



# containerized Multi-Access Gateway – controller

Release 25.7

## Log Events Reference Guide

---

3HE 21890 AAAA TQZZA  
Edition: 01  
July 2025

Nokia is committed to diversity and inclusion. We are continuously reviewing our customer documentation and consulting with standards bodies to ensure that terminology is inclusive and aligned with the industry. Our future customer documentation will be updated accordingly.

---

This document includes Nokia proprietary and confidential information, which may not be distributed or disclosed to any third parties without the prior written consent of Nokia.

This document is intended for use by Nokia's customers ("You"/"Your") in connection with a product purchased or licensed from any company within Nokia Group of Companies. Use this document as agreed. You agree to notify Nokia of any errors you may find in this document; however, should you elect to use this document for any purpose(s) for which it is not intended, You understand and warrant that any determinations You may make or actions You may take will be based upon Your independent judgment and analysis of the content of this document.

Nokia reserves the right to make changes to this document without notice. At all times, the controlling version is the one available on Nokia's site.

No part of this document may be modified.

NO WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF AVAILABILITY, ACCURACY, RELIABILITY, TITLE, NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS MADE IN RELATION TO THE CONTENT OF THIS DOCUMENT. IN NO EVENT WILL NOKIA BE LIABLE FOR ANY DAMAGES, INCLUDING BUT NOT LIMITED TO SPECIAL, DIRECT, INDIRECT, INCIDENTAL OR CONSEQUENTIAL OR ANY LOSSES, SUCH AS BUT NOT LIMITED TO LOSS OF PROFIT, REVENUE, BUSINESS INTERRUPTION, BUSINESS OPPORTUNITY OR DATA THAT MAY ARISE FROM THE USE OF THIS DOCUMENT OR THE INFORMATION IN IT, EVEN IN THE CASE OF ERRORS IN OR OMISSIONS FROM THIS DOCUMENT OR ITS CONTENT.

Copyright and trademark: Nokia is a registered trademark of Nokia Corporation. Other product names mentioned in this document may be trademarks of their respective owners.

© 2025 Nokia.

# Table of contents

|  |           |
|--|-----------|
| <b>List of tables.....</b>   | <b>6</b>  |
| <b>1    Getting started.....</b>   | <b>9</b>  |
| 1.1    About this guide.....   | 9         |
| 1.2    Conventions.....  | 9         |
| 1.2.1    Precautionary and information messages.....                     | 9         |
| 1.2.2    Options or substeps in procedures and sequential workflows..... | 10        |
| <b>2    Log events overview.....</b>                                     | <b>11</b> |
| 2.1    Viewing log events.....   | 11        |
| 2.2    Log event configuration.....                                      | 11        |
| 2.3    Sample log event.....   | 11        |
| <b>3    Log events.....</b>  | <b>13</b> |
| 3.1    audit.....  | 13        |
| 3.1.1    PodDeletedWithForceFlag.....                                    | 13        |
| 3.2    management.....   | 13        |
| 3.2.1    ConfigurationApplyFailed.....                                   | 13        |
| 3.2.2    ConfigurationApplyFailureSolvedByApp.....                       | 14        |
| 3.2.3    ConfigurationApplyFailureSolvedByDelete.....                    | 14        |
| 3.2.4    ConfigurationApplyFailureSolvedByUpdate.....                    | 15        |
| 3.2.5    ConfigurationDeleteFailed.....                                  | 15        |
| 3.2.6    ConfigurationDeleteFailureSolvedByApp.....                      | 15        |
| 3.2.7    ConfigurationDeleteFailureSolvedByUpdate.....                   | 16        |
| 3.2.8    OperationalStateFetchFailed.....                                | 16        |
| 3.2.9    OperationalStateFetchWarning.....                               | 17        |
| 3.3    odsa.....   | 17        |
| 3.3.1    MicroNetsAvailable.....   | 17        |
| 3.3.2    MicroNetsDepleted.....  | 17        |
| 3.3.3    MinimumFreeMicroNetsHigh.....                                   | 18        |
| 3.3.4    MinimumFreeMicroNetsLow.....                                    | 18        |
| 3.4    python.....   | 19        |
| 3.4.1    PythonScriptCompilationFailure.....                             | 19        |

|        |   |    |
|--------|---|----|
| 3.4.2  | PythonScriptExecutionError.....             | 19 |
| 3.4.3  | PythonScriptOutput.....                     | 20 |
| 3.4.4  | PythonScriptSourceLoadError.....            | 20 |
| 3.5    | radius.....                                 | 21 |
| 3.5.1  | RadiusCoaDisconnectMsgSendError.....        | 21 |
| 3.5.2  | RadiusCoaDisconnectPacketDiscarded.....     | 21 |
| 3.5.3  | RadiusCoaMessageHandlingFailed.....         | 21 |
| 3.5.4  | RadiusCoaNackSent.....                      | 22 |
| 3.5.5  | RadiusDisconnectNackSent.....               | 22 |
| 3.6    | session-manager.....                        | 23 |
| 3.6.1  | DHCPv4InvalidLeaseTimes.....                | 23 |
| 3.6.2  | DHCPv4RelayReplyDecodeFailure.....          | 23 |
| 3.6.3  | DHCPv4RelayReplyMessageFailure.....         | 23 |
| 3.6.4  | DHCPv4RelayReplySessionNotFoundFailure..... | 24 |
| 3.6.5  | DHCPv6InvalidLifetimes.....                 | 24 |
| 3.6.6  | DHCPv6RelayReplyDecodeFailure.....          | 25 |
| 3.6.7  | DHCPv6RelayReplyMessageFailure.....         | 25 |
| 3.6.8  | DHCPv6RelayReplySessionNotFoundFailure..... | 25 |
| 3.6.9  | IBCPMessageDecodeFailure.....               | 26 |
| 3.6.10 | IBCPMessageFailure.....                     | 26 |
| 3.6.11 | IBCPSessionSetupFailure.....                | 27 |
| 3.6.12 | LostHostConnectivity.....                   | 27 |
| 3.6.13 | PFCPSessionDeletionFailed.....              | 27 |
| 3.6.14 | PFCPSessionReportFailure.....               | 28 |
| 3.6.15 | SessionCoAFailure.....                      | 28 |
| 3.6.16 | SessionPFCPAuditFailure.....                | 29 |
| 3.6.17 | SessionsCleared.....                        | 29 |
| 3.6.18 | SessionTimerFailure.....                    | 29 |
| 3.6.19 | UPFResiliencyStandbyPFCPSessionFailure..... | 30 |
| 3.7    | test.....                                   | 30 |
| 3.7.1  | DebugEvent.....                             | 30 |
| 3.7.2  | ErrorEvent.....                             | 31 |
| 3.7.3  | InfoEvent.....                              | 31 |
| 3.7.4  | TestEvent.....                              | 31 |
| 3.7.5  | WarnEvent.....                              | 32 |
| 3.8    | upf-manager.....                            | 32 |

---

|        |  |    |
|--------|--|----|
| 3.8.1  | BaseFunctionFeatureSetNotSupported.....            | 32 |
| 3.8.2  | DynamicallySignaledL2AccessIdDeletedByTimeout..... | 33 |
| 3.8.3  | NewDynamicallySignaledL2AccessIdDropped.....       | 33 |
| 3.8.4  | NewDynamicallySignaledNetworkInstanceDropped.....  | 33 |
| 3.8.5  | PFCPPAssociationFailure.....                       | 34 |
| 3.8.6  | PFCPPDefaultSessionFailure.....                    | 34 |
| 3.8.7  | UpfAuditAbort.....                                 | 35 |
| 3.8.8  | UpfAuditEnd.....                                   | 35 |
| 3.8.9  | UpfAuditEndFailure.....                            | 35 |
| 3.8.10 | UpfAuditStartFailure.....                          | 36 |
| 3.8.11 | UpfAuditStartMgmtInitiated.....                    | 36 |
| 3.8.12 | UpfAuditStartPathRestored.....                     | 37 |
| 3.8.13 | UpfAuditStartUpfRequested.....                     | 37 |
| 3.8.14 | UpfPartialAuditAbort.....                          | 37 |
| 3.8.15 | UpfPartialAuditEnd.....                            | 38 |
| 3.8.16 | UpfPartialAuditScheduledByAuditPod.....            | 38 |
| 3.8.17 | UpfPartialAuditStartFailure.....                   | 39 |

# List of tables

Table 1: ConfigurationApplyFailed..... 11

Table 2: Log entry field descriptions..... 12

Table 3: PodDeletedWithForceFlag properties..... 13

Table 4: ConfigurationApplyFailed properties..... 13

Table 5: ConfigurationApplyFailureSolvedByApp properties..... 14

Table 6: ConfigurationApplyFailureSolvedByDelete properties..... 14

Table 7: ConfigurationApplyFailureSolvedByUpdate properties..... 15

Table 8: ConfigurationDeleteFailed properties..... 15

Table 9: ConfigurationDeleteFailureSolvedByApp properties..... 15

Table 10: ConfigurationDeleteFailureSolvedByUpdate properties..... 16

Table 11: OperationalStateFetchFailed properties..... 16

Table 12: OperationalStateFetchWarning properties..... 17

Table 13: MicroNetsAvailable properties..... 17

Table 14: MicroNetsDepleted properties..... 17

Table 15: MinimumFreeMicroNetsHigh properties..... 18

Table 16: MinimumFreeMicroNetsLow properties..... 18

Table 17: PythonScriptCompilationFailure properties..... 19

Table 18: PythonScriptExecutionError properties..... 19

Table 19: PythonScriptOutput properties..... 20

Table 20: PythonScriptSourceLoadError properties..... 20

Table 21: RadiusCoaDisconnectMsgSendError properties..... 21

---

|  |    |
|--|----|
| Table 22: RadiusCoaDisconnectPacketDiscarded properties.....     | 21 |
| Table 23: RadiusCoaMessageHandlingFailed properties.....         | 21 |
| Table 24: RadiusCoaNackSent properties.....                      | 22 |
| Table 25: RadiusDisconnectNackSent properties.....               | 22 |
| Table 26: DHCPv4InvalidLeaseTimes properties.....                | 23 |
| Table 27: DHCPv4RelayReplyDecodeFailure properties.....          | 23 |
| Table 28: DHCPv4RelayReplyMessageFailure properties.....         | 23 |
| Table 29: DHCPv4RelayReplySessionNotFoundFailure properties..... | 24 |
| Table 30: DHCPv6InvalidLifetimes properties.....                 | 24 |
| Table 31: DHCPv6RelayReplyDecodeFailure properties.....          | 25 |
| Table 32: DHCPv6RelayReplyMessageFailure properties.....         | 25 |
| Table 33: DHCPv6RelayReplySessionNotFoundFailure properties..... | 25 |
| Table 34: IBCPMessageDecodeFailure properties.....               | 26 |
| Table 35: IBCPMessageFailure properties.....                     | 26 |
| Table 36: IBCPSessionSetupFailure properties.....                | 27 |
| Table 37: LostHostConnectivity properties.....                   | 27 |
| Table 38: PFCPSessionDeletionFailed properties.....              | 27 |
| Table 39: PFCPSessionReportFailure properties.....               | 28 |
| Table 40: SessionCoAFailure properties.....                      | 28 |
| Table 41: SessionPFCPAuditFailure properties.....                | 29 |
| Table 42: SessionsCleared properties.....                        | 29 |
| Table 43: SessionTimerFailure properties.....                    | 29 |
| Table 44: UPFResiliencyStandbyPFCPSessionFailure properties..... | 30 |

---

|   |    |
|---|----|
| Table 45: DebugEvent properties.....                                    | 30 |
| Table 46: ErrorEvent properties.....                                    | 31 |
| Table 47: InfoEvent properties.....                                     | 31 |
| Table 48: TestEvent properties.....                                     | 31 |
| Table 49: WarnEvent properties.....                                     | 32 |
| Table 50: BaseFunctionFeatureSetNotSupported properties.....            | 32 |
| Table 51: DynamicallySignaledL2AccessIdDeletedByTimeout properties..... | 33 |
| Table 52: NewDynamicallySignaledL2AccessIdDropped properties.....       | 33 |
| Table 53: NewDynamicallySignaledNetworkInstanceDropped properties.....  | 33 |
| Table 54: PFCPAssociationFailure properties.....                        | 34 |
| Table 55: PFCPDefaultSessionFailure properties.....                     | 34 |
| Table 56: UpfAuditAbort properties.....                                 | 35 |
| Table 57: UpfAuditEnd properties.....                                   | 35 |
| Table 58: UpfAuditEndFailure properties.....                            | 35 |
| Table 59: UpfAuditStartFailure properties.....                          | 36 |
| Table 60: UpfAuditStartMgmtInitiated properties.....                    | 36 |
| Table 61: UpfAuditStartPathRestored properties.....                     | 37 |
| Table 62: UpfAuditStartUpfRequested properties.....                     | 37 |
| Table 63: UpfPartialAuditAbort properties.....                          | 37 |
| Table 64: UpfPartialAuditEnd properties.....                            | 38 |
| Table 65: UpfPartialAuditScheduledByAuditPod properties.....            | 38 |
| Table 66: UpfPartialAuditStartFailure properties.....                   | 39 |



# 1 Getting started

*Find general information about this guide.*

## 1.1 About this guide

This guide provides descriptions of event notifications that are forwarded to a destination such as a file or syslog. Properties that are reported include event name, message format, cause, and effect. The information is intended to assist with identifying and responding to the event notifications.

Command outputs shown in this guide are examples only; actual displays may differ depending on supported functionality and user configuration.

The CLI command descriptions can be found in the *cMAG-c CLI and Data Model Reference*.



**Note:** This guide generically covers content for the release specified on the title page of the guide, and may also contain some content that will be released in later maintenance loads. See the applicable *cMAG-c Release Notes* for information about features supported in each load of the software release.

## 1.2 Conventions

This section describes the general conventions used in this guide.

### 1.2.1 Precautionary and information messages

The following information symbols are used in the documentation.



**DANGER:** Danger warns that the described activity or situation may result in serious personal injury or death. An electric shock hazard could exist. Before you begin work on this equipment, be aware of hazards involving electrical circuitry, be familiar with networking environments, and implement accident prevention procedures.



**WARNING:** Warning indicates that the described activity or situation may, or will, cause equipment damage, serious performance problems, or loss of data.



**Caution:** Caution indicates that the described activity or situation may reduce your component or system performance.



**Note:** Note provides additional operational information.



**Tip:** Tip provides suggestions for use or best practices.

## 1.2.2 Options or substeps in procedures and sequential workflows

Options in a procedure or a sequential workflow are indicated by a bulleted list. In the following example, at step 1, the user must perform the described action. At step 2, the user must perform one of the listed options to complete the step.

### Example: Options in a procedure

1. User must perform this step.
2. This step offers three options. User must perform one option to complete this step.
  - This is one option.
  - This is another option.
  - This is yet another option.

Substeps in a procedure or a sequential workflow are indicated by letters. In the following example, at step 1, the user must perform the described action. At step 2, the user must perform two substeps (a. and b.) to complete the step.

### Example: Substeps in a procedure

1. User must perform this step.
2. User must perform all substeps to complete this action.
  - a. This is one substep.
  - b. This is another substep.

## 2 Log events overview

Log events have common elements or properties and are formatted. The logging destinations can be configured.

### 2.1 Viewing log events

**Procedure**

Use the following command to display log events specific to subscriber management:

```
show subscriber-management log
```

See "Logging" in the SR Linux Configuration Basics Guide for more information about viewing log events.

### 2.2 Log event configuration

See "Logging" in the SR Linux Configuration Basics Guide for more information.

### 2.3 Sample log event

In this guide, each log event is described in a separate table.  
The following table contains a sample log event entry for the ConfigurationApplyFailed log event.

Table 1: ConfigurationApplyFailed

| Property name         | Value  |
|-----------------------|--|
| Application name      | management   |
| Event name            | ConfigurationApplyFailed                                     |
| Default severity      | warning  |
| Message format string | <i>object</i> : could not apply fields fields: <i>reason</i> |
| Cause                 | configuration could not be applied                           |
| Effect                | configuration is not applied                                 |

The table title for a log event entry is the event name. Each entry contains the information described in the following table.

Table 2: Log entry field descriptions

| Label                 | Description  |
|-----------------------|--|
| Application name      | Name of the application generating the log message   |
| Event name            | Name of the log event  |
| Default severity      | Default severity level of the log event <ul style="list-style-type: none"><li>critical</li><li>error</li><li>warning</li><li>informational</li><li>debug</li></ul> |
| Message format string | Text description of the log event  |
| Cause                 | Cause of the log event   |
| Effect                | Effect of the log event  |

## 3 Log events

*Get a summary of the supported alarms and raising events and detailed descriptions per alarm and event object.*

### 3.1 audit

#### 3.1.1 PodDeletedWithForceFlag

*Table 3: PodDeletedWithForceFlag properties*

| Property name         | Value   |
|-----------------------|---|
| Application name      | audit   |
| Event name            | PodDeletedWithForceFlag   |
| Default severity      | critical  |
| Message format string | A pod has been deleted with force flag which may cause hanging subscriber transactions. |
| Cause                 | A pod has been deleted with force flag.   |
| Effect                | Subscriber transactions might be hanging.   |

### 3.2 management

#### 3.2.1 ConfigurationApplyFailed

*Table 4: ConfigurationApplyFailed properties*

| Property name         | Value  |
|-----------------------|--|
| Application name      | management   |
| Event name            | ConfigurationApplyFailed   |
| Default severity      | warning  |
| Message format string | <i>object</i> : could not apply fields <i>fields</i> : <i>reason</i> |
| Cause                 | configuration could not be applied                                   |

| Property name | Value                        |
|---------------|------------------------------|
| Effect        | configuration is not applied |

### 3.2.2 ConfigurationApplyFailureSolvedByApp

Table 5: ConfigurationApplyFailureSolvedByApp properties

| Property name         | Value   |
|-----------------------|---|
| Application name      | management  |
| Event name            | ConfigurationApplyFailureSolvedByApp                                      |
| Default severity      | informational   |
| Message format string | <i>object</i> : the configuration application failure is resolved         |
| Cause                 | configuration failure is resolved because the app accepted the new config |
| Effect                | configuration is applied  |

### 3.2.3 ConfigurationApplyFailureSolvedByDelete

Table 6: ConfigurationApplyFailureSolvedByDelete properties

| Property name         | Value  |
|-----------------------|--|
| Application name      | management   |
| Event name            | ConfigurationApplyFailureSolvedByDelete  |
| Default severity      | informational  |
| Message format string | <i>object</i> : the configuration application failure is resolved (object was deleted) |
| Cause                 | configuration failure is resolved because the object is queued for deletion            |
| Effect                | object will be deleted   |

### 3.2.4 ConfigurationApplyFailureSolvedByUpdate

Table 7: ConfigurationApplyFailureSolvedByUpdate properties

| Property name         | Value  |
|-----------------------|--|
| Application name      | management   |
| Event name            | ConfigurationApplyFailureSolvedByUpdate  |
| Default severity      | informational  |
| Message format string | <i>object</i> : the configuration application failure is resolved (update request is canceled)       |
| Cause                 | configuration failure is resolved because the update request was implicitly canceled by a new update |
| Effect                | no config changes are pending anymore  |

### 3.2.5 ConfigurationDeleteFailed

Table 8: ConfigurationDeleteFailed properties

| Property name         | Value  |
|-----------------------|--|
| Application name      | management   |
| Event name            | ConfigurationDeleteFailed                              |
| Default severity      | warning  |
| Message format string | <i>object</i> : could not delete object: <i>reason</i> |
| Cause                 | configuration could not be deleted                     |
| Effect                | configuration is not deleted                           |

### 3.2.6 ConfigurationDeleteFailureSolvedByApp

Table 9: ConfigurationDeleteFailureSolvedByApp properties

| Property name    | Value                                 |
|------------------|---------------------------------------|
| Application name | management                            |
| Event name       | ConfigurationDeleteFailureSolvedByApp |
| Default severity | informational                         |

| Property name         | Value   |
|-----------------------|---|
| Message format string | <i>object</i> : the configuration delete failure is resolved                |
| Cause                 | configuration delete failure is resolved because the app deleted the object |
| Effect                | object is deleted   |

### 3.2.7 ConfigurationDeleteFailureSolvedByUpdate

Table 10: ConfigurationDeleteFailureSolvedByUpdate properties

| Property name         | Value   |
|-----------------------|---|
| Application name      | management  |
| Event name            | ConfigurationDeleteFailureSolvedByUpdate  |
| Default severity      | informational   |
| Message format string | <i>object</i> : the configuration delete failure is resolved (object need not be deleted anymore) |
| Cause                 | configuration delete is resolved because the delete is no longer requested (new config came in)   |
| Effect                | object will not be deleted  |

### 3.2.8 OperationalStateFetchFailed

Table 11: OperationalStateFetchFailed properties

| Property name         | Value   |
|-----------------------|---|
| Application name      | management  |
| Event name            | OperationalStateFetchFailed                                       |
| Default severity      | error   |
| Message format string | <i>object</i> : could not fetch operational state - <i>reason</i> |
| Cause                 | operational state could not be fetched                            |
| Effect                | the returned operational state will be incorrect                  |



### 3.2.9 OperationalStateFetchWarning

Table 12: OperationalStateFetchWarning properties

| Property name         | Value  |
|-----------------------|--|
| Application name      | management   |
| Event name            | OperationalStateFetchWarning   |
| Default severity      | warning  |
| Message format string | <i>object</i> : warning while fetching operational state - <i>reason</i> |
| Cause                 | a warning occurred while fetching operational state                      |
| Effect                | the returned operational state might be incorrect                        |

## 3.3 odsa

### 3.3.1 MicroNetsAvailable

Table 13: MicroNetsAvailable properties

| Property name         | Value  |
|-----------------------|--|
| Application name      | odsa   |
| Event name            | MicroNetsAvailable   |
| Default severity      | informational  |
| Message format string | network-instance <i>networkInstance</i> , pool <i>pool</i> , address-assignment-type <i>addressAssignmentType</i> : micro-net(s) available again |
| Cause                 | the number of available micro-nets rose above zero   |
| Effect                | none   |

### 3.3.2 MicroNetsDepleted

Table 14: MicroNetsDepleted properties

| Property name    | Value |
|------------------|-------|
| Application name | odsa  |

| Property name         | Value  |
|-----------------------|--|
| Event name            | MicroNetsDepleted  |
| Default severity      | warning  |
| Message format string | network-instance <i>networkInstance</i> , pool <i>pool</i> , address-assignment-type <i>addressAssignmentType</i> : no more micro-nets |
| Cause                 | the number of available micro-nets reached zero  |
| Effect                | setup of new end user sessions will start to fail  |

### 3.3.3 MinimumFreeMicroNetsHigh

Table 15: MinimumFreeMicroNetsHigh properties

| Property name         | Value  |
|-----------------------|--|
| Application name      | odsa   |
| Event name            | MinimumFreeMicroNetsHigh   |
| Default severity      | informational  |
| Message format string | network-instance <i>networkInstance</i> , pool <i>pool</i> , address-assignment-type <i>addressAssignmentType</i> : number of micro-nets high enough again |
| Cause                 | the number of available micro-nets rose above the rising threshold and is above the desired minimum  |
| Effect                | none   |

### 3.3.4 MinimumFreeMicroNetsLow

Table 16: MinimumFreeMicroNetsLow properties

| Property name         | Value   |
|-----------------------|---|
| Application name      | odsa  |
| Event name            | MinimumFreeMicroNetsLow   |
| Default severity      | warning   |
| Message format string | network-instance <i>networkInstance</i> , pool <i>pool</i> , address-assignment-type <i>addressAssignmentType</i> : running low on micro-nets |
| Cause                 | the number of available micro-nets fell below the low threshold and is under the desired minimum  |

| Property name | Value |
|---------------|-------|
| Effect        | none  |

## 3.4 python

### 3.4.1 PythonScriptCompilationFailure

Table 17: PythonScriptCompilationFailure properties

| Property name         | Value  |
|-----------------------|--|
| Application name      | python   |
| Event name            | PythonScriptCompilationFailure   |
| Default severity      | warning  |
| Message format string | Python-script ' <i>script</i> ' failed to compile: <i>err</i>                    |
| Cause                 | The python-script source code was not valid python code.                         |
| Effect                | The Python script is operationally down and will fail immediately when executed. |

### 3.4.2 PythonScriptExecutionError

Table 18: PythonScriptExecutionError properties

| Property name         | Value   |
|-----------------------|---|
| Application name      | python  |
| Event name            | PythonScriptExecutionError  |
| Default severity      | warning   |
| Message format string | Python-script ' <i>script</i> ' terminated with an exception: <i>err</i>                |
| Cause                 | The python-script terminated with an exception.   |
| Effect                | The action-on-failure of the script is used to decide the continuation of the callflow. |

### 3.4.3 PythonScriptOutput

Table 19: PythonScriptOutput properties

| Property name         | Value   |
|-----------------------|---|
| Application name      | python  |
| Event name            | PythonScriptOutput                                    |
| Default severity      | debug   |
| Message format string | Python-script ' <i>script</i> ' output: <i>output</i> |
| Cause                 | The python-script has generated output.               |
| Effect                | Not applicable.                                       |

### 3.4.4 PythonScriptSourceLoadError

Table 20: PythonScriptSourceLoadError properties

| Property name         | Value  |
|-----------------------|--|
| Application name      | python   |
| Event name            | PythonScriptSourceLoadError  |
| Default severity      | warning  |
| Message format string | Python-script ' <i>script</i> ' failed to load: <i>err</i>                       |
| Cause                 | The python-script source code could not be fetched from its remote location      |
| Effect                | The Python script is operationally down and will fail immediately when executed. |

## 3.5 radius

### 3.5.1 RadiusCoaDisconnectMsgSendError

Table 21: RadiusCoaDisconnectMsgSendError properties

| Property name         | Value  |
|-----------------------|--|
| Application name      | radius   |
| Event name            | RadiusCoaDisconnectMsgSendError  |
| Default severity      | warning  |
| Message format string | Due to connectivity issues, a CoA reply message could not be sent.     |
| Cause                 | Because of connectivity issues, a CoA reply message could not be sent. |
| Effect                | The reply message is lost.   |

### 3.5.2 RadiusCoaDisconnectPacketDiscarded

Table 22: RadiusCoaDisconnectPacketDiscarded properties

| Property name         | Value  |
|-----------------------|--|
| Application name      | radius   |
| Event name            | RadiusCoaDisconnectPacketDiscarded                   |
| Default severity      | warning  |
| Message format string | A <i>msgType</i> request was discarded.              |
| Cause                 | A Disconnect request was malformed in some way.      |
| Effect                | The message is discarded, no actions were performed. |

### 3.5.3 RadiusCoaMessageHandlingFailed

Table 23: RadiusCoaMessageHandlingFailed properties

| Property name    | Value  |
|------------------|--------|
| Application name | radius |

| Property name         | Value  |
|-----------------------|--|
| Event name            | RadiusCoaMessageHandlingFailed   |
| Default severity      | warning  |
| Message format string | A CoA Disconnect Request was not handled successfully.   |
| Cause                 | A Radius CoA or Disconnect request could not be decoded.   |
| Effect                | The action requested in the Disconnect request was either not executed or executed incompletely. |

### 3.5.4 RadiusCoaNackSent

Table 24: RadiusCoaNackSent properties

| Property name         | Value   |
|-----------------------|---|
| Application name      | radius  |
| Event name            | RadiusCoaNackSent   |
| Default severity      | warning   |
| Message format string | A CoA Request was not handled successfully.   |
| Cause                 | A CoA request was not handled unsuccessfully.   |
| Effect                | The action requested in the CoA request was either not executed or executed incompletely. |

### 3.5.5 RadiusDisconnectNackSent

Table 25: RadiusDisconnectNackSent properties

| Property name         | Value  |
|-----------------------|--|
| Application name      | radius   |
| Event name            | RadiusDisconnectNackSent   |
| Default severity      | warning  |
| Message format string | A Disconnect Request was not handled successfully.   |
| Cause                 | A Disconnect request was not handled unsuccessfully.   |
| Effect                | The action requested in the Disconnect request was either not executed or executed incompletely. |

## 3.6 session-manager

### 3.6.1 DHCPv4InvalidLeaseTimes

Table 26: DHCPv4InvalidLeaseTimes properties

| Property name         | Value  |
|-----------------------|--|
| Application name      | session-manager  |
| Event name            | DHCPv4InvalidLeaseTimes  |
| Default severity      | warning  |
| Message format string | Invalid DHCPv4 renew, rebind, lease time combination, fallback on default values |
| Cause                 | Invalid DHCPv4 renew, rebind, lease time combination                             |
| Effect                | Fallback on default DHCPv4 renew, rebind and lease time                          |

### 3.6.2 DHCPv4RelayReplyDecodeFailure

Table 27: DHCPv4RelayReplyDecodeFailure properties

| Property name         | Value  |
|-----------------------|--|
| Application name      | session-manager                                    |
| Event name            | DHCPv4RelayReplyDecodeFailure                      |
| Default severity      | error  |
| Message format string | Could not decode DHCP message: <i>errorMessage</i> |
| Cause                 | Invalid DHCP server reply                          |
| Effect                | DHCP reply is dropped                              |

### 3.6.3 DHCPv4RelayReplyMessageFailure

Table 28: DHCPv4RelayReplyMessageFailure properties

| Property name    | Value           |
|------------------|-----------------|
| Application name | session-manager |

| Property name         | Value  |
|-----------------------|--|
| Event name            | DHCPv4RelayReplyMessageFailure                                   |
| Default severity      | error  |
| Message format string | Could not process DHCPv4 Relay server reply: <i>errorMessage</i> |
| Cause                 | Processing failure of DHCPv4 server reply message                |
| Effect                | message is dropped   |

### 3.6.4 DHCPv4RelayReplySessionNotFoundFailure

Table 29: DHCPv4RelayReplySessionNotFoundFailure properties

| Property name         | Value  |
|-----------------------|--|
| Application name      | session-manager  |
| Event name            | DHCPv4RelayReplySessionNotFoundFailure                                     |
| Default severity      | error  |
| Message format string | Could not find a session corresponding to the request: <i>errorMessage</i> |
| Cause                 | No session in setup could be found at the current session manager instance |
| Effect                | DHCP reply is dropped  |

### 3.6.5 DHCPv6InvalidLifetimes

Table 30: DHCPv6InvalidLifetimes properties

| Property name         | Value  |
|-----------------------|--|
| Application name      | session-manager  |
| Event name            | DHCPv6InvalidLifetimes   |
| Default severity      | warning  |
| Message format string | Invalid DHCPv6 t1, t2, IPv6 preferred and valid lifetime combination, fallback on default values |
| Cause                 | Invalid DHCPv6 t1, t2, IPv6 preferred and valid lifetime combination                             |
| Effect                | Fallback on default DHCPv6 t1, t2, IPv6 preferred and valid lifetime                             |



### 3.6.6 DHCPv6RelayReplyDecodeFailure

Table 31: DHCPv6RelayReplyDecodeFailure properties

| Property name         | Value  |
|-----------------------|--|
| Application name      | session-manager                                      |
| Event name            | DHCPv6RelayReplyDecodeFailure                        |
| Default severity      | error  |
| Message format string | Could not decode DHCPv6 message: <i>errorMessage</i> |
| Cause                 | Invalid DHCPv6 server reply                          |
| Effect                | message is dropped                                   |

### 3.6.7 DHCPv6RelayReplyMessageFailure

Table 32: DHCPv6RelayReplyMessageFailure properties

| Property name         | Value  |
|-----------------------|--|
| Application name      | session-manager  |
| Event name            | DHCPv6RelayReplyMessageFailure                                   |
| Default severity      | error  |
| Message format string | Could not process DHCPv6 Relay server reply: <i>errorMessage</i> |
| Cause                 | Processing failure of DHCPv6 server reply message                |
| Effect                | message is dropped   |

### 3.6.8 DHCPv6RelayReplySessionNotFoundFailure

Table 33: DHCPv6RelayReplySessionNotFoundFailure properties

| Property name         | Value                                       |
|-----------------------|---|
| Application name      | session-manager                             |
| Event name            | DHCPv6RelayReplySessionNotFoundFailure      |
| Default severity      | error                                       |
| Message format string | Could not find session: <i>errorMessage</i> |

| Property name | Value   |
|---------------|---|
| Cause         | No session transaction could be found at the current session manager instance |
| Effect        | message is dropped  |

### 3.6.9 IBCPMessageDecodeFailure

Table 34: IBCPMessageDecodeFailure properties

| Property name         | Value  |
|-----------------------|--|
| Application name      | session-manager                                    |
| Event name            | IBCPMessageDecodeFailure                           |
| Default severity      | error  |
| Message format string | Could not decode IBCP message: <i>errorMessage</i> |
| Cause                 | Invalid incoming IBCP message                      |
| Effect                | IBCP message is dropped                            |

### 3.6.10 IBCPMessageFailure

Table 35: IBCPMessageFailure properties

| Property name         | Value  |
|-----------------------|--|
| Application name      | session-manager  |
| Event name            | IBCPMessageFailure   |
| Default severity      | error  |
| Message format string | Could not process IBCP message: <i>errorMessage</i>            |
| Cause                 | Processing failure of an IBCP message                          |
| Effect                | IBCP message is dropped or returned with a failure status code |

### 3.6.11 IBCPSessionSetupFailure

Table 36: IBCPSessionSetupFailure properties

| Property name         | Value  |
|-----------------------|--|
| Application name      | session-manager                                    |
| Event name            | IBCPSessionSetupFailure                            |
| Default severity      | error  |
| Message format string | IBCP session setup failure: <i>errorMessage</i>    |
| Cause                 | Session setup triggered by an IBCP message failed  |
| Effect                | IBCP message is dropped and session is not created |

### 3.6.12 LostHostConnectivity

Table 37: LostHostConnectivity properties

| Property name         | Value                  |
|-----------------------|------------------------|
| Application name      | session-manager        |
| Event name            | LostHostConnectivity   |
| Default severity      | warning                |
| Message format string | Lost host connectivity |
| Cause                 | ???                    |
| Effect                | ???                    |

### 3.6.13 PFCPSessionDeletionFailed

Table 38: PFCPSessionDeletionFailed properties

| Property name    | Value                     |
|------------------|---------------------------|
| Application name | session-manager           |
| Event name       | PFCPSessionDeletionFailed |
| Default severity | warning                   |

| Property name         | Value   |
|-----------------------|---|
| Message format string | PFCP session deletion failed for 15 minutes, session is deleted without informing the UPF |
| Cause                 | PFCP session deletion failed for 15 minutes (for example, because of headless)            |
| Effect                | The session is terminated without informing the UPF                                       |

### 3.6.14 PFCPSessionReportFailure

Table 39: PFCPSessionReportFailure properties

| Property name         | Value   |
|-----------------------|---|
| Application name      | session-manager   |
| Event name            | PFCPSessionReportFailure  |
| Default severity      | error   |
| Message format string | PFCP Session Report failure: <i>errorMessage</i>                |
| Cause                 | Failure during processing of a PFCP Session Report from the UPF |
| Effect                | Failure response is sent to the UPF                             |

### 3.6.15 SessionCoAFailure

Table 40: SessionCoAFailure properties

| Property name         | Value   |
|-----------------------|---|
| Application name      | session-manager                               |
| Event name            | SessionCoAFailure                             |
| Default severity      | error   |
| Message format string | CoA failed: <i>errorMessage</i>               |
| Cause                 | CoA failed for a session                      |
| Effect                | Changes are not applied and the CoA is NACKed |

### 3.6.16 SessionPFCPAuditFailure

Table 41: SessionPFCPAuditFailure properties

| Property name         | Value                                  |
|-----------------------|--|
| Application name      | session-manager                        |
| Event name            | SessionPFCPAuditFailure                |
| Default severity      | error                                  |
| Message format string | PFCP audit failed: <i>errorMessage</i> |
| Cause                 | PFCP audit failed for a session        |
| Effect                | Session is not audited                 |

### 3.6.17 SessionsCleared

Table 42: SessionsCleared properties

| Property name         | Value                               |
|-----------------------|-------------------------------------|
| Application name      | session-manager                     |
| Event name            | SessionsCleared                     |
| Default severity      | informational                       |
| Message format string | Cleared <i>numSessions</i> sessions |
| Cause                 | Clear of sessions has finished      |
| Effect                | Sessions have been deleted          |

### 3.6.18 SessionTimerFailure

Table 43: SessionTimerFailure properties

| Property name         | Value                                   |
|-----------------------|---|
| Application name      | session-manager                         |
| Event name            | SessionTimerFailure                     |
| Default severity      | error                                   |
| Message format string | Timer event failed: <i>errorMessage</i> |

| Property name | Value                            |
|---------------|----------------------------------|
| Cause         | Timer event failed for a session |
| Effect        | Timer event is ignored           |

### 3.6.19 UPFResiliencyStandbyPFCPSessionFailure

Table 44: UPFResiliencyStandbyPFCPSessionFailure properties

| Property name         | Value  |
|-----------------------|--|
| Application name      | session-manager  |
| Event name            | UPFResiliencyStandbyPFCPSessionFailure                                   |
| Default severity      | warning  |
| Message format string | PFCP session creation or modification failed on the standby UPF          |
| Cause                 | PFCP session creation or modification failed on the standby UPF          |
| Effect                | PFCP session creation or modification on the standby UPF will be retried |

## 3.7 test

### 3.7.1 DebugEvent

Table 45: DebugEvent properties

| Property name         | Value             |
|-----------------------|-------------------|
| Application name      | test              |
| Event name            | DebugEvent        |
| Default severity      | debug             |
| Message format string | <i>message</i>    |
| Cause                 | Triggered by user |
| Effect                | None              |

### 3.7.2 ErrorEvent

Table 46: ErrorEvent properties

| Property name         | Value             |
|-----------------------|-------------------|
| Application name      | test              |
| Event name            | ErrorEvent        |
| Default severity      | error             |
| Message format string | <i>message</i>    |
| Cause                 | Triggered by user |
| Effect                | None              |

### 3.7.3 InfoEvent

Table 47: InfoEvent properties

| Property name         | Value             |
|-----------------------|-------------------|
| Application name      | test              |
| Event name            | InfoEvent         |
| Default severity      | informational     |
| Message format string | <i>message</i>    |
| Cause                 | Triggered by user |
| Effect                | None              |

### 3.7.4 TestEvent

Table 48: TestEvent properties

| Property name         | Value          |
|-----------------------|----------------|
| Application name      | test           |
| Event name            | TestEvent      |
| Default severity      | informational  |
| Message format string | <i>message</i> |

| Property name | Value             |
|---------------|-------------------|
| Cause         | Triggered by user |
| Effect        | None              |

### 3.7.5 WarnEvent

Table 49: WarnEvent properties

| Property name         | Value             |
|-----------------------|-------------------|
| Application name      | test              |
| Event name            | WarnEvent         |
| Default severity      | warning           |
| Message format string | <i>message</i>    |
| Cause                 | Triggered by user |
| Effect                | None              |

## 3.8 upf-manager

### 3.8.1 BaseFunctionFeatureSetNotSupported

Table 50: BaseFunctionFeatureSetNotSupported properties

| Property name         | Value   |
|-----------------------|---|
| Application name      | upf-manager   |
| Event name            | BaseFunctionFeatureSetNotSupported  |
| Default severity      | error   |
| Message format string | Base function feature set not supported by UPF <i>upfNodeId</i>           |
| Cause                 | Base function feature set not supported by UPF                            |
| Effect                | PFCP association with the UPF will not be established or will be released |



### 3.8.2 DynamicallySignaledL2AccessIdDeletedByTimeout

Table 51: *DynamicallySignaledL2AccessIdDeletedByTimeout* properties

| Property name         | Value   |
|-----------------------|---|
| Application name      | upf-manager   |
| Event name            | DynamicallySignaledL2AccessIdDeletedByTimeout   |
| Default severity      | informational   |
| Message format string | Dynamically signalled l2-access-id <i>l2AccessId</i> from UPF <i>upfNodeId</i> deleted by timeout |
| Cause                 | Dynamically signaled l2-access-id deleted as the cleanup timer expired                            |
| Effect                | L2-access-id will not be tracked anymore and the per port tunnel will be deleted                  |

### 3.8.3 NewDynamicallySignaledL2AccessIdDropped

Table 52: *NewDynamicallySignaledL2AccessIdDropped* properties

| Property name         | Value  |
|-----------------------|--|
| Application name      | upf-manager  |
| Event name            | NewDynamicallySignaledL2AccessIdDropped  |
| Default severity      | warning  |
| Message format string | New dynamically signalled l2-access-id <i>l2AccessId</i> from UPF <i>upfNodeId</i> dropped |
| Cause                 | New dynamically signaled l2-access-id dropped as maximum limit is reached                  |
| Effect                | L2-access-id health will not be tracked and no per port tunnel will be established         |

### 3.8.4 NewDynamicallySignaledNetworkInstanceDropped

Table 53: *NewDynamicallySignaledNetworkInstanceDropped* properties

| Property name    | Value       |
|------------------|-------------|
| Application name | upf-manager |

| Property name         | Value   |
|-----------------------|---|
| Event name            | NewDynamicallySignaledNetworkInstanceDropped  |
| Default severity      | warning   |
| Message format string | New dynamically signalled network instance <i>networkInstance</i> from UPF <i>upfNodeId</i> dropped |
| Cause                 | New dynamically signaled network instance dropped as maximum limit is reached                       |
| Effect                | Network instance health will not be tracked   |

### 3.8.5 PFCPAssociationFailure

Table 54: PFCPAssociationFailure properties

| Property name         | Value   |
|-----------------------|---|
| Application name      | upf-manager   |
| Event name            | PFCPAssociationFailure  |
| Default severity      | error   |
| Message format string | PFCP <i>pfcpMessage</i> exchange with UPF <i>upfNodeId</i> failed: <i>error Message</i> |
| Cause                 | The PFCP association message exchange was not successful                                |
| Effect                | The PFCP association message is not successfully processed on the UPF                   |

### 3.8.6 PFCPDefaultSessionFailure

Table 55: PFCPDefaultSessionFailure properties

| Property name         | Value   |
|-----------------------|---|
| Application name      | upf-manager   |
| Event name            | PFCPDefaultSessionFailure   |
| Default severity      | error   |
| Message format string | PFCP <i>pfcpMessage</i> exchange with UPF <i>upfNodeId</i> failed for default session with sessionID <i>sessionId</i> : <i>errorMessage</i> |
| Cause                 | The PFCP default session message exchange was not successful  |

| Property name | Value   |
|---------------|---|
| Effect        | The PFCP default session message is not successfully processed on the UPF |

### 3.8.7 UpfAuditAbort

Table 56: UpfAuditAbort properties

| Property name         | Value  |
|-----------------------|--|
| Application name      | upf-manager                                  |
| Event name            | UpfAuditAbort                                |
| Default severity      | informational                                |
| Message format string | PFCP Audit with UPF <i>upfNodeId</i> aborted |
| Cause                 | UPF audit aborted                            |
| Effect                | Ongoing UPF audit is aborted                 |

### 3.8.8 UpfAuditEnd

Table 57: UpfAuditEnd properties

| Property name         | Value                                    |
|-----------------------|--|
| Application name      | upf-manager                              |
| Event name            | UpfAuditEnd                              |
| Default severity      | informational                            |
| Message format string | PFCP Audit with <i>upfNodeId</i> ended   |
| Cause                 | UPF audit ended                          |
| Effect                | All sessions and FSGs in UPF are audited |

### 3.8.9 UpfAuditEndFailure

Table 58: UpfAuditEndFailure properties

| Property name    | Value       |
|------------------|-------------|
| Application name | upf-manager |

| Property name         | Value   |
|-----------------------|---|
| Event name            | UpfAuditEndFailure  |
| Default severity      | error   |
| Message format string | PFCP Audit with UPF <i>upfNodeId</i> not ended: <i>errorMessage</i> |
| Cause                 | Ending of PFCP audit with UPF failed                                |
| Effect                | PFCP audit is not ended   |

### 3.8.10 UpfAuditStartFailure

Table 59: UpfAuditStartFailure properties

| Property name         | Value   |
|-----------------------|---|
| Application name      | upf-manager   |
| Event name            | UpfAuditStartFailure  |
| Default severity      | error   |
| Message format string | PFCP Audit with UPF <i>upfNodeId</i> not started: <i>errorMessage</i> |
| Cause                 | Starting of PFCP audit with UPF failed                                |
| Effect                | PFCP audit is not started   |

### 3.8.11 UpfAuditStartMgmtInitiated

Table 60: UpfAuditStartMgmtInitiated properties

| Property name         | Value  |
|-----------------------|--|
| Application name      | upf-manager  |
| Event name            | UpfAuditStartMgmtInitiated   |
| Default severity      | informational  |
| Message format string | PFCP Audit with UPF <i>upfNodeId</i> started on management request |
| Cause                 | UPF audit initiated from management console                        |
| Effect                | All sessions and FSGs in UPF will be audited                       |

### 3.8.12 UpfAuditStartPathRestored

Table 61: UpfAuditStartPathRestored properties

| Property name         | Value  |
|-----------------------|--|
| Application name      | upf-manager  |
| Event name            | UpfAuditStartPathRestored                                    |
| Default severity      | informational  |
| Message format string | PFCP Audit with UPF <i>upfNodeId</i> started on path restore |
| Cause                 | UPF audit initiated because of the path being restored       |
| Effect                | All sessions and FSGs in UPF will be audited                 |

### 3.8.13 UpfAuditStartUpfRequested

Table 62: UpfAuditStartUpfRequested properties

| Property name         | Value   |
|-----------------------|---|
| Application name      | upf-manager   |
| Event name            | UpfAuditStartUpfRequested                                   |
| Default severity      | informational   |
| Message format string | PFCP Audit with UPF <i>upfNodeId</i> started on UPF request |
| Cause                 | UPF audit initiated on request from UPF                     |
| Effect                | All sessions and FSGs in UPF will be audited                |

### 3.8.14 UpfPartialAuditAbort

Table 63: UpfPartialAuditAbort properties

| Property name         | Value  |
|-----------------------|--|
| Application name      | upf-manager  |
| Event name            | UpfPartialAuditAbort                                 |
| Default severity      | informational  |
| Message format string | Partial PFCP Audit with UPF <i>upfNodeId</i> aborted |

| Property name | Value                                |
|---------------|--------------------------------------|
| Cause         | Partial UPF audit aborted            |
| Effect        | Ongoing partial UPF audit is aborted |

### 3.8.15 UpfPartialAuditEnd

Table 64: UpfPartialAuditEnd properties

| Property name         | Value  |
|-----------------------|--|
| Application name      | upf-manager                                    |
| Event name            | UpfPartialAuditEnd                             |
| Default severity      | informational                                  |
| Message format string | Partial PFCP Audit with <i>upfNodeId</i> ended |
| Cause                 | Partial UPF audit ended                        |
| Effect                | All requested sessions in UPF are audited      |

### 3.8.16 UpfPartialAuditScheduledByAuditPod

Table 65: UpfPartialAuditScheduledByAuditPod properties

| Property name         | Value   |
|-----------------------|---|
| Application name      | upf-manager   |
| Event name            | UpfPartialAuditScheduledByAuditPod  |
| Default severity      | informational   |
| Message format string | Partial PFCP Audit with UPF <i>upfNodeId</i> started on audit pod request |
| Cause                 | Partial UPF audit initiated by audit pod                                  |
| Effect                | All selected sessions in UPF will be audited                              |

### 3.8.17 UpfPartialAuditStartFailure

Table 66: *UpfPartialAuditStartFailure* properties

| Property name         | Value   |
|-----------------------|---|
| Application name      | upf-manager   |
| Event name            | UpfPartialAuditStartFailure   |
| Default severity      | error   |
| Message format string | Partial PFCP Audit with UPF <i>upfNodeId</i> not started: <i>errorMessage</i> |
| Cause                 | Starting of partial PFCP audit with UPF failed                                |
| Effect                | Partial PFCP audit is not started   |

# Customer document and product support



## Customer documentation

[Customer documentation welcome page](#)



## Technical support

[Product support portal](#)



## Documentation feedback

[Customer documentation feedback](#)