
Configuration Commands

Generic Commands

alarms

Syntax	alarms
Context	config>system
Description	This command enters the context to configure facility alarm parameters.

max-cleared

Syntax	max-cleared <i>max-alarms</i>
Context	config>system>alarms
Description	This command configures the maximum number of cleared alarms that the system will store and display.
Default	500
Parameters	<i>max-alarms</i> — Specify the maximum number of cleared alarms.

shutdown

Syntax	[no] shutdown
Context	config>system>alarms
Description	This command enables or disables the Facility Alarm functionality. When enabled, the Facility Alarm sub-system tracks active and cleared facility alarms and controls the Alarm LEDs on the CPMs/CFMs. When Facility Alarm functionality is enabled, the alarms are viewed using the <code>show system alarms</code> command(s).
Default	no shutdown

