
Configuration Commands

Generic Commands

alarms

| | |
|--------------------|---|
| Syntax | alarms |
| Context | config>system |
| Description | This command enters the context to configure facility alarm parameters. |

max-cleared

| | |
|--------------------|--|
| Syntax | max-cleared <i>max-alarms</i> |
| Context | config>system>alarms |
| Description | This command configures the maximum number of cleared alarms that the system will store and display. |
| Default | 500 |
| Parameters | <i>max-alarms</i> — Specify the maximum number of cleared alarms. |

shutdown

| | |
|--------------------|--|
| Syntax | [no] shutdown |
| Context | config>system>alarms |
| Description | This command enables or disables the Facility Alarm functionality. When enabled, the Facility Alarm sub-system tracks active and cleared facility alarms and controls the Alarm LEDs on the CPMs/CFMs. When Facility Alarm functionality is enabled, the alarms are viewed using the <code>show system alarms</code> command(s). |
| Default | no shutdown |

