
Configuration Commands

NETCONF System Commands

netconf

Syntax	netconf
Context	config>system>security>profile
Description	This command authorizes netconf capability for the user.

kill-session

Syntax	[no] kill-session
Context	config>system>security>profile>netconf>base-op-authorization
Description	This operation authorizes a user associated with the profile to send a <kill-session> NETCONF operation. This <kill-session> operation allows a NETCONF client to kill another NETCONF session, but not the session in which the operation is requested.
Default	no kill-session

shutdown

Syntax	[no] shutdown
Context	config>system>netconf
Description	This command disables the NETCONF server. 'shutdown' is blocked if there are any active NETCONF sessions. Use the “admin disconnect” command to disconnect all NETCONF sessions before shutting down the NETCONF service.

base-op-authorization

Syntax	base-op-authorization
Context	config>system>security>profile>netconf
Description	This command enters the context where permission to use various NETCONF operations is controlled.

