

# Slope QoS Policy Command Reference

---

## Command Hierarchies

### Configuration Commands

```
config
  — qos
    — [no] slope-policy name
      — description description-string
      — no description
      — [no] high-slope
        — max-avg percent
        — no max-avg
        — max-prob percent
        — no max-prob
        — start-avg percent
        — no start-avg
        — [no] shutdown
      — [no] low-slope
        — max-avg percent
        — no max-avg
        — max-prob percent
        — no max-prob
        — start-avg percent
        — no start-avg
        — [no] shutdown
      — time-average-factor value
      — no time-average-factor
```

### Operational Commands

```
config
  — qos
    — copy slope-policy src-name dst-name [overwrite]
```

## Show Commands

```
show
  — qos
    — slope-policy [slope-policy-name] [detail]
```