

Nokia Service Router Linux

Release 24.7

Log Events Guide

3HE 20659 AAAA TQZZA Edition: 01 July 2024

© 2024 Nokia.

Use subject to Terms available at: www.nokia.com/terms.

Nokia is committed to diversity and inclusion. We are continuously reviewing our customer documentation and consulting with standards bodies to ensure that terminology is inclusive and aligned with the industry. Our future customer documentation will be updated accordingly.

This document includes Nokia proprietary and confidential information, which may not be distributed or disclosed to any third parties without the prior written consent of Nokia.

This document is intended for use by Nokia's customers ("You"/"Your") in connection with a product purchased or licensed from any company within Nokia Group of Companies. Use this document as agreed. You agree to notify Nokia of any errors you may find in this document; however, should you elect to use this document for any purpose(s) for which it is not intended, You understand and warrant that any determinations You may make or actions You may take will be based upon Your independent judgment and analysis of the content of this document.

Nokia reserves the right to make changes to this document without notice. At all times, the controlling version is the one available on Nokia's site.

No part of this document may be modified.

NO WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF AVAILABILITY, ACCURACY, RELIABILITY, TITLE, NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS MADE IN RELATION TO THE CONTENT OF THIS DOCUMENT. IN NO EVENT WILL NOKIA BE LIABLE FOR ANY DAMAGES, INCLUDING BUT NOT LIMITED TO SPECIAL, DIRECT, INDIRECT, INCIDENTAL OR CONSEQUENTIAL OR ANY LOSSES, SUCH AS BUT NOT LIMITED TO LOSS OF PROFIT, REVENUE, BUSINESS INTERRUPTION, BUSINESS OPPORTUNITY OR DATA THAT MAY ARISE FROM THE USE OF THIS DOCUMENT OR THE INFORMATION IN IT, EVEN IN THE CASE OF ERRORS IN OR OMISSIONS FROM THIS DOCUMENT OR ITS CONTENT.

Copyright and trademark: Nokia is a registered trademark of Nokia Corporation. Other product names mentioned in this document may be trademarks of their respective owners.

The registered trademark Linux® is used pursuant to a sublicense from the Linux Foundation, the exclusive licensee of Linus Torvalds, owner of the mark on a worldwide basis.

© 2024 Nokia.

Table of contents

1	Abo	ut this guide	20
	1.1	Precautionary and information messages	20
	1.2	Conventions	20
2	Log	events overview	22
	2.1	Example log event	22
	2.2	Log event properties	23
3	Wha	it's new	25
4	aaa.		28
	4.1	serverDown	28
	4.2	serverGroupDown	28
	4.3	serverRouteUnavailable	29
	4.4	serverTimeout	29
	4.5	sessionClosed	30
	4.6	sessionDisconnected	30
	4.7	sessionIdleDisconnected	30
	4.8	sessionOpened	31
	4.9	userAuthenticationFailed	31
	4.10	userAuthenticationSucceeded	32
	4.11	userLockoutReset	32
	4.12	userLockoutSet.	33
	4.13	userPasswordChanged	33
	4.14	userPasswordExpired	33
5	арр.		35
	5.1	applicationFailed	35
	5.2	applicationFailureActionTriggered	35
	5.3	applicationRestarted	36
	5.4	applicationStarted	36
	5.5	applicationStarting	36
			0.0

	6.1	aclCpmlpv4MatchedPacket	38
	6.2	aclCpmlpv6MatchedPacket	38
	6.3	aclInterfaceInputIpv4MatchedPacket	39
	6.4	aclInterfaceInputIpv6MatchedPacket	39
	6.5	aclInterfaceOutputIpv4MatchedPacket	40
	6.6	aclInterfaceOutputIpv6MatchedPacket	40
	6.7	aclTcamProgComplete	41
	6.8	platformAclHighUtilization	41
	6.9	platformAclHighUtilizationLowered	42
	6.10	platformTcamHighUtilization	42
	6.11	platformTcamHighUtilizationLowered	43
7	arpn	nd	44
	7.1	ipArpEntryUpdated	44
	7.2	ipSubinterfaceDuplicateIpv4Address	44
	7.3	ipSubinterfaceDuplicateIpv6Address	45
	7.4	ipSubinterfaceDuplicateMacAddress	45
	7.5	ipSubinterfaceInvalidArp	45
	7.6	ipSubinterfaceInvalidIpv6NeighborSolicitation	46
	7.7	ipv6NeighborEntryUpdated	46
	7.8	ipv6NeighborSubinterfaceLimit	47
	7.9	ipv6NeighborSubinterfaceLimitThreshold	47
8	bfd		48
	8.1	bfdDownEvent	48
	8.2	bfdMaxSessionActive	48
	8.3	bfdProtocolClientAdd	49
	8.4	bfdProtocolClientRemove	49
	8.5	bfdSessionDeleted	50
	8.6	bfdSessionUp	50
	8.7	bfdWarmrebootAdjustTimers	51
	8.8	bfdWarmrebootRestoreTimers	51
	8.9	microbfdDownEvent	51
	8.10	microbfdMaxSessionActive	52
	8.11	microbfdSessionDeleted	53
	8.12	microbfdSessionUp	53

	8.13	sbfdechoDownEvent	54
	8.14	sbfdechoMaxSessionActive	54
	8.15	sbfdechoSessionDeleted	55
	8.16	sbfdechoSessionUp	55
9	bgp.		56
	9.1	bgpIncomingDynamicPeerLimitReached	56
	9.2	bgpIncomingInterfaceDynamicPeerLimitReached	56
	9.3	bgpInstanceConvergenceStateTransition	57
	9.4	bgpLowMemory	57
	9.5	bgpNeighborBackwardTransition	58
	9.6	bgpNeighborClosedTCPConn	58
	9.7	bgpNeighborEstablished	58
	9.8	bgpNeighborGRHelpingStarted	59
	9.9	bgpNeighborGRHelpingStopped	59
	9.10	bgpNeighborHoldTimeExpired	60
	9.11	bgpNeighborInvalidLocalIP	60
	9.12	bgpNeighborNoOpenReceived	61
	9.13	bgpNeighborPrefixLimitReached	61
	9.14	bgpNeighborPrefixLimitThresholdReached	62
	9.15	bgpNeighborUnknownRemoteIP	62
	9.16	bgpNLRIInvalid	63
	9.17	bgpNotificationReceivedFromNeighbor	63
	9.18	bgpNotificationSentToNeighbor	64
	9.19	bgpOutgoingDynamicPeerLimitReached	64
	9.20	bgpPathAttributeDiscarded	65
	9.21	bgpPathAttributeMalformed	65
	9.22	bgpRouteWithdrawnDueToError	66
	9.23	bgpUpdateInvalid	66
10	brio	lgetable	67
	10.1	evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimit HighUtilization	67
	10.2	evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimit HighUtilizationLowered	67
	10.3	evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitLowered	68
	10.4	evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitReached	68
	10.5	I2ConnectionpointBridgeTableDuplicateMacAddressDeleted	69

10.6	I2ConnectionpointBridgeTableDuplicateMacAddressDetected	69
10.7	I2ConnectionpointBridgeTableMacLimitHighUtilization	70
10.8	I2ConnectionpointBridgeTableMacLimitHighUtilizationLowered	70
10.9	I2ConnectionpointBridgeTableMacLimitLowered	71
10.10	I2ConnectionpointBridgeTableMacLimitReached	71
10.11	I2SubinterfaceBridgeTableDuplicateMacAddressDeleted	72
10.12	I2SubinterfaceBridgeTableDuplicateMacAddressDetected	72
10.13	I2SubinterfaceBridgeTableMacLimitHighUtilization	73
10.14	I2SubinterfaceBridgeTableMacLimitHighUtilizationLowered	73
10.15	I2SubinterfaceBridgeTableMacLimitLowered	74
10.16	I2SubinterfaceBridgeTableMacLimitReached	74
10.17	networkInstanceBridgeTableDuplicateMacAddressDeleted	75
10.18	networkInstanceBridgeTableDuplicateMacAddressDetected	75
10.19	networkInstanceBridgeTableMacLimitHighUtilization	76
10.20	networkInstanceBridgeTableMacLimitHighUtilizationLowered	76
10.21	networkInstanceBridgeTableMacLimitLowered	77
10.22	networkInstanceBridgeTableMacLimitReached	77
10.23	networkInstanceBridgeTableProxyArpLimitHighUtilization	78
10.24	networkInstanceBridgeTableProxyArpLimitHighUtilizationLowered	78
10.25	networkInstanceBridgeTableProxyArpNdDuplicateIpAddressDeleted	79
10.26	networkInstanceBridgeTableProxyArpNdDuplicateIpAddressDetected	79
10.27	networkInstanceBridgeTableProxyNdLimitHighUtilization	80
10.28	networkInstanceBridgeTableProxyNdLimitHighUtilizationLowered	80
10.29	systemBridgeTableMacLimitHighUtilization	81
10.30	systemBridgeTableMacLimitHighUtilizationLowered	81
10.31	systemBridgeTableMacLimitLowered	82
10.32	systemBridgeTableMacLimitReached	82
10.33	systemBridgeTableProxyArpLimitHighUtilization	83
10.34	systemBridgeTableProxyArpLimitHighUtilizationLowered	83
10.35	systemBridgeTableProxyNdLimitHighUtilization	84
10.36	systemBridgeTableProxyNdLimitHighUtilizationLowered	84
10.37	systemEvpnMplsMulticastPeersLimitHighUtilization	85
10.38	systemEvpnMplsMulticastPeersLimitHighUtilizationLowered	85
10.39	systemEvpnMplsMulticastPeersLimitLowered	86
10.40	systemEvpnMplsMulticastPeersLimitReached	86
10 41	systemMulticastIdLimitHighUtilization	86

	10.42	systemMulticastIdLimitHighUtilizationLowered	87
	10.43	vxlanInterfaceBridgeTableMulticastDestinationsLimitHighUtilization	87
	10.44	vxlanInterfaceBridgeTableMulticastDestinationsLimit HighUtilizationLowered	88
	10.45	vxlanInterfaceBridgeTableMulticastDestinationsLimitLowered	88
	10.46	vxlanInterfaceBridgeTableMulticastDestinationsLimitReached	89
11	chas	ssis	90
	11.1	platformDatapathResourceHighUtilization	90
	11.2	platformDatapathResourceHighUtilizationLowered	90
	11.3	platformDatapathResourceLimitCleared	91
	11.4	platformDatapathResourceLimitReached	91
	11.5	platformMtuHighUtilization	92
	11.6	platformMtuHighUtilizationLowered	92
	11.7	platformPipelineResourceHighUtilization	93
	11.8	platformPipelineResourceHighUtilizationLowered	93
	11.9	platformPipelineResourceLimitCleared	94
	11.10	platformPipelineResourceLimitReached	94
	11.11	portDown	95
	11.12	portEtherCrcMonAlarmClear	95
	11.13	portEtherCrcMonAlarmSet	95
	11.14	portEtherSymMonAlarmClear	96
	11.15	portEtherSymMonAlarmSet	96
	11.16	portUp	97
	11.17	secureBootDisabled	97
	11.18	secureBootEnabled	98
	11.19	subinterfaceDown	98
	11.20	subinterfaceUp	98
	11.21	transceiverChannelHighInputPowerAlarm	99
	11.22	transceiverChannelHighInputPowerAlarmClear	99
	11.23	transceiverChannelHighInputPowerWarning	100
	11.24	transceiverChannelHighInputPowerWarningClear	100
	11.25	transceiverChannelHighLaserBiasCurrentAlarm	101
	11.26	transceiverChannelHighLaserBiasCurrentAlarmClear	101
	11.27	transceiverChannelHighLaserBiasCurrentWarning	102
	11.28	transceiverChannelHighLaserBiasCurrentWarningClear	102
	11.29	transceiverChannelHighOutputPowerAlarm	103

11.30	transceiverChannelHighOutputPowerAlarmClear	103
11.31	transceiverChannelHighOutputPowerWarning	103
11.32	transceiverChannelHighOutputPowerWarningClear	104
11.33	transceiverChannelLowInputPowerAlarm	104
11.34	transceiverChannelLowInputPowerAlarmClear	105
11.35	transceiverChannelLowInputPowerWarning	105
11.36	transceiverChannelLowInputPowerWarningClear	106
11.37	transceiverChannelLowLaserBiasCurrentAlarm	106
11.38	transceiverChannelLowLaserBiasCurrentAlarmClear	106
11.39	transceiverChannelLowLaserBiasCurrentWarning	107
11.40	transceiverChannelLowLaserBiasCurrentWarningClear	107
11.41	transceiverChannelLowOutputPowerAlarm	108
11.42	transceiverChannelLowOutputPowerAlarmClear	108
11.43	transceiverChannelLowOutputPowerWarning	109
11.44	transceiverChannelLowOutputPowerWarningClear	109
11.45	transceiverHighInputPowerAlarm	109
11.46	transceiverHighInputPowerAlarmClear	110
11.47	transceiverHighInputPowerWarning	110
11.48	transceiverHighInputPowerWarningClear	111
11.49	transceiverHighLaserBiasCurrentAlarm	111
11.50	transceiverHighLaserBiasCurrentAlarmClear	112
11.51	transceiverHighLaserBiasCurrentWarning	112
11.52	transceiverHighLaserBiasCurrentWarningClear	112
11.53	transceiverHighOutputPowerAlarm	113
11.54	transceiverHighOutputPowerAlarmClear	113
11.55	transceiverHighOutputPowerWarning	114
11.56	transceiverHighOutputPowerWarningClear	114
11.57	transceiverLowInputPowerAlarm	115
11.58	transceiverLowInputPowerAlarmClear	115
11.59	transceiverLowInputPowerWarning	115
11.60	transceiverLowInputPowerWarningClear	116
11.61	transceiverLowLaserBiasCurrentAlarm	116
11.62	transceiverLowLaserBiasCurrentAlarmClear	117
11.63	transceiverLowLaserBiasCurrentWarning	117
11.64	transceiverLowLaserBiasCurrentWarningClear	117
11 65	transceivert owOutnutPowerAlarm	119

	11.66	transceiverLowOutputPowerAlarmClear	118
	11.67	transceiverLowOutputPowerWarning	119
	11.68	transceiverLowOutputPowerWarningClear	119
	11.69	transceiverModuleDown	119
	11.70	transceiverModuleHighTemperatureAlarm	120
	11.71	transceiverModuleHighTemperatureAlarmClear	120
	11.72	transceiverModuleHighTemperatureWarning	121
	11.73	transceiverModuleHighTemperatureWarningClear	121
	11.74	transceiverModuleHighVoltageAlarm	121
	11.75	transceiverModuleHighVoltageAlarmClear	122
	11.76	transceiverModuleHighVoltageWarning	122
	11.77	transceiverModuleHighVoltageWarningClear	123
	11.78	transceiverModuleLowTemperatureAlarm	123
	11.79	transceiverModuleLowTemperatureAlarmClear	123
	11.80	transceiverModuleLowTemperatureWarning	124
	11.81	transceiverModuleLowTemperatureWarningClear	124
	11.82	transceiverModuleLowVoltageAlarm	125
	11.83	transceiverModuleLowVoltageAlarmClear	125
	11.84	transceiverModuleLowVoltageWarning	125
	11.85	transceiverModuleLowVoltageWarningClear	126
	11.86	transceiverModuleUp	126
12	debu	ug	127
	12.1	setAllConfigLevels	127
	12.2	setAllStartupLevels	127
	12.3	setHighBaselineLogLevels	128
13	dhcı	p	129
	13.1	dhcp6ClientAddressDeclined	129
	13.2	dhcp6Clientlpv6AddressValidLifetimeExpired	129
	13.3	dhcp6ClientRebindAttempted	130
	13.4	dhcp6ClientReconfigureMsgDropped	130
	13.5	dhcp6ClientRenewSuccess	131
	13.6	dhcpClientAddressDeclined	131
	13.7	dhcpClientLeaseExpired	132
	13.8	dhcpClientRebindAttempted	132

	13.9	dhcpClientRenewSuccess	132
	13.10	dhcpv4RelayAdminDisable	133
	13.11	dhcpv4RelayAdminEnable	133
	13.12	dhcpv4RelayAllDhcpv4ServersUnreachable	134
	13.13	dhcpv4RelayOperDown	134
	13.14	dhcpv4RelayOperUp	135
	13.15	dhcpv6RelayAdminDisable	135
	13.16	dhcpv6RelayAdminEnable	136
	13.17	dhcpv6RelayAllDhcpv6ServersUnreachable	136
	13.18	dhcpv6RelayOperDown	137
	13.19	dhcpv6RelayOperUp	137
	13.20	giAddressMismatch	137
	13.21	sourceAddressMismatch	138
14	ethc	fm	139
	14.1	ClearErrorCcm	139
	14.2	ClearLOC	139
	14.3	ClearMacStatus	140
	14.4	ClearMMG	140
	14.5	clearOneWayDmTCA	141
	14.6	ClearRDI	141
	14.7	ClearRemoteCcm	142
	14.8	ClearRemoteDefectIndication	142
	14.9	clearTwoWayDmTCA	143
	14.10	clearTwoWaySImAvgflrTCA	143
	14.11	clearTwoWaySlmHliTCA	144
	14.12	clearTwoWaySlmUnavailTCA	144
	14.13	ClearUNL	145
	14.14	ClearUNM	145
	14.15	ClearUNP	145
	14.16	ClearXconCcm	146
	14.17	linktraceCompleted	146
	14.18	loopbackCompleted	147
	14.19	RaiseErrorCcm	147
	14.20	RaiseLOC	148
	44.04	DeigaMagCtatus	140

	14.22	RaiseMMG	149
	14.23	raiseOneWayDmTCA	149
	14.24	RaiseRDI	150
	14.25	RaiseRemoteCcm.	150
	14.26	RaiseRemoteDefectIndication.	151
	14.27	raiseTwoWayDmTCA	151
	14.28	raiseTwoWaySlmAvgflrTCA	152
	14.29	raiseTwoWaySImHliTCA	152
	14.30	raiseTwoWaySlmUnavailTCA	153
	14.31	RaiseUNL	153
	14.32	RaiseUNM	154
	14.33	RaiseUNP	154
	14.34	RaiseXconCcm	155
	14.35	singleEndedDmmCompleted	155
	14.36	singleEndedSImCompleted	156
	14.37	TwoWaySlmAvailabilityState	156
15	evpr	1	157
	15.1	ethernetsegmentNetworkInstanceBgpInstanceDfStatusChanged	157
	15.2	ethernetsegmentPreferenceOperValueChanged	157
	15.3	evpnAutoDiscoveryEviRouteAddDroppedDueToUnexpectedEthTag	158
	15.4	evpnAutoDiscoveryEviRouteWithdrawDroppedDueToUnexpected EthTag	158
	15.5	evpnAutoDiscoveryEviRouteWithdrawnDueToUnexpectedVni	159
	15.6	evpnInclMcastRouteAddDroppedDueToUnexpectedEthTag	159
	15.7	evpnInclMcastRouteWithdrawDroppedDueToUnexpectedEthTag	160
	15.8	evpnInclMcastRouteWithdrawnDueToUnexpectedVni	161
	15.9	evpnIpPrefixRouteNotImportedDueToUnexpectedVni	161
	15.10	evpnIpPrefixRouteWithdrawnDueToNoGwMac	162
	15.11	evpnIpPrefixRouteWithdrawnDueToUnexpectedGwIp	162
	15.12	evpnMacRouteAddDroppedDueToUnexpectedEthTag	163
	15.13	evpnMacRouteWithdrawDroppedDueToUnexpectedEthTag	163
	15.14	evpnMacRouteWithdrawnDueToUnexpectedVni	164
16	gnsi		165
	16.1	gnsiAcctzSubscriptionEnd	165
	16.2	gnsiAcctzSubscriptionRequestReceived	165

	16.3	gnsiAcctzSubscriptionStart	166
	16.4	gnsiAuthzPolicyFinalized	166
	16.5	gnsiAuthzPolicyInvalid	167
	16.6	gnsiAuthzPolicyNotFinalized	167
	16.7	gnsiAuthzPolicyRotate	168
	16.8	gnsiCertzRotate	168
	16.9	gnsiCertzRotateFinalized	169
	16.10	gnsiCertzRotateInvalid	169
	16.11	gnsiCertzRotateNotFinalized	170
	16.12	gnsiCredentialzRotateAccountCredentials	170
	16.13	gnsiCredentialzRotateAccountCredentialsFinalized	171
	16.14	gnsiCredentialzRotateAccountCredentialsInvalid	171
	16.15	gnsiCredentialzRotateAccountCredentialsNotFinalized	172
	16.16	gnsiCredentialzRotateHostParameters	172
	16.17	gnsiCredentialzRotateHostParametersFinalized	173
	16.18	gnsiCredentialzRotateHostParametersInvalid	173
	16.19	gnsiCredentialzRotateHostParametersNotFinalized	174
	16.20	gnsiPathzPolicyFinalized	174
	16.21	gnsiPathzPolicyInvalid	175
	16.22	gnsiPathzPolicyNotFinalized	175
	16.23	gnsiPathzPolicyRotate	176
17	grpc		177
	17.1	configUpdate	177
	17.2	grpcServerStart	177
	17.3	grpcServerStop	178
	17.4	subscriptionEnd	178
	17.5	subscriptionRequestReceived	178
	17.6	subscriptionStart	179
	17.7	unixSocketGrpcOperDown	179
	17.8	unixSocketGrpcOperUp	180
18	igmp	3	181
	18.1	igmpCModeRxQueryVersionMismatch	181
	18.2	igmpMaxNumberOfGroupSourcesReached	181
	18.3	igmpMaxNumberOfGroupsReached	182

	18.4	igmpMaxNumberOfSourcesReached	182
	18.5	igmpRxQueryVersionMismatch	183
19	ieie		19.4
19	19.1	isisAdjacencyBfdSessionSetupFailed	
	19.2	isisAdjacencyChange	
	19.3	isisAdjacencyRestartStatusChange	
	19.4	isisAreaMismatch	
	19.5	isisAuthDataFail	
	19.6	isisAuthTypeMismatch	
	19.7	isisCircuitIdsExhausted	
	19.8	isisCircuitMtuTooLow	
	19.9	isisCorruptedLspDetected	
	19.10	isisLdpSyncExited	
	19.11	isisLdpSyncTimerStarted	189
	19.12	isisLspFragmentTooLarge	189
	19.13	isisLspPurge	190
	19.14	isisLspSequenceNumberSkip	190
	19.15	isisMaxAreaAddressesMismatch	190
	19.16	isisMaxLspSequenceNumberExceeded	191
	19.17	isisOverloadEntry	191
	19.18	isisOverloadExit	192
	19.19	isisOwnLspPurge	192
	19.20	isisSystemIdLengthMismatch	193
	19.21	isisVersionMismatch	193
20	json		194
	20.1	authenticationError	
	20.2	globalConfigUpdate	194
	20.3	httpJsonRpcOperDown	195
	20.4	httpJsonRpcOperUp	195
	20.5	httpsJsonRpcOperDown	196
	20.6	httpsJsonRpcOperUp	196
	20.7	jsonRpcRequestReceived	197
	20.8	jsonRpcResponseSent	197
	20.9	networkInstanceConfigUpdate	197

	20.10	unixSocketJsonRpcOperDown	198
	20.11	unixSocketJsonRpcOperUp	198
	20.12	userAuthenticated	199
	20.13	userAuthenticationErrorWrongPassword	199
21	lag		200
	21.1	lagDown	200
	21.2	lagDownMinLinks	200
	21.3	lagMemberLinkAdded	201
	21.4	lagMemberLinkRemoved	201
	21.5	lagMemberOperDown	201
	21.6	lagMemberOperUp	202
	21.7	lagUp	202
22	ldp		204
	22.1	ldplpv4InstanceDown	204
	22.2	ldplpv4InstanceUp	204
	22.3	ldplPv4InterfaceDown	205
	22.4	ldpIPv4InterfaceUp	205
	22.5	ldpIPv4TargetDown	206
	22.6	ldpIPv4TargetUp	206
	22.7	ldplpv6InstanceDown	
	22.8	ldplpv6InstanceUp	207
	22.9	ldpIPv6InterfaceDown	207
	22.10	ldpIPv6InterfaceUp	208
	22.11	IdpIPv6TargetDown	208
	22.12	ldpIPv6TargetUp	209
	22.13	IdpSessionDown	209
	22.14	IdpSessionFecLimitReached	210
	22.15	IdpSessionLocalIPv4Overload	210
	22.16	IdpSessionLocalIPv4OverloadCleared	211
	22.17	IdpSessionLocalIPv6Overload	211
	22.18	IdpSessionLocalIPv6OverloadCleared	211
	22.19	IdpSessionPeerIPv4Overload	212
	22.20	IdpSessionPeerIPv4OverloadCleared	212
	22.21	ldpSessionPeerIPv6Overload	213

	22.22	IdpSessionPeerIPv6OverloadCleared	213
	22.23	IdpSessionUp	214
23	licer	nse	215
	23.1	licenseExpirySoon	215
24	linux	C	216
	24.1	cpuUsageCritical	216
	24.2	cpuUsageHigh	216
	24.3	cpuUsageNormal	217
	24.4	dateAndTimeChanged	217
	24.5	domainChanged	217
	24.6	hostnameChanged	218
	24.7	memoryUsageCritical	218
	24.8	memoryUsageFull	219
	24.9	memoryUsageHigh	219
	24.10	memoryUsageNormal	220
	24.11	partitionStateChange	220
	24.12	partitionUsageCritical	220
	24.13	partitionUsageFull	221
	24.14	partitionUsageNormal	221
	24.15	partitionUsageWarning	222
	24.16	serviceConfigChanged	222
	24.17	serviceDownInNetworkInstance	223
	24.18	serviceUpInNetworkInstance	223
	24.19	tlsProfileExpired	224
	24.20	tlsProfileExpiresSoon	224
25	lldp.		225
	25.1	remotePeerAdded	225
	25.2	remotePeerRemoved	225
	25.3	remotePeerUpdated	226
26	log		227
	26.1	bufferRollover	227
	26.2	configUpdate	227
	26.3	fileRollover	228

	26.4	networkNamespaceChanged	228
	26.5	subsystemFacilityChanged	229
07			222
27		nt	
	27.1	checkpointGenerated	
	27.2	checkpointRevertRequestReceived	
	27.3	commitFailed	
	27.4	commitSucceeded	
	27.5	exclusiveConfigSessionBlockedByOtherSessionError	
	27.6	exclusiveConfigSessionError	
	27.7	privateConfigSessionError	
	27.8	privateSharedMismatch	
	27.9	sharedConfigSessionBlockedByOtherSessionError	233
28	mirro	or	234
	28.1	mirrorDestinationDelete	234
	28.2	mirrorDestinationOperDown	234
	28.3	mirrorDestinationOperUP	235
	28.4	mirrorDestnationAdd	235
	28.5	mirrorInstanceAdminDisable	236
	28.6	mirrorInstanceAdminEnable	236
	28.7	mirrorInstanceOperDown	236
	28.8	mirrorInstanceOperUp	237
	28.9	mirrorSourceAdd	237
	28.10	mirrorSourceDelete	238
29	netc	onf	239
	29.1	netconfHello	
	29.2	netconfRpcError	
	29.3	netconfRpcReply	
	29.4	netconfRpcRequest	
	29.5	netconfRpcStart	
	29.6	netconfRpcSuccess	
	29.7	netconfSessionClosed	
	29.8	netconfSessionDisconnected	242
	29.9	netconfSessionKilled	242

	29.10	netconfSessionOpened	242
30	netir	nst	244
	30.1	networkInstanceInterfaceDown	244
	30.2	networkInstanceInterfaceUp	244
	30.3	networkInstanceStateDown	
	30.4	networkInstanceStateUp	245
31	oam	_pm	246
	31.1	ThresholdDelayEventClear	246
	31.2	ThresholdDelayEventRaise	246
	31.3	ThresholdLossEventClear	247
	31.4	ThresholdLossEventRaise	247
32	ospf	F	248
	32.1	ospfAdjacencyBfdSessionSetupFailed	248
	32.2	ospfAdjacencyChange	248
	32.3	ospfAdjacencyRestartStatusChange	249
	32.4	ospfAsMaxAgeLSA	249
	32.5	ospfExportLimitReached	250
	32.6	ospfExportLimitWarning	250
	32.7	ospfFailure	251
	32.8	ospflfLdpSyncStateChange	251
	32.9	ospflfRxBadPacket	251
	32.10	ospflfStateChange	252
	32.11	ospfLsdbApproachingOverflow	252
	32.12	ospfLsdbOverflow	253
	32.13	ospfNbrMtuMismatch	253
	32.14	ospfOverloadEntry	254
	32.15	ospfOverloadExit	254
	32.16	ospfOverloadWarning	255
	32.17	ospfSpfRunRestarted	
	32.18	ospfSpfRunsStopped	255
	32.19	osplfAuthDataFailure	256
33	platf	form	257
	33 1	airflowCorrected	257

33.2	airflowMismatch	257
33.3	componentBooting	258
33.4	componentDown	258
33.5	componentFailed	258
33.6	componentInserted	259
33.7	componentLocatorDisabled	259
33.8	componentLocatorEnabled	260
33.9	componentPowerDown	260
33.10	componentPowerUp	261
33.11	componentRemoved	261
33.12	componentRestarted	262
33.13	componentTemperatureExceeded	262
33.14	componentTemperatureFailure	262
33.15	componentTemperatureNormal	263
33.16	componentUp	263
33.17	controlModuleActivityChange	264
33.18	controlModuleConfigSynchronized	264
33.19	controlModuleImageSynchronized	265
33.20	controlModuleInSync	265
33.21	controlModuleOverlaySynchronized	265
33.22	controlModuleSyncLost	266
33.23	controlModuleSyncStart	266
33.24	fantrayEmpty	267
33.25	fips140ConfiguredOperDown	267
33.26	fips140ConfiguredOperUp	268
33.27	fips140ConfiguredWaitingReboot	268
33.28	fips140NotActive	268
33.29	fips140Removed	269
33.30	linecardCapacityDegraded	269
33.31	linecardCapacityNormal	270
33.32	platformLowPower	270
33.33	platformLowReservePower	271
33.34	platformNoPowerRedundancy	271
33.35	platformNormalPower	271
33.36	platformPowerRedundancyRecovered	272
33.37	psuInputDown	272

	33.38	psuInputUp	273
	33.39	psuOutputDown	273
	33.40	psuOutputUp	274
	33.41	psuTemperatureFault	274
	33.42	psuTemperatureNormal	274
	33.43	systemInServiceSoftwareUpgrade	275
	33.44	systemReboot	275
	33.45	systemWarmReboot	276
	33.46	systemWarmRebootAborted	276
34	qos.		277
	34.1	platformQoSProfileHighUtilization	277
	34.2	platformQoSProfileHighUtilizationLowered	277
35	ra_g	juard-agent	278
	35.1	ra_guardAdd	278
	35.2	ra_guardRemove	278
36	sflov	w	279
	36.1	sFlowAgentChange	279
	36.2	sFlowCollectorUnreachable	279
37	sync	2	280
	37.1	syncFreqClockQLChange	280
	37.2	syncFreqClockRefChange	280
	37.3	syncFreqClockStateChange	281
	37.4	syncFreqInstanceAlarmChange	281
	37.5	syncFreqInstanceQLChange	281
	37.6	syncPTPParentChange	282
	37.7	syncPTPParentChangeIP	282
	37.8	syncPTPPortPTSFUnusable	283
	37.9	syncPTPTimeRecoveryState	283

1 About this guide

This document provides guidance for operators to interpret log events for the Nokia Service Router Linux (SR Linux). This document is intended for users who need to access and understand log events for SR Linux.



Note:

This manual covers the current release and may also contain some content that will be released in later maintenance loads. See the *SR Linux Release Notes* for information about features supported in each load.

Configuration and command outputs shown in this guide are examples only; actual displays may differ depending on supported functionality and user configuration.

1.1 Precautionary and information messages

The following are information symbols used in the documentation.



DANGER: Danger warns that the described activity or situation may result in serious personal injury or death. An electric shock hazard could exist. Before you begin work on this equipment, be aware of hazards involving electrical circuitry, be familiar with networking environments, and implement accident prevention procedures.



WARNING: Warning indicates that the described activity or situation may, or will, cause equipment damage, serious performance problems, or loss of data.



Caution: Caution indicates that the described activity or situation may reduce your component or system performance.



Note: Note provides additional operational information.



Tip: Tip provides suggestions for use or best practices.

1.2 Conventions

Nokia SR Linux documentation uses the following command conventions.

- Bold indicates a command that the user must enter.
- Input and output examples are displayed in Courier text.
- An open right angle bracket indicates a progression of menu choices or simple command sequence (often selected from a user interface). Example: start > connect to
- A vertical bar (|) indicates a mutually exclusive argument.
- Square brackets ([]) indicate optional elements.

- Braces ({ }) indicate a required choice. When braces are contained within square brackets, they indicate a required choice within an optional element.
- Italic indicates a variable.

Generic IP addresses are used in examples. Replace these with the appropriate IP addresses used in the system.

2 Log events overview

This section provides general information about the log events described in this guide for the Nokia Service Router Linux (SR Linux).

For more information about logging, see the SR Linux Configuration Basics Guide.

2.1 Example log event

The following contains an example log event entry from this guide for the bgpNeighborBackwardTransition log event.

Table 1: bgpNeighborBackwardTransition properties

Property name	Value
Application name	bgp
Event name	bgpNeighborBackwardTransition
Default severity	warning
Message format string	In network-instance \$network-instance\$, the BGP session with \$peer-address\$ moved from higher state \$last-state\$ to lower state \$session-state\$ due to event \$last-event\$
Cause	No routes can be exchanged with this peer
Effect	N/A

The table title for a log event entry is the event name. Each entry contains the information described in the table that follows.

Table 2: Log event entry field descriptions

Label	Description
Application name	Name of the application generating the log message
Event name	Name of the log event
Default severity	Severity level of the log event (see Table 3: Log event entry field descriptions for the severity level)
Message format string	Text description of the log event
Cause	Cause of the log event

Label	Description
Effect	Effect of the log event

2.2 Log event properties

Log events that are forwarded to a destination are formatted. All application-generated events have the following properties:

- · time stamp in UTC or local time
- generating application
- router name identifying the VRF-ID that generated the event
- · subject identifying the affected object
- · short message describing the event

A log event with a memory, console, or file destination has the following format:

```
nnnn YYYY/MM/DD HH:MM:SS.SS TZONE <severity>: <application> <router-name>
  <subject>
  <message>
```

Format properties are described in Table 3: Log event entry field descriptions.

Table 3: Log event entry field descriptions

Label	Description
nnnn	Log event entry sequence number
YYYY/MM/DD	UTC or local date stamp for the log event entry:
	YYYY — Year
	MM — Month
	<i>DD</i> — Day
HH:MM:SS.SS	UTC time stamp for the event:
	HH — Hours (24-hour format)
	MM — Minutes
	SS.SS — Seconds.hundredths of a second
TZONE	Time zone (for example, UTC, EDT)
<severity></severity>	Severity level of the log event:
	emerg — System is unusable
	alert — Action must be taken immediately
	crit — Critical conditions
	err — Error conditions

Label	Description
	warning — Warning conditions
	notice — Normal but significant condition
	info — Informational messages
	debug — Debug-level messages
<application></application>	Name of the application generating the log event message
<router></router>	Router name representing the VRF-ID that generated the log event
<subject></subject>	Subject/affected object for the log event
<message></message>	Text description of the log event

3 What's new

Table 4: Event Changes

Event Name	Change
ThresholdDelayEventClear	New
ThresholdDelayEventRaise	New
ThresholdLossEventClear	New
ThresholdLossEventRaise	New
fips140ConfiguredOperDown	New
fips140ConfiguredOperUp	New
fips140ConfiguredWaitingReboot	New
fips140NotActive	New
fips140Removed	New
globalConfigUpdate	Dropped
globalConfigUpdate	Dropped
globalConfigUpdate	Dropped
gnmiServerStart	Dropped
gnmiServerStop	Dropped
gnsiPathzPolicyFinalized	New
gnsiPathzPolicyInvalid	New
gnsiPathzPolicyNotFinalized	New
gnsiPathzPolicyRotate	New
gribiServerStart	Dropped
gribiServerStop	Dropped
ldpSessionLocallPv4OverloadCleared	New
ldpSessionLocallPv6OverloadCleared	New
IdpSessionPeerIPv4OverloadCleared	New

Event Name	Change
IdpSessionPeerIPv6OverloadCleared	New
netconfHello	New
netconfRpcError	New
netconfRpcReply	New
netconfRpcRequest	New
netconfRpcStart	New
netconfRpcSuccess	New
netconfSessionClosed	New
netconfSessionDisconnected	New
netconfSessionKilled	New
netconfSessionOpened	New
networkInstanceConfigUpdate	Dropped
networkInstanceConfigUpdate	Dropped
networkInstanceConfigUpdate	Dropped
networkInstanceP4rtOperDown	Dropped
networkInstanceP4rtOperUp	Dropped
p4rtServerStart	Dropped
p4rtServerStop	Dropped
serverDown	Modified
serverGroupDown	Modified
serverRouteUnavailable	Modified
serverTimeout	Modified
sessionClosed	Modified
sessionDisconnected	Modified
sessionIdleDisconnected	New
sessionOpened	Modified
subscriptionEnd	Dropped

Event Name	Change
subscriptionRequestReceived	Dropped
subscriptionStart	Dropped
systemEvpnMplsMulticastPeersLimitHighUtilization	New
systemEvpnMplsMulticastPeersLimitHighUtilizationLowered	New
systemEvpnMplsMulticastPeersLimitLowered	New
systemEvpnMplsMulticastPeersLimitReached	New
systemReboot	Modified
unixSocketGnmiOperDown	Dropped
unixSocketGnmiOperUp	Dropped
unixSocketGribiOperDown	Dropped
unixSocketGribiOperUp	Dropped
unixSocketP4rtOperDown	Dropped
unixSocketP4rtOperUp	Dropped
userAuthenticationFailed	Modified
userAuthenticationSucceeded	Modified
userLockoutReset	New
userLockoutSet	New
userPasswordChanged	New
userPasswordExpired	New

4 aaa

4.1 serverDown

Table 5: serverDown properties

Property name	Value
Application name	ааа
Event name	serverDown
Default severity	error
Message format string	Server server_address in group server_group is down
Cause	The specified server is down, either via being unreachable, or a timeout
Effect	The specified server can no longer be used for authentication, authorization, or accounting transactions.

4.2 serverGroupDown

Table 6: serverGroupDown properties

Property name	Value
Application name	ааа
Event name	serverGroupDown
Default severity	critical
Message format string	All servers in server group server_group are down
Cause	All servers within the specified server group are no longer available
Effect	The specified server group can no longer be used for authentication, authorization, or accounting transactions.

4.3 serverRouteUnavailable

Table 7: serverRouteUnavailable properties

Property name	Value
Application name	ааа
Event name	serverRouteUnavailable
Default severity	error
Message format string	No route available to reach remote server server_address in server group server_group via network instance network_instance
Cause	No routes are available in the specified network instance to reach the remote server
Effect	The specified server can no longer be used for authentication, authorization, or accounting transactions.

4.4 serverTimeout

Table 8: serverTimeout properties

Property name	Value
Application name	ааа
Event name	serverTimeout
Default severity	error
Message format string	Server server_address in group server_group has timed out
Cause	The connection between the AAA manager and the remote server has timed out. The server will be tried again in 30 seconds, or immediately if a valid response is received
Effect	The specified server can no longer be used for authentication, authorization, or accounting transactions.

4.5 sessionClosed

Table 9: sessionClosed properties

Property name	Value
Application name	ааа
Event name	sessionClosed
Default severity	notice
Message format string	Closed session session_id for user user_name from host remote_host in network-instance network_instance
Cause	The specified user has closed a session on the system
Effect	None.

4.6 sessionDisconnected

Table 10: sessionDisconnected properties

Property name	Value
Application name	ааа
Event name	sessionDisconnected
Default severity	notice
Message format string	Session session_id for user user_name from remote host remote_host in network-instance network_instance disconnected by administrative action
Cause	A specific session for a user has been disconnected from the system by an administrator
Effect	The specified user is disconnected.

4.7 sessionIdleDisconnected

Table 11: sessionIdleDisconnected properties

Property name	Value
Application name	ааа

Property name	Value
Event name	sessionIdleDisconnected
Default severity	notice
Message format string	Session session_id for user user_name from remote host remote_host in network-instance network_instance disconnected by timeout
Cause	The specified user session disconnected from the system due to an idle timeout
Effect	The specified user is disconnected.

4.8 sessionOpened

Table 12: sessionOpened properties

Property name	Value
Application name	aaa
Event name	sessionOpened
Default severity	notice
Message format string	Opened session session_id for user user_name from host remote_host in network-instance network_instance
Cause	The specified user has opened a session on the system
Effect	None.

4.9 userAuthenticationFailed

Table 13: userAuthenticationFailed properties

Property name	Value
Application name	aaa
Event name	userAuthenticationFailed
Default severity	warning
Message format string	User <i>user_name</i> authentication failed from host <i>remote_host</i> in network-instance <i>network_instance</i>
Cause	The specified user has failed authentication

Property name	Value
Effect	None.

4.10 userAuthenticationSucceeded

Table 14: userAuthenticationSucceeded properties

Property name	Value
Application name	ааа
Event name	userAuthenticationSucceeded
Default severity	notice
Message format string	User <i>user_name</i> on session <i>session_id</i> successfully authenticated from host <i>remote_host</i> in network-instance <i>network_instance</i>
Cause	The specified user has successfully authenticated
Effect	None.

4.11 userLockoutReset

Table 15: userLockoutReset properties

Property name	Value
Application name	ааа
Event name	userLockoutReset
Default severity	warning
Message format string	User <i>user_name</i> is unlocked
Cause	Tools command is used to unlock this user or when the lockout timer expires
Effect	None.

4.12 userLockoutSet

Table 16: userLockoutSet properties

Property name	Value
Application name	ааа
Event name	userLockoutSet
Default severity	warning
Message format string	User <i>user_name</i> is locked out
Cause	The specified user has been locked out after successive authentication failed attempts within a specific time duration
Effect	None.

4.13 userPasswordChanged

Table 17: userPasswordChanged properties

Property name	Value
Application name	ааа
Event name	userPasswordChanged
Default severity	notice
Message format string	Password for user <i>user_name</i> has changed
Cause	The user has changed his password or it was changed by a user with administrative rights
Effect	None.

4.14 userPasswordExpired

Table 18: userPasswordExpired properties

Property name	Value
Application name	ааа
Event name	userPasswordExpired

Property name	Value
Default severity	warning
Message format string	User <i>user_name</i> password has expired
Cause	The specified user has not changed his password before aging time
Effect	None.

5 app

5.1 applicationFailed

Table 19: applicationFailed properties

Property name	Value
Application name	арр
Event name	applicationFailed
Default severity	alert
Message format string	Application application_name has failed, failure_count of failure_threshold failures in the last failure_window seconds
Cause	The specified application has failed.
Effect	The specified application has failed, and all functionality it provides is inoperable. If this failure reaches the applications failure threshold then the applications failure action will be triggered, otherwise the application will be restarted.

5.2 applicationFailureActionTriggered

Table 20: applicationFailureActionTriggered properties

Property name	Value
Application name	арр
Event name	applicationFailureActionTriggered
Default severity	alert
Message format string	Application application_name has failed failure_threshold times in the last failure_window seconds, triggering action failure_action
Cause	The specified application has failed enough times to trigger the applications failure action.
Effect	The applications failure action is triggered, as defined in the application-specific configuration.

5.3 applicationRestarted

Table 21: applicationRestarted properties

Property name	Value
Application name	арр
Event name	applicationRestarted
Default severity	warning
Message format string	Restarted application application_name, restart type restart_type
Cause	Application manager has restarted the specified application.
Effect	The specified application has been restarted.

5.4 applicationStarted

Table 22: applicationStarted properties

Property name	Value
Application name	арр
Event name	applicationStarted
Default severity	notice
Message format string	Successfully started application application_name
Cause	Application manager has started the specified application.
Effect	The specified application is started.

5.5 applicationStarting

Table 23: applicationStarting properties

Property name	Value
Application name	арр
Event name	applicationStarting
Default severity	notice

Property name	Value
Message format string	Starting application application_name
Cause	Application manager is starting the specified application.
Effect	The specified application is starting.

6 acl

6.1 aclCpmlpv4MatchedPacket

Table 24: aclCpmlpv4MatchedPacket properties

Property name	Value
Application name	acl
Event name	aclCpmlpv4MatchedPacket
Default severity	notice
Message format string	An IPv4 packet, len <i>packet-length</i> , protocol <i>ip-protocol</i> , received by linecard <i>incoming-linecard</i> was <i>action</i> by entry <i>sequence-id</i> of the IPv4 cpm-filter. <i>source-ip</i> (<i>source-port</i>) -> <i>dest-ip</i> (<i>dest-port</i>)
Cause	This event is generated when an IPv4 packet matches an entry of the CPM IPv4 filter and that entry specifies a log action
Effect	None

6.2 aclCpmlpv6MatchedPacket

Table 25: aclCpmlpv6MatchedPacket properties

Property name	Value
Application name	acl
Event name	aclCpmlpv6MatchedPacket
Default severity	notice
Message format string	An IPv6 packet, len packet-length, protocol last-next-header, received by linecard incoming-linecard was action by entry sequence-id of the IPv6 cpm-filter. source-ip(source-port) -> dest-ip(dest-port)
Cause	This event is generated when an IPv6 packet matches an entry of the CPM IPv6 filter and that entry specifies a log action
Effect	None

6.3 aclinterfaceInputIpv4MatchedPacket

Table 26: aclInterfaceInputIpv4MatchedPacket properties

Property name	Value
Application name	acl
Event name	aclInterfaceInputIpv4MatchedPacket
Default severity	notice
Message format string	An IPv4 packet, len packet-length, protocol ip-protocol, received on incoming-interface was action by entry sequence-id of filter filter-name. source-ip(source-port) -> dest-ip(dest-port)
Cause	This event is generated when an IPv4 packet matches an entry of an IPv4 filter applied to ingress traffic on a subinterface and that entry specifies a log action
Effect	None

6.4 aclinterfaceInputIpv6MatchedPacket

Table 27: aclInterfaceInputIpv6MatchedPacket properties

Property name	Value
Application name	acl
Event name	aclInterfaceInputIpv6MatchedPacket
Default severity	notice
Message format string	An IPv6 packet, len packet-length, protocol last-next-header, received on incoming-interface was action by entry sequence-id of filter filtername. source-ip(source-port) -> dest-ip(dest-port)
Cause	This event is generated when an IPv6 packet matches an entry of an IPv6 filter applied to ingress traffic on a subinterface and that entry specifies a log action
Effect	None

6.5 aclInterfaceOutputlpv4MatchedPacket

Table 28: aclInterfaceOutputIpv4MatchedPacket properties

Property name	Value
Application name	acl
Event name	aclInterfaceOutputIpv4MatchedPacket
Default severity	notice
Message format string	An IPv4 packet, len packet-length, protocol ip-protocol, intended for transmit on outgoing-interface was action by entry sequence-id of filter filter-name. source-ip(source-port) -> dest-ip(dest-port)
Cause	This event is generated when an IPv4 packet matches an entry of an IPv4 filter applied to egress traffic on a subinterface and that entry specifies a log action
Effect	None

6.6 aclInterfaceOutputlpv6MatchedPacket

Table 29: aclInterfaceOutputIpv6MatchedPacket properties

Property name	Value
Application name	acl
Event name	aclInterfaceOutputIpv6MatchedPacket
Default severity	notice
Message format string	An IPv6 packet, len packet-length, protocol last-next-header, intended for transmit on outgoing-interface was action by entry sequence-id of filter filter-name. source-ip(source-port) -> dest-ip(dest-port)
Cause	This event is generated when an IPv6 packet matches an entry of an IPv6 filter applied to egress traffic on a subinterface and that entry specifies a log action
Effect	None

6.7 aclTcamProgComplete

Table 30: aclTcamProgComplete properties

Property name	Value
Application name	acl
Event name	aclTcamProgComplete
Default severity	notice
Message format string	All TCAM banks on all linecards have been reprogrammed with the latest ACL configuration changes.
Cause	This event is generated when all TCAM banks on all linecards have been reprogrammed with the latest ACL configuration changes.
Effect	None

6.8 platformAclHighUtilization

Table 31: platformAclHighUtilization properties

Property name	Value
Application name	acl
Event name	platformAclHighUtilization
Default severity	warning
Message format string	The ACL resource called <i>resource-name</i> has reached <i>threshold</i> % or more utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> . Only <i>free-entries</i> entries are remaining.
Cause	This event is generated when the utilization of an ACL resource has increased to a level that may warrant concern if futher resources are consumed
Effect	None

6.9 platformAclHighUtilizationLowered

Table 32: platformAclHighUtilizationLowered properties

Property name	Value
Application name	acl
Event name	platformAclHighUtilizationLowered
Default severity	notice
Message format string	The ACL resource called <i>resource-name</i> has decreased back to <i>threshold</i> % or less utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> .
Cause	This event is generated when the utilization of an ACL resource has decreased to a level that may no longer warrant concern
Effect	None

6.10 platformTcamHighUtilization

Table 33: platformTcamHighUtilization properties

Property name	Value
Application name	acl
Event name	platformTcamHighUtilization
Default severity	warning
Message format string	The TCAM resource called <i>resource-name</i> has reached <i>threshold</i> % or more utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> . Only <i>free-entries</i> entries are remaining.
Cause	This event is generated when the utilization of a TCAM resource has increased to a level that may warrant concern if futher resources are consumed
Effect	None

6.11 platformTcamHighUtilizationLowered

Table 34: platformTcamHighUtilizationLowered properties

Property name	Value
Application name	acl
Event name	platformTcamHighUtilizationLowered
Default severity	notice
Message format string	The TCAM resource called <i>resource-name</i> has decreased back to <i>threshold</i> % or less utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> .
Cause	This event is generated when the utilization of a TCAM resource has decreased to a level that may no longer warrant concern
Effect	None

7 arpnd

7.1 ipArpEntryUpdated

Table 35: ipArpEntryUpdated properties

Property name	Value
Application name	arpnd
Event name	ipArpEntryUpdated
Default severity	informational
Message format string	The ARP entry for <i>ipv4-address</i> on <i>interface.subinterface-index</i> has been updated from mac <i>old-mac</i> type <i>old-type</i> to mac <i>new-mac</i> and type <i>new-type</i> .
Cause	This event is generated whenever an existing static or dynamic ARP entry for an IPv4 address is overwritten. This could be a triggered by a change of entry type (static vs dynamic) or a change of MAC address or a change of the subinterface binding.
Effect	None

7.2 ipSubinterfaceDuplicateIpv4Address

Table 36: ipSubinterfaceDuplicateIpv4Address properties

Property name	Value
Application name	arpnd
Event name	ipSubinterfaceDuplicateIpv4Address
Default severity	notice
Message format string	The IPv4 address <i>ipv4-address</i> assigned to <i>interface.subinterface-index</i> is being used by another host or router on the same subnet.
Cause	This event is generated when ARP detects that another system is using the same IPv4 address
Effect	Unreliable communications

7.3 ipSubinterfaceDuplicateIpv6Address

Table 37: ipSubinterfaceDuplicateIpv6Address properties

Property name	Value
Application name	arpnd
Event name	ipSubinterfaceDuplicateIpv6Address
Default severity	notice
Message format string	The IPv6 address <i>ipv6-address</i> assigned to <i>interface.subinterface-index</i> is being used by another host or router on the same subnet.
Cause	This event is generated when IPv6 DAD detects that another system is using the same IPv6 address
Effect	Unreliable communications

7.4 ipSubinterfaceDuplicateMacAddress

Table 38: ipSubinterfaceDuplicateMacAddress properties

Property name	Value
Application name	arpnd
Event name	ipSubinterfaceDuplicateMacAddress
Default severity	notice
Message format string	The MAC address <i>mac-address</i> used by <i>interface.subinterface-index</i> is being used by another host or router on the same subnet.
Cause	This event is generated when ARP or IPv6 Neighbor Discovery detects that another system is using the same MAC address
Effect	Unreliable communications

7.5 ipSubinterfaceInvalidArp

Table 39: ipSubinterfaceInvalidArp properties

Property name	Value
Application name	arpnd

Property name	Value
Event name	ipSubinterfaceInvalidArp
Default severity	notice
Message format string	An ARP request for <i>ipv4-address</i> was received on <i>interface.subinterface-index</i> and there is no matching IPv4 subnet.
Cause	This event is generated when ARP receives an ARP request for an invalid IPv4 address
Effect	None

7.6 ipSubinterfaceInvalidIpv6NeighborSolicitation

Table 40: ipSubinterfaceInvalidIpv6NeighborSolicitation properties

Property name	Value
Application name	arpnd
Event name	ipSubinterfaceInvalidIpv6NeighborSolicitation
Default severity	notice
Message format string	An IPv6 neighbor solicitation for <i>ipv6-address</i> was received on <i>interface.subinterface-index</i> and there is no matching IPv6 subnet.
Cause	This event is generated when IPv6 neighbor discovery receives a NS message for an invalid IPv6 address
Effect	None

7.7 ipv6NeighborEntryUpdated

Table 41: ipv6NeighborEntryUpdated properties

Property name	Value
Application name	arpnd
Event name	ipv6NeighborEntryUpdated
Default severity	informational
Message format string	The IPv6 neighbor discovery entry for <i>ipv6-address</i> on <i>interface.subinterface-index</i> has been updated from mac <i>old-mac</i> type <i>old-type</i> to mac <i>new-mac</i> and type <i>new-type</i> .

Property name	Value
Cause	This event is generated whenever an existing static or dynamic neighbor entry for an IPv6 address is overwritten. This could be a triggered by a change of entry type (static vs dynamic) or a change of MAC address or a change of the subinterface binding.
Effect	None

7.8 ipv6NeighborSubinterfaceLimit

Table 42: ipv6NeighborSubinterfaceLimit properties

Property name	Value
Application name	arpnd
Event name	ipv6NeighborSubinterfaceLimit
Default severity	warning
Message format string	The number of IPv6 neighbor discovery entries on <i>interface-dot-subindex</i> has reached the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of IPv6 neighbor entries in the subinterface is at the configured limit.
Effect	None

7.9 ipv6NeighborSubinterfaceLimitThreshold

Table 43: ipv6NeighborSubinterfaceLimitThreshold properties

Property name	Value
Application name	arpnd
Event name	ipv6NeighborSubinterfaceLimitThreshold
Default severity	warning
Message format string	The number of IPv6 neighbor discovery entries on <i>interface-dot-subindex</i> has reached <i>pct-threshold</i> percent of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of IPv6 neighbor entries in the subinterface is at the configured threshold warning limit.
Effect	None

8 bfd

8.1 bfdDownEvent

Table 44: bfdDownEvent properties

Property name	Value
Application name	bfd
Event name	bfdDownEvent
Default severity	warning
Message format string	BFD: Network-instance network-instance - Session from local-address:local-discriminator to remote-address:remote-discriminator has transitioned to the down-state state with local-diagnostic code: local-diagnostic-str (local-diagnostic-code) and remote-diagnostic code: remote-diagnostic-str (remote-diagnostic-code)
Cause	This notification is generated when a BFD session transitions to the Down or Admin Down state from an Up state.
Effect	The specified BFD session is now down. If the new state is Down, the session may be down due to a failure see the local or remote diagnostic code. If the new state is Admin-Down the session is down due to administrative reasons.

8.2 bfdMaxSessionActive

Table 45: bfdMaxSessionActive properties

Property name	Value
Application name	bfd
Event name	bfdMaxSessionActive
Default severity	warning
Message format string	BFD: Network-instance <i>network-instance</i> - Session from <i>local-address</i> to <i>remote-address</i> requested by <i>client-protocol</i> could not be created because the maximum number of BFD sessions <i>bfd-max-session</i> are active.

Property name	Value
Cause	This notification is generated when a BFD session cannot be created because the maximum number of BFD sessions are already active.
Effect	No more BFD sessions can be created until some existing sessions are removed.

8.3 bfdProtocolClientAdd

Table 46: bfdProtocolClientAdd properties

Property name	Value
Application name	bfd
Event name	bfdProtocolClientAdd
Default severity	notice
Message format string	BFD: Network-instance network-instance - The protocol client-protocol is now using BFD session from local-address:local-discriminator to remote-address: remote-discriminator
Cause	This notification is generated when a new protocol begins to use a BFD session to track liveliness.
Effect	The specified protocol will be notified by BFD if the associated sessions transitions from an Up to a Down state. It will be up to the receiving protocol to determine the course of action.

8.4 bfdProtocolClientRemove

Table 47: bfdProtocolClientRemove properties

Property name	Value
Application name	bfd
Event name	bfdProtocolClientRemove
Default severity	notice
Message format string	BFD: Network-instance network-instance - The protocol client-protocol using BFD session from local-address:local-discriminator to remote-address: remote-discriminator has been cleared

Property name	Value
Cause	This notification is generated when a protocol stops using a BFD session to track liveliness.
Effect	The specified protocol will no longer be notified by BFD if the associated sessions transitions from an Up to a Down state

8.5 bfdSessionDeleted

Table 48: bfdSessionDeleted properties

Property name	Value
Application name	bfd
Event name	bfdSessionDeleted
Default severity	notice
Message format string	BFD: Network-instance network-instance - Session from local-address:local-discriminator to remote-address:remote-discriminator has been deleted
Cause	This notification is generated when a BFD session has been removed from the configuration.
Effect	The BFD session has been removed.

8.6 bfdSessionUp

Table 49: bfdSessionUp properties

Property name	Value
Application name	bfd
Event name	bfdSessionUp
Default severity	notice
Message format string	BFD: Network-instance network-instance - Session from local-address:local-discriminator to remote-address:remote-discriminator is UP
Cause	This notification is generated when a BFD session transitions to the up state.
Effect	The BFD session is now operational.

8.7 bfdWarmrebootAdjustTimers

Table 50: bfdWarmrebootAdjustTimers properties

Property name	Value
Application name	bfd
Event name	bfdWarmrebootAdjustTimers
Default severity	notice
Message format string	BFD: Warm reboot adjustment of BFD timers initiated
Cause	This notification is generated when BFD is notified to adjust timers in preparation for warm reboot.
Effect	The timers on warm reboot capable BFD sessions are adjusted to keep the sessions UP during the warm reboot

8.8 bfdWarmrebootRestoreTimers

Table 51: bfdWarmrebootRestoreTimers properties

Property name	Value
Application name	bfd
Event name	bfdWarmrebootRestoreTimers
Default severity	notice
Message format string	BFD: Warm reboot restoration of BFD timers initiated
Cause	This notification is generated when BFD is notified to restore timers at completion of warm reboot.
Effect	The timers on warm reboot capable BFD sessions are restored to their configured values

8.9 microbfdDownEvent

Table 52: microbfdDownEvent properties

Property name	Value
Application name	bfd

Property name	Value
Event name	microbfdDownEvent
Default severity	warning
Message format string	BFD: LAG lag-interface member member-interface - Session from local-address:local-discriminator to remote-address:remote-discriminator has transitioned to the down-state state with local-diagnostic code: local-diagnostic-str (local-diagnostic-code) and remote-diagnostic code: remote-diagnostic-str (remote-diagnostic-code)
Cause	This notification is generated when a BFD session transitions to the Down or Admin Down state from an Up state.
Effect	The specified BFD session is now down. If the new state is Down, the session may be down due to a failure see the local or remote diagnostic code. If the new state is Admin-Down the session is down due to administrative reasons.

8.10 microbfdMaxSessionActive

Table 53: microbfdMaxSessionActive properties

Property name	Value
Application name	bfd
Event name	microbfdMaxSessionActive
Default severity	warning
Message format string	BFD: LAG <i>lag-interface</i> member <i>member-interface</i> - Session from <i>local-address</i> to <i>remote-address</i> could not be created because the maximum number of BFD sessions <i>bfd-max-session</i> are active.
Cause	This notification is generated when a BFD session cannot be created because the maximum number of BFD sessions are already active.
Effect	No more BFD sessions can be created until some existing sessions are removed.

8.11 microbfdSessionDeleted

Table 54: microbfdSessionDeleted properties

Property name	Value
Application name	bfd
Event name	microbfdSessionDeleted
Default severity	notice
Message format string	BFD: LAG lag-interface member member-interface - Session from local-address:local-discriminator to remote-address:remote-discriminator has been deleted
Cause	This notification is generated when a BFD session has been removed from the configuration.
Effect	The BFD session has been removed.

8.12 microbfdSessionUp

Table 55: microbfdSessionUp properties

Property name	Value
Application name	bfd
Event name	microbfdSessionUp
Default severity	notice
Message format string	BFD: LAG lag-interface member member-interface - Session from local-address:local-discriminator to remote-address:remote-discriminator is UP
Cause	This notification is generated when a BFD session transitions to the up state.
Effect	The BFD session is now operational.

8.13 sbfdechoDownEvent

Table 56: sbfdechoDownEvent properties

Property name	Value
Application name	bfd
Event name	sbfdechoDownEvent
Default severity	warning
Message format string	BFD: BFD: SR Policy Id <i>policy-id</i> Policy Name <i>policy-name</i> User Type <i>user-type</i> Endpoint <i>endpoint</i> Network-instance <i>network-instance</i> - SBFD Echo Session discriminator <i>local-discriminator</i> has transitioned to the <i>down-state</i> state with local-diagnostic code: <i>local-diagnostic-str</i> (<i>local-diagnostic-code</i>)
Cause	This notification is generated when a BFD session transitions to the Down or Admin Down state from an Up state.
Effect	The specified BFD session is now down. If the new state is Down, the session may be down due to a failure see the local or remote diagnostic code. If the new state is Admin-Down the session is down due to administrative reasons.

8.14 sbfdechoMaxSessionActive

Table 57: sbfdechoMaxSessionActive properties

Property name	Value
Application name	bfd
Event name	sbfdechoMaxSessionActive
Default severity	warning
Message format string	BFD: SR Policy Id <i>policy-id</i> Policy Name <i>policy-name</i> User Type <i>user-type</i> Endpoint <i>endpoint</i> Network-instance <i>network-instance</i> - SBFD Echo Session requested by <i>client-protocol</i> could not be created because the maximum number of BFD sessions <i>bfd-max-session</i> are active.
Cause	This notification is generated when a BFD session cannot be created because the maximum number of BFD sessions are already active.
Effect	No more BFD sessions can be created until some existing sessions are removed.

8.15 sbfdechoSessionDeleted

Table 58: sbfdechoSessionDeleted properties

Property name	Value
Application name	bfd
Event name	sbfdechoSessionDeleted
Default severity	notice
Message format string	BFD: SR Policy Id <i>policy-id</i> Policy Name <i>policy-name</i> User Type <i>user-type</i> Endpoint <i>endpoint</i> Network-instance <i>network-instance</i> - SBFD Echo Session discriminator <i>local-discriminator</i> has been deleted
Cause	This notification is generated when a BFD session has been removed from the configuration.
Effect	The BFD session has been removed.

8.16 sbfdechoSessionUp

Table 59: sbfdechoSessionUp properties

Property name	Value
Application name	bfd
Event name	sbfdechoSessionUp
Default severity	notice
Message format string	BFD: SR Policy Id <i>policy-id</i> Policy Name <i>policy-name</i> User Type <i>user-type</i> Endpoint <i>endpoint</i> Network-instance <i>network-instance</i> - SBFD Echo Session discriminator <i>local-discriminator</i> is UP
Cause	This notification is generated when a BFD session transitions to the up state.
Effect	The BFD session is now operational.

9 bgp

9.1 bgpIncomingDynamicPeerLimitReached

Table 60: bgpIncomingDynamicPeerLimitReached properties

Property name	Value
Application name	bgp
Event name	bgpIncomingDynamicPeerLimitReached
Default severity	notice
Message format string	In network-instance <i>network-instance</i> , an incoming BGP connection from <i>peer-address</i> was rejected because the limit for the maximum number of incoming dynamic peers, <i>max-sessions</i> , has been reached.
Cause	The configured limit on the number of incoming sessions associated with dynamic peers has been reached.
Effect	The incoming connection attempt is rejected.

9.2 bgplncomingInterfaceDynamicPeerLimitReached

Table 61: bgpIncomingInterfaceDynamicPeerLimitReached properties

Property name	Value
Application name	bgp
Event name	bgpIncomingInterfaceDynamicPeerLimitReached
Default severity	notice
Message format string	In network-instance <i>network-instance</i> , an incoming BGP connection from <i>peer-address</i> was rejected because the limit for the maximum number of incoming interface dynamic peers, <i>max-sessions</i> , has been reached for the interface <i>interface</i> .
Cause	This event is generated when the dynamic session limit for this interface is reached.
Effect	The incoming connection attempt is rejected.

9.3 bgpInstanceConvergenceStateTransition

Table 62: bgpInstanceConvergenceStateTransition properties

Property name	Value
Application name	bgp
Event name	bgpInstanceConvergenceStateTransition
Default severity	notice
Message format string	In network-instance <i>network-instance</i> , the BGP convergence state for the <i>address-family</i> address family transitioned from the <i>previous-state</i> state to the <i>new-state</i> state
Cause	This event is generated when the BGP convergence process is being tracked and a state transition occurs
Effect	Dependent on the new state

9.4 bgpLowMemory

Table 63: bgpLowMemory properties

Property name	Value
Application name	bgp
Event name	bgpLowMemory
Default severity	critical
Message format string	In network-instance <i>network-instance</i> , the BGP session with <i>peer-address</i> was terminated immediately because BGP has out of memory.
Cause	BGP has run out of memory and this peer has been shutdown to reclaim some memory.
Effect	No routes can be exchanged with this peer.

9.5 bgpNeighborBackwardTransition

Table 64: bgpNeighborBackwardTransition properties

Property name	Value
Application name	bgp
Event name	bgpNeighborBackwardTransition
Default severity	warning
Message format string	In network-instance network-instance, the BGP session with peer-address moved from higher state last-state to lower state session-state due to event last-event
Cause	This event is generated when the BGP FSM moves from a higher numbered state to a lower numbered state.
Effect	No routes can be exchanged with this peer.

9.6 bgpNeighborClosedTCPConn

Table 65: bgpNeighborClosedTCPConn properties

Property name	Value
Application name	bgp
Event name	bgpNeighborClosedTCPConn
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , the BGP session with <i>peer-address</i> was closed because the neighbor closed the TCP connection.
Cause	The router received a TCP FIN message from its peer.
Effect	No routes can be exchanged with this peer.

9.7 bgpNeighborEstablished

Table 66: bgpNeighborEstablished properties

Property name	Value
Application name	bgp

Property name	Value
Event name	bgpNeighborEstablished
Default severity	notice
Message format string	In network-instance network-instance, the BGP session with peer-address moved into the ESTABLISHED state
Cause	The BGP session entered the ESTABLISHED state.
Effect	Routes of negotiated address families can now be exchanged with this peer.

9.8 bgpNeighborGRHelpingStarted

Table 67: bgpNeighborGRHelpingStarted properties

Property name	Value
Application name	bgp
Event name	bgpNeighborGRHelpingStarted
Default severity	notice
Message format string	In network-instance <i>network-instance</i> , the router has started providing GR helper service to the neighbor <i>peer-address</i>
Cause	GR helper is activated
Effect	Routes previously received from the peer, prior to its restart, are retained as stale until the stale-routes-time expires.

9.9 bgpNeighborGRHelpingStopped

Table 68: bgpNeighborGRHelpingStopped properties

Property name	Value
Application name	bgp
Event name	bgpNeighborGRHelpingStopped
Default severity	notice
Message format string	In network-instance <i>network-instance</i> , the router has stopped providing GR helper service to the neighbor <i>peer-address</i>

Property name	Value
Cause	GR helper is deactivated
Effect	Any remaining stale routes are immediately removed.

9.10 bgpNeighborHoldTimeExpired

Table 69: bgpNeighborHoldTimeExpired properties

Property name	Value
Application name	bgp
Event name	bgpNeighborHoldTimeExpired
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , the BGP session with <i>peer-address</i> was terminated because a KEEPALIVE message was not received before the holdtime limit of <i>negotiated-hold-time</i> was reached.
Cause	BGP did not receive a KEEPALIVE message from the peer before the negotiated holdtime expired.
Effect	No routes can be exchanged with this peer.

9.11 bgpNeighborInvalidLocalIP

Table 70: bgpNeighborInvalidLocalIP properties

Property name	Value
Application name	bgp
Event name	bgpNeighborInvalidLocalIP
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , an incoming BGP connection from <i>peer-address</i> was rejected because the destination IP address does not match the allowed local-address, <i>local-address</i> .
Cause	BGP configuration does not allow an incoming BGP connection to this IP address.
Effect	No routes can be exchanged with this peer.

9.12 bgpNeighborNoOpenReceived

Table 71: bgpNeighborNoOpenReceived properties

Property name	Value
Application name	bgp
Event name	bgpNeighborNoOpenReceived
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , the BGP session with <i>peer-address</i> was terminated because an OPEN message was not received before the configured holdtime limit was reached.
Cause	BGP did not receive an OPEN message from the peer before the configured holdtime expired.
Effect	No routes can be exchanged with this peer.

9.13 bgpNeighborPrefixLimitReached

Table 72: bgpNeighborPrefixLimitReached properties

Property name	Value
Application name	bgp
Event name	bgpNeighborPrefixLimitReached
Default severity	notice
Message format string	In network-instance <i>network-instance</i> , the number of <i>family</i> routes received from the neighbor <i>peer-address</i> has exceeded the configured limit.
Cause	The number of received routes from the peer has exceeded the configured limit for the associated address family.
Effect	No effect. Routes above the limit are still received and processed.

9.14 bgpNeighborPrefixLimitThresholdReached

Table 73: bgpNeighborPrefixLimitThresholdReached properties

Property name	Value
Application name	bgp
Event name	bgpNeighborPrefixLimitThresholdReached
Default severity	notice
Message format string	In network-instance <i>network-instance</i> , the number of <i>family</i> routes received from the neighbor <i>peer-address</i> has exceeded the configured threshold, which is <i>warning-threshold-pct</i> % of the limit.
Cause	The number of received routes from the peer has exceeded the configured threshold for the associated address family.
Effect	No effect. Routes above the threshold are still received and processed.

9.15 bgpNeighborUnknownRemotelP

Table 74: bgpNeighborUnknownRemoteIP properties

Property name	Value
Application name	bgp
Event name	bgpNeighborUnknownRemoteIP
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , an incoming BGP connection from <i>peer-address</i> was rejected because the source IP address does not match the address of any configured neighbor or any dynamic-neighbor block.
Cause	BGP configuration does not allow an incoming BGP connection from this IP address.
Effect	No routes can be exchanged with this peer.

9.16 bgpNLRIInvalid

Table 75: bgpNLRIInvalid properties

Property name	Value
Application name	bgp
Event name	bgpNLRIInvalid
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , a route for NLRI <i>nlri</i> was received from neighbor <i>peer-address</i> and it was ignored because it is considered an invalid NLRI.
Cause	The router received an UPDATE with an invalid NLRI
Effect	The route associated with the NLRI is not added or removed from the BGP RIB.

9.17 bgpNotificationReceivedFromNeighbor

Table 76: bgpNotificationReceivedFromNeighbor properties

Property name	Value
Application name	bgp
Event name	bgpNotificationReceivedFromNeighbor
Default severity	warning
Message format string	In network-instance network-instance, the BGP session with peer-address was closed because the neighbor sent a NOTIFICATION with code last-notification-error-code and subcode last-notification-error-subcode
Cause	The router received a NOTIFICATION message from its peer.
Effect	No routes can be exchanged with this peer.

9.18 bgpNotificationSentToNeighbor

Table 77: bgpNotificationSentToNeighbor properties

Property name	Value
Application name	bgp
Event name	bgpNotificationSentToNeighbor
Default severity	warning
Message format string	In network-instance network-instance, the BGP session with peer-address was closed because the router sent this neighbor a NOTIFICATION with code last-notification-error-code and subcode last-notification-error-subcode
Cause	The router sent a NOTIFICATION message to its peer.
Effect	No routes can be exchanged with this peer.

9.19 bgpOutgoingDynamicPeerLimitReached

Table 78: bgpOutgoingDynamicPeerLimitReached properties

Property name	Value
Application name	bgp
Event name	bgpOutgoingDynamicPeerLimitReached
Default severity	notice
Message format string	In network-instance <i>network-instance</i> , no session was initiated towards the LLDP-discovered address <i>peer-address</i> because the limit for the maximum number of outgoing dynamic peers, <i>max-sessions</i> , has been reached.
Cause	The configured limit on the number of outgoing sessions associated with dynamic peers has been reached.
Effect	No connection attempt is made by the router.

9.20 bgpPathAttributeDiscarded

Table 79: bgpPathAttributeDiscarded properties

Property name	Value
Application name	bgp
Event name	bgpPathAttributeDiscarded
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , a path attribute of type <i>attribute-type</i> and length <i>attribute-length</i> was discarded in a route received from the neighbor <i>peer-address</i> .
Cause	The path attribute was malformed and the attribute-discard approach is used for this type of attribute.
Effect	The intended meaning of that path attribute is not applied but the UPDATE message is still processed for new reachability information.

9.21 bgpPathAttributeMalformed

Table 80: bgpPathAttributeMalformed properties

Property name	Value
Application name	bgp
Event name	bgpPathAttributeMalformed
Default severity	warning
Message format string	In network-instance network-instance, a path attribute of type attribute- type and length attribute-length that was received in a route from the neighbor peer-address was considered malformed.
Cause	The router considers a path attribute to be malformed, for example not the expected length. The UPDATE message can still be parsed though.
Effect	Dependent on the type of the malformed path attribute. Either the malformed attribute is discarded or else the entire UPDATE message is considered to have unreachable NLRI.

9.22 bgpRouteWithdrawnDueToError

Table 81: bgpRouteWithdrawnDueToError properties

Property name	Value
Application name	bgp
Event name	bgpRouteWithdrawnDueToError
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , a route for NLRI <i>nlri</i> was received from neighbor <i>peer-address</i> and it was considered withdrawn because of a recoverable error in the UPDATE message.
Cause	The router received a malformed UPDATE and the malformed path attribute(s) require as a treat-as-withdraw error handling behavior for the included set of routes.
Effect	There is no reachability for the NLRI in the malformed UPDATE message.

9.23 bgpUpdateInvalid

Table 82: bgpUpdateInvalid properties

Property name	Value
Application name	bgp
Event name	bgpUpdateInvalid
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , an UPDATE message received from neighbor <i>peer-address</i> was considered invalid and caused the connection to be closed because the NLRI could not be parsed correctly.
Cause	The router received a malformed UPDATE which made it is impossible to identify all of the NLRI correctly.
Effect	The session is shutdown.

10 bridgetable

10.1 evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimit HighUtilization

Table 83: evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitHigh Utilization
Default severity	warning
Message format string	The number of Evpn-Mpls Multicast Destinations in the bridge table for bgp-instance bgp-instance on network-instance network-instance has reached pct-threshold% of the allowed limit of maximum-entries.
Cause	This event is generated when the number of Evpn-Mpls Multicast Destinations in the bgp-instance reaches the warning threshold percentage of the allowed limit.
Effect	None

10.2 evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimit HighUtilizationLowered

Table 84: evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitHigh UtilizationLowered
Default severity	notice
Message format string	The number of Evpn-Mpls Multicast Destinations in the bridge table for bgp-instance bgp-instance on network-instance network-instance is now below a pct-threshold% minus 5% of the allowed limit of maximum-entries.

Property name	Value
Cause	This event is generated when the number of Evpn-Mpls Multicast Destinations in the bgp-instance is 5% below the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

10.3 evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitLowered

Table 85: evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitLowered properties

Property name	Value
Application name	bridgetable
Event name	evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitLowered
Default severity	notice
Message format string	The number of Evpn-Mpls Multicast Destinations in the bridge table for bgp-instance bgp-instance on network-instance is now below the allowed limit of maximum-entries.
Cause	This event is generated when the number of Evpn-Mpls Multicast Destinations in a bgp-instance goes below the allowed limit, after being above the allowed limit
Effect	New Evpn-Mpls Multicast Destinations can be added to the multicast list of the network-instance.

10.4 evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitReached

Table 86: evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitReached properties

Property name	Value
Application name	bridgetable
Event name	evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitReached
Default severity	warning
Message format string	The number of Evpn-Mpls Multicast Destinations in the bridge table for bgp-instance bgp-instance on network-instance network-instance is at the allowed limit of maximum-entries.

Property name	Value
Cause	This event is generated when the number of Evpn-Mpls Multicast Destinations in a bgp-instance is at the allowed limit.
Effect	New Evpn-Mpls Multicast Destinations cannot be added to the multicast list of the network-instance.

10.5 I2ConnectionpointBridgeTableDuplicateMacAddressDeleted

Table 87: I2ConnectionpointBridgeTableDuplicateMacAddressDeleted properties

Property name	Value
Application name	bridgetable
Event name	I2ConnectionpointBridgeTableDuplicateMacAddressDeleted
Default severity	notice
Message format string	A duplicate MAC address <i>mac-address</i> detected on connection-point <i>connection-point</i> on <i>network-instance</i> is now deleted.
Cause	This event is generated when a duplicate MAC address is deleted.
Effect	The duplicate mac-address is now deleted.

10.6 I2ConnectionpointBridgeTableDuplicateMacAddressDetected

Table 88: I2ConnectionpointBridgeTableDuplicateMacAddressDetected properties

Property name	Value
Application name	bridgetable
Event name	I2ConnectionpointBridgeTableDuplicateMacAddressDetected
Default severity	notice
Message format string	A duplicate MAC address <i>mac-address</i> was detected on connection-point <i>connection-point</i> on <i>network-instance</i> .
Cause	This event is generated when a duplicate MAC address is detected, qualified by the bridge-table mac-duplication configuration under the network-instance and the connection-points configured under the network-instance.

Property name	Value
	depending on the mac-duplication configuration, traffic destined to the duplicate mac-address maybe blackholed or not reprogrammed against any other connection-point on the network-instance

10.7 I2ConnectionpointBridgeTableMacLimitHighUtilization

Table 89: I2ConnectionpointBridgeTableMacLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	I2ConnectionpointBridgeTableMacLimitHighUtilization
Default severity	warning
Message format string	The number of MAC addresses in the bridge table for connection-point connection-point on network-instance has reached pct-threshold% of the allowed limit of maximum-entries.
Cause	This event is generated when the number of MAC addresses in the bridge table for a connection-point reaches the configured warning threshold percentage of the allowed limit.
Effect	None

${\bf 10.8\ I2Connection point Bridge Table MacLimit High Utilization Lowered}$

Table 90: I2ConnectionpointBridgeTableMacLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	I2ConnectionpointBridgeTableMacLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of MAC addresses in the bridge table for connection-point connection-point on network-instance is below pct-threshold% (minus 5%) of the allowed limit of maximum-entries.
Cause	This event is generated when the number of MAC addresses in the bridge table for a connection-point is below 5% minus the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.

Property name	Value
Effect	None

10.9 I2ConnectionpointBridgeTableMacLimitLowered

Table 91: I2ConnectionpointBridgeTableMacLimitLowered properties

Property name	Value
Application name	bridgetable
Event name	I2ConnectionpointBridgeTableMacLimitLowered
Default severity	notice
Message format string	The number of MAC addresses in the bridge table for the connection-point connection-point on network-instance is below the allowed limit of maximum-entries.
Cause	This event is generated when the number of MAC addresses in the bridge table for a connection-point is below the allowed limit, after being above the allowed limit
Effect	new mac-addresses for the connection-point can now be added to the bridge table.

10.10 I2ConnectionpointBridgeTableMacLimitReached

Table 92: I2ConnectionpointBridgeTableMacLimitReached properties

Property name	Value
Application name	bridgetable
Event name	I2ConnectionpointBridgeTableMacLimitReached
Default severity	warning
Message format string	The number of MAC addresses in the bridge table for the connection-point connection-point on network-instance has reached the allowed limit of maximum-entries.
Cause	This event is generated when the number of MAC addresses in the bridge table for the connection-point is at the allowed limit.
Effect	new mac-addresses for the connection-point cannot be added in the bridge table.

10.11 I2SubinterfaceBridgeTableDuplicateMacAddressDeleted

Table 93: I2SubinterfaceBridgeTableDuplicateMacAddressDeleted properties

Property name	Value
Application name	bridgetable
Event name	I2SubinterfaceBridgeTableDuplicateMacAddressDeleted
Default severity	notice
Message format string	A duplicate MAC address <i>mac-address</i> detected on sub-interface <i>interface.subinterface-index</i> is now deleted.
Cause	This event is generated when a duplicate MAC address is deleted.
Effect	The duplicate mac-address is now deleted.

10.12 I2SubinterfaceBridgeTableDuplicateMacAddressDetected

Table 94: I2SubinterfaceBridgeTableDuplicateMacAddressDetected properties

Property name	Value
Application name	bridgetable
Event name	I2SubinterfaceBridgeTableDuplicateMacAddressDetected
Default severity	notice
Message format string	A duplicate MAC address <i>mac-address</i> was detected on sub-interface interface.subinterface-index.
Cause	This event is generated when a duplicate MAC address is detected, qualified by the bridge-table mac-duplication configuration under the network-instance and the sub-interfaces configured under the network-instance.
Effect	depending on the mac-duplication configuration, traffic destined to the duplicate mac-address maybe blackholed or not reprogrammed against any other sub-interface on the network-instance

10.13 I2SubinterfaceBridgeTableMacLimitHighUtilization

Table 95: I2SubinterfaceBridgeTableMacLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	I2SubinterfaceBridgeTableMacLimitHighUtilization
Default severity	warning
Message format string	The number of MAC addresses in the bridge table for sub-interface interface.subinterface-index has reached pct-threshold% of the allowed limit of maximum-entries.
Cause	This event is generated when the number of MAC addresses in the bridge table for a sub-interface reaches the configured warning threshold percentage of the allowed limit.
Effect	None

10.14 I2SubinterfaceBridgeTableMacLimitHighUtilizationLowered

Table 96: I2SubinterfaceBridgeTableMacLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	I2SubinterfaceBridgeTableMacLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of MAC addresses in the bridge table for sub-interface interface.subinterface-index is below pct-threshold% (minus 5%) of the allowed limit of maximum-entries.
Cause	This event is generated when the number of MAC addresses in the bridge table for a sub-interface is below 5% minus the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

10.15 I2SubinterfaceBridgeTableMacLimitLowered

Table 97: I2SubinterfaceBridgeTableMacLimitLowered properties

Property name	Value
Application name	bridgetable
Event name	I2SubinterfaceBridgeTableMacLimitLowered
Default severity	notice
Message format string	The number of MAC addresses in the bridge table for the sub-interface interface.subinterface-index is below the allowed limit of maximum-entries.
Cause	This event is generated when the number of MAC addresses in the bridge table for a sub-interface is below the allowed limit, after being above the allowed limit
Effect	new mac-addresses for the sub-interface can now be added to the bridge table.

10.16 I2SubinterfaceBridgeTableMacLimitReached

Table 98: I2SubinterfaceBridgeTableMacLimitReached properties

Property name	Value
Application name	bridgetable
Event name	I2SubinterfaceBridgeTableMacLimitReached
Default severity	warning
Message format string	The number of MAC addresses in the bridge table for the sub-interface interface.subinterface-index has reached the allowed limit of maximum-entries.
Cause	This event is generated when the number of MAC addresses in the bridge table for the sub-interface is at the allowed limit.
Effect	new mac-addresses for the sub-interface cannot be added in the bridge table.

${\bf 10.17}\ network Instance Bridge Table Duplicate Mac Address Deleted$

Table 99: networkInstanceBridgeTableDuplicateMacAddressDeleted properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableDuplicateMacAddressDeleted
Default severity	notice
Message format string	A duplicate MAC address <i>mac-address</i> detected on <i>network-instance</i> is now deleted.
Cause	This event is generated when a duplicate MAC address is deleted.
Effect	The duplicate mac-address is now deleted.

10.18 networkInstanceBridgeTableDuplicateMacAddressDetected

Table 100: networkInstanceBridgeTableDuplicateMacAddressDetected properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableDuplicateMacAddressDetected
Default severity	notice
Message format string	A duplicate MAC address <i>mac-address</i> was detected on <i>network-instance</i> .
Cause	This event is generated when a duplicate MAC address is detected, qualified by the bridge-table mac-duplication configuration under the network-instance and the sub-interfaces configured under the network-instance.
Effect	depending on the mac-duplication configuration, traffic destined to the duplicate mac-address maybe blackholed or not reprogrammed against any other sub-interface on the network-instance

10.19 networkInstanceBridgeTableMacLimitHighUtilization

Table 101: networkInstanceBridgeTableMacLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableMacLimitHighUtilization
Default severity	warning
Message format string	The number of MAC addresses in the bridge table of network-instance network-instance has reached pct-threshold% of the allowed limit of maximum-entries.
Cause	This event is generated when the number of MAC addresses in the bridge table of a network-instance reaches the configured warning threshold percentage of the allowed limit.
Effect	None

${\bf 10.20\ network Instance Bridge Table MacLimit High Utilization Lowered}$

Table 102: networkInstanceBridgeTableMacLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableMacLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of MAC addresses in the bridge table of network-instance network-instance is now at pct-threshold% minus 5% of the allowed limit of maximum-entries.
Cause	This event is generated when the number of MAC addresses in the bridge table of the network-instance is at 5% minus the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

10.21 networkInstanceBridgeTableMacLimitLowered

Table 103: networkInstanceBridgeTableMacLimitLowered properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableMacLimitLowered
Default severity	notice
Message format string	The number of MAC addresses in the bridge table of network-instance network-instance is now below the allowed limit of maximum-entries.
Cause	This event is generated when the number of MAC addresses in the bridge table of a network-instance goes below the allowed limit, after being above the allowed limit
Effect	new mac-addresses can now be added to the bridge table.

10.22 networkInstanceBridgeTableMacLimitReached

Table 104: networkInstanceBridgeTableMacLimitReached properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableMacLimitReached
Default severity	warning
Message format string	The number of MAC addresses in the bridge table of network-instance network-instance is at the allowed limit of maximum-entries.
Cause	This event is generated when the number of MAC addresses in the bridge table of a network-instance is at the allowed limit.
Effect	new mac-addresses cannot be added in the bridge table.

10.23 networkInstanceBridgeTableProxyArpLimitHighUtilization

Table 105: networkInstanceBridgeTableProxyArpLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableProxyArpLimitHighUtilization
Default severity	warning
Message format string	The number of proxy ARP entries in the bridge table of network-instance network-instance has reached pct-threshold% of the allowed limit of maximum-entries.
Cause	This event is generated when the number of proxy ARP entries in the bridge table of a network-instance reaches the warning threshold percentage of the allowed limit.
Effect	None

10.24 networkInstanceBridgeTableProxyArpLimitHighUtilizationLowered

Table 106: networkInstanceBridgeTableProxyArpLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableProxyArpLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of proxy ARP entries in the bridge table of network-instance network-instance is now at pct-threshold% minus 5% of the allowed limit of maximum-entries.
Cause	This event is generated when the number of proxy ARP entriesin the bridge table of the network-instance is at 5% minus the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

$10.25\ network Instance Bridge Table Proxy Arp Nd Duplicate Ip Address Deleted$

Table 107: networkInstanceBridgeTableProxyArpNdDuplicateIpAddressDeleted properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableProxyArpNdDuplicateIpAddressDeleted
Default severity	notice
Message format string	A duplicate proxy IP <i>ip-address</i> detected on <i>network-instance</i> is now deleted.
Cause	This event is generated when a duplicate proxy IP is deleted.
Effect	The duplicate proxy IP is now deleted.

10.26 networkInstanceBridgeTableProxyArpNdDuplicateIpAddressDetected

Table 108: networkInstanceBridgeTableProxyArpNdDuplicateIpAddressDetected properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableProxyArpNdDuplicateIpAddressDetected
Default severity	notice
Message format string	A duplicate link-layer-address <i>new-mac-address</i> was detected for proxy IP <i>ip-address</i> link-layer-address <i>old-mac-address</i> on <i>network-instance</i> .
Cause	This event is generated when when duplicate detection criteria is met when a new link-layer-address overwrites the existing link-layer-address for the proxy IP on the network-instance.
Effect	A traffic disruption may occur if both systems are active

10.27 networkInstanceBridgeTableProxyNdLimitHighUtilization

Table 109: networkInstanceBridgeTableProxyNdLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableProxyNdLimitHighUtilization
Default severity	warning
Message format string	The number of proxy ND entries in the bridge table of network-instance network-instance has reached pct-threshold% of the allowed limit of maximum-entries.
Cause	This event is generated when the number of proxy ND entries in the bridge table of a network-instance reaches the warning threshold percentage of the allowed limit.
Effect	None

10.28 networkInstanceBridgeTableProxyNdLimitHighUtilizationLowered

Table 110: networkInstanceBridgeTableProxyNdLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableProxyNdLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of proxy ND entries in the bridge table of network-instance network-instance is now at pct-threshold% minus 5% of the allowed limit of maximum-entries.
Cause	This event is generated when the number of proxy ND entriesin the bridge table of the network-instance is at 5% minus the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

10.29 systemBridgeTableMacLimitHighUtilization

Table 111: systemBridgeTableMacLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	systemBridgeTableMacLimitHighUtilization
Default severity	warning
Message format string	The number of MAC addresses in the bridge table of the system has reached <i>pct-threshold</i> % of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table of the system reaches the configured warning threshold percentage of the allowed limit.
Effect	None

10.30 systemBridgeTableMacLimitHighUtilizationLowered

Table 112: systemBridgeTableMacLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	systemBridgeTableMacLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of MAC addresses in the bridge table of the system is now at <i>pct-threshold</i> % minus 5% of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table of the system is at 5% minus the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

10.31 systemBridgeTableMacLimitLowered

Table 113: systemBridgeTableMacLimitLowered properties

Property name	Value
Application name	bridgetable
Event name	systemBridgeTableMacLimitLowered
Default severity	notice
Message format string	The number of MAC addresses in the bridge table of the system is now below the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table of the system goes below the allowed limit, after being above the allowed limit
Effect	new mac-addresses can now be added to the bridge table.

10.32 systemBridgeTableMacLimitReached

Table 114: systemBridgeTableMacLimitReached properties

Property name	Value
Application name	bridgetable
Event name	systemBridgeTableMacLimitReached
Default severity	warning
Message format string	The number of MAC addresses in the bridge table of the system is at the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table of the system is at the allowed limit.
Effect	new mac-addresses cannot be added in any bridge table in the system.

10.33 systemBridgeTableProxyArpLimitHighUtilization

Table 115: systemBridgeTableProxyArpLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	systemBridgeTableProxyArpLimitHighUtilization
Default severity	warning
Message format string	The number of proxy ARP entries in the bridge table of the system has reached <i>pct-threshold</i> % of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of proxy ARP entries in the bridge table the system reaches the warning threshold percentage of the allowed limit.
Effect	None

10.34 systemBridgeTableProxyArpLimitHighUtilizationLowered

Table 116: systemBridgeTableProxyArpLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	systemBridgeTableProxyArpLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of proxy ARP entries in the bridge table of the system is now at pct-threshold% minus 5% of the allowed limit of maximum-entries.
Cause	This event is generated when the number of proxy ARP entriesin the bridge table of the system is at 5% minus the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

10.35 systemBridgeTableProxyNdLimitHighUtilization

Table 117: systemBridgeTableProxyNdLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	systemBridgeTableProxyNdLimitHighUtilization
Default severity	warning
Message format string	The number of proxy ND entries in the bridge table of the system has reached <i>pct-threshold</i> % of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of proxy ND entries in the bridge table the system reaches the warning threshold percentage of the allowed limit.
Effect	None

10.36 systemBridgeTableProxyNdLimitHighUtilizationLowered

Table 118: systemBridgeTableProxyNdLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	systemBridgeTableProxyNdLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of proxy ND entries in the bridge table of the system is now at <i>pct-threshold</i> % minus 5% of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of proxy ND entries in the bridge table of the system is at 5% minus the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

10.37 systemEvpnMpIsMulticastPeersLimitHighUtilization

Table 119: systemEvpnMpIsMulticastPeersLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	systemEvpnMplsMulticastPeersLimitHighUtilization
Default severity	warning
Message format string	The number of Evpn Mpls Multicast Peers has reached <i>pct-threshold</i> % of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of Evpn Mpls Multicast Peers reaches the warning threshold percentage of the allowed limit.
Effect	None

10.38 systemEvpnMplsMulticastPeersLimitHighUtilizationLowered

Table 120: systemEvpnMpIsMulticastPeersLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	systemEvpnMplsMulticastPeersLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of Evpn Mpls Multicast Peers is now below a <i>pct-threshold</i> % minus 5% of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of Evpn Mpls Multicast Peers is 5% below the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

10.39 systemEvpnMpIsMulticastPeersLimitLowered

Table 121: systemEvpnMpIsMulticastPeersLimitLowered properties

Property name	Value
Application name	bridgetable
Event name	systemEvpnMplsMulticastPeersLimitLowered
Default severity	notice
Message format string	The number of Evpn Mpls Multicast Peers is now below the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of Evpn Mpls Multicast Peers goes below the allowed limit, after being above the allowed limit
Effect	New Evpn Mpls Multicast Peers can be added.

10.40 systemEvpnMpIsMulticastPeersLimitReached

Table 122: systemEvpnMplsMulticastPeersLimitReached properties

Property name	Value
Application name	bridgetable
Event name	systemEvpnMplsMulticastPeersLimitReached
Default severity	warning
Message format string	The number of Evpn Mpls Multicast Peers is at the allowed limit of maximum-entries.
Cause	This event is generated when the number of Evpn Mpls Multicast Peers is at the allowed limit.
Effect	New Evpn Mpls Multicast Peers cannot be added.

10.41 systemMulticastIdLimitHighUtilization

Table 123: systemMulticastIdLimitHighUtilization properties

Property name	Value
Application name	bridgetable

Property name	Value
Event name	systemMulticastIdLimitHighUtilization
Default severity	warning
Message format string	The multicast id usage of the system has reached <i>pct-threshold</i> % of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the multicast id usage of the system reaches the configured warning threshold percentage of the allowed limit.
Effect	None

10.42 systemMulticastIdLimitHighUtilizationLowered

Table 124: systemMulticastIdLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	systemMulticastIdLimitHighUtilizationLowered
Default severity	notice
Message format string	The multicast id usage of the system is now at <i>pct-threshold</i> % minus 5% of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the multicast id usage of the system is at 5% minus the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

${\bf 10.43\ vxlanlnter} face Bridge Table Multicast Destinations Limit High Utilization$

Table 125: vxlanInterfaceBridgeTableMulticastDestinationsLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	vxlanInterfaceBridgeTableMulticastDestinationsLimitHighUtilization
Default severity	warning

Property name	Value
Message format string	The number of Vxlan Multicast Destinations in the bridge table for the vxlan-interface tunnel-interface.vxlan-interface has reached pct-threshold% of the allowed limit of maximum-entries.
Cause	This event is generated when the number of Vxlan Multicast Destinations in the vxlan-interface reaches the warning threshold percentage of the allowed limit.
Effect	None

10.44 vxlanInterfaceBridgeTableMulticastDestinationsLimit HighUtilizationLowered

Table 126: vxlanInterfaceBridgeTableMulticastDestinationsLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	vxlanInterfaceBridgeTableMulticastDestinationsLimitHighUtilization Lowered
Default severity	notice
Message format string	The number of Vxlan Multicast Destinations in the bridge table for the vxlan-interface tunnel-interface.vxlan-interface is now below a pct-threshold% minus 5% of the allowed limit of maximum-entries.
Cause	This event is generated when the number of Vxlan Multicast Destinations in the vxlan-interface is 5% below the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

${\bf 10.45\ vx} lanInterface Bridge Table Multicast Destinations Limit Lowered$

Table 127: vxlanInterfaceBridgeTableMulticastDestinationsLimitLowered properties

Property name	Value
Application name	bridgetable
Event name	vxlanInterfaceBridgeTableMulticastDestinationsLimitLowered
Default severity	notice

Property name	Value
Message format string	The number of Vxlan Multicast Destinations in the bridge table for the vxlan-interface tunnel-interface.vxlan-interface is now below the allowed limit of maximum-entries.
Cause	This event is generated when the number of Vxlan Multicast Destinations in a vxlan-interface goes below the allowed limit, after being above the allowed limit
Effect	New Vxlan Multicast Destinations can be added to the vxlan-interface.

10.46 vxlanInterfaceBridgeTableMulticastDestinationsLimitReached

Table 128: vxlanInterfaceBridgeTableMulticastDestinationsLimitReached properties

Property name	Value
Application name	bridgetable
Event name	vxlanInterfaceBridgeTableMulticastDestinationsLimitReached
Default severity	warning
Message format string	The number of Vxlan Multicast Destinations in the bridge table for the vxlan-interface tunnel-interface.vxlan-interface is at the allowed limit of maximum-entries.
Cause	This event is generated when the number of Vxlan Multicast Destinations in a vxlan-interface is at the allowed limit.
Effect	New Vxlan Multicast Destinations cannot be added to the vxlan-interface.

11 chassis

11.1 platformDatapathResourceHighUtilization

Table 129: platformDatapathResourceHighUtilization properties

Property name	Value
Application name	chassis
Event name	platformDatapathResourceHighUtilization
Default severity	warning
Message format string	The datapath resource called <i>resource-name</i> has reached <i>threshold</i> % or more utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i>
Cause	This event is generated when the utilization of a datapath resource has increased to a level that may warrant concern if further resources are consumed
Effect	None

11.2 platformDatapathResourceHighUtilizationLowered

Table 130: platformDatapathResourceHighUtilizationLowered properties

Property name	Value
Application name	chassis
Event name	platformDatapathResourceHighUtilizationLowered
Default severity	notice
Message format string	The datapath resource called <i>resource-name</i> has decreased back to <i>threshold</i> % or less utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i>
Cause	This event is generated when the utilization of a datapath resource has decreased to a level that may no longer warrant concern
Effect	None

11.3 platformDatapathResourceLimitCleared

Table 131: platformDatapathResourceLimitCleared properties

Property name	Value
Application name	chassis
Event name	platformDatapathResourceLimitCleared
Default severity	notice
Message format string	The datapath resource called <i>resource-name</i> has decreased from 100% utilization back to 95% or less utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i>
Cause	This event is generated when the utilization of a datapath resource has decreased to a level such that resource exhaustion is no longer imminent
Effect	None

11.4 platformDatapathResourceLimitReached

Table 132: platformDatapathResourceLimitReached properties

Property name	Value
Application name	chassis
Event name	platformDatapathResourceLimitReached
Default severity	warning
Message format string	The datapath resource called <i>resource-name</i> has reached 100% utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i>
Cause	This event is generated when the utilization of a datapath resource has exhausted the resource
Effect	None

11.5 platformMtuHighUtilization

Table 133: platformMtuHighUtilization properties

Property name	Value
Application name	chassis
Event name	platformMtuHighUtilization
Default severity	warning
Message format string	The MTU resource called <i>resource-name</i> has reached <i>threshold</i> % or more utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> . Only <i>free-entries</i> entries are remaining.
Cause	This event is generated when the utilization of an MTU resource has increased to a level that may warrant concern if further resources are consumed
Effect	None

11.6 platformMtuHighUtilizationLowered

Table 134: platformMtuHighUtilizationLowered properties

Property name	Value
Application name	chassis
Event name	platformMtuHighUtilizationLowered
Default severity	notice
Message format string	The MTU resource called <i>resource-name</i> has decreased back to <i>threshold</i> % or less utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> .
Cause	This event is generated when the utilization of an MTU resource has decreased to a level that may no longer warrant concern
Effect	None

11.7 platformPipelineResourceHighUtilization

Table 135: platformPipelineResourceHighUtilization properties

Property name	Value
Application name	chassis
Event name	platformPipelineResourceHighUtilization
Default severity	warning
Message format string	The pipeline resource called <i>resource-name</i> has reached <i>threshold</i> % or more utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> , pipeline <i>pipeline</i>
Cause	This event is generated when the utilization of a pipeline resource has increased to a level that may warrant concern if futher resources are consumed
Effect	None

11.8 platformPipelineResourceHighUtilizationLowered

Table 136: platformPipelineResourceHighUtilizationLowered properties

Property name	Value
Application name	chassis
Event name	platformPipelineResourceHighUtilizationLowered
Default severity	notice
Message format string	The pipeline resource called <i>resource-name</i> has decreased back to <i>threshold</i> % or less utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> , pipeline <i>pipeline</i>
Cause	This event is generated when the utilization of a pipeline resource has decreased to a level that may no longer warrant concern
Effect	None

11.9 platformPipelineResourceLimitCleared

Table 137: platformPipelineResourceLimitCleared properties

Property name	Value
Application name	chassis
Event name	platformPipelineResourceLimitCleared
Default severity	notice
Message format string	The pipeline resource called <i>resource-name</i> has decreased from 100% utilization back to 95% or less utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> , <i>pipeline</i>
Cause	This event is generated when the utilization of a pipeline resource has decreased to a level such that resource exhaustion is no longer imminent
Effect	None

11.10 platformPipelineResourceLimitReached

Table 138: platformPipelineResourceLimitReached properties

Property name	Value
Application name	chassis
Event name	platformPipelineResourceLimitReached
Default severity	warning
Message format string	The pipeline resource called <i>resource-name</i> has reached 100% utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> , <i>pipeline</i>
Cause	This event is generated when the utilization of a pipeline resource has exhausted the resource
Effect	None

11.11 portDown

Table 139: portDown properties

Property name	Value
Application name	chassis
Event name	portDown
Default severity	warning
Message format string	Interface interface_name is now down for reason: oper_down_reason
Cause	The interface has transitioned from the up state to the down state
Effect	The interface is now down

11.12 portEtherCrcMonAlarmClear

Table 140: portEtherCrcMonAlarmClear properties

Property name	Value
Application name	chassis
Event name	portEtherCrcMonAlarmClear
Default severity	warning
Message format string	Interface interface-name reported CRC frame errors have dropped below configured threshold-name threshold multiplier*10e-exponent
Cause	This event is generated when an Ethernet port CRC monitoring alarm condition is cleared or the monitoring is disabled.
Effect	None

11.13 portEtherCrcMonAlarmSet

Table 141: portEtherCrcMonAlarmSet properties

Property name	Value
Application name	chassis
Event name	portEtherCrcMonAlarmSet

Property name	Value
Default severity	warning
Message format string	Interface interface-name reported CRC frame errors in excess of the configured threshold-name threshold multiplier*10e-exponent
Cause	This event is generated when an Ethernet port CRC frame monitoring alarm condition is detected. It is generated only when CRC monitoring is enabled on the port
Effect	On a signal failure (SF) threshold being exceeded, the port is taken out of service until the CRC alarm condition is cleared

11.14 portEtherSymMonAlarmClear

Table 142: portEtherSymMonAlarmClear properties

Property name	Value
Application name	chassis
Event name	portEtherSymMonAlarmClear
Default severity	warning
Message format string	Interface interface-name reported symbol errors have dropped below configured threshold-name threshold multiplier*10e-exponent
Cause	This event is generated when an Ethernet port symbol monitoring alarm condition is cleared or the monitoring is disabled.
Effect	None

11.15 portEtherSymMonAlarmSet

Table 143: portEtherSymMonAlarmSet properties

Property name	Value
Application name	chassis
Event name	portEtherSymMonAlarmSet
Default severity	warning
Message format string	Interface interface-name reported symbol errors in excess of the configured threshold-name threshold multiplier*10e-exponent

Property name	Value
Cause	This event is generated when an Ethernet port symbol monitoring alarm condition is detected. It is generated only when symbol monitoring is enabled on the port
Effect	On a signal failure (SF) threshold being exceeded, the port is taken out of service until the symbol alarm condition is cleared

11.16 portUp

Table 144: portUp properties

Property name	Value
Application name	chassis
Event name	portUp
Default severity	notice
Message format string	Interface interface_name is now up
Cause	The interface has transitioned from the down state to the up state
Effect	The interface is now up

11.17 secureBootDisabled

Table 145: secureBootDisabled properties

Property name	Value
Application name	chassis
Event name	secureBootDisabled
Default severity	warning
Message format string	Control module <i>control</i> booted with Secure Boot Disabled
Cause	The control module booted with Secure Boot disabled
Effect	Boot software is not subject to signature verification

11.18 secureBootEnabled

Table 146: secureBootEnabled properties

Property name	Value
Application name	chassis
Event name	secureBootEnabled
Default severity	notice
Message format string	Control module <i>control</i> booted with Secure Boot Enabled
Cause	The control module booted with Secure Boot Enabled
Effect	Boot software is subject to signature verification

11.19 subinterfaceDown

Table 147: subinterfaceDown properties

Property name	Value
Application name	chassis
Event name	subinterfaceDown
Default severity	warning
Message format string	The subinterface subinterface_name is now down for reason: oper_down_reason
Cause	This event is generated when the subinterface has transitioned from the up state to the down state
Effect	The subinterface is now down

11.20 subinterfaceUp

Table 148: subinterfaceUp properties

Property name	Value
Application name	chassis
Event name	subinterfaceUp

Property name	Value
Default severity	notice
Message format string	The subinterface subinterface_name is now up
Cause	This event is generated when the subinterface has transitioned from the down state to the up state.
Effect	The subinterface is now up

11.21 transceiverChannelHighInputPowerAlarm

Table 149: transceiverChannelHighInputPowerAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighInputPowerAlarm
Default severity	critical
Message format string	The input power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> dBm or more
Cause	The input power of the optical channel has increased
Effect	High input power may affect transceiver performance

11.22 transceiverChannelHighInputPowerAlarmClear

Table 150: transceiverChannelHighInputPowerAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighInputPowerAlarmClear
Default severity	informational
Message format string	The input power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> dBm
Cause	The input power of the optical channel has decreased

Property name	Value
Effect	High input power may affect transceiver performance

11.23 transceiverChannelHighInputPowerWarning

Table 151: transceiverChannelHighInputPowerWarning properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighInputPowerWarning
Default severity	warning
Message format string	The input power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> dBm or more
Cause	The input power of the optical channel has increased
Effect	High input power may affect transceiver performance

11.24 transceiverChannelHighInputPowerWarningClear

Table 152: transceiverChannelHighInputPowerWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighInputPowerWarningClear
Default severity	informational
Message format string	The input power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> dBm
Cause	The input power of the optical channel has decreased
Effect	High input power may affect transceiver performance

11.25 transceiverChannelHighLaserBiasCurrentAlarm

Table 153: transceiverChannelHighLaserBiasCurrentAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighLaserBiasCurrentAlarm
Default severity	critical
Message format string	The laser bias current supplied to channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> mA or more
Cause	Laser bias increases with temperature and age. Consider lowering the ambient temperature or replacing the laser.
Effect	High laser bias may affect transceiver performance

11.26 transceiverChannelHighLaserBiasCurrentAlarmClear

Table 154: transceiverChannelHighLaserBiasCurrentAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighLaserBiasCurrentAlarmClear
Default severity	informational
Message format string	The laser bias current supplied to channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> mA
Cause	Laser bias current has decreased
Effect	High laser bias may affect transceiver performance

11.27 transceiverChannelHighLaserBiasCurrentWarning

Table 155: transceiverChannelHighLaserBiasCurrentWarning properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighLaserBiasCurrentWarning
Default severity	warning
Message format string	The laser bias current supplied to channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> mA or more
Cause	Laser bias increases with temperature and age. Consider lowering the ambient temperature or replacing the laser.
Effect	High laser bias may affect transceiver performance

11.28 transceiverChannelHighLaserBiasCurrentWarningClear

Table 156: transceiverChannelHighLaserBiasCurrentWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighLaserBiasCurrentWarningClear
Default severity	informational
Message format string	The laser bias current supplied to channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> mA
Cause	Laser bias current has decreased
Effect	High laser bias may affect transceiver performance

11.29 transceiverChannelHighOutputPowerAlarm

Table 157: transceiverChannelHighOutputPowerAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighOutputPowerAlarm
Default severity	critical
Message format string	The output power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> dBm or more
Cause	The output power of the optical channel has increased
Effect	High output power may affect transceiver performance

11.30 transceiverChannelHighOutputPowerAlarmClear

Table 158: transceiverChannelHighOutputPowerAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighOutputPowerAlarmClear
Default severity	informational
Message format string	The output power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> dBm
Cause	The output power of the optical channel has decreased
Effect	High output power may affect transceiver performance

11.31 transceiverChannelHighOutputPowerWarning

Table 159: transceiverChannelHighOutputPowerWarning properties

Property name	Value
Application name	chassis

Property name	Value
Event name	transceiverChannelHighOutputPowerWarning
Default severity	warning
Message format string	The output power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> dBm or more
Cause	The output power of the optical channel has increased
Effect	High output power may affect transceiver performance

11.32 transceiverChannelHighOutputPowerWarningClear

Table 160: transceiverChannelHighOutputPowerWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighOutputPowerWarningClear
Default severity	informational
Message format string	The output power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> dBm
Cause	The output power of the optical channel has decreased
Effect	High output power may affect transceiver performance

11.33 transceiverChannelLowInputPowerAlarm

Table 161: transceiverChannelLowInputPowerAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowInputPowerAlarm
Default severity	critical
Message format string	The input power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> dBm or less

Property name	Value
Cause	The input power of the optical channel has decreased
Effect	Low input power may affect transceiver performance

11.34 transceiverChannelLowInputPowerAlarmClear

Table 162: transceiverChannelLowInputPowerAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowInputPowerAlarmClear
Default severity	informational
Message format string	The input power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> dBm
Cause	The input power of the optical channel has increased
Effect	Low input power may affect transceiver performance

11.35 transceiverChannelLowInputPowerWarning

Table 163: transceiverChannelLowInputPowerWarning properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowInputPowerWarning
Default severity	warning
Message format string	The input power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> dBm or less
Cause	The input power of the optical channel has decreased
Effect	Low input power may affect transceiver performance

11.36 transceiverChannelLowInputPowerWarningClear

Table 164: transceiverChannelLowInputPowerWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowInputPowerWarningClear
Default severity	informational
Message format string	The input power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> dBm
Cause	The input power of the optical channel has increased
Effect	Low input power may affect transceiver performance

11.37 transceiverChannelLowLaserBiasCurrentAlarm

Table 165: transceiverChannelLowLaserBiasCurrentAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowLaserBiasCurrentAlarm
Default severity	critical
Message format string	The laser bias current supplied to channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> mA or less
Cause	The laser bias current of the optical channel has decreased
Effect	Low laser bias current may affect transceiver performance

11.38 transceiverChannelLowLaserBiasCurrentAlarmClear

Table 166: transceiverChannelLowLaserBiasCurrentAlarmClear properties

Property name	Value
Application name	chassis

Property name	Value
Event name	transceiverChannelLowLaserBiasCurrentAlarmClear
Default severity	informational
Message format string	The laser bias current supplied to channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> mA
Cause	The laser bias current of the optical channel has increased
Effect	Low laser bias current may affect transceiver performance

11.39 transceiverChannelLowLaserBiasCurrentWarning

Table 167: transceiverChannelLowLaserBiasCurrentWarning properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowLaserBiasCurrentWarning
Default severity	warning
Message format string	The laser bias current supplied to channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> mA or less
Cause	The laser bias current of the optical channel has decreased
Effect	Low laser bias current may affect transceiver performance

11.40 transceiverChannelLowLaserBiasCurrentWarningClear

Table 168: transceiverChannelLowLaserBiasCurrentWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowLaserBiasCurrentWarningClear
Default severity	informational
Message format string	The laser bias current supplied to channel channel_num of the transceiver associated with interface interface_name has increased above low_threshold mA

Property name	Value
Cause	The laser bias current of the optical channel has increased
Effect	Low laser bias current may affect transceiver performance

11.41 transceiverChannelLowOutputPowerAlarm

Table 169: transceiverChannelLowOutputPowerAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowOutputPowerAlarm
Default severity	critical
Message format string	The output power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> dBm or less
Cause	The output power of the optical channel has decreased
Effect	Low output power may affect transceiver performance

11.42 transceiverChannelLowOutputPowerAlarmClear

Table 170: transceiverChannelLowOutputPowerAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowOutputPowerAlarmClear
Default severity	informational
Message format string	The output power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> dBm
Cause	The output power of the optical channel has increased
Effect	Low output power may affect transceiver performance

11.43 transceiverChannelLowOutputPowerWarning

Table 171: transceiverChannelLowOutputPowerWarning properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowOutputPowerWarning
Default severity	warning
Message format string	The output power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> dBm or less
Cause	The output power of the optical channel has decreased
Effect	Low output power may affect transceiver performance

11.44 transceiverChannelLowOutputPowerWarningClear

Table 172: transceiverChannelLowOutputPowerWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowOutputPowerWarningClear
Default severity	informational
Message format string	The output power measured for channel channel_num of the transceiver associated with interface interface_name has increased above low_threshold dBm
Cause	The output power of the optical channel has increased
Effect	Low output power may affect transceiver performance

11.45 transceiverHighInputPowerAlarm

Table 173: transceiverHighInputPowerAlarm properties

Property name	Value
Application name	chassis

Property name	Value
Event name	transceiverHighInputPowerAlarm
Default severity	critical
Message format string	The input power measured for the transceiver associated with interface interface_name has increased to high_threshold dBm or more
Cause	The input power of the optics has increased
Effect	High input power may affect transceiver performance

11.46 transceiverHighInputPowerAlarmClear

Table 174: transceiverHighInputPowerAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverHighInputPowerAlarmClear
Default severity	informational
Message format string	The input power measured for the transceiver associated with interface interface_name has decreased below high_threshold dBm
Cause	The input power of the optics has decreased
Effect	High input power may affect transceiver performance

11.47 transceiverHighInputPowerWarning

Table 175: transceiverHighInputPowerWarning properties

Property name	Value
Application name	chassis
Event name	transceiverHighInputPowerWarning
Default severity	warning
Message format string	The input power measured for the transceiver associated with interface interface_name has increased to high_threshold dBm or more
Cause	The input power of the optics has increased

Property name	Value
Effect	High input power may affect transceiver performance

11.48 transceiverHighInputPowerWarningClear

Table 176: transceiverHighInputPowerWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverHighInputPowerWarningClear
Default severity	informational
Message format string	The input power measured for the transceiver associated with interface interface_name has decreased below high_threshold dBm
Cause	The input power of the opticsl has decreased
Effect	High input power may affect transceiver performance

11.49 transceiverHighLaserBiasCurrentAlarm

Table 177: transceiverHighLaserBiasCurrentAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverHighLaserBiasCurrentAlarm
Default severity	critical
Message format string	The laser bias current supplied to the transceiver associated with interface interface_name has increased to high_threshold mA or more
Cause	Laser bias increases with temperature and age. Consider lowering the ambient temperature or replacing the laser.
Effect	High laser bias may affect transceiver performance

11.50 transceiverHighLaserBiasCurrentAlarmClear

Table 178: transceiverHighLaserBiasCurrentAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverHighLaserBiasCurrentAlarmClear
Default severity	informational
Message format string	The laser bias current supplied to the transceiver associated with interface interface_name has decreased below high_threshold mA
Cause	Laser bias current has decreased
Effect	High laser bias may affect transceiver performance

11.51 transceiverHighLaserBiasCurrentWarning

Table 179: transceiverHighLaserBiasCurrentWarning properties

Property name	Value
Application name	chassis
Event name	transceiverHighLaserBiasCurrentWarning
Default severity	warning
Message format string	The laser bias current supplied to the transceiver associated with interface interface_name has increased to high_threshold mA or more
Cause	Laser bias increases with temperature and age. Consider lowering the ambient temperature or replacing the laser.
Effect	High laser bias may affect transceiver performance

11.52 transceiverHighLaserBiasCurrentWarningClear

Table 180: transceiverHighLaserBiasCurrentWarningClear properties

Property name	Value
Application name	chassis

Property name	Value
Event name	transceiverHighLaserBiasCurrentWarningClear
Default severity	informational
Message format string	The laser bias current supplied to the transceiver associated with interface interface_name has decreased below high_threshold mA
Cause	Laser bias current has decreased
Effect	High laser bias may affect transceiver performance

11.53 transceiverHighOutputPowerAlarm

Table 181: transceiverHighOutputPowerAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverHighOutputPowerAlarm
Default severity	critical
Message format string	The output power measured for the transceiver associated with interface interface_name has increased to high_threshold dBm or more
Cause	The output power of the optics has increased
Effect	High output power may affect transceiver performance

11.54 transceiverHighOutputPowerAlarmClear

Table 182: transceiverHighOutputPowerAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverHighOutputPowerAlarmClear
Default severity	informational
Message format string	The output power measured for the transceiver associated with interface interface_name has decreased below high_threshold dBm
Cause	The output power of the optics has decreased

Property name	Value
Effect	High output power may affect transceiver performance

11.55 transceiverHighOutputPowerWarning

Table 183: transceiverHighOutputPowerWarning properties

Property name	Value
Application name	chassis
Event name	transceiverHighOutputPowerWarning
Default severity	warning
Message format string	The output power measured for the transceiver associated with interface interface_name has increased to high_threshold dBm or more
Cause	The output power of the optics has increased
Effect	High output power may affect transceiver performance

11.56 transceiverHighOutputPowerWarningClear

Table 184: transceiverHighOutputPowerWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverHighOutputPowerWarningClear
Default severity	informational
Message format string	The output power measured for the transceiver associated with interface interface_name has decreased below high_threshold dBm
Cause	The output power of the optics has decreased
Effect	High output power may affect transceiver performance

11.57 transceiverLowInputPowerAlarm

Table 185: transceiverLowInputPowerAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverLowInputPowerAlarm
Default severity	critical
Message format string	The input power measured for the transceiver associated with interface interface_name has decreased to low_threshold dBm or less
Cause	The input power of the optics has decreased
Effect	Low input power may affect transceiver performance

11.58 transceiverLowInputPowerAlarmClear

Table 186: transceiverLowInputPowerAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverLowInputPowerAlarmClear
Default severity	informational
Message format string	The input power measured for the transceiver associated with interface interface_name has increased above low_threshold dBm
Cause	The input power of the optics has increased
Effect	Low input power may affect transceiver performance

11.59 transceiverLowInputPowerWarning

Table 187: transceiverLowInputPowerWarning properties

Property name	Value
Application name	chassis
Event name	transceiverLowInputPowerWarning

Property name	Value
Default severity	warning
Message format string	The input power measured for the transceiver associated with interface interface_name has decreased to low_threshold dBm or less
Cause	The input power of the optics has decreased
Effect	Low input power may affect transceiver performance

11.60 transceiverLowInputPowerWarningClear

Table 188: transceiverLowInputPowerWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverLowInputPowerWarningClear
Default severity	informational
Message format string	The input power measured for the transceiver associated with interface interface_name has increased above low_threshold dBm
Cause	The input power of the optics has increased
Effect	Low input power may affect transceiver performance

11.61 transceiverLowLaserBiasCurrentAlarm

Table 189: transceiverLowLaserBiasCurrentAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverLowLaserBiasCurrentAlarm
Default severity	critical
Message format string	The laser bias current supplied to the transceiver associated with interface interface_name has decreased to low_threshold mA or less
Cause	The laser bias current of the optics has decreased
Effect	Low laser bias current may affect transceiver performance

11.62 transceiverLowLaserBiasCurrentAlarmClear

Table 190: transceiverLowLaserBiasCurrentAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverLowLaserBiasCurrentAlarmClear
Default severity	informational
Message format string	The laser bias current supplied to the transceiver associated with interface interface_name has increased above low_threshold mA
Cause	The laser bias current of the optics has increased
Effect	Low laser bias current may affect transceiver performance

11.63 transceiverLowLaserBiasCurrentWarning

Table 191: transceiverLowLaserBiasCurrentWarning properties

Property name	Value
Application name	chassis
Event name	transceiverLowLaserBiasCurrentWarning
Default severity	warning
Message format string	The laser bias current supplied to the transceiver associated with interface interface_name has decreased to low_threshold mA or less
Cause	The laser bias current of the optics has decreased
Effect	Low laser bias current may affect transceiver performance

11.64 transceiverLowLaserBiasCurrentWarningClear

Table 192: transceiverLowLaserBiasCurrentWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverLowLaserBiasCurrentWarningClear

Property name	Value
Default severity	informational
Message format string	The laser bias current supplied to the transceiver associated with interface interface_name has increased above low_threshold mA
Cause	The laser bias current of the optics has increased
Effect	Low laser bias current may affect transceiver performance

11.65 transceiverLowOutputPowerAlarm

Table 193: transceiverLowOutputPowerAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverLowOutputPowerAlarm
Default severity	critical
Message format string	The output power measured for the transceiver associated with interface interface_name has decreased to low_threshold dBm or less
Cause	The output power of the optics has decreased
Effect	Low output power may affect transceiver performance

11.66 transceiverLowOutputPowerAlarmClear

Table 194: transceiverLowOutputPowerAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverLowOutputPowerAlarmClear
Default severity	informational
Message format string	The output power measured for the transceiver associated with interface interface_name has increased above low_threshold dBm
Cause	The output power of the optics has increased
Effect	Low output power may affect transceiver performance

11.67 transceiverLowOutputPowerWarning

Table 195: transceiverLowOutputPowerWarning properties

Property name	Value
Application name	chassis
Event name	transceiverLowOutputPowerWarning
Default severity	warning
Message format string	The output power measured for the transceiver associated with interface interface_name has decreased to low_threshold dBm or less
Cause	The output power of the optics has decreased
Effect	Low output power may affect transceiver performance

11.68 transceiverLowOutputPowerWarningClear

Table 196: transceiverLowOutputPowerWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverLowOutputPowerWarningClear
Default severity	informational
Message format string	The output power measured for the transceiver associated with interface interface_name has increased above low_threshold dBm
Cause	The output power of the optics has increased
Effect	Low output power may affect transceiver performance

11.69 transceiverModuleDown

Table 197: transceiverModuleDown properties

Property name	Value
Application name	chassis
Event name	transceiverModuleDown

Property name	Value
Default severity	warning
Message format string	The transceiver associated with the interface <i>interface_name</i> is now down
Cause	The transceiver oper-state has transitioned from the up state to any lower state
Effect	The transceiver is not operational

11.70 transceiverModuleHighTemperatureAlarm

Table 198: transceiverModuleHighTemperatureAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverModuleHighTemperatureAlarm
Default severity	critical
Message format string	The temperature of the transceiver associated with the interface interface_name has increased to high_threshold degrees C or more
Cause	The temperature of the transceiver module has increased
Effect	High temperatures may affect transceiver performance

11.71 transceiverModuleHighTemperatureAlarmClear

Table 199: transceiverModuleHighTemperatureAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverModuleHighTemperatureAlarmClear
Default severity	informational
Message format string	The temperature of the transceiver associated with the interface interface_name has decreased below high_threshold degrees C
Cause	The temperature of the transceiver module has decreased
Effect	High temperatures may affect transceiver performance

11.72 transceiverModuleHighTemperatureWarning

Table 200: transceiverModuleHighTemperatureWarning properties

Property name	Value
Application name	chassis
Event name	transceiverModuleHighTemperatureWarning
Default severity	warning
Message format string	The temperature of the transceiver associated with the interface interface_name has increased to high_threshold degrees C or more
Cause	The temperature of the transceiver module has increased
Effect	High temperatures may affect transceiver performance

11.73 transceiverModuleHighTemperatureWarningClear

Table 201: transceiverModuleHighTemperatureWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverModuleHighTemperatureWarningClear
Default severity	informational
Message format string	The temperature of the transceiver associated with the interface interface_name has decreased below high_threshold degrees C
Cause	The temperature of the transceiver module has decreased
Effect	High temperatures may affect transceiver performance

11.74 transceiverModuleHighVoltageAlarm

Table 202: transceiverModuleHighVoltageAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverModuleHighVoltageAlarm

Property name	Value
Default severity	critical
Message format string	The voltage of the transceiver associated with the interface <i>interface_name</i> has increased to <i>high_threshold</i> Volts or more
Cause	The voltage supplied to the transceiver module has increased
Effect	High voltages may affect transceiver performance

11.75 transceiverModuleHighVoltageAlarmClear

Table 203: transceiverModuleHighVoltageAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverModuleHighVoltageAlarmClear
Default severity	informational
Message format string	The voltage of the transceiver associated with the interface interface_name has decreased below high_threshold Volts
Cause	The voltage supplied to the transceiver module has decreased
Effect	High voltages may affect transceiver performance

11.76 transceiverModuleHighVoltageWarning

Table 204: transceiverModuleHighVoltageWarning properties

Property name	Value
Application name	chassis
Event name	transceiverModuleHighVoltageWarning
Default severity	warning
Message format string	The voltage of the transceiver associated with the interface interface name has increased to high_threshold Volts or more
Cause	The voltage supplied to the transceiver module has increased
Effect	High voltages may affect transceiver performance

11.77 transceiverModuleHighVoltageWarningClear

Table 205: transceiverModuleHighVoltageWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverModuleHighVoltageWarningClear
Default severity	informational
Message format string	The voltage of the transceiver associated with the interface interface_name has decreased below high_threshold Volts
Cause	The voltage supplied to the transceiver module has decreased
Effect	High voltages may affect transceiver performance

11.78 transceiverModuleLowTemperatureAlarm

Table 206: transceiverModuleLowTemperatureAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverModuleLowTemperatureAlarm
Default severity	critical
Message format string	The temperature of the transceiver associated with the interface interface_name has decreased to low_threshold degrees C or less
Cause	The temperature of the transceiver module has decreased
Effect	Low temperatures may affect transceiver performance

11.79 transceiverModuleLowTemperatureAlarmClear

Table 207: transceiverModuleLowTemperatureAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverModuleLowTemperatureAlarmClear

Property name	Value
Default severity	informational
Message format string	The temperature of the transceiver associated with the interface interface_name has increased above low_threshold degrees C
Cause	The temperature of the transceiver module has increased
Effect	Low temperatures may affect transceiver performance

11.80 transceiverModuleLowTemperatureWarning

Table 208: transceiverModuleLowTemperatureWarning properties

Property name	Value
Application name	chassis
Event name	transceiverModuleLowTemperatureWarning
Default severity	warning
Message format string	The temperature of the transceiver associated with the interface interface_name has decreased to low_threshold degrees C or less
Cause	The temperature of the transceiver module has decreased
Effect	Low temperatures may affect transceiver performance

11.81 transceiverModuleLowTemperatureWarningClear

Table 209: transceiverModuleLowTemperatureWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverModuleLowTemperatureWarningClear
Default severity	informational
Message format string	The temperature of the transceiver associated with the interface interface_name has increased above low_threshold degrees C
Cause	The temperature of the transceiver module has increased
Effect	Low temperatures may affect transceiver performance

11.82 transceiverModuleLowVoltageAlarm

Table 210: transceiverModuleLowVoltageAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverModuleLowVoltageAlarm
Default severity	critical
Message format string	The voltage of the transceiver associated with the interface interface name has decreased to low_threshold Volts or less
Cause	The voltage supplied to the transceiver module has decreased
Effect	Low voltages may affect transceiver performance

11.83 transceiverModuleLowVoltageAlarmClear

Table 211: transceiverModuleLowVoltageAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverModuleLowVoltageAlarmClear
Default severity	informational
Message format string	The voltage of the transceiver associated with the interface interface_name has increased above low_threshold Volts
Cause	The voltage supplied to the transceiver module has increased
Effect	Low voltages may affect transceiver performance

11.84 transceiverModuleLowVoltageWarning

Table 212: transceiverModuleLowVoltageWarning properties

Property name	Value
Application name	chassis
Event name	transceiverModuleLowVoltageWarning

Property name	Value
Default severity	warning
Message format string	The voltage of the transceiver associated with the interface interface_name has decreased to low_threshold Volts or less
Cause	The voltage supplied to the transceiver module has decreased
Effect	Low voltages may affect transceiver performance

11.85 transceiverModuleLowVoltageWarningClear

Table 213: transceiverModuleLowVoltageWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverModuleLowVoltageWarningClear
Default severity	informational
Message format string	The voltage of the transceiver associated with the interface <i>interface_name</i> has increased above <i>low_threshold</i> Volts
Cause	The voltage supplied to the transceiver module has increased
Effect	Low voltages may affect transceiver performance

11.86 transceiverModuleUp

Table 214: transceiverModuleUp properties

Property name	Value
Application name	chassis
Event name	transceiverModuleUp
Default severity	notice
Message format string	The transceiver associated with the interface interface_name is now up
Cause	The transceiver oper-state has transitioned from any other state to the up state
Effect	The transceiver is now operational

12 debug

12.1 setAllConfigLevels

Table 215: setAllConfigLevels properties

Property name	Value
Application name	debug
Event name	setAllConfigLevels
Default severity	informational
Message format string	App config debug log levels set to: new_level.
Cause	Configuration of debug log levels that can be received by program parameter or via idb.
Effect	Sticky levels are losable only to another configuration setting.

12.2 setAllStartupLevels

Table 216: setAllStartupLevels properties

Property name	Value
Application name	debug
Event name	setAllStartupLevels
Default severity	informational
Message format string	App debug startup log levels set to: new_level (configuration can override).
Cause	Restrain of logging verbosity internal to some programs
Effect	If configuration is set, and goes away, the startup levels are respected.

12.3 setHighBaselineLogLevels

Table 217: setHighBaselineLogLevels properties

Property name	Value
Application name	debug
Event name	setHighBaselineLogLevels
Default severity	informational
Message format string	Default (startup), and runtime app debug log levels set to: new_level. Except for modules: {configured_list}
Cause	Boot phase time is up, and verbose messages are suppressed in a beta build with .
Effect	Internal setting to all levels. If module levels are configured, they restore to the setting.

13 dhcp

13.1 dhcp6ClientAddressDeclined

Table 218: dhcp6ClientAddressDeclined properties

Property name	Value
Application name	dhcp
Event name	dhcp6ClientAddressDeclined
Default severity	notice
Message format string	DHCPv6 client running on <i>subinterface_name</i> was given a duplicate IPv6 address by the DHCP server <i>server_ip</i>
Cause	The DHCP server assigned an IPv6 address that is already in use on the same subnet
Effect	The subinterface will try to acquire a new IPv6 address

13.2 dhcp6Clientlpv6AddressValidLifetimeExpired

Table 219: dhcp6ClientIpv6AddressValidLifetimeExpired properties

Property name	Value
Application name	dhcp
Event name	dhcp6ClientIpv6AddressValidLifetimeExpired
Default severity	warning
Message format string	The IPv6 address assigned_ip obtained by the DHCPv6 client running on subinterface_name has become invalid
Cause	The DHCPv6 client was not successful in renewing or rebinding the IA_NA lease before the valid lifetime of the IPv6 address expired
Effect	The subinterface has no DHCP-assigned IPv6 address

13.3 dhcp6ClientRebindAttempted

Table 220: dhcp6ClientRebindAttempted properties

Property name	Value
Application name	dhcp
Event name	dhcp6ClientRebindAttempted
Default severity	informational
Message format string	DHCPv6 client running on <i>subinterface_name</i> is attempting to rebind its IA_NA lease for the IPv6 address <i>requested_ip</i>
Cause	The DHCPv6 client could not renew its assigned IPv6 address before the timer T2 expired
Effect	The IPv6 address may become deprecated and then invalid if the rebind is not successful

13.4 dhcp6ClientReconfigureMsgDropped

Table 221: dhcp6ClientReconfigureMsgDropped properties

Property name	Value
Application name	dhcp
Event name	dhcp6ClientReconfigureMsgDropped
Default severity	notice
Message format string	The DHCPv6 client running on <i>subinterface_name</i> dropped a RECONFIGURE message received from the server <i>server_ip</i>
Cause	The DHCPv6 client received a message that it was not supposed to receive (because it did not include a Reconfigure Accept option in its SOLICIT msg)
Effect	None

13.5 dhcp6ClientRenewSuccess

Table 222: dhcp6ClientRenewSuccess properties

Property name	Value
Application name	dhcp
Event name	dhcp6ClientRenewSuccess
Default severity	informational
Message format string	DHCPv6 client running on <i>subinterface_name</i> successfully renewed the IPv6 address <i>requested_ip</i> for a new lease duration of <i>new_lease_time</i> seconds from server <i>server_ip</i>
Cause	The DHCPv6 client received a success REPLY in response to its RENEW
Effect	The subinterface remains operational with its existing DHCP-assigned IPv6 address

13.6 dhcpClientAddressDeclined

Table 223: dhcpClientAddressDeclined properties

Property name	Value
Application name	dhcp
Event name	dhcpClientAddressDeclined
Default severity	notice
Message format string	DHCP client running on <i>subinterface_name</i> was given a duplicate IPv4 address by the DHCP server <i>server_ip</i>
Cause	The DHCP server assigned an IPv4 address that is already in use on the same subnet
Effect	The subinterface will try to acquire a new IPv4 address after a 10s delay

13.7 dhcpClientLeaseExpired

Table 224: dhcpClientLeaseExpired properties

Property name	Value
Application name	dhcp
Event name	dhcpClientLeaseExpired
Default severity	warning
Message format string	The DHCP lease for address assigned_ip obtained by the DHCP client running on subinterface_name and obtained from server server_ip has expired
Cause	The DHCP client was not successful in renewing or rebinding the lease
Effect	The subinterface has no DHCP-assigned IPv4 address

13.8 dhcpClientRebindAttempted

Table 225: dhcpClientRebindAttempted properties

Property name	Value
Application name	dhcp
Event name	dhcpClientRebindAttempted
Default severity	informational
Message format string	DHCP client running on <i>subinterface_name</i> is attempting to rebind its lease for the IP address <i>requested_ip</i>
Cause	The DHCP client could not renew its assigned IPv4 address before the timer T2 expired
Effect	The lease may expire if the rebind is not successful

13.9 dhcpClientRenewSuccess

Table 226: dhcpClientRenewSuccess properties

Property name	Value
Application name	dhcp

Property name	Value
Event name	dhcpClientRenewSuccess
Default severity	informational
Message format string	DHCP client running on <i>subinterface_name</i> successfully renewed the IP address <i>requested_ip</i> for a new lease duration of <i>new_lease_time</i> seconds from server <i>server_ip</i>
Cause	The DHCP client received a DHCPACK response to its DHCPREQUEST
Effect	The subinterface remains operational with its existing DHCP-assigned IPv4 address

13.10 dhcpv4RelayAdminDisable

Table 227: dhcpv4RelayAdminDisable properties

Property name	Value
Application name	dhcp
Event name	dhcpv4RelayAdminDisable
Default severity	warning
Message format string	DHCPv4 Relay on sub-interface <i>subinterface_name</i> has changed to administrative disable state
Cause	The DHCPv4 Relay admin state has changed from enable to disable due to configuration change
Effect	The DHCPv4 Relay admin state is disable on the mentioned sub- interface

13.11 dhcpv4RelayAdminEnable

Table 228: dhcpv4RelayAdminEnable properties

Property name	Value
Application name	dhcp
Event name	dhcpv4RelayAdminEnable
Default severity	warning

Property name	Value
Message format string	DHCPv4 Relay on sub-interface <i>subinterface_name</i> has changed to administrative enable state
Cause	The DHCPv4 Relay admin state has changed from disable to enable due to configuration change
Effect	The DHCPv4 Relay admin state is enable on the mentioned sub- interface

13.12 dhcpv4RelayAllDhcpv4ServersUnreachable

Table 229: dhcpv4RelayAllDhcpv4ServersUnreachable properties

Property name	Value
Application name	dhcp
Event name	dhcpv4RelayAllDhcpv4ServersUnreachable
Default severity	critical
Message format string	All DHCPv4 Servers dhcpv4_server_list configured under DHCPv4 Relay on sub-interface subinterface_name are unreachable for network instance network_instance
Cause	All The DHCPv4 Servers configured under DHCPv4 Relay are unreachable
Effect	The DHCPv4 Relay oper state is down on the mentioned sub-interface

13.13 dhcpv4RelayOperDown

Table 230: dhcpv4RelayOperDown properties

Property name	Value
Application name	dhcp
Event name	dhcpv4RelayOperDown
Default severity	critical
Message format string	DHCPv4 Relay on sub-interface <i>subinterface_name</i> has changed to operational down state
Cause	The DHCPv4 Relay oper state has changed from up to down

Property name	Value
Effect	The DHCPv4 Relay oper state is down on the mentioned sub-interface

13.14 dhcpv4RelayOperUp

Table 231: dhcpv4RelayOperUp properties

Property name	Value
Application name	dhcp
Event name	dhcpv4RelayOperUp
Default severity	warning
Message format string	DHCPv4 Relay on sub-interface <i>subinterface_name</i> has changed to operational up state
Cause	The DHCPv4 Relay oper state has changed from down to up
Effect	The DHCPv4 Relay oper state is up on the mentioned sub-interface

13.15 dhcpv6RelayAdminDisable

Table 232: dhcpv6RelayAdminDisable properties

Property name	Value
Application name	dhcp
Event name	dhcpv6RelayAdminDisable
Default severity	warning
Message format string	DHCPv6 Relay on sub-interface <i>subinterface_name</i> has changed to administrative disable state
Cause	The DHCPv6 Relay admin state has changed from enable to disable due to configuration change
Effect	The DHCPv6 Relay admin state is disable on the mentioned sub- interface

13.16 dhcpv6RelayAdminEnable

Table 233: dhcpv6RelayAdminEnable properties

Property name	Value
Application name	dhcp
Event name	dhcpv6RelayAdminEnable
Default severity	warning
Message format string	DHCPv6 Relay on sub-interface <i>subinterface_name</i> has changed to administrative enable state
Cause	The DHCPv6 Relay admin state has changed from disable to enable due to configuration change
Effect	The DHCPv6 Relay admin state is enable on the mentioned sub- interface

13.17 dhcpv6RelayAllDhcpv6ServersUnreachable

Table 234: dhcpv6RelayAllDhcpv6ServersUnreachable properties

Property name	Value
Application name	dhcp
Event name	dhcpv6RelayAllDhcpv6ServersUnreachable
Default severity	critical
Message format string	All DHCPv6 Servers dhcpv6_server_list configured under DHCPv6 Relay on sub-interface subinterface_name are unreachable for network instance network_instance
Cause	All The DHCPv6 Servers configured under DHCPv6 Relay are unreachable
Effect	The DHCPv6 Relay oper state is down on the mentioned sub-interface

13.18 dhcpv6RelayOperDown

Table 235: dhcpv6RelayOperDown properties

Property name	Value
Application name	dhcp
Event name	dhcpv6RelayOperDown
Default severity	critical
Message format string	DHCPv6 Relay on sub-interface <i>subinterface_name</i> has changed to operational down state
Cause	The DHCPv6 Relay oper state has changed from up to down
Effect	The DHCPv6 Relay oper state is down on the mentioned sub-interface

13.19 dhcpv6RelayOperUp

Table 236: dhcpv6RelayOperUp properties

Property name	Value
Application name	dhcp
Event name	dhcpv6RelayOperUp
Default severity	warning
Message format string	DHCPv6 Relay on sub-interface <i>subinterface_name</i> has changed to operational up state
Cause	The DHCPv6 Relay oper state has changed from down to up
Effect	The DHCPv6 Relay oper state is up on the mentioned sub-interface

13.20 giAddressMismatch

Table 237: giAddressMismatch properties

Property name	Value
Application name	dhcp
Event name	giAddressMismatch

Property name	Value
Default severity	critical
Message format string	Gi-Address for DHCPv4 Relay on sub-interface <i>subinterface_name</i> does not match any of the configured IPv4 addresses under sub-interface
Cause	The gi-address for DHCPv4 Relay does not match any of the configured IPv4 addresses under sub-interface
Effect	The DHCPv4 Relay oper state is down on the mentioned sub-interface

13.21 sourceAddressMismatch

Table 238: sourceAddressMismatch properties

Property name	Value
Application name	dhcp
Event name	sourceAddressMismatch
Default severity	critical
Message format string	source-address for DHCPv6 Relay on sub-interface <i>subinterface_name</i> does not match any of the configured IPv6 addresses under sub-interface
Cause	The source-address for DHCPv6 Relay does not match any of the configured IPv6 addresses under sub-interface
Effect	The DHCPv6 Relay oper state is down on the mentioned sub-interface

14 ethcfm

14.1 ClearErrorCcm

Table 239: ClearErrorCcm properties

Property name	Value
Application name	ethcfm
Event name	ClearErrorCcm
Default severity	notice
Message format string	ETHCFM: The condition of ERROR-CCM on MEP domain-id/ association-id/mep-id was cleared.
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level, correct MEG ID, correct MEP ID, correct period.
Effect	The MEP has cleared a defect.

14.2 ClearLOC

Table 240: ClearLOC properties

Property name	Value
Application name	ethcfm
Event name	ClearLOC
Default severity	notice
Message format string	ETHCFM: The condition of loss of continuity (LOC) on MEP domain-id/association-id/mep-id was cleared.
Cause	This notification is generated when a MEP receives CCM frames from a peer MEP during an interval equal to 3.5 times the CCM transmission period.
Effect	The MEP has cleared a defect.

14.3 ClearMacStatus

Table 241: ClearMacStatus properties

Property name	Value
Application name	ethcfm
Event name	ClearMacStatus
Default severity	notice
Message format string	ETHCFM: The condition of MAC-STATUS on MEP domain-id/association-id/mep-id was cleared.
Cause	This notification is generated when a MEP receives CCM frames from a peer MEP during an interval equal to 3.5 times the CCM transmission period.
Effect	The MEP has cleared a defect.

14.4 ClearMMG

Table 242: ClearMMG properties

Property name	Value
Application name	ethcfm
Event name	ClearMMG
Default severity	notice
Message format string	ETHCFM: The condition of mismerge (MMG) on MEP domain-id/association-id/mep-id was cleared.
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level, correct MEG ID.
Effect	The MEP has cleared a defect.

14.5 clearOneWayDmTCA

Table 243: clearOneWayDmTCA properties

Property name	Value
Application name	ethcfm
Event name	clearOneWayDmTCA
Default severity	notice
Message format string	ETHCFM: A TCA is cleared for one-way delay measurement PM test ' domain-id/association-id/mep-id/session-id/ mi-type/bin-type/direction'.
Cause	This notification is generated when the result of performance monitoring of an one-way delay measurement has fallen below the clear-threshold.
Effect	The alarm is cleared.

14.6 ClearRDI

Table 244: ClearRDI properties

Property name	Value
Application name	ethcfm
Event name	ClearRDI
Default severity	notice
Message format string	ETHCFM: The remote defect indication (RDI) condition on MEP domain-id/association-id/mep-id was cleared.
Cause	This notification is generated when a MEP receives a CCM frame with the RDI field clear.
Effect	The MEP has cleared a defect.

14.7 ClearRemoteCcm

Table 245: ClearRemoteCcm properties

Property name	Value
Application name	ethcfm
Event name	ClearRemoteCcm
Default severity	notice
Message format string	ETHCFM: The condition of REMOTE-CCM on MEP domain-id/association-id/mep-id was cleared.
Cause	This notification is generated when a MEP receives CCM frames from a peer MEP during an interval equal to 3.5 times the CCM transmission period.
Effect	The MEP has cleared a defect.

14.8 ClearRemoteDefectIndication

Table 246: ClearRemoteDefectIndication properties

Property name	Value
Application name	ethcfm
Event name	ClearRemoteDefectIndication
Default severity	notice
Message format string	ETHCFM: The remote defect indication (RDI) condition on MEP domain-id/association-id/mep-id was cleared.
Cause	This notification is generated when a MEP receives a CCM frame with the RDI field clear.
Effect	The MEP has cleared a defect.

14.9 clearTwoWayDmTCA

Table 247: clearTwoWayDmTCA properties

Property name	Value
Application name	ethcfm
Event name	clearTwoWayDmTCA
Default severity	notice
Message format string	ETHCFM: A TCA is cleared for two-way delay measurement PM test ' domain-id/association-id/mep-id/session-id/ mi-type/bin-type/direction'.
Cause	This notification is generated when the result of performance monitoring of a two-way delay measurement has fallen below the clear-threshold.
Effect	The alarm is cleared.

14.10 clearTwoWaySlmAvgflrTCA

Table 248: clearTwoWaySlmAvgflrTCA properties

Property name	Value
Application name	ethcfm
Event name	clearTwoWaySlmAvgflrTCA
Default severity	notice
Message format string	ETHCFM: A TCA is cleared for average flr of two-way synthetic loss measurement PM test ' domain-id/association-id/mep-id/session-id/ mitype/direction'.
Cause	This notification is generated when the average flr of a two-way synthetic loss measurement has fallen below the clear-threshold.
Effect	The alarm is cleared.

14.11 clearTwoWaySImHliTCA

Table 249: clearTwoWaySImHliTCA properties

Property name	Value
Application name	ethcfm
Event name	clearTwoWaySlmHliTCA
Default severity	notice
Message format string	ETHCFM: A TCA is cleared for high loss of two-way synthetic loss measurement PM test ' domain-id/association-id/mep-id/session-id/ mitype/direction'.
Cause	This notification is generated when the high loss interval of a two-way synthetic loss measurement has fallen below the clear-threshold.
Effect	The alarm is cleared.

14.12 clearTwoWaySlmUnavailTCA

Table 250: clearTwoWaySlmUnavailTCA properties

Property name	Value
Application name	ethcfm
Event name	clearTwoWaySlmUnavailTCA
Default severity	notice
Message format string	ETHCFM: A TCA is cleared for unavailability of two-way synthetic loss measurement PM test ' domain-id/association-id/mep-id/session-id/ mitype/direction'.
Cause	This notification is generated when the unavailability intervals of a two-way synthetic loss measurement has fallen below the clear-threshold.
Effect	The alarm is cleared.

14.13 ClearUNL

Table 251: ClearUNL properties

Property name	Value
Application name	ethcfm
Event name	ClearUNL
Default severity	notice
Message format string	ETHCFM: The condition of unexpected MEG level (UNL) on MEP domain-id/association-id/mep-id was cleared.
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level.
Effect	The MEP has cleared a defect.

14.14 ClearUNM

Table 252: ClearUNM properties

Property name	Value
Application name	ethcfm
Event name	ClearUNM
Default severity	notice
Message format string	ETHCFM: The condition of unexpected MEP (UNM) on MEP domain-id/association-id/mep-id was cleared.
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level, correct MEG ID, correct MEP ID.
Effect	The MEP has cleared a defect.

14.15 ClearUNP

Table 253: ClearUNP properties

Property name	Value
Application name	ethcfm

Property name	Value
Event name	ClearUNP
Default severity	notice
Message format string	ETHCFM: The condition of unexpected period (UNP) on MEP domain-id/association-id/mep-id was cleared.
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level, correct MEG ID, correct MEP ID, correct period.
Effect	The MEP has cleared a defect.

14.16 ClearXconCcm

Table 254: ClearXconCcm properties

Property name	Value
Application name	ethcfm
Event name	ClearXconCcm
Default severity	notice
Message format string	ETHCFM: The condition of XCON-CCM on MEP domain-id/association-id/mep-id was cleared.
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level.
Effect	The MEP has cleared a defect.

14.17 linktraceCompleted

Table 255: linktraceCompleted properties

Property name	Value
Application name	ethcfm
Event name	linktraceCompleted
Default severity	notice
Message format string	ETHCFM: A linktrace test from MEP domain-id/association-id/mep-id to the destination address target has completed.

Property name	Value
Cause	This notification is generated when an on-demand linktrace test was successfully completed.
Effect	The test result is stored in the MEP object.

14.18 loopbackCompleted

Table 256: loopbackCompleted properties

Property name	Value
Application name	ethcfm
Event name	loopbackCompleted
Default severity	notice
Message format string	ETHCFM: A loopback test from MEP domain-id/association-id/mep-id to the destination address target has completed.
Cause	This notification is generated when an on-demand loopback test was successfully completed.
Effect	The test result is stored in the MEP object.

14.19 RaiseErrorCcm

Table 257: RaiseErrorCcm properties

Property name	Value
Application name	ethcfm
Event name	RaiseErrorCcm
Default severity	warning
Message format string	ETHCFM: MEP domain-id/ association-id/mep-id has a condition of ERROR-CCM.
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level, correct MEG ID, correct MEP ID, but with a period field value different than its own CCM transmission period.
Effect	The MEP has a defect.

14.20 RaiseLOC

Table 258: RaiseLOC properties

Property name	Value
Application name	ethcfm
Event name	RaiseLOC
Default severity	warning
Message format string	ETHCFM: MEP domain-id/ association-id/mep-id has a condition of loss of continuity (LOC).
Cause	This notification is generated when a MEP receives no CCM frames from a peer MEP during an interval equal to 3.5 times the CCM transmission period.
Effect	The MEP has a defect.

14.21 RaiseMacStatus

Table 259: RaiseMacStatus properties

Property name	Value
Application name	ethcfm
Event name	RaiseMacStatus
Default severity	warning
Message format string	ETHCFM: MEP domain-id/ association-id/mep-id has a condition of MAC-STATUS.
Cause	This notification is generated when a MEP receives no CCM frames from a peer MEP during an interval equal to 3.5 times the CCM transmission period.
Effect	The MEP has a defect.

14.22 RaiseMMG

Table 260: RaiseMMG properties

Property name	Value
Application name	ethcfm
Event name	RaiseMMG
Default severity	warning
Message format string	ETHCFM: MEP domain-id/ association-id/mep-id has a condition of mismerge (MMG).
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level but incorrect MEG ID.
Effect	The MEP has a defect.

14.23 raiseOneWayDmTCA

Table 261: raiseOneWayDmTCA properties

Property name	Value
Application name	ethcfm
Event name	raiseOneWayDmTCA
Default severity	warning
Message format string	ETHCFM: A TCA is raised for one-way delay measurement PM test ' domain-id/association-id/mep-id/session-id/ mi-type/bin-type/direction'.
Cause	This notification is generated when the result of performance monitoring of a one-way delay measurement has reached or exceeded the raise-threshold.
Effect	An alarm is raised.

14.24 RaiseRDI

Table 262: RaiseRDI properties

Property name	Value
Application name	ethcfm
Event name	RaiseRDI
Default severity	warning
Message format string	ETHCFM: MEP domain-id/ association-id/mep-id has a condition of remote defect indication (RDI).
Cause	This notification is generated when a MEP receives a CCM frame with the RDI field set.
Effect	The MEP has a defect.

14.25 RaiseRemoteCcm

Table 263: RaiseRemoteCcm properties

Property name	Value
Application name	ethcfm
Event name	RaiseRemoteCcm
Default severity	warning
Message format string	ETHCFM: MEP domain-id/ association-id/mep-id has a condition of REMOTE-CCM.
Cause	This notification is generated when a MEP receives no CCM frames from a peer MEP during an interval equal to 3.5 times the CCM transmission period.
Effect	The MEP has a defect.

14.26 RaiseRemoteDefectIndication

Table 264: RaiseRemoteDefectIndication properties

Property name	Value
Application name	ethcfm
Event name	RaiseRemoteDefectIndication
Default severity	warning
Message format string	ETHCFM: MEP domain-id/ association-id/mep-id has a condition of remote defect indication (RDI).
Cause	This notification is generated when a MEP receives a CCM frame with the RDI field set.
Effect	The MEP has a defect.

14.27 raiseTwoWayDmTCA

Table 265: raiseTwoWayDmTCA properties

Property name	Value
Application name	ethcfm
Event name	raiseTwoWayDmTCA
Default severity	warning
Message format string	ETHCFM: A TCA is raised for two-way delay measurement PM test ' domain-id/association-id/mep-id/session-id/ mi-type/bin-type/direction'.
Cause	This notification is generated when the result of performance monitoring of a two-way delay measurement has reached or exceeded the raise-threshold.
Effect	An alarm is raised.

14.28 raiseTwoWaySlmAvgflrTCA

Table 266: raiseTwoWaySlmAvgflrTCA properties

Property name	Value
Application name	ethcfm
Event name	raiseTwoWaySlmAvgflrTCA
Default severity	warning
Message format string	ETHCFM: A TCA is raised for average flr of two-way synthetic loss measurement PM test ' domain-id/association-id/mep-id/session-id/ mitype/direction'.
Cause	This notification is generated when the average flr of a two-way synthetic loss measurement has reached or exceeded the raise-threshold.
Effect	An alarm is raised.

14.29 raiseTwoWaySlmHliTCA

Table 267: raiseTwoWaySlmHliTCA properties

Property name	Value
Application name	ethcfm
Event name	raiseTwoWaySlmHliTCA
Default severity	warning
Message format string	ETHCFM: A TCA is raised for high loss of two-way synthetic loss measurement PM test ' domain-id/association-id/mep-id/session-id/ mitype/direction'.
Cause	This notification is generated when the high loss intervals of a two- way synthetic loss measurement has reached or exceeded the raise- threshold.
Effect	An alarm is raised.

14.30 raiseTwoWaySlmUnavailTCA

Table 268: raiseTwoWaySlmUnavailTCA properties

Property name	Value
Application name	ethcfm
Event name	raiseTwoWaySlmUnavailTCA
Default severity	warning
Message format string	ETHCFM: A TCA is raised for unavailability of two-way synthetic loss measurement PM test ' domain-id/association-id/mep-id/session-id/ mitype/direction'.
Cause	This notification is generated when the unavailability intervals of a two-way synthetic loss measurement has reached or exceeded the raise-threshold.
Effect	An alarm is raised.

14.31 RaiseUNL

Table 269: RaiseUNL properties

Property name	Value
Application name	ethcfm
Event name	RaiseUNL
Default severity	warning
Message format string	ETHCFM: MEP domain-id/ association-id/mep-id has a condition of unexpected MEG level (UNL).
Cause	This notification is generated when a MEP receives a CCM frame with incorrect MEG level.
Effect	The MEP has a defect.

14.32 RaiseUNM

Table 270: RaiseUNM properties

Property name	Value
Application name	ethcfm
Event name	RaiseUNM
Default severity	warning
Message format string	ETHCFM: MEP domain-id/ association-id/mep-id has a condition of unexpected MEP (UNM).
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level, correct MEG ID but with unexpected MEP ID.
Effect	The MEP has a defect.

14.33 RaiseUNP

Table 271: RaiseUNP properties

Property name	Value
Application name	ethcfm
Event name	RaiseUNP
Default severity	warning
Message format string	ETHCFM: MEP domain-id/ association-id/mep-id has a condition of unexpected period (UNP).
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level, correct MEG ID, correct MEP ID, but with a period field value different than its own CCM transmission period.
Effect	The MEP has a defect.

14.34 RaiseXconCcm

Table 272: RaiseXconCcm properties

Property name	Value
Application name	ethcfm
Event name	RaiseXconCcm
Default severity	warning
Message format string	ETHCFM: MEP domain-id/ association-id/mep-id has a condition of XCON-CCM.
Cause	This notification is generated when a MEP receives a CCM frame with incorrect MEG level.
Effect	The MEP has a defect.

14.35 singleEndedDmmCompleted

Table 273: singleEndedDmmCompleted properties

Property name	Value
Application name	ethcfm
Event name	singleEndedDmmCompleted
Default severity	notice
Message format string	ETHCFM: A single-ended delay measurement test (<i>test-id</i>) from MEP <i>domain-id/association-id/mep-id</i> to the destination address <i>target</i> has completed.
Cause	This notification is generated when an on-demand single-ended delay measurement test was successfully completed.
Effect	The test result is stored in the MEP object.

14.36 singleEndedSImCompleted

Table 274: singleEndedSImCompleted properties

Property name	Value
Application name	ethcfm
Event name	singleEndedSImCompleted
Default severity	notice
Message format string	ETHCFM: A single-ended synthetic loss measurement test (test-id) from MEP domain-id/association-id/mep-id to the destination address target has completed.
Cause	This notification is generated when an on-demand single-ended synthetic loss measurement test was successfully completed.
Effect	The test result is stored in the MEP object.

14.37 TwoWaySlmAvailabilityState

Table 275: TwoWaySlmAvailabilityState properties

Property name	Value
Application name	ethcfm
Event name	TwoWaySlmAvailabilityState
Default severity	notice
Message format string	ETHCFM: The availability state has transited to 'availability' in two-way synthetic loss measurement PM test 'domain-id/ association-id/mep-id/ session-id/mi-type/direction' at 'transition-time'.
Cause	This notification is generated when the availability of a two-way synthetic loss measurement has transited from Available to Unavailable or vice versa.
Effect	The notice is sent.

15 evpn

15.1 ethernetsegmentNetworkInstanceBgpInstanceDfStatusChanged

Table 276: ethernetsegmentNetworkInstanceBgpInstanceDfStatusChanged properties

Property name	Value
Application name	evpn
Event name	ethernetsegmentNetworkInstanceBgpInstanceDfStatusChanged
Default severity	notice
Message format string	BGP-EVPN attachment circuit on ethernet segment <i>ethernet-segment</i> on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is now a <i>designated-forwarding-status</i> .
Cause	This event is generated when there is a change in the ethernet segment attachment circuit designated forwarder state.
Effect	The forwarding state of the ethernet segment attachment circuit is changed.

15.2 ethernetsegmentPreferenceOperValueChanged

Table 277: ethernetsegmentPreferenceOperValueChanged properties

Property name	Value
Application name	evpn
Event name	ethernetsegmentPreferenceOperValueChanged
Default severity	notice
Message format string	The Oper DF preference value changed to <i>oper-preference</i> and/or the DP value changed to <i>do-not-preempt</i> on ethernet-segment <i>ethernet-segment</i>
Cause	This event is generated when there is a change in the ethernet segment operational preference value or the do not preempt value.
Effect	The designated forwarder state of the ethernet segment's attachment circuit might change.

15.3 evpnAutoDiscoveryEviRouteAddDroppedDueToUnexpectedEthTag

Table 278: evpnAutoDiscoveryEviRouteAddDroppedDueToUnexpectedEthTag properties

Property name	Value
Application name	evpn
Event name	evpnAutoDiscoveryEviRouteAddDroppedDueToUnexpectedEthTag
Default severity	warning
Message format string	BGP-EVPN Auto Discovery Evi route received with route-distinguisher route-distinguisher and ethernet segment identifier ethernet-segment-id add on network instance network-instance and bgp instance bgp-instance is dropped because the Ethernet Tag Identifier received-ethernet-tag received in the route, does not match locally configured Ethernet Tag Identifier local-ethernet-tag on the bgp-instance
Cause	This event is generated when a received Ethernet Tag Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The designated forwarder election on this ethernet-segment-id for this EVI will be affected. The mac-address's on this ethernet-segment will not be programmed in the bridge-table

15.4 evpnAutoDiscoveryEviRouteWithdrawDroppedDueToUnexpected EthTag

Table 279: evpnAutoDiscoveryEviRouteWithdrawDroppedDueToUnexpectedEthTag properties

Property name	Value
Application name	evpn
Event name	evpnAutoDiscoveryEviRouteWithdrawDroppedDueToUnexpectedEth Tag
Default severity	warning
Message format string	BGP-EVPN Auto Discovery Evi route received with route-distinguisher route-distinguisher and ethernet segment identifier ethernet-segment-id delete on network instance network-instance and bgp instance bgp-instance is dropped because the Ethernet Tag Identifier received-ethernet-tag received in the route, does not match locally configured Ethernet Tag Identifier local-ethernet-tag on the bgp-instance

Property name	Value
Cause	This event is generated when a received Ethernet Tag Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The designated forwarder election on this ethernet-segment-id for this EVI will be affected. The mac-address's on this ethernet-segment if programmed in the bridge-table, will not be deleted or updated

15.5 evpnAutoDiscoveryEviRouteWithdrawnDueToUnexpectedVni

Table 280: evpnAutoDiscoveryEviRouteWithdrawnDueToUnexpectedVni properties

Property name	Value
Application name	evpn
Event name	evpnAutoDiscoveryEviRouteWithdrawnDueToUnexpectedVni
Default severity	warning
Message format string	BGP-EVPN Auto Discovery Evi route received with route-distinguisher route-distinguisher and ethernet segment identifier ethernet-segment-id on network instance network-instance and bgp instance bgp-instance is withdrawn because the VXLAN Network Identifier received-vni received in the route, does not match locally configured VXLAN Network Identifier local-vni on the bgp-instance
Cause	This event is generated when a received VXLAN Network Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The designated forwarder election on this ethernet-segment-id for this EVI will be affected. The mac-address's on this ethernet-segment will not be programmed in the bridge-table

15.6 evpnInclMcastRouteAddDroppedDueToUnexpectedEthTag

Table 281: evpnInclMcastRouteAddDroppedDueToUnexpectedEthTag properties

Property name	Value
Application name	evpn
Event name	evpnInclMcastRouteAddDroppedDueToUnexpectedEthTag
Default severity	warning

Property name	Value
Message format string	BGP-EVPN Inclusive Multicast route received with route-distinguisher route-distinguisher and originating IP originating-ip-address add on network instance network-instance and bgp instance bgp-instance is dropped because the Ethernet Tag Identifier received-ethernet-tag received in the route, does not match locally configured Ethernet Tag Identifier local-ethernet-tag on the bgp-instance
Cause	This event is generated when a received Ethernet Tag Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The Virtual Tunnel End Point for the received VXLAN Network Identifier is not programmed in the multicast flood list of bridge-table

15.7 evpnIncIMcastRouteWithdrawDroppedDueToUnexpectedEthTag

Table 282: evpnInclMcastRouteWithdrawDroppedDueToUnexpectedEthTag properties

Property name	Value
Application name	evpn
Event name	evpnInclMcastRouteWithdrawDroppedDueToUnexpectedEthTag
Default severity	warning
Message format string	BGP-EVPN Inclusive Multicast route received with route-distinguisher route-distinguisher and originating IP originating-ip-address withdraw on network instance network-instance and bgp instance bgp-instance is dropped because the Ethernet Tag Identifier received-ethernet-tag received in the route, does not match locally configured Ethernet Tag Identifier local-ethernet-tag on the bgp-instance
Cause	This event is generated when a received Ethernet Tag Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The Virtual Tunnel End Point for the received VXLAN Network Identifier if programmed in the multicast flood list of bridge-table, might not be removed

15.8 evpnIncIMcastRouteWithdrawnDueToUnexpectedVni

Table 283: evpnInclMcastRouteWithdrawnDueToUnexpectedVni properties

Property name	Value
Application name	evpn
Event name	evpnInclMcastRouteWithdrawnDueToUnexpectedVni
Default severity	warning
Message format string	BGP-EVPN Inclusive Multicast route received with route-distinguisher route-distinguisher and originating IP originating-ip-address on network instance network-instance and bgp instance bgp-instance is withdrawn because the VXLAN Network Identifier received-vni received in the route, does not match locally configured VXLAN Network Identifier local-vni on the bgp-instance
Cause	This event is generated when a received VXLAN Network Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The Virtual Tunnel End Point for the received VXLAN Network Identifier is not programmed in the multicast flood list of bridge-table

15.9 evpnlpPrefixRouteNotImportedDueToUnexpectedVni

Table 284: evpnlpPrefixRouteNotImportedDueToUnexpectedVni properties

Property name	Value
Application name	evpn
Event name	evpnIpPrefixRouteNotImportedDueToUnexpectedVni
Default severity	warning
Message format string	BGP-EVPN IP-PREFIX <i>ip-prefix</i> LENGTH <i>prefix-length</i> received with route-distinguisher <i>route-distinguisher</i> on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is not imported because the VXLAN Network Identifier <i>received-vni</i> received in the route, does not match the locally configured VXLAN Network Identifier on the bgp-instance
Cause	This event is generated when a received VXLAN Network Identifier does not match the one configured locally on the bgp-instance in the network instance

Property name	Value
Effect	The IP-Prefix is not programmed in the route-table

15.10 evpnIpPrefixRouteWithdrawnDueToNoGwMac

Table 285: evpnlpPrefixRouteWithdrawnDueToNoGwMac properties

Property name	Value
Application name	evpn
Event name	evpnIpPrefixRouteWithdrawnDueToNoGwMac
Default severity	warning
Message format string	BGP-EVPN IP-PREFIX <i>ip-prefix</i> LENGTH <i>prefix-length</i> received with route-distinguisher <i>route-distinguisher</i> on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is withdrawn because the route is received without a Gateway MAC Address and that is not allowed in an EVPN Interface-less bgp instance for VXLAN tunnels
Cause	This event is generated when a received IP Prefix route does not contain the required GW Mac and therefore it is not allowed in the local EVPN Interface-less bgp instance of the network-instance
Effect	The ip-prefix is not programmed in the route table of the network instance

$15.11\ evpnlp Prefix Route With drawn Due To Unexpected Gwlp$

Table 286: evpnlpPrefixRouteWithdrawnDueToUnexpectedGwlp properties

Property name	Value
Application name	evpn
Event name	evpnIpPrefixRouteWithdrawnDueToUnexpectedGwIp
Default severity	warning
Message format string	BGP-EVPN IP-PREFIX <i>ip-prefix</i> LENGTH <i>prefix-length</i> received with route-distinguisher <i>route-distinguisher</i> on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is withdrawn because the non-zero Gateway IP Address <i>gw-ip-address</i> received in the route is not allowed in an EVPN Interface-less bgp instance of the network-instance

Property name	Value
Cause	This event is generated when a received Gateway IP Address in the IP Prefix routes is non-zero and therefore not allowed in the local EVPN Interface-less bgp instance of the network-instance
Effect	The ip-prefix is not programmed in the route table of the network instance

15.12 evpnMacRouteAddDroppedDueToUnexpectedEthTag

Table 287: evpnMacRouteAddDroppedDueToUnexpectedEthTag properties

Property name	Value
Application name	evpn
Event name	evpnMacRouteAddDroppedDueToUnexpectedEthTag
Default severity	warning
Message format string	BGP-EVPN MAC <i>mac-address</i> IP <i>ip-address</i> received with routedistinguisher <i>route-distinguisher</i> add on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is dropped because the Ethernet Tag Identifier <i>received-ethernet-tag</i> received in the route, does not match locally configured Ethernet Tag Identifier <i>local-ethernet-tag</i> on the bgp-instance
Cause	This event is generated when a received Ethernet Tag Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The mac-address is not programmed in the bridge-table AND/OR the mac-address/ip-address pair is not programmed in the ARP or Neighbor discovery table

15.13 evpnMacRouteWithdrawDroppedDueToUnexpectedEthTag

Table 288: evpnMacRouteWithdrawDroppedDueToUnexpectedEthTag properties

Property name	Value
Application name	evpn
Event name	evpnMacRouteWithdrawDroppedDueToUnexpectedEthTag
Default severity	warning

Property name	Value
Message format string	BGP-EVPN MAC <i>mac-address</i> IP <i>ip-address</i> received with routedistinguisher <i>route-distinguisher</i> delete on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is dropped because the Ethernet Tag Identifier <i>received-ethernet-tag</i> received in the route, does not match locally configured Ethernet Tag Identifier <i>local-ethernet-tag</i> on the bgp-instance
Cause	This event is generated when a received Ethernet Tag Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The mac-address if programmed in the bridge-table AND/OR the mac-address/ip-address pair if programmed in the ARP or Neighbor discovery table, might not be removed

15.14 evpnMacRouteWithdrawnDueToUnexpectedVni

Table 289: evpnMacRouteWithdrawnDueToUnexpectedVni properties

Property name	Value
Application name	evpn
Event name	evpnMacRouteWithdrawnDueToUnexpectedVni
Default severity	warning
Message format string	BGP-EVPN MAC <i>mac-address</i> IP <i>ip-address</i> received with routedistinguisher <i>route-distinguisher</i> on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is withdrawn because the VXLAN Network Identifier <i>received-vni</i> received in the route, does not match locally configured VXLAN Network Identifier <i>local-vni</i> on the bgp-instance
Cause	This event is generated when a received VXLAN Network Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The mac-address is not programmed in the bridge-table AND/OR the mac-address/ip-address pair is not programmed in the ARP or Neighbor discovery table

16 gnsi

16.1 gnsiAcctzSubscriptionEnd

Table 290: gnsiAcctzSubscriptionEnd properties

Property name	Value
Application name	gnsi
Event name	gnsiAcctzSubscriptionEnd
Default severity	informational
Message format string	Acctz subscription with starting point ' timestamp' requested by peer_address:peer_port has finished.
Cause	Acctz subscription has finished based on the request from mentioned peer.
Effect	none.

16.2 gnsiAcctzSubscriptionRequestReceived

Table 291: gnsiAcctzSubscriptionRequestReceived properties

Property name	Value
Application name	gnsi
Event name	gnsiAcctzSubscriptionRequestReceived
Default severity	informational
Message format string	Acctz subscription request from peer <i>peer_address:peer_port</i> is received.
Cause	Acctz has received subscription request is received from the mentioned peer.
Effect	Server will process the request.

16.3 gnsiAcctzSubscriptionStart

Table 292: gnsiAcctzSubscriptionStart properties

Property name	Value
Application name	gnsi
Event name	gnsiAcctzSubscriptionStart
Default severity	informational
Message format string	Acctz subscription with starting timestamp ' timestamp' requested by peer_address:peer_port has started.
Cause	Acctz subscription has started based on the request from mentioned peer.
Effect	none.

16.4 gnsiAuthzPolicyFinalized

Table 293: gnsiAuthzPolicyFinalized properties

Property name	Value
Application name	gnsi
Event name	gnsiAuthzPolicyFinalized
Default severity	informational
Message format string	Authz gRPC authorization policy has been finalized on version version created on created_on
Cause	Authz has received a request to rotate the gRPC authorization policy, and a subsequent request to finalize it.
Effect	Requests to all gRPC servers on the system will authorize using the new policy. Reboots of the system will use the new policy rather than reverting to the previous.

16.5 gnsiAuthzPolicyInvalid

Table 294: gnsiAuthzPolicyInvalid properties

Property name	Value
Application name	gnsi
Event name	gnsiAuthzPolicyInvalid
Default severity	critical
Message format string	Authz gRPC authorization policy with version <i>version</i> created on <i>created_on</i> failed to validate - policy content invalid. Previous policy remains active.
Cause	Authz has received a request to rotate the gRPC authorization policy, with policy content that is invalid.
Effect	Requests to all gRPC servers on the system will authorize using the previous policy.

16.6 gnsiAuthzPolicyNotFinalized

Table 295: gnsiAuthzPolicyNotFinalized properties

Property name	Value
Application name	gnsi
Event name	gnsiAuthzPolicyNotFinalized
Default severity	critical
Message format string	Authz gRPC authorization policy with version <i>version</i> created on <i>created_on</i> was not finalized by client. Reverting to previous policy.
Cause	Authz has received a request to rotate the gRPC authorization policy, but did not received a subsequent finalization before the RPC was terminated.
Effect	Requests to all gRPC servers on the system will authorize using the previous policy.

16.7 gnsiAuthzPolicyRotate

Table 296: gnsiAuthzPolicyRotate properties

Property name	Value
Application name	gnsi
Event name	gnsiAuthzPolicyRotate
Default severity	informational
Message format string	Authz gRPC authorization policy has been rotated to version version created on created_on
Cause	gNSI server has received a request to rotate the gRPC authorization policy.
Effect	Requests to all gRPC servers on the system will authorize using the new policy. If a request is not recieved to finalize the rotation, the system will revert to the previous policy.

16.8 gnsiCertzRotate

Table 297: gnsiCertzRotate properties

Property name	Value
Application name	gnsi
Event name	gnsiCertzRotate
Default severity	informational
Message format string	Certz artifact_type has been rotated to version version created on created_on
Cause	Certz has received a request to rotate the specified certificate or bundle.
Effect	All gRPC servers without explicitly configured TLS server profiles will use the certificate and bundles provided. If a request is not received to finalize the rotation, the system will revert to the previous certificate and/or bundle/s.

16.9 gnsiCertzRotateFinalized

Table 298: gnsiCertzRotateFinalized properties

Property name	Value
Application name	gnsi
Event name	gnsiCertzRotateFinalized
Default severity	informational
Message format string	Certz artifact_type has been finalized on version version created on created_on
Cause	Certz has received a request to rotate the certificate and/or bundle/s, and a subsequent request to finalize it.
Effect	All gRPC servers without explicitly configured TLS server profiles will use the certificate and/or bundle/s provided. Reboots of the system will use the profile rather than reverting to the previous.

16.10 gnsiCertzRotateInvalid

Table 299: gnsiCertzRotateInvalid properties

Property name	Value
Application name	gnsi
Event name	gnsiCertzRotateInvalid
Default severity	critical
Message format string	Certz artifact_type with version version created on created_on failed to rotate. Previous artifact_type remains active. Error: error
Cause	Certz has received a request to rotate a certificate and/or bundle/s, but the RPC has failed with the provided error.
Effect	All gRPC servers without explicitly configured TLS server profiles will revert to using the previous certificate and/or bundle/s provided.

16.11 gnsiCertzRotateNotFinalized

Table 300: gnsiCertzRotateNotFinalized properties

Property name	Value
Application name	gnsi
Event name	gnsiCertzRotateNotFinalized
Default severity	critical
Message format string	Certz artifact_type with version version created on created_on was not finalized by client. Reverting to previous.
Cause	Certz has received a request to rotate the a certificate and/or bundle/s, but did not received a subsequent finalization before the RPC was terminated.
Effect	All gRPC servers without explicitly configured TLS server profiles will revert to using the previous certificate and/or bundle/s provided.

16.12 gnsiCredentialzRotateAccountCredentials

Table 301: gnsiCredentialzRotateAccountCredentials properties

Property name	Value
Application name	gnsi
Event name	gnsiCredentialzRotateAccountCredentials
Default severity	informational
Message format string	Credentialz artifact_type for user username has been rotated to version version created on created_on
Cause	Credentialz has received a request to rotate the specified aaa user credentials.
Effect	System will use the aaa user credentials provided. If a request is not received to finalize the rotation, the system will revert to the previous aaa user credentials.

16.13 gnsiCredentialzRotateAccountCredentialsFinalized

Table 302: gnsiCredentialzRotateAccountCredentialsFinalized properties

Property name	Value
Application name	gnsi
Event name	gnsiCredentialzRotateAccountCredentialsFinalized
Default severity	informational
Message format string	Credentialz artifact_type for user username has been finalized on version version created on created_on
Cause	Credentialz has received a request to rotate aaa user credentials, and a subsequent request to finalize it.
Effect	System will use the aaa user credentials provided. Reboots of the system will use the aaa user credentials rather than reverting to the previous.

16.14 gnsiCredentialzRotateAccountCredentialsInvalid

Table 303: gnsiCredentialzRotateAccountCredentialsInvalid properties

Property name	Value
Application name	gnsi
Event name	gnsiCredentialzRotateAccountCredentialsInvalid
Default severity	critical
Message format string	Credentialz artifact_type for user username with version version created on created_on failed to rotate. Previous artifact_type remains active. Error: error
Cause	Credentialz has received a request to rotate aaa user credentials, but the RPC has failed with the provided error.
Effect	System will revert to using the previous aaa user credentials provided.

16.15 gnsiCredentialzRotateAccountCredentialsNotFinalized

Table 304: gnsiCredentialzRotateAccountCredentialsNotFinalized properties

Property name	Value
Application name	gnsi
Event name	gnsiCredentialzRotateAccountCredentialsNotFinalized
Default severity	critical
Message format string	Credentialz artifact_type for user username with version version created on created_on was not finalized by client. Reverting to previous.
Cause	Credentialz has received a request to rotate aaa user credentials, but did not received a subsequent finalization before the RPC was terminated.
Effect	System will revert to using the previous aaa user credentials provided.

16.16 gnsiCredentialzRotateHostParameters

Table 305: gnsiCredentialzRotateHostParameters properties

Property name	Value
Application name	gnsi
Event name	gnsiCredentialzRotateHostParameters
Default severity	informational
Message format string	Credentialz artifact_type has been rotated to version version created on created_on
Cause	Credentialz has received a request to rotate the specified ssh host parameters.
Effect	All ssh servers will use the ssh host parameters provided. If a request is not received to finalize the rotation, the system will revert to the previous ssh host parameters.

16.17 gnsiCredentialzRotateHostParametersFinalized

Table 306: gnsiCredentialzRotateHostParametersFinalized properties

Property name	Value
Application name	gnsi
Event name	gnsiCredentialzRotateHostParametersFinalized
Default severity	informational
Message format string	Credentialz artifact_type has been finalized on version version created on created_on
Cause	Credentialz has received a request to rotate ssh host parameters, and a subsequent request to finalize it.
Effect	All ssh servers will use the ssh host parameters provided. Reboots of the system will use the ssh host parameters rather than reverting to the previous.

16.18 gnsiCredentialzRotateHostParametersInvalid

Table 307: gnsiCredentialzRotateHostParametersInvalid properties

Property name	Value
Application name	gnsi
Event name	gnsiCredentialzRotateHostParametersInvalid
Default severity	critical
Message format string	Credentialz artifact_type with version version created on created_on failed to rotate. Previous artifact_type remains active. Error: error
Cause	Credentialz has received a request to rotate ssh host parameters, but the RPC has failed with the provided error.
Effect	All ssh servers will revert to using the previous ssh host parameters provided.

16.19 gnsiCredentialzRotateHostParametersNotFinalized

Table 308: gnsiCredentialzRotateHostParametersNotFinalized properties

Property name	Value
Application name	gnsi
Event name	gnsiCredentialzRotateHostParametersNotFinalized
Default severity	critical
Message format string	Credentialz artifact_type with version version created on created_on was not finalized by client. Reverting to previous.
Cause	Credentialz has received a request to rotate ssh host parameters, but did not received a subsequent finalization before the RPC was terminated.
Effect	All ssh servers will revert to using the previous ssh host parameters provided.

16.20 gnsiPathzPolicyFinalized

Table 309: gnsiPathzPolicyFinalized properties

Property name	Value
Application name	gnsi
Event name	gnsiPathzPolicyFinalized
Default severity	informational
Message format string	Pathz gRPC authorization policy has been finalized on version version created on created_on
Cause	Pathz has received a request to rotate the gRPC authorization policy, and a subsequent request to finalize it.
Effect	Requests to all gRPC servers on the system will authorize using the new policy. Reboots of the system will use the new policy rather than reverting to the previous.

16.21 gnsiPathzPolicyInvalid

Table 310: gnsiPathzPolicyInvalid properties

Property name	Value
Application name	gnsi
Event name	gnsiPathzPolicyInvalid
Default severity	critical
Message format string	Pathz gRPC authorization policy with version <i>version</i> created on <i>created_on</i> failed to validate - policy content invalid. Previous policy remains active.
Cause	Pathz has received a request to rotate the gRPC authorization policy, with policy content that is invalid.
Effect	Requests to all gRPC servers on the system will authorize using the previous policy.

16.22 gnsiPathzPolicyNotFinalized

Table 311: gnsiPathzPolicyNotFinalized properties

Property name	Value
Application name	gnsi
Event name	gnsiPathzPolicyNotFinalized
Default severity	critical
Message format string	Pathz gRPC authorization policy with version <i>version</i> created on <i>created_on</i> was not finalized by client. Reverting to previous policy.
Cause	Pathz has received a request to rotate the gRPC authorization policy, but did not received a subsequent finalization before the RPC was terminated.
Effect	Requests to all gRPC servers on the system will authorize using the previous policy.

Log Events Guide Release 24.7

16.23 gnsiPathzPolicyRotate

Table 312: gnsiPathzPolicyRotate properties

Property name	Value
Application name	gnsi
Event name	gnsiPathzPolicyRotate
Default severity	informational
Message format string	Pathz gRPC authorization policy has been rotated to version <i>version</i> created on <i>created_on</i>
Cause	gNSI server has received a request to rotate the gRPC authorization policy.
Effect	Requests to all gRPC servers on the system will authorize using the new policy. If a request is not recieved to finalize the rotation, the system will revert to the previous policy.

17 grpc

17.1 configUpdate

Table 313: configUpdate properties

Property name	Value
Application name	grpc
Event name	configUpdate
Default severity	informational
Message format string	gRPC server <i>name</i> configuration updated.
Cause	A configuration change has been made in the mentioned grpc server, resulting in gRPC server configuration being regenerated.
Effect	May result in gRPC server start or stop depending on the configuration change.

17.2 grpcServerStart

Table 314: grpcServerStart properties

Property name	Value
Application name	grpc
Event name	grpcServerStart
Default severity	informational
Message format string	gRPC server <i>name</i> started for network instance <i>network_instance</i> source address <i>source_address</i> port number <i>grpc_socket</i> .
Cause	gRPC server has started for the mentioned network instance, source address and port number.
Effect	gRPC server is ready to receive and process requests for the mentioned network instance, source address and port number.

17.3 grpcServerStop

Table 315: grpcServerStop properties

Property name	Value
Application name	grpc
Event name	grpcServerStop
Default severity	informational
Message format string	gRPC server <i>name</i> stopped for network <i>network_instance</i> source address <i>source_address</i> port number <i>grpc_socket</i> .
Cause	gRPC server has stopped for the mentioned network instance, source address and port number.
Effect	gRPC server is not ready to receive and process requests for the mentioned network instance, source address and port number.

17.4 subscriptionEnd

Table 316: subscriptionEnd properties

Property name	Value
Application name	grpc
Event name	subscriptionEnd
Default severity	informational
Message format string	Subscription for path(s) paths requested by peer_address:socket has finished.
Cause	A subscription has finished based on the request from mentioned peer.
Effect	none.

17.5 subscriptionRequestReceived

Table 317: subscriptionRequestReceived properties

Property name	Value
Application name	grpc

Property name	Value
Event name	subscriptionRequestReceived
Default severity	informational
Message format string	Subscription request from peer peer_address:socket is received.
Cause	A subscription request is received from the mentioned peer.
Effect	gRPC server will process the request.

17.6 subscriptionStart

Table 318: subscriptionStart properties

Property name	Value
Application name	grpc
Event name	subscriptionStart
Default severity	informational
Message format string	Subscription for path(s) <i>paths</i> requested by <i>peer_address</i> : <i>socket</i> has started.
Cause	A subscription has started based on the request from mentioned peer.
Effect	none.

17.7 unixSocketGrpcOperDown

Table 319: unixSocketGrpcOperDown properties

Property name	Value
Application name	grpc
Event name	unixSocketGrpcOperDown
Default severity	critical
Message format string	Unix domain socket of gRPC server <i>name</i> is no longer operational.
Cause	The Unix domain socket of gRPC server has transitioned from any other operational state to the down state.
Effect	Unix domain socket of gRPC server is now down.

Log Events Guide Release 24.7

17.8 unixSocketGrpcOperUp

Table 320: unixSocketGrpcOperUp properties

Property name	Value
Application name	grpc
Event name	unixSocketGrpcOperUp
Default severity	warning
Message format string	Unix domain socket of gRPC server <i>name</i> is operational.
Cause	The Unix domain socket of gRPC server has transitioned from any other operational state to the up state.
Effect	Unix domain socket of gRPC server is now up.

18 igmp

18.1 igmpCModeRxQueryVersionMismatch

Table 321: igmpCModeRxQueryVersionMismatch properties

Property name	Value
Application name	igmp
Event name	igmpCModeRxQueryVersionMismatch
Default severity	warning
Message format string	Network-instance network_instance - Mismatch between the interface subinterface compatible mode(igmpInterfaceOperVersion) and the version of the IGMP query (version igmpQuerierVersion) received on the interface.
Cause	This event is generated when the IGMP interface receives a query with a version that is higher than the interface's compatible mode.
Effect	IGMP interfaces will ignore any Queries with a version higher than the interface's compatibility mode.

18.2 igmpMaxNumberOfGroupSourcesReached

Table 322: igmpMaxNumberOfGroupSourcesReached properties

Property name	Value
Application name	igmp
Event name	igmpMaxNumberOfGroupSourcesReached
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - The number of group/source combinations learned on interface <i>subinterface</i> has exceeded the maximum limit of <i>igmpInterfaceMaxGroupSources</i> .
Cause	This event is generated when an attempt is made to learn a source when the number of group/source combinations on the IGMP interface is equal to the maximum number of group-sources configured on the interface.

Property name	Value
	IGMP interfaces will not learn any new sources for a given group when the configured maximum number of group-sources has been reached.

18.3 igmpMaxNumberOfGroupsReached

Table 323: igmpMaxNumberOfGroupsReached properties

Property name	Value
Application name	igmp
Event name	igmpMaxNumberOfGroupsReached
Default severity	warning
Message format string	Network-instance network_instance - The number of groups learned on interface subinterface has exceeded the maximum limit of igmp InterfaceMaxGroups.
Cause	This event is generated when an attempt is made to learn a group when the number of groups on the IGMP interface is equal to the maximum number of groups configured on the interface.
Effect	IGMP interfaces will not learn any new groups when the configured maximum number of groups has been reached.

18.4 igmpMaxNumberOfSourcesReached

Table 324: igmpMaxNumberOfSourcesReached properties

Property name	Value
Application name	igmp
Event name	igmpMaxNumberOfSourcesReached
Default severity	warning
Message format string	Network-instance network_instance - The number of sources learned on interface subinterface has exceeded the maximum limit of igmp InterfaceMaxSources.
Cause	This event is generated when an attempt is made to learn a source when the number of sources for this group on the IGMP interface is equal to the maximum number of sources per group configured on the interface.

Property name	Value
	IGMP interfaces will not learn any new sources for a given group when the configured maximum number of sources for the group has been reached.

18.5 igmpRxQueryVersionMismatch

Table 325: igmpRxQueryVersionMismatch properties

Property name	Value
Application name	igmp
Event name	igmpRxQueryVersionMismatch
Default severity	warning
Message format string	Network-instance network_instance - IGMPvigmpQuerierVersion query received on interface subinterface configured as IGMPvigmpInterface AdminVersion.
Cause	This event is generated when the IGMP interface is configured as IGMPv3 and receives an IGMPv1 Query or IGMPv2 General Query.
Effect	IGMP interfaces configured as IGMPv3 will ignore IGMPv1 and IGMPv2 General Queries.

19 isis

19.1 isisAdjacencyBfdSessionSetupFailed

Table 326: isisAdjacencyBfdSessionSetupFailed properties

Property name	Value
Application name	isis
Event name	isisAdjacencyBfdSessionSetupFailed
Default severity	warning
Message format string	In network-instance network_instance, BFD session setup failed for the level IS-IS adjacency with system sys_id, using interface subinterface. Failure reason: bfd_failure_reason.
Cause	This event is generated when BFD session setup fails with an adjacent neighbor.
Effect	Fast failure detection may not be possible.

19.2 isisAdjacencyChange

Table 327: isisAdjacencyChange properties

Property name	Value
Application name	isis
Event name	isisAdjacencyChange
Default severity	warning
Message format string	In network-instance network_instance, the level IS-IS adjacency with system sys_id, using interface subinterface, moved to state adj_state.
Cause	This event is generated when an IS-IS adjacency enters or leaves the up state.
Effect	IS-IS traffic can only be forwarded along adjacencies that are up.

19.3 isisAdjacencyRestartStatusChange

Table 328: isisAdjacencyRestartStatusChange properties

Property name	Value
Application name	isis
Event name	isisAdjacencyRestartStatusChange
Default severity	warning
Message format string	In network-instance network_instance, the graceful restart status for the level IS-IS adjacency on interface subinterface moved to new state restart_status.
Cause	This event is generated when the graceful restart status of a neighbor changes.
Effect	None

19.4 isisAreaMismatch

Table 329: isisAreaMismatch properties

Property name	Value
Application name	isis
Event name	isisAreaMismatch
Default severity	warning
Message format string	In network-instance network_instance, a level1 PDU was received on interface subinterface with no Area Addresses matching the areas to which this IS router belongs. The PDU starts with: pdu_fragment
Cause	This event is generated to alert of a possible area-id misconfiguration inside a L1 area.
Effect	L1 adjacency cannot form

19.5 isisAuthDataFail

Table 330: isisAuthDataFail properties

Property name	Value
Application name	isis
Event name	isisAuthDataFail
Default severity	warning
Message format string	In network-instance network_instance, a level PDU was received on interface subinterface with unexpected or incorrect data in the Authentication TLV. The PDU starts with: pdu_fragment
Cause	This event could be caused by incorrect keychain configuration in this router or its neighbor.
Effect	PDUs are dropped, with the effect depending on the PDU type

19.6 isisAuthTypeMismatch

Table 331: isisAuthTypeMismatch properties

Property name	Value
Application name	isis
Event name	isisAuthTypeMismatch
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , a <i>level</i> PDU was received on interface <i>subinterface</i> with an unrecognized or unsupported authentication type in TLV 10. The PDU starts with: <i>pdu_fragment</i>
Cause	This event could be caused by incorrect keychain configuration in this router or its neighbor.
Effect	PDUs are dropped, with the effect depending on the PDU type

19.7 isisCircuitIdsExhausted

Table 332: isisCircuitIdsExhausted properties

Property name	Value
Application name	isis
Event name	isisCircuitIdsExhausted
Default severity	warning
Message format string	In network-instance network_instance, the IS-IS interface subinterface is operationally down because the limit of 255 circuit IDs available to LAN interfaces was reached.
Cause	This event is caused by having too many LAN interfaces.
Effect	LAN adjacencies are not formed

19.8 isisCircuitMtuTooLow

Table 333: isisCircuitMtuTooLow properties

Property name	Value
Application name	isis
Event name	isisCircuitMtuTooLow
Default severity	warning
Message format string	In network-instance network_instance, a level LSP PDU or SNP PDU could not be transmitted on interface subinterface because the IP MTU is only operational_subif_mtu and an MTU of at least required_mtu is required.
Cause	The port MTU is too small and/or the lsp-mtu-size is too large.
Effect	PDUs are dropped

19.9 isisCorruptedLspDetected

Table 334: isisCorruptedLspDetected properties

Property name	Value
Application name	isis
Event name	isisCorruptedLspDetected
Default severity	warning
Message format string	In network-instance network_instance, the LSP PDU with ID lsp_id in the level database has become corrupted.
Cause	Memory corruption or other.
Effect	LSP is removed

19.10 isisLdpSyncExited

Table 335: isisLdpSyncExited properties

Property name	Value
Application name	isis
Event name	isisLdpSyncExited
Default severity	warning
Message format string	In network-instance network_instance, the LDP synchronization state has ended on IS-IS interface subinterface, and now the state is sync_state
Cause	The LDP synchronization timer can be stopped because of a tools command, hold-down timer expiry or indication from the LDP peer that End-of-LIB has been received. When LDP sync is exited IS-IS resumes advertising a normal metric for the interface.
Effect	Transit traffic can start using this interface again.

19.11 isisLdpSyncTimerStarted

Table 336: isisLdpSyncTimerStarted properties

Property name	Value
Application name	isis
Event name	isisLdpSyncTimerStarted
Default severity	warning
Message format string	In network-instance network_instance, the LDP synchronization timer has started on IS-IS interface subinterface
Cause	The sync timer is started when LDP synchronization is configured and the LDP adjacency comes up with the LDP peer. When this timer expires IS-IS will resume advertisement of a normal metric for the interface.
Effect	Transit traffic will continue to avoid using this interface.

19.12 isisLspFragmentTooLarge

Table 337: isisLspFragmentTooLarge properties

Property name	Value
Application name	isis
Event name	isisLspFragmentTooLarge
Default severity	warning
Message format string	In network-instance network_instance, the level LSP PDU fragment lsp_id received on interface subinterface could not be accepted because the configured LSP MTU size is too small. An LSP MTU size of at least required_lsp_mtu bytes is required.
Cause	Misconfiguration of LSP MTU size
Effect	LSP PDU is not accepted

19.13 isisLspPurge

Table 338: isisLspPurge properties

Property name	Value
Application name	isis
Event name	isisLspPurge
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , the LSP PDU with ID <i>lsp_id</i> in the <i>level</i> database has been purged by <i>purge_originator</i> .
Cause	LSP lifetime expired or other reason
Effect	The PDU is removed

19.14 isisLspSequenceNumberSkip

Table 339: isisLspSequenceNumberSkip properties

Property name	Value
Application name	isis
Event name	isisLspSequenceNumberSkip
Default severity	warning
Message format string	In network-instance network_instance, the LSP with id Isp_id in the Ievel database was re-originated with a sequence number that incremented by more than one.
Cause	There may be another IS router configured with the same system ID.
Effect	None

19.15 isisMaxAreaAddressesMismatch

Table 340: isisMaxAreaAddressesMismatch properties

Property name	Value
Application name	isis

Property name	Value
Event name	isisMaxAreaAddressesMismatch
Default severity	warning
Message format string	In network-instance network_instance, a level PDU was received on interface subinterface with an unexpected Max Area Addresses value in the IS-IS PDU header. The PDU starts with: pdu_fragment
Cause	Misconfiguration of max area addresses in the neighbor
Effect	The PDU is dropped

19.16 isisMaxLspSequenceNumberExceeded

Table 341: isisMaxLspSequenceNumberExceeded properties

Property name	Value
Application name	isis
Event name	isisMaxLspSequenceNumberExceeded
Default severity	warning
Message format string	In network-instance network_instance, the LSP with id Isp_id in the Ievel database was purged because the sequence number was already at its maximum value and could not be incremented.
Cause	A possible cause could be that the same system-id is configured on multiple systems; when 2 systems have the same system-id they both keep incrementing the LSP sequence number, causing the sequence counter to rollover.
Effect	The PDU is purged and reachability may be temporarily lost

19.17 isisOverloadEntry

Table 342: isisOverloadEntry properties

Property name	Value
Application name	isis
Event name	isisOverloadEntry
Default severity	warning

Property name	Value
Message format string	In the IS-IS instance of network-instance network_instance, the level database has entered the overload state.
Cause	Overload bit configuration
Effect	No transit traffic is routed through the overloaded router.

19.18 isisOverloadExit

Table 343: isisOverloadExit properties

Property name	Value
Application name	isis
Event name	isisOverloadExit
Default severity	warning
Message format string	In the IS-IS instance of network-instance network_instance, the level database has exited from the overload state.
Cause	Overload bit configuration
Effect	Transit traffic can again be routed through the router.

19.19 isisOwnLspPurge

Table 344: isisOwnLspPurge properties

Property name	Value
Application name	isis
Event name	isisOwnLspPurge
Default severity	warning
Message format string	In network-instance network_instance, a level LSP PDU was received with the system ID of this IS router and age equal to zero. The purge originator was purge_originator.
Cause	LSP lifetime expired or other reason
Effect	The PDU is removed

19.20 isisSystemIdLengthMismatch

Table 345: isisSystemIdLengthMismatch properties

Property name	Value
Application name	isis
Event name	isisSystemIdLengthMismatch
Default severity	warning
Message format string	In network-instance network_instance, a level PDU was received on interface subinterface with an unexpected System ID length in the IS-IS PDU header. The PDU starts with: pdu_fragment
Cause	Misconfiguration of system ID length in the neighbor
Effect	The PDU is dropped

19.21 isisVersionMismatch

Table 346: isisVersionMismatch properties

Property name	Value
Application name	isis
Event name	isisVersionMismatch
Default severity	warning
Message format string	In network-instance network_instance, a level PDU was received on interface subinterface with an IS-IS protocol version not matching the expected value. The PDU starts with: pdu_fragment
Cause	Unsupported IS-IS version
Effect	PDUs cannot be exchanged

20 json

20.1 authenticationError

Table 347: authenticationError properties

Property name	Value
Application name	json
Event name	authenticationError
Default severity	informational
Message format string	No username/password received, authentication needed
Cause	A user has failed to authenticate.
Effect	That user can't establish a configuration session.

20.2 globalConfigUpdate

Table 348: globalConfigUpdate properties

Property name	Value
Application name	json
Event name	globalConfigUpdate
Default severity	informational
Message format string	JSON RPC server global configuration updated.
Cause	A global configuration change has been made, resulting in json rpc configuration being regenerated.
Effect	May result in json rpc process(es) start or stop depending on the configuration change.

20.3 httpJsonRpcOperDown

Table 349: httpJsonRpcOperDown properties

Property name	Value
Application name	json
Event name	httpJsonRpcOperDown
Default severity	critical
Message format string	HTTP JSON RPC server for network instance network_instance is no longer operational.
Cause	The httpJsonRpcOperDown event is generated when HTTP JSON RPC server on the mentioned network instance has transitioned from any other operational state to the down state.
Effect	HTTP JSON RPC server on the mentioned network instance is now down.

20.4 httpJsonRpcOperUp

Table 350: httpJsonRpcOperUp properties

Property name	Value
Application name	json
Event name	httpJsonRpcOperUp
Default severity	warning
Message format string	HTTP JSON RPC server for network instance network_instance is operational.
Cause	The httpJsonRpcOperUp event is generated when HTTP JSON RPC server on the mentioned network instance has transitioned from any other operational state to the up state.
Effect	HTTP JSON RPC server on the mentioned network instance is now up.

20.5 httpsJsonRpcOperDown

Table 351: https://sonRpcOperDown properties

Property name	Value
Application name	json
Event name	httpsJsonRpcOperDown
Default severity	critical
Message format string	HTTPS JSON RPC server for network instance network_instance is no longer operational.
Cause	The httpsJsonRpcOperDown event is generated when HTTPs JSON RPC server on the mentioned network instance has transitioned from any other operational state to the down state.
Effect	HTTPS JSON RPC server on the mentioned network instance is now down.

20.6 httpsJsonRpcOperUp

Table 352: https://sonRpcOperUp properties

Property name	Value
Application name	json
Event name	httpsJsonRpcOperUp
Default severity	warning
Message format string	HTTPS JSON RPC server for network instance network_instance is operational.
Cause	The httpsJsonRpcOperUp event is generated when HTTPs JSON RPC server on the mentioned network instance has transitioned from any other operational state to the up state.
Effect	HTTPS JSON RPC server on the mentioned network instance is now up.

20.7 jsonRpcRequestReceived

Table 353: jsonRpcRequestReceived properties

Property name	Value
Application name	json
Event name	jsonRpcRequestReceived
Default severity	informational
Message format string	Request received for session id session_id username username.
Cause	A JSON RPC Request is received.
Effect	JSON RPC server processes That Requset.

20.8 jsonRpcResponseSent

Table 354: jsonRpcResponseSent properties

Property name	Value
Application name	json
Event name	jsonRpcResponseSent
Default severity	informational
Message format string	Response sent for session id session_id username username.
Cause	A JSON RPC Response is sent.
Effect	none.

20.9 networkInstanceConfigUpdate

Table 355: networkInstanceConfigUpdate properties

Property name	Value
Application name	json
Event name	networkInstanceConfigUpdate
Default severity	informational

Property name	Value
Message format string	JSON RPC server network instance <i>network_instance</i> configuration updated.
Cause	A configuration change has been made in the mentioned network instance, resulting in json rpc configuration being regenerated.
Effect	May result in json rpc process(es) start or stop depending on the configuration change.

20.10 unixSocketJsonRpcOperDown

Table 356: unixSocketJsonRpcOperDown properties

Property name	Value
Application name	json
Event name	unixSocketJsonRpcOperDown
Default severity	critical
Message format string	Unix Domain Socket JSON RPC server is no longer operational.
Cause	The Unix Domain Socket JSON RPC server has transitioned from any other operational state to the down state.
Effect	Unix Domain Socket JSON RPC server is now down.

20.11 unixSocketJsonRpcOperUp

Table 357: unixSocketJsonRpcOperUp properties

Property name	Value
Application name	json
Event name	unixSocketJsonRpcOperUp
Default severity	warning
Message format string	Unix Domain Socket JSON RPC server is operational.
Cause	The Unix Domain Socket JSON RPC server has transitioned from any other operational state to the up state.
Effect	Unix Domain Socket JSON RPC server is now up.

20.12 userAuthenticated

Table 358: userAuthenticated properties

Property name	Value
Application name	json
Event name	userAuthenticated
Default severity	informational
Message format string	User <i>username</i> authenticated.
Cause	A user has been successfully authenticated.
Effect	That user is ready to start a configuration session.

20.13 userAuthenticationErrorWrongPassword

Table 359: userAuthenticationErrorWrongPassword properties

Property name	Value
Application name	json
Event name	userAuthenticationErrorWrongPassword
Default severity	informational
Message format string	User <i>username</i> authentication failure, invalid username or password.
Cause	A user has failed to authenticate.
Effect	That user can't establish a configuration session.

21 lag

21.1 lagDown

Table 360: lagDown properties

Property name	Value
Application name	lag
Event name	lagDown
Default severity	warning
Message format string	LAG Interface <i>interface_name</i> : The operational state has transitioned to Down
Cause	This warning is generated when a LAG transitions to the down state.
Effect	The LAG is now down and any associated subinterfaces will also be brought down.

21.2 lagDownMinLinks

Table 361: lagDownMinLinks properties

Property name	Value
Application name	lag
Event name	lagDownMinLinks
Default severity	warning
Message format string	LAG Interface <i>interface_name</i> : The active number of member links has fallen below the min-links threshold
Cause	This warning is generated when a LAG transitions to the down state because the number of active links has dropped below the min-link threshold
Effect	The LAG is now down and any associated subinterfaces will also be brought down.

Log Events Guide Release 24.7

21.3 lagMemberLinkAdded

Table 362: lagMemberLinkAdded properties

Property name	Value
Application name	lag
Event name	lagMemberLinkAdded
Default severity	notice
Message format string	LAG Interface <i>interface_name</i> : The member-link <i>member-interface</i> has been added
Cause	This notification is generated when a new member-link is added to a LAG.
Effect	A new member link is now available to the LAG bundle.

21.4 lagMemberLinkRemoved

Table 363: lagMemberLinkRemoved properties

Property name	Value
Application name	lag
Event name	lagMemberLinkRemoved
Default severity	notice
Message format string	LAG Interface <i>interface_name</i> : The member-link <i>member-interface</i> has been removed
Cause	This notification is generated when a new member-link is removed from a LAG.
Effect	The specified interfaces is no longer a member of the LAG bundle.

21.5 lagMemberOperDown

Table 364: lagMemberOperDown properties

Property name	Value
Application name	lag

Property name	Value
Event name	lagMemberOperDown
Default severity	warning
Message format string	LAG Interface interface_name: The member-link member-interface operational state has transitioned to Down
Cause	This notification is generated when a member-link transitions to the down state.
Effect	The member link is now down and will not forward traffic.

21.6 lagMemberOperUp

Table 365: lagMemberOperUp properties

Property name	Value
Application name	lag
Event name	lagMemberOperUp
Default severity	warning
Message format string	LAG Interface <i>interface_name</i> : The member-link <i>member-interface</i> operational state has transitioned to Up
Cause	This notification is generated when a member-link transitions to the up state.
Effect	The member link is now operational.

21.7 lagUp

Table 366: lagUp properties

Property name	Value
Application name	lag
Event name	lagUp
Default severity	notice
Message format string	LAG Interface <i>interface_name</i> : The operational state has transitioned to Up

Property name	Value
Cause	This notification is generated when a LAG transitions to the up state.
Effect	The LAG is now operational.

22 ldp

22.1 ldplpv4lnstanceDown

Table 367: IdpIpv4InstanceDown properties

Property name	Value
Application name	ldp
Event name	ldplpv4InstanceDown
Default severity	warning
Message format string	In network-instance network_instance, LDP-IPv4 has changed oper- state to DOWN. The reason is oper_down_reason
Cause	This event is generated when LDP ceases to becomes functional for IPv4 adjacencies, FECs and addresses.
Effect	LDP cannot form IPv4 adjacencies and sessions with other such routers.

22.2 Idplpv4InstanceUp

Table 368: Idplpv4InstanceUp properties

Property name	Value
Application name	ldp
Event name	ldplpv4InstanceUp
Default severity	notice
Message format string	In network-instance <i>network_instance</i> , LDP-IPv4 is now up and functional.
Cause	This event is generated when LDP becomes functional for IPv4 adjacencies, FECs and addresses.
Effect	LDP can form IPv4 adjacencies and sessions with other such routers reachable through LDP interfaces that are operational.

22.3 IdplPv4InterfaceDown

Table 369: IdpIPv4InterfaceDown properties

Property name	Value
Application name	ldp
Event name	IdpIPv4InterfaceDown
Default severity	warning
Message format string	In network-instance network_instance, LDP has changed oper-state to DOWN on the following IPv4 interface subinterface. The reason is oper_down_reason
Cause	This event is generated when LDP ceases to be functional on a subinterface.
Effect	LDP drops its adjacencies and sessions with other routers reachable through this subinterface.

22.4 IdpIPv4InterfaceUp

Table 370: IdpIPv4InterfaceUp properties

Property name	Value
Application name	ldp
Event name	ldplPv4InterfaceUp
Default severity	notice
Message format string	In network-instance <i>network_instance</i> , LDP is now up and functional on the following IPv4 interface <i>subinterface</i> .
Cause	This event is generated when LDP becomes functional on a subinterface.
Effect	LDP can form adjacencies and sessions with other routers reachable through this subinterface.

22.5 IdplPv4TargetDown

Table 371: IdpIPv4TargetDown properties

Property name	Value
Application name	ldp
Event name	IdpIPv4TargetDown
Default severity	warning
Message format string	In network-instance network_instance, LDP target peer target has changed oper-state to DOWN. The reason is oper_down_reason
Cause	This event is generated when LDP ceases to be functional on a target.
Effect	LDP drops its adjacencies and sessions with other routers reachable through this target.

22.6 IdpIPv4TargetUp

Table 372: IdpIPv4TargetUp properties

Property name	Value
Application name	ldp
Event name	ldplPv4TargetUp
Default severity	notice
Message format string	In network-instance <i>network_instance</i> , LDP target peer <i>target</i> state is now in service.
Cause	This event is generated when LDP becomes functional on a target.
Effect	LDP can form adjacencies and sessions with other routers reachable through this target.

22.7 ldplpv6lnstanceDown

Table 373: Idplpv6InstanceDown properties

Property name	Value
Application name	ldp

Property name	Value
Event name	ldplpv6lnstanceDown
Default severity	warning
Message format string	In network-instance network_instance, LDP-IPv6 has changed oper- state to DOWN. The reason is oper_down_reason
Cause	This event is generated when LDP ceases to becomes functional for IPv6 adjacencies, FECs and addresses.
Effect	LDP cannot form IPv6 adjacencies and sessions with other such routers.

22.8 ldplpv6lnstanceUp

Table 374: Idplpv6InstanceUp properties

Property name	Value
Application name	ldp
Event name	ldplpv6InstanceUp
Default severity	notice
Message format string	In network-instance <i>network_instance</i> , LDP-IPv6 is now up and functional.
Cause	This event is generated when LDP becomes functional for IPv6 adjacencies, FECs and addresses.
Effect	LDP can form IPv6 adjacencies and sessions with other such routers reachable through LDP interfaces that are operational.

22.9 IdplPv6InterfaceDown

Table 375: IdpIPv6InterfaceDown properties

Property name	Value
Application name	ldp
Event name	IdpIPv6InterfaceDown
Default severity	warning

Property name	Value
Message format string	In network-instance network_instance, LDP has changed oper-state to DOWN on the following IPv6 interface subinterface. The reason is oper_down_reason
Cause	This event is generated when LDP ceases to be functional on a subinterface.
Effect	LDP drops its adjacencies and sessions with other routers reachable through this subinterface.

22.10 IdplPv6InterfaceUp

Table 376: IdpIPv6InterfaceUp properties

Property name	Value
Application name	ldp
Event name	IdpIPv6InterfaceUp
Default severity	notice
Message format string	In network-instance <i>network_instance</i> , LDP is now up and functional on the following IPv6 interface <i>subinterface</i> .
Cause	This event is generated when LDP becomes functional on a subinterface.
Effect	LDP can form adjacencies and sessions with other routers reachable through this subinterface.

22.11 IdplPv6TargetDown

Table 377: IdpIPv6TargetDown properties

Property name	Value
Application name	ldp
Event name	ldpIPv6TargetDown
Default severity	warning
Message format string	In network-instance network_instance, LDP target peer target has changed oper-state to DOWN. The reason is oper_down_reason
Cause	This event is generated when LDP ceases to be functional on a target.

Property name	Value
	LDP drops its adjacencies and sessions with other routers reachable through this target.

22.12 IdpIPv6TargetUp

Table 378: IdpIPv6TargetUp properties

Property name	Value
Application name	ldp
Event name	ldpIPv6TargetUp
Default severity	notice
Message format string	In network-instance <i>network_instance</i> , LDP target peer <i>target</i> state is now in service.
Cause	This event is generated when LDP becomes functional on a target.
Effect	LDP can form adjacencies and sessions with other routers reachable through this target.

22.13 IdpSessionDown

Table 379: IdpSessionDown properties

Property name	Value
Application name	ldp
Event name	IdpSessionDown
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , the LDP session with peer <i>peer_ldp_id</i> has changed to non-existent.
Cause	This event is generated when an LDP session transitions into the non-existent state from a higher state.
Effect	LDP immediately deletes FEC-label and address bindings received from this peer.

22.14 IdpSessionFecLimitReached

Table 380: IdpSessionFecLimitReached properties

Property name	Value
Application name	ldp
Event name	IdpSessionFecLimitReached
Default severity	warning
Message format string	The number of FECs received from the LDP peer peer_ldp_id has reached the configured limit of fec_limit.
Cause	The number of FECs accepted from the peer has reached the configured limit. If the number of FECs go below the limit and again start to increase and hit the limit a second time, a new event is generated if 2 or more minutes have elapsed since the previous event. If the FEC limit is changed and the current number of FECs is equal to or higher than the limit then the event is generated immediately.
Effect	If the peer supports the overload capability then the session will go into overload. If the peer doesn't support the overload capability then excess FECs will trigger the sending of label release messages back to the peer.

22.15 IdpSessionLocallPv4Overload

Table 381: IdpSessionLocalIPv4Overload properties

Property name	Value
Application name	ldp
Event name	IdpSessionLocalIPv4Overload
Default severity	warning
Message format string	The LDP session with peer <i>peer_ldp_id</i> has entered overload state for IPv4 FECs because this router sent an overload TLV to the peer.
Cause	The local router has received too many IPv4 FECs.
Effect	The local router is requesting the peer to stop sending further IPv4 FECs.

22.16 IdpSessionLocallPv4OverloadCleared

Table 382: IdpSessionLocalIPv4OverloadCleared properties

Property name	Value
Application name	ldp
Event name	IdpSessionLocalIPv4OverloadCleared
Default severity	notice
Message format string	The LDP session with peer <i>peer_ldp_id</i> has exited overload state for IPv4 FECs because this router cleared the overload TLV to the peer.
Cause	The local router has cleared overload state.
Effect	The local router cleared the peer to continue sending further IPv4 FECs.

22.17 IdpSessionLocalIPv6Overload

Table 383: IdpSessionLocalIPv6Overload properties

Property name	Value
Application name	ldp
Event name	IdpSessionLocalIPv6Overload
Default severity	warning
Message format string	The LDP session with peer <i>peer_ldp_id</i> has entered overload for IPv6 FECs because this router sent an overload TLV to the peer.
Cause	The local router has received too many IPv6 FECs.
Effect	The local router is requesting the peer to stop sending further IPv6 FECs.

22.18 IdpSessionLocallPv6OverloadCleared

Table 384: IdpSessionLocalIPv6OverloadCleared properties

Property name	Value
Application name	ldp

Property name	Value
Event name	IdpSessionLocalIPv6OverloadCleared
Default severity	notice
Message format string	The LDP session with peer <i>peer_ldp_id</i> has exited overload state for IPv6 FECs because this router cleared the overload TLV to the peer.
Cause	The local router has cleared overload state.
Effect	The local router cleared the peer to continue sending further IPv6 FECs.

22.19 IdpSessionPeerIPv4Overload

Table 385: IdpSessionPeerIPv4Overload properties

Property name	Value
Application name	ldp
Event name	IdpSessionPeerIPv4Overload
Default severity	warning
Message format string	The LDP session with peer <i>peer_ldp_id</i> has entered overload state for IPv4 FECs because the peer sent an overload TLV.
Cause	The peer router has received too many IPv4 FECs.
Effect	The local router stops sending further IPv4 FECs to the peer.

22.20 IdpSessionPeerIPv4OverloadCleared

Table 386: IdpSessionPeerIPv4OverloadCleared properties

Property name	Value
Application name	ldp
Event name	IdpSessionPeerIPv4OverloadCleared
Default severity	notice
Message format string	The LDP session with peer <i>peer_ldp_id</i> has exited overload state for IPv4 FECs because the peer cleared overload TLV.
Cause	The peer router has cleared overload state.

Property name	Value
Effect	The local router can again send IPv4 FECs to the peer.

22.21 IdpSessionPeerIPv6Overload

Table 387: IdpSessionPeerIPv6Overload properties

Property name	Value
Application name	ldp
Event name	IdpSessionPeerIPv6Overload
Default severity	warning
Message format string	The LDP session with peer <i>peer_ldp_id</i> has entered overload state for IPv6 FECs because the peer sent an overload TLV.
Cause	The peer router has received too many IPv6 FECs.
Effect	The local router stops sending further IPv6 FECs to the peer.

22.22 IdpSessionPeerIPv6OverloadCleared

Table 388: IdpSessionPeerIPv6OverloadCleared properties

Property name	Value
Application name	ldp
Event name	IdpSessionPeerIPv6OverloadCleared
Default severity	notice
Message format string	The LDP session with peer <i>peer_ldp_id</i> has exited overload state for IPv6 FECs because the peer cleared overload TLV.
Cause	The peer router has cleared overload state.
Effect	The local router can again send IPv6 FECs to the peer.

Log Events Guide Release 24.7

22.23 IdpSessionUp

Table 389: IdpSessionUp properties

Property name	Value
Application name	ldp
Event name	IdpSessionUp
Default severity	notice
Message format string	In network-instance <i>network_instance</i> , an LDP session is now up and operational with peer <i>peer_ldp_id</i> .
Cause	This event is generated when an LDP session transitions into the operational state from a lower state.
Effect	LDP can exchange FEC-label and address bindings with this peer.

23 license

23.1 licenseExpirySoon

Table 390: licenseExpirySoon properties

Property name	Value
Application name	license
Event name	licenseExpirySoon
Default severity	warning
Message format string	License <i>license_name</i> expires at <i>expires_at_date_time</i> , current time: current_date_time
Cause	The license specified will expire in less than 30 days.
Effect	If no new license is provided before the expiry, the system becomes unlicensed.

24 linux

24.1 cpuUsageCritical

Table 391: cpuUsageCritical properties

Property name	Value
Application name	linux
Event name	cpuUsageCritical
Default severity	critical
Message format string	CPU utilization on <i>component_type</i> module <i>slot</i> is above 90% on average for the last minute, current usage <i>cpu_usage_percentage</i> %
Cause	Applications or other system tasks have consumed more than 90% of available CPU resources on average over the last minute.
Effect	Processes may be scheduled at a slower rate than required, resulting in potential application failures or slow downs.

24.2 cpuUsageHigh

Table 392: cpuUsageHigh properties

Property name	Value
Application name	linux
Event name	cpuUsageHigh
Default severity	warning
Message format string	CPU utilization on <i>component_type</i> module <i>slot</i> is above 80% on average for the last minute, current usage <i>cpu_usage_percentage</i> %
Cause	Applications or other system tasks have consumed more than 80% of available CPU resources on average over the last minute.
Effect	No immediate effect, if utilization continues to increase, processes may be scheduled at a slower rate than required, resulting in potential application failures or slow downs.

24.3 cpuUsageNormal

Table 393: cpuUsageNormal properties

Property name	Value
Application name	linux
Event name	cpuUsageNormal
Default severity	notice
Message format string	CPU utilization on component_type module slot is below 70% on average for the last minute, current usage cpu_usage_percentage%
Cause	CPU consumption on the specified slot has returned to normal levels - below 70%, after triggering a cpuUsageHigh/cpuUsageCritical event.
Effect	None.

24.4 dateAndTimeChanged

Table 394: dateAndTimeChanged properties

Property name	Value
Application name	linux
Event name	dateAndTimeChanged
Default severity	notice
Message format string	System date and time changed to date_and_time
Cause	The system time has been changed either manually, or via NTP, to the specified time.
Effect	Local time on the system has changed.

24.5 domainChanged

Table 395: domainChanged properties

Property name	Value
Application name	linux

Property name	Value
Event name	domainChanged
Default severity	informational
Message format string	System domain name changed to domain_name
Cause	System configuration change to the domain name has been made.
Effect	The system uses the new domain name.

24.6 hostnameChanged

Table 396: hostnameChanged properties

Property name	Value
Application name	linux
Event name	hostnameChanged
Default severity	informational
Message format string	System host name changed to <i>host_name</i>
Cause	System configuration change to the host name has been made.
Effect	The system uses the new host name.

24.7 memoryUsageCritical

Table 397: memoryUsageCritical properties

Property name	Value
Application name	linux
Event name	memoryUsageCritical
Default severity	critical
Message format string	Memory utilization on <i>component_type</i> module <i>slot</i> is above 90%, current usage <i>memory_usage_percentage</i> %
Cause	Applications or other in-memory items have consumed more than 90% of the memory on the specified module.

Property name	Value
Effect	No immediate effect, if utilization continues to increase, new memory allocations may fail, resulting in potential application failures.

24.8 memoryUsageFull

Table 398: memoryUsageFull properties

Property name	Value
Application name	linux
Event name	memoryUsageFull
Default severity	emergency
Message format string	Memory utilization on component_type module slot is full
Cause	Applications or other in-memory items have consumed 100% of the memory on the specified module.
Effect	Further memory allocations will fail, likely leading to application failures and eventual module restart.

24.9 memoryUsageHigh

Table 399: memoryUsageHigh properties

Property name	Value
Application name	linux
Event name	memoryUsageHigh
Default severity	warning
Message format string	Memory utilization on <i>component_type</i> module <i>slot</i> is above 70%, current usage <i>memory_usage_percentage</i> %
Cause	Applications or other in-memory items have consumed more than 70% of the memory on the specified slot.
Effect	No immediate effect, if utilization continues to increase, new memory allocations may fail, resulting in potential application failures.

24.10 memoryUsageNormal

Table 400: memoryUsageNormal properties

Property name	Value
Application name	linux
Event name	memoryUsageNormal
Default severity	notice
Message format string	Memory utilization on <i>component_type</i> module <i>slot</i> is below 60%, current usage <i>memory_usage_percentage</i> %
Cause	Memory consumption on the specified slot has returned to normal levels - below 60%
Effect	None.

24.11 partitionStateChange

Table 401: partitionStateChange properties

Property name	Value
Application name	linux
Event name	partitionStateChange
Default severity	alert
Message format string	Partition partition has changed state to current_state
Cause	The specified partition has transitioned to a new state.
Effect	Depending on the state, the partition may now be unusable, read-only, or read-write.

24.12 partitionUsageCritical

Table 402: partitionUsageCritical properties

Property name	Value
Application name	linux

Property name	Value
Event name	partitionUsageCritical
Default severity	critical
Message format string	Partition partition_label usage on component_type module slot is higher than 90%, current usage partition_usage_percentage%
Cause	The specified partition is almost full, and action should be taken to remove unneeded files.
Effect	None.

24.13 partitionUsageFull

Table 403: partitionUsageFull properties

Property name	Value
Application name	linux
Event name	partitionUsageFull
Default severity	alert
Message format string	Partition partition_label on component_type module slot is full
Cause	The specified partition is full.
Effect	Write actions to this partition will fail.

24.14 partitionUsageNormal

Table 404: partitionUsageNormal properties

Property name	Value
Application name	linux
Event name	partitionUsageNormal
Default severity	notice
Message format string	Partition partition_label on component_type module slot is below 70%, current usage partition_usage_percentage%
Cause	Utilization of the specified partition is below 70%, after previously being higher than 80%.

Property name	Value
Effect	None.

24.15 partitionUsageWarning

Table 405: partitionUsageWarning properties

Property name	Value
Application name	linux
Event name	partitionUsageWarning
Default severity	warning
Message format string	Partition partition_label usage on component_type module slot is higher than 80%, current usage partition_usage_percentage%
Cause	The specified partition is almost full, and action should be taken to remove unneeded files.
Effect	None.

24.16 serviceConfigChanged

Table 406: serviceConfigChanged properties

Property name	Value
Application name	linux
Event name	serviceConfigChanged
Default severity	notice
Message format string	Service service_name configuration changed, service reloaded
Cause	The specified service configuration has been changed, and linux_mgr has reloaded the service.
Effect	New configuration for the service is now in effect.

24.17 serviceDownInNetworkInstance

Table 407: serviceDownInNetworkInstance properties

Property name	Value
Application name	linux
Event name	serviceDownInNetworkInstance
Default severity	warning
Message format string	Service service_name is no longer operational in network instance net_inst
Cause	The specified service has been disabled in the specified network instance.
Effect	Functionality provided by the service is no longer available in the specified network instance.

24.18 serviceUpInNetworkInstance

Table 408: serviceUpInNetworkInstance properties

Property name	Value
Application name	linux
Event name	serviceUpInNetworkInstance
Default severity	notice
Message format string	Service service_name is now operational in network instance net_inst
Cause	The specified service has been started in the specified network instance.
Effect	Functionality provided by the service is now available in the specified network instance.

24.19 tlsProfileExpired

Table 409: tlsProfileExpired properties

Property name	Value
Application name	linux
Event name	tlsProfileExpired
Default severity	warning
Message format string	Certificate in TLS profile tls_profile has expired
Cause	The certificate used in the specified TLS profile has an expiration date in the past.
Effect	Authentication using the specified TLS profile may fail.

24.20 tlsProfileExpiresSoon

Table 410: tlsProfileExpiresSoon properties

Property name	Value
Application name	linux
Event name	tlsProfileExpiresSoon
Default severity	warning
Message format string	Certificate in TLS profile tls_profile expires at expires_at_date_time
Cause	The certificate used in the specified TLS profile will expire in the next 30 days.
Effect	Authentication using the specified TLS profile may fail once the certificate expires.

25 IIdp

25.1 remotePeerAdded

Table 411: remotePeerAdded properties

Property name	Value
Application name	lldp
Event name	remotePeerAdded
Default severity	informational
Message format string	LLDP remote peer added on interface interface_name: System remote_system_name with chassis ID remote_chassis_id, port remote_port_id with MAC remote_port_mac
Cause	A new LLDP PDU has been received on the interface, resulting in the creation of an LLDP peer.
Effect	A new peer has been added to LLDP.

25.2 remotePeerRemoved

Table 412: remotePeerRemoved properties

Property name	Value
Application name	Ildp
Event name	remotePeerRemoved
Default severity	informational
Message format string	LLDP remote peer removed on interface interface_name: System remote_system_name with chassis ID remote_chassis_id, port remote_port_id with MAC remote_port_mac
Cause	The TTL for the remote peer has expired without a new LLDP PDU being received.
Effect	The peer has been removed from LLDP.

25.3 remotePeerUpdated

Table 413: remotePeerUpdated properties

Property name	Value
Application name	Ildp
Event name	remotePeerUpdated
Default severity	informational
Message format string	LLDP remote peer updated on interface interface_name: System remote_system_name with chassis ID remote_chassis_id, port remote_port_id with MAC remote_port_mac
Cause	The LLDP peer has sent new information in a LLDP PDU, without the TTL for the peer expiring.
Effect	The peer has been updated in LLDP.

26 log

26.1 bufferRollover

Table 414: bufferRollover properties

Property name	Value
Application name	log
Event name	bufferRollover
Default severity	informational
Message format string	Buffer buffer_name has been rolled over
Cause	The buffer has reached its configured max size, and log manager has rolled it over.
Effect	A new buffer has been opened for writing, and the old buffer has been archived. This may result in older buffers being removed from the system.

26.2 configUpdate

Table 415: configUpdate properties

Property name	Value
Application name	log
Event name	configUpdate
Default severity	informational
Message format string	Logging configuration updated
Cause	A configuration change has been made, resulting in rsyslogd configuration being regenerated.
Effect	Rsyslogd configuration has been modified, and the process has been restarted.

26.3 fileRollover

Table 416: fileRollover properties

Property name	Value
Application name	log
Event name	fileRollover
Default severity	informational
Message format string	File file_path/ file_name has been rolled over
Cause	The file has reached its configured max size, and log manager has rolled it over.
Effect	A new log file has been opened for writing, and the old log file has been archived. This may result in older logs being removed from the system.

26.4 networkNamespaceChanged

Table 417: networkNamespaceChanged properties

Property name	Value
Application name	log
Event name	networkNamespaceChanged
Default severity	informational
Message format string	Logging network namespace has changed from <i>old_net_namespace</i> to new_net_namespace
Cause	Configuration has been modified, resulting in the rsyslogd using the new network namespace to reach remote syslog servers.
Effect	Rsyslogd will use the new network namespace for reachability to remote syslog servers.

26.5 subsystemFacilityChanged

Table 418: subsystemFacilityChanged properties

Property name	Value
Application name	log
Event name	subsystemFacilityChanged
Default severity	informational
Message format string	Logging output facility has changed from <i>old_facility</i> to <i>new_facility</i>
Cause	Configuration has been modified, resulting in the output facility of our subsystems changing.
Effect	Subsystems will now output logs to the newly configured facility.

27 mgmt

27.1 checkpointGenerated

Table 419: checkpointGenerated properties

Property name	Value
Application name	mgmt
Event name	checkpointGenerated
Default severity	informational
Message format string	Generated checkpoint checkpoint_name with comment checkpoint_comment on the following path checkpoint_file_path.
Cause	A configuration checkpoint generated on the mentioned path.
Effect	The mentioned checkpoint is stored to the filesystem.

27.2 checkpointRevertRequestReceived

Table 420: checkpointRevertRequestReceived properties

Property name	Value
Application name	mgmt
Event name	checkpointRevertRequestReceived
Default severity	warning
Message format string	Configuration is going to be reverted to checkpoint checkpoint_id name checkpoint_name comment checkpoint_comment.
Cause	Configuration revert request was received.
Effect	Configuration is going to be reverted to the specified checkpoint and applied to running datastore.

27.3 commitFailed

Table 421: commitFailed properties

Property name	Value
Application name	mgmt
Event name	commitFailed
Default severity	warning
Message format string	Error while committing configuration changes for user <i>username</i> session <i>session_id</i> (<i>message</i>).
Cause	Unsuccessful commit due to error(s)
Effect	Configuration changes are not applied to running datastore

27.4 commitSucceeded

Table 422: commitSucceeded properties

Property name	Value
Application name	mgmt
Event name	commitSucceeded
Default severity	informational
Message format string	All changes have been committed successfully by user <i>username</i> session <i>session_id</i> .
Cause	A successful commit
Effect	Configuration changes applied to running datastore

${\bf 27.5\ exclusive Config Session Blocked By Other Session Error}$

Table 423: exclusiveConfigSessionBlockedByOtherSessionError properties

Property name	Value
Application name	mgmt
Event name	exclusiveConfigSessionBlockedByOtherSessionError

Property name	Value
Default severity	informational
Message format string	Cannot start an exclusive configuration session for candidate name candidate_name, there is other configuration session in progress - session id session_id username username candidate name candidate_name.
Cause	Candidate datastore is locked due to other active session in progress
Effect	Exclusive configuration session Error

27.6 exclusiveConfigSessionError

Table 424: exclusiveConfigSessionError properties

Property name	Value
Application name	mgmt
Event name	exclusiveConfigSessionError
Default severity	informational
Message format string	Cannot start an exclusive configuration session, there is already another exclusive configuration session in progress - session id session_id username username candidate name candidate_name.
Cause	Candidate datastore is locked due to other active session in progress
Effect	Exclusive configuration session Error

27.7 privateConfigSessionError

Table 425: privateConfigSessionError properties

Property name	Value
Application name	mgmt
Event name	privateConfigSessionError
Default severity	informational
Message format string	Cannot start a configuration session for candidate name candidate_name by user username, the candidate is owned by user candidate_username.

Property name	Value
Cause	Candidate datastore is owned by different user
Effect	Private configuration session Error

27.8 privateSharedMismatch

Table 426: privateSharedMismatch properties

Property name	Value
Application name	mgmt
Event name	privateSharedMismatch
Default severity	informational
Message format string	Cannot start a configuration session for candidate name <i>candidate_name</i> by user <i>username</i> , cannot use private candidate with shared session or vice versa.
Cause	Candidate was created as private and the requested configuration session is shared or vice versa
Effect	Private shared configuration mismatch Error

${\bf 27.9\ shared Config Session Blocked By Other Session Error}$

Table 427: sharedConfigSessionBlockedByOtherSessionError properties

Property name	Value
Application name	mgmt
Event name	sharedConfigSessionBlockedByOtherSessionError
Default severity	informational
Message format string	Cannot start a shared configuration session for candidate name candidate_name, there is other configuration session in progress - session id session_id username username candidate name candidate_name.
Cause	Candidate datastore is locked due to other active session in progress
Effect	Shared configuration session Error

28 mirror

28.1 mirrorDestinationDelete

Table 428: mirrorDestinationDelete properties

Property name	Value
Application name	mirror
Event name	mirrorDestinationDelete
Default severity	warning
Message format string	Mirror destination <i>mirror_destination</i> is removed from configuration under mirror instance <i>mirror_instance_name</i>
Cause	Mirror destination is removed from configuration under the mentioned mirror instance
Effect	Packets will no longer be mirrorred towards the mentioned mirror destination under the mentioned mirror instance

28.2 mirrorDestinationOperDown

Table 429: mirrorDestinationOperDown properties

Property name	Value
Application name	mirror
Event name	mirrorDestinationOperDown
Default severity	critical
Message format string	Mirror destination <i>mirror_destination</i> is operationally down under mirror instance <i>mirror_instance_name</i>
Cause	Mirror destination oper state has changed from up to down the mentioned mirror instance
Effect	The oper state is down for the mentioned mirror destination under the mentioned mirror instance. Packets will no longer be mirrorred towards the mentioned mirror destination

28.3 mirrorDestinationOperUP

Table 430: mirrorDestinationOperUP properties

Property name	Value
Application name	mirror
Event name	mirrorDestinationOperUP
Default severity	warning
Message format string	Mirror destination <i>mirror_destination</i> is operationally up under mirror instance <i>mirror_instance_name</i>
Cause	Mirror destination oper state has changed from down to up the mentioned mirror instance
Effect	The oper state is up for the mentioned mirror destination under the mentioned mirror instance

28.4 mirrorDestnationAdd

Table 431: mirrorDestnationAdd properties

Property name	Value
Application name	mirror
Event name	mirrorDestnationAdd
Default severity	warning
Message format string	Mirror destination <i>mirror_destination</i> is added to configuration under mirror instance <i>mirror_instance_name</i>
Cause	Mirror destination is added in configuration under the mentioned mirror instance
Effect	Packets from mirror source(s) configured under the mentioned mirror instance will be mirrored towards the mentioned mirror destination configured under the same mirror instance if mirror instance, mirror source(s) and mirror dest are opernational up

28.5 mirrorInstanceAdminDisable

Table 432: mirrorInstanceAdminDisable properties

Property name	Value
Application name	mirror
Event name	mirrorInstanceAdminDisable
Default severity	warning
Message format string	Mirror instance <i>mirror_instance_name</i> has changed to administrative disable state
Cause	The mirror instance admin state has changed from enable to disable due to configuration change
Effect	The admin state is disable for the mentioned mirror instance

28.6 mirrorInstanceAdminEnable

Table 433: mirrorInstanceAdminEnable properties

Property name	Value
Application name	mirror
Event name	mirrorInstanceAdminEnable
Default severity	warning
Message format string	Mirror instance <i>mirror_instance_name</i> has changed to administrative enable state
Cause	The mirror instance admin state has changed from disable to enable due to configuration change
Effect	The admin state is enable for the mentioned mirror instance

28.7 mirrorInstanceOperDown

Table 434: mirrorInstanceOperDown properties

Property name	Value
Application name	mirror

Property name	Value
Event name	mirrorInstanceOperDown
Default severity	critical
Message format string	Mirror instance <i>mirror_instance_name</i> has changed to operational down state due to <i>oper_down_reason</i>
Cause	The mirror instance oper state has changed from up to down
Effect	The oper state is down on the mentioned mirror instance

28.8 mirrorInstanceOperUp

Table 435: mirrorInstanceOperUp properties

Property name	Value
Application name	mirror
Event name	mirrorInstanceOperUp
Default severity	warning
Message format string	Mirror instance <i>mirror_instance_name</i> has changed to operational up state
Cause	The mirror instance oper state has changed from down to up
Effect	The oper state is up for the mentioned mirror instance

28.9 mirrorSourceAdd

Table 436: mirrorSourceAdd properties

Property name	Value
Application name	mirror
Event name	mirrorSourceAdd
Default severity	warning
Message format string	Mirror source <i>mirror_source</i> is added to configuration under mirror instance <i>mirror_instance_name</i>
Cause	Mirror source is added in configuration under the mentioned mirror instance

Property name	Value
Effect	Packets on the mentioned mirror source will be mirrored towards the mirror destination configured under the mentioned mirror instance if mirror instance, mirror source and mirror dest are opernational up

28.10 mirrorSourceDelete

Table 437: mirrorSourceDelete properties

Property name	Value
Application name	mirror
Event name	mirrorSourceDelete
Default severity	warning
Message format string	Mirror source <i>mirror_source</i> is removed from configuration under mirror instance <i>mirror_instance_name</i>
Cause	Mirror source is removed from configuration under the mentioned mirror instance
Effect	Packets on the mentioned mirror source will no longer be mirrorred towards the mirror destination configured under the mentioned mirror instance

29 netconf

29.1 netconfHello

Table 438: netconfHello properties

Property name	Value
Application name	netconf
Event name	netconfHello
Default severity	notice
Message format string	Netconf session session_id hello received from remote host.
Cause	The hello message was received over the session.
Effect	None.

29.2 netconfRpcError

Table 439: netconfRpcError properties

Property name	Value
Application name	netconf
Event name	netconfRpcError
Default severity	notice
Message format string	Netconf session session_id rpc message-id message_id completed with an error: error_message
Cause	The rpc message was processed with an error.
Effect	None.

29.3 netconfRpcReply

Table 440: netconfRpcReply properties

Property name	Value
Application name	netconf
Event name	netconfRpcReply
Default severity	debug
Message format string	Netconf session session_id rpc message-id message_id reply: data
Cause	The rpc message was processed.
Effect	None.

29.4 netconfRpcRequest

Table 441: netconfRpcRequest properties

Property name	Value
Application name	netconf
Event name	netconfRpcRequest
Default severity	debug
Message format string	Netconf session session_id rpc message-id message_id request: data
Cause	The rpc message was received over the session.
Effect	None.

29.5 netconfRpcStart

Table 442: netconfRpcStart properties

Property name	Value
Application name	netconf
Event name	netconfRpcStart
Default severity	notice

Property name	Value
Message format string	Netconf session session_id rpc message-id message_id processing started.
Cause	The rpc message was received over the session.
Effect	None.

29.6 netconfRpcSuccess

Table 443: netconfRpcSuccess properties

Property name	Value
Application name	netconf
Event name	netconfRpcSuccess
Default severity	notice
Message format string	Netconf session session_id rpc message-id message_id processing completed with success.
Cause	The rpc message was processed successfully.
Effect	None.

29.7 netconfSessionClosed

Table 444: netconfSessionClosed properties

Property name	Value
Application name	netconf
Event name	netconfSessionClosed
Default severity	notice
Message format string	Netconf session session_id closed for user user_name for remote host remote_host network-instance net_inst over transport.
Cause	The specified session closed on the system.
Effect	The specified session is now disconnected.

29.8 netconfSessionDisconnected

Table 445: netconfSessionDisconnected properties

Property name	Value
Application name	netconf
Event name	netconfSessionDisconnected
Default severity	notice
Message format string	Netconf session session_id for user user_name for remote host remote_host killed by administrative action.
Cause	The specified session has been disconnected from the system by an administrators action.
Effect	The specified session will be disconnected.

29.9 netconfSessionKilled

Table 446: netconfSessionKilled properties

Property name	Value
Application name	netconf
Event name	netconfSessionKilled
Default severity	notice
Message format string	Netconf session session_id for user user_name for remote host remote_host killed by Netconf session kill_session_id.
Cause	The specified session has been disconnected from the system by other netconf session.
Effect	The specified session will be disconnected.

29.10 netconfSessionOpened

Table 447: netconfSessionOpened properties

Property name	Value
Application name	netconf

Property name	Value
Event name	netconfSessionOpened
Default severity	notice
Message format string	Netconf session session_id opened for user user_name from remote host remote_host network-instance net_inst over transport.
Cause	The specified user has opened a session on the system.
Effect	None.

30 netinst

30.1 networkInstanceInterfaceDown

Table 448: networkInstanceInterfaceDown properties

Property name	Value
Application name	netinst
Event name	networkInstanceInterfaceDown
Default severity	warning
Message format string	The interface networkinstance_interface_name in network-instance networkinstance_name is now down for reason: oper_down_reason
Cause	This event is generated when the network instance interface has transitioned from the up state to the down state
Effect	The network instance interface is now down

30.2 networkInstanceInterfaceUp

Table 449: networkInstanceInterfaceUp properties

Property name	Value
Application name	netinst
Event name	networkInstanceInterfaceUp
Default severity	notice
Message format string	The interface networkinstance_interface_name in network-instance networkinstance_name is now up
Cause	This event is generated when the network instance interface has transitioned from the down state to the up state.
Effect	The network instance interface is now up

30.3 networkInstanceStateDown

Table 450: networkInstanceStateDown properties

Property name	Value
Application name	netinst
Event name	networkInstanceStateDown
Default severity	warning
Message format string	Network Instance networkinstance_name is now down
Cause	The network instance has transitioned from the up state to the down state
Effect	The network instance is now down

30.4 networkInstanceStateUp

Table 451: networkInstanceStateUp properties

Property name	Value
Application name	netinst
Event name	networkInstanceStateUp
Default severity	notice
Message format string	Network Instance networkinstance_name is now up
Cause	The network instance has transitioned from the down state to the up state
Effect	The network instance is now up

31 oam_pm

31.1 ThresholdDelayEventClear

Table 452: ThresholdDelayEventClear properties

Property name	Value
Application name	oam_pm
Event name	ThresholdDelayEventClear
Default severity	warning
Message format string	OAM performance monitoring delay threshold cleared for session session-name mi-duration measurement interval index index started start-time threshold type threshold-event-type in the direction direction delay metric bin-type bin lower bound bin-lower-bound meets the clear threshold criteria clear-threshold
Cause	This event is generated when a delay metric count is lower than the clear threshold, clearing the event.
Effect	None.

31.2 ThresholdDelayEventRaise

Table 453: ThresholdDelayEventRaise properties

Property name	Value
Application name	oam_pm
Event name	ThresholdDelayEventRaise
Default severity	warning
Message format string	OAM performance monitoring delay raise threshold trigger for session session-name mi-duration measurement interval index index started start-time threshold type threshold-event-type in the direction delay metric bin-type bin lower bound bin-lower-bound exceeding the raise threshold raise-threshold
Cause	This event is generated when a delay metric count exceeds the raise threshold.

Property name	Value
Effect	None.

31.3 ThresholdLossEventClear

Table 454: ThresholdLossEventClear properties

Property name	Value
Application name	oam_pm
Event name	ThresholdLossEventClear
Default severity	warning
Message format string	OAM performance monitoring loss threshold cleared for session session-name mi-duration measurement interval index index started start-time threshold type threshold-event-type in the direction direction meets the clear threshold criteria clear-threshold
Cause	This event is generated when a loss metric count is lower than the clear threshold, clearing the event.
Effect	None.

31.4 ThresholdLossEventRaise

Table 455: ThresholdLossEventRaise properties

Property name	Value
Application name	oam_pm
Event name	ThresholdLossEventRaise
Default severity	warning
Message format string	OAM performance monitoring loss raise threshold trigger for session session-name mi-duration measurement interval index index started start-time threshold type threshold-event-type in the direction direction exceeding the raise threshold raise-threshold
Cause	This event is generated when a loss metric count exceeds the raise threshold.
Effect	None.

32 ospf

32.1 ospfAdjacencyBfdSessionSetupFailed

Table 456: ospfAdjacencyBfdSessionSetupFailed properties

Property name	Value
Application name	ospf
Event name	ospfAdjacencyBfdSessionSetupFailed
Default severity	warning
Message format string	Network-instance network_instance - OSPF instance ospflnstance: BFD session setup failed for the OSPF neighbor ospfNbrRtrld, using interface subinterface. Failure reason: bfd_failure_reason.
Cause	This event is generated when BFD session setup fails with an adjacent OSPF neighbor.
Effect	Fast failure detection may not be possible.

32.2 ospfAdjacencyChange

Table 457: ospfAdjacencyChange properties

Property name	Value
Application name	ospf
Event name	ospfAdjacencyChange
Default severity	warning
Message format string	Network-instance network_instance - OSPF instance ospflnstance: Adjacency with neighbor ospfNbrRtrld, using interface subinterface, moved to state ospfNbrState due to event ospfNbrEvent.
Cause	This event is generated when an OSPF Neighbor changes state.
Effect	OSPF routing information can only utilized from neighbors in an up state.

32.3 ospfAdjacencyRestartStatusChange

Table 458: ospfAdjacencyRestartStatusChange properties

Property name	Value
Application name	ospf
Event name	ospfAdjacencyRestartStatusChange
Default severity	warning
Message format string	Network-instance network_instance - OSPF instance ospflnstance: The graceful restart status for OSPF neighbor ospfNbrRtrld on interface subinterface moved to new state restart_status.
Cause	This event is generated when the graceful restart status of a neighbor changes.
Effect	None

32.4 ospfAsMaxAgeLSA

Table 459: ospfAsMaxAgeLSA properties

Property name	Value
Application name	ospf
Event name	ospfAsMaxAgeLSA
Default severity	warning
Message format string	Network-instance network_instance - OSPF instance ospflnstance area ospfAreald: Max aged LSA ospfLsdbLsid type ospfLsdbType advertising router ospfLsdbRtrld.
Cause	One of the LSAs in the router's link-state database has reached its maximum age limit.
Effect	The Max Age LSA will be flushed from the LSDB.

32.5 ospfExportLimitReached

Table 460: ospfExportLimitReached properties

Property name	Value
Application name	ospf
Event name	ospfExportLimitReached
Default severity	warning
Message format string	Network-instance network_instance - OSPF instance ospflnstance: The export-limit ospfExportLimit is reached, additional routes will not be exported by OSPF.
Cause	This event is generated when OSPF has exported the maximum number of routes.
Effect	OSPF will not export any more routes.

32.6 ospfExportLimitWarning

Table 461: ospfExportLimitWarning properties

Property name	Value
Application name	ospf
Event name	ospfExportLimitWarning
Default severity	warning
Message format string	Network-instance network_instance - OSPF instance ospfInstance: OSPF has reached ospfExportLimitLogPercent% of the export-limit ospfExportLimit.
Cause	This event is generated when OSPF has exported the maximum number of routes.
Effect	OSPF will not export any more routes.

32.7 ospfFailure

Table 462: ospfFailure properties

Property name	Value
Application name	ospf
Event name	ospfFailure
Default severity	warning
Message format string	Network-instance network_instance - OSPF instance ospflnstance: has failed due to ospfFailureReason.
Cause	OSPF encountered an event forcing it to go down.
Effect	OSPF goes down and will restart after a timout.

32.8 ospflfLdpSyncStateChange

Table 463: ospflfLdpSyncStateChange properties

Property name	Value
Application name	ospf
Event name	ospflfLdpSyncStateChange
Default severity	warning
Message format string	Network-instance network_instance - OSPF instance ospflnstance: Interface subinterface, ldp-sync-state moved to state ospflfLdpSync State
Cause	This event is generated when an OSPF interface ldp-synchronization changes state.
Effect	Metric of the interface changes to or from infinity.

32.9 ospflfRxBadPacket

Table 464: ospflfRxBadPacket properties

Property name	Value
Application name	ospf

Property name	Value
Event name	ospflfRxBadPacket
Default severity	warning
Message format string	Network-instance network_instance - OSPF instance ospflnstance: A bad packet was received on interface subinterface from ospfPacketSrc Address in packet type ospfPacketType
Cause	This event is generated An OSPF packet has been received on an interface that cannot be parsed.
Effect	Bad packet is discarded

32.10 ospflfStateChange

Table 465: ospflfStateChange properties

Property name	Value
Application name	ospf
Event name	ospflfStateChange
Default severity	warning
Message format string	Network-instance network_instance - OSPF instance ospflnstance: Interface subinterface, moved to state ospflfState due to event ospf IfEvent
Cause	This event is generated when an OSPF interface changes state.
Effect	An OSPF adjacency can not be established if the interface state is down or loop.

32.11 ospfLsdbApproachingOverflow

Table 466: ospfLsdbApproachingOverflow properties

Property name	Value
Application name	ospf
Event name	ospfLsdbApproachingOverflow
Default severity	warning

Property name	Value
Message format string	Network-instance network_instance - OSPF instance ospflnstance: The number of external LSAs has exceeded 90% of the configured limit ospfExtLsdbLimit.
Cause	The number of external LSAs in the router's link-state database has exceeded ninety percent of the configured limit.
Effect	Warning only, normal behavior will continue.

32.12 ospfLsdbOverflow

Table 467: ospfLsdbOverflow properties

Property name	Value
Application name	ospf
Event name	ospfLsdbOverflow
Default severity	warning
Message format string	Network-instance network_instance - OSPF instance ospflnstance: The number of external LSAs has exceeded the configured limit ospfExt LsdbLimit.
Cause	The number of external LSAs in the router's link-state database has exceeded the configured limit.
Effect	No additional external LSA will be added.

32.13 ospfNbrMtuMismatch

Table 468: ospfNbrMtuMismatch properties

Property name	Value
Application name	ospf
Event name	ospfNbrMtuMismatch
Default severity	warning
Message format string	Network-instance network_instance - OSPF instance ospflnstance: Neighbor ospfNbrRtrld, using interface subinterface, signaled an unacceptable MTU.

Property name	Value
Cause	This event is generated when an OSPF Neighbor signals an incorrect MTU.
Effect	An OSPF adjacency cannot be established if there is an MTU mismatch.

32.14 ospfOverloadEntry

Table 469: ospfOverloadEntry properties

Property name	Value
Application name	ospf
Event name	ospfOverloadEntry
Default severity	warning
Message format string	Network-instance network_instance - OSPF instance ospflnstance: the LSDB database has entered the overload state due to ospfOverload Reason.
Cause	Overload bit configuration
Effect	No transit traffic is routed through the overloaded router.

32.15 ospfOverloadExit

Table 470: ospfOverloadExit properties

Property name	Value
Application name	ospf
Event name	ospfOverloadExit
Default severity	warning
Message format string	Network-instance network_instance - OSPF instance ospflnstance: the LSDB database has exited the overload state.
Cause	Overload bit cleared
Effect	The OSPF instance has cleared the overload state.

32.16 ospfOverloadWarning

Table 471: ospfOverloadWarning properties

Property name	Value
Application name	ospf
Event name	ospfOverloadWarning
Default severity	warning
Message format string	Network-instance network_instance - OSPF instance ospflnstance: ospfOverloadReason.
Cause	Overload bit configuration
Effect	No transit traffic is routed through the overloaded router.

32.17 ospfSpfRunRestarted

Table 472: ospfSpfRunRestarted properties

Property name	Value
Application name	ospf
Event name	ospfSpfRunRestarted
Default severity	warning
Message format string	Network-instance network_instance - OSPF instance ospflnstance: SPF runs resumed - memory resources available.
Cause	There are sufficient memory resources on the system to run the SPF to completion.
Effect	OSPF stops running SPFs until enough memory resources become availableOSPF will resume running the SPFs as required.

32.18 ospfSpfRunsStopped

Table 473: ospfSpfRunsStopped properties

Property name	Value
Application name	ospf

Property name	Value
Event name	ospfSpfRunsStopped
Default severity	warning
Message format string	Network-instance network_instance - OSPF instance ospflnstance: SPF runs stopped - insufficient memory resources.
Cause	There are insufficient memory resources on the system to run the SPF to completion.
Effect	OSPF stops running SPFs until enough memory resources become available.

32.19 osplfAuthDataFailure

Table 474: osplfAuthDataFailure properties

Property name	Value
Application name	ospf
Event name	osplfAuthDataFailure
Default severity	warning
Message format string	Network-instance network_instance - OSPF instance ospflnstance: A packet received on interface subinterface from ospfPacketSrcAddress and packet type ospfPacketType, failed authentication with ospfAuth Error
Cause	This event is caused by interface from a router whose authentication key or authentication type conflicts with this router's authentication key or authentication type.
Effect	PDUs are dropped, with the effect depending on the PDU type

33 platform

33.1 airflowCorrected

Table 475: airflowCorrected properties

Property name	Value
Application name	platform
Event name	airflowCorrected
Default severity	notice
Message format string	The <i>type</i> in slot <i>slot</i> now matches the dominant airflow of other modules in the system
Cause	The specified module is now part of the majority (either front to back, or back to front) fans + PSUs in the system. This clearance is triggered when a module moves from being part of the minority to the majority, typically through other modules being plugged/unplugged.
Effect	The specified module is providing correct airflow to the system.

33.2 airflowMismatch

Table 476: airflowMismatch properties

Property name	Value
Application name	platform
Event name	airflowMismatch
Default severity	critical
Message format string	The <i>type</i> in slot <i>slot</i> does not match the airflow of other modules in the system
Cause	The inserted module does not match the airflow direction of other modules in the system.
Effect	The system is working with inefficient cooling, and may trigger thermal protection.

33.3 componentBooting

Table 477: componentBooting properties

Property name	Value
Application name	platform
Event name	componentBooting
Default severity	informational
Message format string	Component <i>type slot</i> has started initialization
Cause	The componentBooting event is generated when the active control module has started initializing the component.
Effect	The specified component has started initializing.

33.4 componentDown

Table 478: componentDown properties

Property name	Value
Application name	platform
Event name	componentDown
Default severity	critical
Message format string	Component <i>type slot</i> is no longer operational
Cause	The componentDown event is generated when a component has transitioned from any other operational state to the down state.
Effect	The specified component is now down.

33.5 componentFailed

Table 479: componentFailed properties

Property name	Value
Application name	platform
Event name	componentFailed

Property name	Value
Default severity	critical
Message format string	Component <i>type slot</i> has failed, reason <i>reason</i>
Cause	The componentFailed event is generated when a component has transitioned from any other operational state to the failed state.
Effect	The specified component is now failed.

33.6 componentInserted

Table 480: componentInserted properties

Property name	Value
Application name	platform
Event name	componentInserted
Default severity	notice
Message format string	Component <i>type slot</i> has been inserted into the system
Cause	The componentInserted event is generated when a component has been initially detected by the active control module.
Effect	The specified component is detected.

33.7 componentLocatorDisabled

Table 481: componentLocatorDisabled properties

Property name	Value
Application name	platform
Event name	componentLocatorDisabled
Default severity	notice
Message format string	Locator LED disabled on <i>type slot</i>
Cause	The componentLocatorDisabled event is generated when the locator LED for the component has been disabled, either via timeout, or via operator action.

Property name	Value
Effect	The specified component's LED is no longer flashing with locator functionality.

33.8 componentLocatorEnabled

Table 482: componentLocatorEnabled properties

Property name	Value
Application name	platform
Event name	componentLocatorEnabled
Default severity	notice
Message format string	Locator LED enabled on <i>type slot</i> for <i>duration</i> seconds
Cause	The componentLocatorEnabled event is generated when the locator LED for the component has been enabled by an operator action.
Effect	The specified component's LED is now flashing with locator functionality.

33.9 componentPowerDown

Table 483: componentPowerDown properties

Property name	Value
Application name	platform
Event name	componentPowerDown
Default severity	critical
Message format string	Component <i>type slot</i> is being powered down due to insufficient power capacity
Cause	The componentPowerDown event is generated when a component is being powered off by the active control module as a means to bring the overall power consumption of the chassis down to a level the available power supplies are able to accommodate.
Effect	The specified component is powering down.

33.10 componentPowerUp

Table 484: componentPowerUp properties

Property name	Value
Application name	platform
Event name	componentPowerUp
Default severity	warning
Message format string	Component <i>type slot</i> is being powered up due to sufficient power capacity
Cause	The componentPowerUp event is generated when a component is being powered on by the active control module, following on from a power down as a result of insufficient power supplies. This event is not generated during normal power on events.
Effect	The specified component is powering on.

33.11 componentRemoved

Table 485: componentRemoved properties

Property name	Value
Application name	platform
Event name	componentRemoved
Default severity	critical
Message format string	Component <i>type slot</i> has been removed from the system
Cause	The componentRemoved event is generated when a component has is no longer detected in the system. This does not necessarily indicate that the component has been physically removed, but indicates that it is no longer detected by the active control module.
Effect	The specified component is no longer detected by the active control module.

33.12 componentRestarted

Table 486: componentRestarted properties

Property name	Value
Application name	platform
Event name	componentRestarted
Default severity	critical
Message format string	Component <i>type slot</i> has been restarted
Cause	The componentRestarting event is generated when the a component has been restarted.
Effect	The specified component has been restarted.

33.13 componentTemperatureExceeded

Table 487: componentTemperatureExceeded properties

Property name	Value
Application name	platform
Event name	componentTemperatureExceeded
Default severity	warning
Message format string	Component <i>type slot</i> has exceeded its temperature threshold, current temperature <i>temperature</i> C
Cause	The componentTemperatureExceeded event is generated when the component has exceeded its temperature threshold.
Effect	The specified component has a temperature sensor that is overheating, the component may shut down by thermal protection.

33.14 componentTemperatureFailure

Table 488: componentTemperatureFailure properties

Property name	Value
Application name	platform

Property name	Value
Event name	componentTemperatureFailure
Default severity	warning
Message format string	Component <i>type slot</i> has exceeded its safe operating temperature, component will be powered down in 10 seconds. Current temperature <i>temperature</i> C
Cause	The componentTemperatureFailure event is generated when the component has exceeded its maximum temperature.
Effect	The specified component has a temperature sensor that has overheated, the component will shut down in 10 seconds for thermal protection.

33.15 componentTemperatureNormal

Table 489: componentTemperatureNormal properties

Property name	Value
Application name	platform
Event name	componentTemperatureNormal
Default severity	notice
Message format string	Component <i>type slot</i> temperature is now normal, current temperature <i>temperature</i> C
Cause	The componentTemperatureNormal event is generated when the component has recovered from a temperature exceeded state.
Effect	The specified component is now within temperature operating limits.

33.16 componentUp

Table 490: componentUp properties

Property name	Value
Application name	platform
Event name	componentUp
Default severity	notice

Property name	Value
Message format string	Component <i>type slot</i> is now operational
Cause	The componentUp event is generated when a component has transitioned from any other operational state to the up state.
Effect	The specified component is now up.

33.17 controlModuleActivityChange

Table 491: controlModuleActivityChange properties

Property name	Value
Application name	platform
Event name	controlModuleActivityChange
Default severity	critical
Message format string	Control module <i>slot</i> has become <i>activity_state</i>
Cause	The controlModuleActivityChange event is generated when there has been an activity change on either control module.
Effect	The specified control module has transitioned to the specified state.

33.18 controlModuleConfigSynchronized

Table 492: controlModuleConfigSynchronized properties

Property name	Value
Application name	platform
Event name	controlModuleConfigSynchronized
Default severity	informational
Message format string	Configuration synchronization with standby control module <i>standby_slot</i> has succeeded
Cause	Configuration has been successfully synchronized between the active and standby control modules.
Effect	The standby control module now has the same configuration as the active.

33.19 controlModuleImageSynchronized

Table 493: controlModuleImageSynchronized properties

Property name	Value
Application name	platform
Event name	controlModuleImageSynchronized
Default severity	informational
Message format string	Image synchronization with standby control module <i>standby_slot</i> has succeeded
Cause	Images have been successfully synchronized between the active and standby control modules.
Effect	The standby control module now has the same images as the active.

33.20 controlModuleInSync

Table 494: controlModuleInSync properties

Property name	Value
Application name	platform
Event name	controlModuleInSync
Default severity	informational
Message format string	Active and standby control modules are now synchronized
Cause	All synchronization activities have completed between the active and standby control modules.
Effect	The standby control module is now ready for a control module switchover, if necessary.

33.21 controlModuleOverlaySynchronized

Table 495: controlModuleOverlaySynchronized properties

Property name	Value
Application name	platform

Property name	Value
Event name	controlModuleOverlaySynchronized
Default severity	informational
Message format string	Overlay synchronization with standby control module <i>standby_slot</i> has succeeded
Cause	Overlays have been successfully synchronized between the active and standby control modules.
Effect	The standby control module now has the same overlay as the active.

${\bf 33.22\ control Module Sync Lost}$

Table 496: controlModuleSyncLost properties

Property name	Value
Application name	platform
Event name	controlModuleSyncLost
Default severity	critical
Message format string	Active control module has lost visibility of the standby control module
Cause	Connection between the active and standby control modules has been lost.
Effect	The standby control module is no longer capable of taking over in the event of a failure of the active, no configuration or images are being synchronized.

33.23 controlModuleSyncStart

Table 497: controlModuleSyncStart properties

Property name	Value
Application name	platform
Event name	controlModuleSyncStart
Default severity	informational
Message format string	Active and standby control modules are now synchronizing synchronization_category

Property name	Value
Cause	A synchronization has been triggered between the active and standby control modules.
Effect	Configuration, images, or persistent storage is being synchronized between the active and standby control module.

33.24 fantrayEmpty

Table 498: fantrayEmpty properties

Property name	Value
Application name	platform
Event name	fantrayEmpty
Default severity	critical
Message format string	Component fan-tray <i>slot</i> is not present in the system
Cause	The fantrayEmpty event is generated when a fan-tray has transitioned from any other operational state to the empty state, or is never present.
Effect	The system may have cooling issues.

33.25 fips140ConfiguredOperDown

Table 499: fips140ConfiguredOperDown properties

Property name	Value
Application name	platform
Event name	fips140ConfiguredOperDown
Default severity	critical
Message format string	FIPS-140 is enabled operationally down for reason down-reason
Cause	FIPS-140 has been successfully configured but it is oper-down because of an error.
Effect	None

33.26 fips140ConfiguredOperUp

Table 500: fips140ConfiguredOperUp properties

Property name	Value
Application name	platform
Event name	fips140ConfiguredOperUp
Default severity	notice
Message format string	FIPS-140 has been enabled and fully operational
Cause	FIPS-140 is successfully enabled and operational.
Effect	None

33.27 fips140ConfiguredWaitingReboot

Table 501: fips140ConfiguredWaitingReboot properties

Property name	Value
Application name	platform
Event name	fips140ConfiguredWaitingReboot
Default severity	notice
Message format string	FIPS-140 is enabled but operationally down until next reboot
Cause	FIPS-140 has been successfully configured.
Effect	FIPS-140 active after next reboot

33.28 fips140NotActive

Table 502: fips140NotActive properties

Property name	Value
Application name	platform
Event name	fips140NotActive
Default severity	notice

Property name	Value
Message format string	FIPS-140 is not activated
Cause	FIPS-140 is not configured.
Effect	None

33.29 fips140Removed

Table 503: fips140Removed properties

Property name	Value
Application name	platform
Event name	fips140Removed
Default severity	notice
Message format string	FIPS-140 has been disabled but is operationally up until next reboot
Cause	FIPS-140 has been successfully unconfigured.
Effect	FIPS-140 inactive after next reboot.

33.30 linecardCapacityDegraded

Table 504: linecardCapacityDegraded properties

Property name	Value
Application name	platform
Event name	linecardCapacityDegraded
Default severity	critical
Message format string	Linecard <i>slot</i> forwarding complex <i>forwarding-complex</i> fabric capacity degraded
Cause	The specified linecard's forwarding complex has insufficient operational fabric links.
Effect	Packets may be dropped if the linecard's forwarding complex is sending and receiving significant amounts of traffic to the fabric.

33.31 linecardCapacityNormal

Table 505: linecardCapacityNormal properties

Property name	Value
Application name	platform
Event name	linecardCapacityNormal
Default severity	informational
Message format string	Linecard <i>slot</i> forwarding complex <i>forwarding-complex</i> fabric capacity normal
Cause	The specified linecard's forwarding complex has sufficient operational fabric links again.
Effect	Normal behavior is restored for sending and receiving traffic to the fabric.

33.32 platformLowPower

Table 506: platformLowPower properties

Property name	Value
Application name	platform
Event name	platformLowPower
Default severity	emergency
Message format string	Insufficient power for currently installed components, current_powerW available, required_powerW required
Cause	Available power from operational power supplies is insufficient to power all components in the system.
Effect	Components in the system will be powered down until required power is lower than what is supplied by operational power supplies.

33.33 platformLowReservePower

Table 507: platformLowReservePower properties

Property name	Value
Application name	platform
Event name	platformLowReservePower
Default severity	critical
Message format string	Insufficient reserve power for currently installed components, current_powerW available, required_powerW required
Cause	Available power is less than one power supply capacity extra to power all components in the system.
Effect	Power will be insufficient if one operational power supply is lost.

33.34 platformNoPowerRedundancy

Table 508: platformNoPowerRedundancy properties

Property name	Value
Application name	platform
Event name	platformNoPowerRedundancy
Default severity	warning
Message format string	Power redundancy based on mode <i>redundancy_mode</i> is not available, required PSUs <i>required_psus</i> , operational PSUs <i>active_psus</i>
Cause	The available PSUs are not able to accomodate the configured power redundancy mode.
Effect	The desired power redundancy is not available.

33.35 platformNormalPower

Table 509: platformNormalPower properties

Property name	Value
Application name	platform

Property name	Value
Event name	platformNormalPower
Default severity	informational
Message format string	Sufficient power for currently installed components, current_powerW available, required_powerW required
Cause	Available power from operational power supplies is sufficient to power all components in the system.
Effect	Enough power is available.

33.36 platformPowerRedundancyRecovered

Table 510: platformPowerRedundancyRecovered properties

Property name	Value
Application name	platform
Event name	platformPowerRedundancyRecovered
Default severity	informational
Message format string	Power redundancy based on mode redundancy_mode is available, required PSUs required_psus, operational PSUs active_psus
Cause	The available PSUs are able to accomodate the configured power redundancy mode.
Effect	The desired power redundancy is available.

33.37 psuInputDown

Table 511: psuInputDown properties

Property name	Value
Application name	platform
Event name	psuInputDown
Default severity	warning
Message format string	Power input on power-supply <i>slot</i> is down
Cause	Input fault on the specified power supply is set.

Property name	Value
Effect	The specified power supply can no longer supply power to the system.

33.38 psulnputUp

Table 512: psuInputUp properties

Property name	Value
Application name	platform
Event name	psuInputUp
Default severity	notice
Message format string	Power input on power-supply <i>slot</i> is up
Cause	Input fault on the specified power supply is clear.
Effect	The specified power supply can now supply power to the system.

33.39 psuOutputDown

Table 513: psuOutputDown properties

Property name	Value
Application name	platform
Event name	psuOutputDown
Default severity	warning
Message format string	Power output on power-supply slot is down
Cause	Output fault on the specified power supply is set.
Effect	The specified power supply can no longer supply power to the system.

33.40 psuOutputUp

Table 514: psuOutputUp properties

Property name	Value
Application name	platform
Event name	psuOutputUp
Default severity	notice
Message format string	Power output on power-supply slot is up
Cause	Output fault on the specified power supply is clear.
Effect	The specified power supply can now supply power to the system.

33.41 psuTemperatureFault

Table 515: psuTemperatureFault properties

Property name	Value
Application name	platform
Event name	psuTemperatureFault
Default severity	warning
Message format string	Component <i>type slot</i> has raised a temperature fault, current temperature <i>temperature</i> C
Cause	The psuTemperatureFault event is generated when the power supply raises a temperature fault.
Effect	The power supply is overheating, and may shut down by thermal protection.

33.42 psuTemperatureNormal

Table 516: psuTemperatureNormal properties

Property name	Value
Application name	platform

Property name	Value
Event name	psuTemperatureNormal
Default severity	notice
Message format string	Component <i>type slot</i> temperature fault is now clear, current temperature <i>temperature</i> C
Cause	The psuTemperatureNormal event is generated when the power supply recovered from a temperature fault state.
Effect	The power supply is now within temperature operating limits.

${\bf 33.43\ system In Service Software Upgrade}$

Table 517: systemInServiceSoftwareUpgrade properties

Property name	Value
Application name	platform
Event name	systemInServiceSoftwareUpgrade
Default severity	critical
Message format string	System is upgrading from <i>old_version</i> to <i>new_version</i> , utilizing warm reboot
Cause	The systemInServiceSoftwareUpgrade event is generated when a software triggered in service software upgrade request has been made.
Effect	The control and management plane of the system will go offline, the datapath will continue forwarding based on current state. The system will upgrade the kernel, operating system, and/or applications as needed.

33.44 systemReboot

Table 518: systemReboot properties

Property name	Value
Application name	platform
Event name	systemReboot
Default severity	critical

Property name	Value
Message format string	System going down for reboot
Cause	The systemReboot event is generated when a software triggered reboot has been made.
Effect	The system will go offline for reboot

33.45 systemWarmReboot

Table 519: systemWarmReboot properties

Property name	Value
Application name	platform
Event name	systemWarmReboot
Default severity	critical
Message format string	System going down for warm reboot
Cause	The systemWarmReboot event is generated when a software triggered warm reboot has been made.
Effect	The control and management plane of the system will go offline, the datapath will continue forwarding based on current state.

33.46 systemWarmRebootAborted

Table 520: systemWarmRebootAborted properties

Property name	Value
Application name	platform
Event name	systemWarmRebootAborted
Default severity	critical
Message format string	System has aborted a requested warm reboot due to <i>reason</i>
Cause	The systemWarmRebootAborted event is generated when a software triggered warm reboot request has been aborted, typically due to unsupported configuration.
Effect	The in progress warm reboot has been aborted, no effect to system configuration or state.

34 qos

34.1 platformQoSProfileHighUtilization

Table 521: platformQoSProfileHighUtilization properties

Property name	Value
Application name	qos
Event name	platformQoSProfileHighUtilization
Default severity	warning
Message format string	The QoS resource called <i>resource-name</i> has reached <i>threshold</i> % or more utilization on linecard <i>linecard</i> , forwarding complex forwarding-complex. Only <i>free-entries</i> entries are remaining.
Cause	This event is generated when the utilization of a QoS resource has increased to a level that may warrant concern if futher resources are consumed
Effect	None

34.2 platformQoSProfileHighUtilizationLowered

Table 522: platformQoSProfileHighUtilizationLowered properties

Property name	Value
Application name	qos
Event name	platformQoSProfileHighUtilizationLowered
Default severity	notice
Message format string	The QoS resource called <i>resource-name</i> has decreased back to <i>threshold</i> % or less utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> .
Cause	This event is generated when the utilization of a QoS resource has decreased to a level that may no longer warrant concern
Effect	None

35 ra_guard-agent

35.1 ra_guardAdd

Table 523: ra_guardAdd properties

Property name	Value
Application name	ra_guard-agent
Event name	ra_guardAdd
Default severity	notice
Message format string	RA Guard Policy <i>pol-name</i> associated with subinterface <i>if-name</i> , VLAN <i>vlan</i>
Cause	This notification is generated when an RA policy is added to a subinterface.
Effect	The associated RA Policy is now applied to the subinterface.

35.2 ra_guardRemove

Table 524: ra_guardRemove properties

Property name	Value
Application name	ra_guard-agent
Event name	ra_guardRemove
Default severity	notice
Message format string	RA Guard Policy <i>pol-name</i> removed from subinterface <i>if-name</i> , VLAN <i>vlan</i>
Cause	This notification is generated when an RA policy is removed from a subinterface.
Effect	An RA Policy is no longer associated with the specified subinterface.

36 sflow

36.1 sFlowAgentChange

Table 525: sFlowAgentChange properties

Property name	Value
Application name	sflow
Event name	sFlowAgentChange
Default severity	notice
Message format string	SFLOW: The global sFlow Agent has administratively been changed to state
Cause	This notification is generated when a sFlow global process changes administrative state.
Effect	The sFlow global process state has changed.

36.2 sFlowCollectorUnreachable

Table 526: sFlowCollectorUnreachable properties

Property name	Value
Application name	sflow
Event name	sFlowCollectorUnreachable
Default severity	warning
Message format string	SFLOW: Collector <i>collector-id</i> - IP address: <i>collector-ip</i> is unreachable
Cause	This notification is generated when the specified sFlow collector will no longer receive sflow sample data until reachability is restored
Effect	Restore IP reachability to the sFlow collector.

37 sync

37.1 syncFreqClockQLChange

Table 527: syncFreqClockQLChange properties

Property name	Value
Application name	sync
Event name	syncFreqClockQLChange
Default severity	notice
Message format string	The system frequency clock's Quality Level (ql) has transitioned to freq_clock_ql
Cause	This notification is generated when a frequency clock transitions to a new ql.
Effect	The system's frequency clock is synced to remote clock with this ql.

37.2 syncFreqClockRefChange

Table 528: syncFreqClockRefChange properties

Property name	Value
Application name	sync
Event name	syncFreqClockRefChange
Default severity	notice
Message format string	The system frequency clock reference has transitioned to frequency reference instance instance_number
Cause	This notification is generated when a frequency reference instance selected has changed.
Effect	The system frequency clock will follow the new reference.

37.3 syncFreqClockStateChange

Table 529: syncFreqClockStateChange properties

Property name	Value
Application name	sync
Event name	syncFreqClockStateChange
Default severity	notice
Message format string	The system frequency clock state has transitioned to freq_clock_state
Cause	This notification is generated when a frequency clock transitions to a new state.
Effect	The system's frequency clock behavior is based on this state.

37.4 syncFreqInstanceAlarmChange

Table 530: syncFreqInstanceAlarmChange properties

Property name	Value
Application name	sync
Event name	syncFreqInstanceAlarmChange
Default severity	notice
Message format string	Frequency reference instance <i>instance_number</i> : The alarm state has transitioned to <i>alarm_state</i>
Cause	This notification is generated when a frequency Reference instance transitions to a new alarm state.
Effect	If there is an alarm for a frequency reference instance, it will not be qualified for use.

37.5 syncFreqInstanceQLChange

Table 531: syncFreqInstanceQLChange properties

Property name	Value
Application name	sync

Property name	Value
Event name	syncFreqInstanceQLChange
Default severity	notice
Message format string	Frequency reference instance <i>instance_number</i> : The Quality Level (ql) has transitioned to <i>ql_number</i>
Cause	This notification is generated when a frequency reference Instance transitions to a new QL.
Effect	The new QL will be taken into account when for system frequency clock reference selection if ql-selection is set.

37.6 syncPTPParentChange

Table 532: syncPTPParentChange properties

Property name	Value
Application name	sync
Event name	syncPTPParentChange
Default severity	notice
Message format string	PTP has transitioned to new parent parent_clock_mac_address on port parent_clock_port with clockClass of parent_clockclass.
Cause	This notification is generated when the PTP clock transitions to a new parent.
Effect	The ptp clock will follow this new parent clock.

37.7 syncPTPParentChangelP

Table 533: syncPTPParentChangeIP properties

Property name	Value
Application name	sync
Event name	syncPTPParentChangeIP
Default severity	notice
Message format string	PTP has transitioned to new parent <i>parent_clock_ip</i> in routing instance <i>parent_clock_router</i> with clockClass of <i>parent_clockclass</i> .

Property name	Value
Cause	This notification is generated when the PTP clock transitions to a new IP parent.
Effect	The ptp clock will follow this new parent clock.

37.8 syncPTPPortPTSFUnusable

Table 534: syncPTPPortPTSFUnusable properties

Property name	Value
Application name	sync
Event name	syncPTPPortPTSFUnusable
Default severity	warning
Message format string	PTP detected excessive noise between PTP port number ptp_neighbor_port_number and parent clock ID ptp_neighbor_clock_id.
Cause	The PTP process detected excessive noise between the local port and the indicated external Master port.
Effect	Any Announce messages received from the indicated neighbor shall be excluded from the BMCA algorithm until this condition is cleared.

37.9 syncPTPTimeRecoveryState

Table 535: syncPTPTimeRecoveryState properties

Property name	Value
Application name	sync
Event name	syncPTPTimeRecoveryState
Default severity	notice
Message format string	PTP has transitioned to time recovery state of ptp_time_rec_state
Cause	This notification is generated when the PTP clock transitions to a new time recovery state.
Effect	The ptp clock's tim recovery behavior will be based on this state.

Customer document and product support



Customer documentation

Customer documentation welcome page



Technical support

Product support portal



Documentation feedback

Customer documentation feedback