

7450 Ethernet Service Switch 7750 Service Router 7950 Extensible Routing System Virtualized Service Router Releases up to 25.7.R2

Interface Configuration Advanced Configuration Guide for Classic CLI

3HE 20790 AAAE TQZZA Edition: 01 October 2025

© 2025 Nokia.

Nokia is committed to diversity and inclusion. We are continuously reviewing our customer documentation and consulting with standards bodies to ensure that terminology is inclusive and aligned with the industry. Our future customer documentation will be updated accordingly.

This document includes Nokia proprietary and confidential information, which may not be distributed or disclosed to any third parties without the prior written consent of Nokia.

This document is intended for use by Nokia's customers ("You"/"Your") in connection with a product purchased or licensed from any company within Nokia Group of Companies. Use this document as agreed. You agree to notify Nokia of any errors you may find in this document; however, should you elect to use this document for any purpose(s) for which it is not intended, You understand and warrant that any determinations You may make or actions You may take will be based upon Your independent judgment and analysis of the content of this document.

Nokia reserves the right to make changes to this document without notice. At all times, the controlling version is the one available on Nokia's site.

No part of this document may be modified.

NO WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF AVAILABILITY, ACCURACY, RELIABILITY, TITLE, NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS MADE IN RELATION TO THE CONTENT OF THIS DOCUMENT. IN NO EVENT WILL NOKIA BE LIABLE FOR ANY DAMAGES, INCLUDING BUT NOT LIMITED TO SPECIAL, DIRECT, INDIRECT, INCIDENTAL OR CONSEQUENTIAL OR ANY LOSSES, SUCH AS BUT NOT LIMITED TO LOSS OF PROFIT, REVENUE, BUSINESS INTERRUPTION, BUSINESS OPPORTUNITY OR DATA THAT MAY ARISE FROM THE USE OF THIS DOCUMENT OR THE INFORMATION IN IT, EVEN IN THE CASE OF ERRORS IN OR OMISSIONS FROM THIS DOCUMENT OR ITS CONTENT.

Copyright and trademark: Nokia is a registered trademark of Nokia Corporation. Other product names mentioned in this document may be trademarks of their respective owners.

© 2025 Nokia.

Table of contents

List	of figures	4
	Preface	5
	Multi-Chassis APS and Pseudowire Redundancy Interworking	6
	Multi-Chassis LAG and Pseudowire Redundancy Interworking	. 23
	Port Cross-Connect (PXC)	43

List of figures

Figure 1: MC-APS network topology	7
Figure 2: Access node and network resilience (part 1)	8
Figure 3: Access node and network resilience (part 2)	8
Figure 4: Association of SAPs/SDPs and endpoints	13
Figure 5: ICB spoke SDPs and association with the endpoints	16
Figure 6: Additional setup example 1 (part 1)	19
Figure 7: Additional setup example 1 (part 2)	19
Figure 8: Additional setup example 2 (part 1a)	20
Figure 9: Additional setup example 2 (part 1b)	20
Figure 10: Additional setup example 2 (part 2)	21
Figure 11: MC-LAG example topology	24
Figure 12: Network resiliency	25
Figure 13: Association of SAPs/SDPs and endpoints	32
Figure 14: ICB spoke SDPs and their association with the endpoints	36
Figure 15: Additional setup example 1	39
Figure 16: Additional setup example 2	40
Figure 17: Example topology	44
Figure 18: Non-redundant PXC	47
Figure 19: PXC redundant mode with LAG	49
Figure 20: AS mode with redundant FPE	59

Preface

About This Guide

Each Advanced Configuration Guide is organized alphabetically and provides feature and configuration explanations, CLI descriptions, and overall solutions. The Advanced Configuration Guide chapters are written for and based on several Releases, up to 25.7.R2. The Applicability section in each chapter specifies on which release the configuration is based.

The Advanced Configuration Guides supplement the user configuration guides listed in the 7450 ESS, 7750 SR, and 7950 XRS Guide to Documentation.

Audience

This manual is intended for network administrators who are responsible for configuring the routers. It is assumed that the network administrators have a detailed understanding of networking principles and configurations.

Multi-Chassis APS and Pseudowire Redundancy Interworking

This chapter describes multi-chassis APS and pseudowire redundancy interworking.

Topics in this chapter include:

- · Applicability
- Overview
- Configuration
- Conclusion

Applicability

This chapter was initially written for SR OS Release 6.0.R2, but the CLI in the current edition is based on SR OS Release 19.10.R2. The configuration in this chapter includes the use of the ATM ports. See the Release Notes for information about support of ATM (and other) MDAs on various platforms as well as MC-APS restrictions.

Overview

MC-APS

MC-APS is an extension to the APS feature to provide not only link redundancy but also node level redundancy. It can protect against nodal failure by configuring the working circuit of an APS group on one node while configuring the protect circuit of the same APS group on a different node.

The two nodes connect to each other with an IP link that is used to establish a signaling path between them. The relevant APS groups in both the working and protection routers must have the same group ID and working circuit, and the protect circuit must have compatible configurations (such as the same speed, framing, and port type). Signaling is provided using the direct connection between the two service routers. A heartbeat protocol can be used to add robustness to the interaction between the two routers.

Signaling functionality includes support for:

- APS group matching between service routers.
- Verification that one side is configured as a working circuit and the other side is configured as the protect circuit. In case of a mismatch, a trap (incompatible-neighbor) is generated.
- Change in working circuit status is sent from the working router to keep the protection router in sync.
- Protection router, based on K1/K2 byte data, member circuit status, and external request, selects the
 active circuit and informs the working router to activate or de-activate the working circuit.

Pseudowire redundancy


Pseudowire (PW) redundancy provides the ability to protect a pseudowire with a pre-provisioned pseudowire and to switch traffic over to the secondary standby pseudowire in case of a SAP and/or network failure condition. Normally, pseudowires are redundant by the virtue of the SDP redundancy mechanism. For instance, if the SDP is an RSVP LSP and is protected by a secondary standby path and/or by Fast-Reroute paths, the pseudowire is also protected.

However, there are a few applications in which SDP redundancy does not protect the end-to-end pseudowire path when there are two different destination SR-series PE nodes for the same VLL service. The main use case is the provisioning of dual-homing of a CPE or access node to two SR-series PE nodes located in different POPs. The other use case is the provisioning of a pair of active and standby BRAS nodes, or active and standby links to the same BRAS node, to provide service resiliency to broadband service subscribers.

Example topology

The setup in this section contains two access nodes and 4 PE nodes. The access nodes can be any ATM switches that support 1+1 bi-directional APS. Figure 1: MC-APS network topology shows the physical topology of the setup. Figure 3: Access node and network resilience (part 2) shows the use of both MC-APS in the access network and pseudowire redundancy in the core network to provide a resilient end-to-end VLL service.

Figure 1: MC-APS network topology

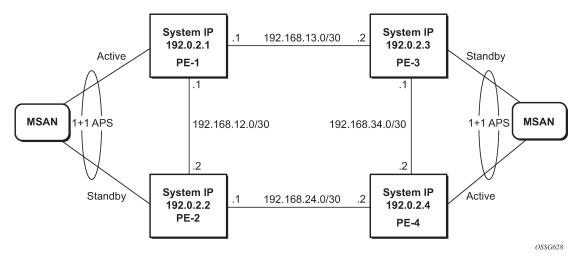


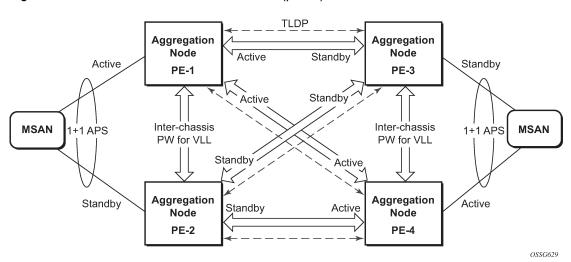


Figure 2: Access node and network resilience (part 1)

Figure 3: Access node and network resilience (part 2)

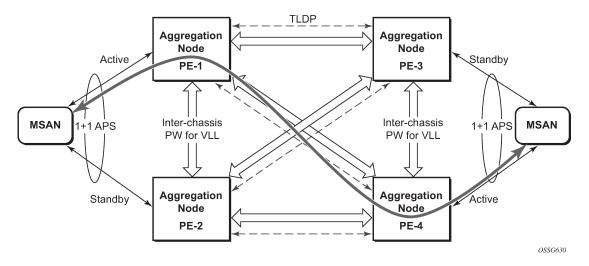

Configuration

The following configuration should be completed on the PEs before configuring MC-APS:

- Cards, MDAs and ports
- Router interfaces
- · IGP configured and converged
- MPLS
- · SDPs configured between all PE routers

For the IGP, OSPF or IS-IS can be used. MPLS or GRE can be used for the transport tunnels. Also, several protocols can be used for signaling MPLS labels. In this example, OSPF and LDP are used. The

following commands can be used to check if OSPF has converged and to make sure the SDPs are up (for example, on PE-1):

Route Table (Router: Base)				
Dest Prefix[Flags] Next Hop[Interface Name]	Туре	Proto	Age Metric	Pref
192.0.2.1/32 system	Local	Local	01h29m06s 0	0
192.0.2.2/32 192.168.12.2	Remote	0SPF	01h23m18s 100	10
192.0.2.3/32 192.168.13.2	Remote	0SPF	01h17m45s 100	10
192.0.2.4/32 192.168.12.2	Remote	0SPF	01h17m30s 200	10
192.168.12.0/30 int-PE-1-PE-2	Local	Local	01h29m06s 0	0
192.168.13.0/30 int-PE-1-PE-3	Local	Local	01h29m06s 0	0
192.168.24.0/30 192.168.12.2	Remote	0SPF	01h23m18s 200	10
192.168.34.0/30 192.168.13.2	Remote	0SPF	01h17m45s 200	10
No. of Routes: 8 Flags: n = Number of times nexthop is replication B = BGP backup route available L = LFA nexthop available S = Sticky ECMP requested	peated			

*A:PE-	1# show	service	sdp						
Servic	es: Serv	ice Dest	ination Points	5					
SdpId	AdmMTU	OprMTU	Far End	Adm	0pr		Del	LSP	Sig
14	-	1492 1492	192.0.2.2 192.0.2.3 192.0.2.4	Up Up Up				L L L	TLDP TLDP TLDP
Legend			LDP, B = BGP, = SR-OSPF, T		•	-	ot Appl	icable	

Step 1. APS configuration on MSANs

The access nodes can be any ATM switches that support 1+1 bi-directional APS. Here is an example on 7670RSP (Routing Switching Platform).

```
RSP> configure
RSP> port 1-6-1-1
RSP> options protection type 1+1
RSP> options protection switching bidirect
RSP> options protection

(Standby)

# Type Status Name
```

```
1-6-1-1 STM1_IR8 OK
Protection Group Contains:
Protection Port : 1-6-1-1 (Standby)
Working Port : 1-5-1-1
Protection Type : 1+1
Switching Type : Non-Revertive
Switching Mode : Bi-directional
Wait-To-Restore Timer : 5 minute(s)
```

Step 2. MC-APS configuration on PE-1 and PE-2

Assuming the link between MSAN and PE-1 is working circuit and the link between MSAN and PE-2 is protection circuit.

Configure APS on the PE-1 port. Specify the system IP address of neighbor node (PE-2) and working-circuit.

```
# on PE-1
configure
    port 1/2/1
        sonet-sdh
        exit
        no shutdown
    exit
    port aps-1
        aps
            neighbor 192.0.2.2
            working-circuit 1/2/1
        exit
        sonet-sdh
            path sts3
                encap-type atm
                crc 32
                atm
                exit
                no shutdown
            exit
        exit
        no shutdown
    exit
```

Configure APS on the PE-2 port. Specify the system IP address of neighbor node (PE-1) and protect-circuit instead of working-circuit.

```
# on PE-2
configure
    port 1/2/1
        sonet-sdh
        exit
        no shutdown
    exit
    port aps-1
        aps
            neighbor 192.0.2.1
            protect-circuit 1/2/1
        exit
        sonet-sdh
            path sts3
                encap-type atm
                crc 32
                atm
                exit
```

```
no shutdown
exit
exit
no shutdown
```

The following parameters can optionally be configured under APS.

- advertise-interval This command specifies the time interval, in 100s of milliseconds, between 'I am
 operational' messages sent by both protect and working circuits to their neighbor for multi-chassis APS.
- hold-time This command specifies how much time can pass, in 100s of milliseconds, without
 receiving an advertise packet from the neighbor before the multi-chassis signaling link is considered not
 operational.
- revert-time This command configures the revert-time timer to determine how long to wait before switching back to the working circuit after that circuit has been restored into service.
- switching-mode This command configures the switching mode for the APS port which can be bidirectional or uni-directional.

Step 3. Verify the APS status on PE-1.

```
*A:PE-1# show port aps-1
_____
SONET/SDH Interface
______
Clock Source : loop Framing : sonet
Last State Change : 01/10/2020 09:38:21 Port IfIndex : 1358987264
Configured Address : 04:0f:ff:00:02:49
Hardware Address : 04:0f:ff:00:02:49
Last Cleared Time : N/A
Cfg Alarm : loc lrdi lb2er-sf slof slos Alarm Status :
Hold time up : 500 milliseconds Reset On Path Down : Disabled Hold time down : 200 milliseconds
Port Statistics
______
                             Input
Packets
                               0
                               0
Discards
Unknown Proto Discards
                               0
```

Step 4. Verify the MC-APS status and parameters on PE-1 and PE-2

Detailed parameters of the APS configuration on PE-1 can be verified, as follows. The admin/oper status of APS group 1 shows up/up. K1/K2 byte shows N/A as APS 1+1 exchanges that information through the protection circuit. The admin/oper status of the working circuit (the link between MSAN and PE-1) is up/up.

```
*A:PE-1# show aps detail
APS Group: aps-1
_______
Revertive-mode : Non-revertive Rx K1/K2 byte : N/A Tx K1/K2 byte : N/A
                          Revert-time (min) :
Current APS Status : OK
Multi-Chassis APS : Yes
Neighbor
            : 192.0.2.2
Control link state : Up
: 3000 msec
APS Working Circuit - 1/2/1
Switchover seconds : 0
Signal Failure Cnt : 0
Last Exercise Result : N/A
Signal Degrade Cnt : 0
Last Switch Cmd : N/A
Tx L-AIS : None
            : None
```

Detailed parameters of the APS configuration on PE-2 can be verified, as follows. The admin/oper status of APS group 1 shows up/up. Both Rx and Tx of the K1/K2 byte are in the status of 0x00/0x05 (No-Req on Protect) as there is no failure or force-switchover request. The admin/oper status of the protection circuit (the link between MSAN and PE-2) is up/up.

```
APS Working Circuit - Neighbor
Admin Status : N/A Oper Status : N/A
Current APS Status : OK No. of Switchovers : 0
Last Switchover : None Switchover seconds : 0
Signal Degrade Cnt : 0 Signal Failure Cnt : 1
Last Switch Cmd : No Cmd Last Exercise Result : Unknown
Last Switch Cmd : No Cmd
Tx L-AIS : None
 APS Protection Circuit - 1/2/1
Admin Status : Up
                                Oper Status
                                                         : Up
Current APS Status : OK
                                         No. of Switchovers : 0
Last Switchover : None
                                          Switchover seconds : 0
Signal Degrade Cnt : 0
                                           Signal Failure Cnt : 0
Last Switch Cmd : No Cmd
                                           Last Exercise Result : Unknown
Tx L-AIS
                   : None
_____
```


Step 5. MC-APS configuration on PE-3 and PE-4

The MC-APS configuration on PE-3 and PE-4 is similar to the configuration on PE-1 and PE-2. Configure the working circuit on PE-4 and the protection circuit on PE-3.

Step 6. Pseudowire configuration

Configure an Apipe service on every PE and create endpoints X and Y. Associate the SAPs and spoke SDPs with the endpoints, as shown in Figure 4: Association of SAPs/SDPs and endpoints.

Figure 4: Association of SAPs/SDPs and endpoints

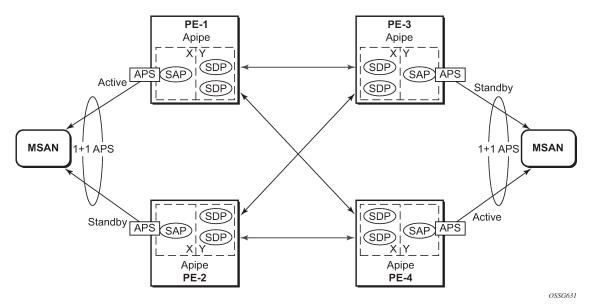

```
# on PE-1
configure
    service
    apipe 1 name name "Apipe 1" customer 1 create
        endpoint "X" create
        exit
        endpoint "Y" create
```

```
exit
service-mtu 1400
sap aps-1:0/32 endpoint "X" create
exit
spoke-sdp 13:1 endpoint "Y" create
exit
spoke-sdp 14:1 endpoint "Y" create
exit
spoke-sdp 14:1 endpoint "Y" create
exit
no shutdown
exit
```

Syntax aps-1:0/32 specifies the APS group and VPI/VCI of the ATM circuit using the aps-id:vpi/vci format.

Likewise, an Apipe service, with endpoints, SAPs and spoke SDPs must be configured on the other PE routers.

Step 7. Pseudowire verification

The Apipe service is up in PE-1 (MC-APS working circuit), as follows:

The Apipe service is down in PE-2 (MC-APS protect circuit), as follows:

The Apipe service is down in PE-3 (MC-APS protect circuit), as follows:

```
*A:PE-3#
```

The Apipe service is up in PE-4 (MC-APS working circuit), as follows:

Note: After configuring ICB spoke-SDPs, the Apipe will be up on all PEs.

Step 8. Verify SDP status

The status of SDP 23:1 on PE-2 can be verified as follows.

Peer Pw Bits shows the status of the pseudowire on the peer node. In this example, both the local node (PE-2) as the remote node (PE-3) are sending the *lacIngressFault*, *lacEgressFault* and *pwFwdingStandby* flags. This is because the Apipe service on these nodes is down because the MC-APS is in protection status.

```
*A:PE-2# show service id 1 sdp 23:1 detail
Service Destination Point (Sdp Id : 23:1) Details
_____
 Sdp Id 23:1 -(192.0.2.3)
-----
Description : (Not Specified)
SDP Id : 23:1
Spoke Descr : (Not Specified)
                                          Туре
                                                          : Spoke
Split Horiz Grp : (Not Specified)
VC Type : AAL5SDU
Admin Path MTU : 0
Delivery : MPLS
Far End : 192.0.2.3
                                           VC Tag : 0
Oper Path MTU : 1492
                                           Tunnel Far End
Oper Tunnel Far End: 192.0.2.3
LSP Types : LDP
Admin State
                                           Oper State : Up
MinReqd SdpOperMTU : 1404
Ingress Label : 52428
                                           Collect Stats : Disabled
Egress Label : 524282
Egr Mac Fltr-Id : n/a
                 : 524283
Ingr Mac Fltr-Id : n/a
Ingr IP Fltr-Id : n/a
                                           Egr IP Fltr-Id : n/a
Admin ControlWord : Preferred
                                           Oper ControlWord : True
Admin BW(Kbps) : 0
BFD Template : None
BFD-Fnabled : no
                                           Oper BW(Kbps) : 0
                                           Signaling
BFD-Enabled
                 : no
                                                           : ipv4
Last Status Change : 01/10/2020 09:46:58
                                                           : TLDP
Last Mgmt Change : 01/10/2020 09:46:52
Endpoint : Y
PW Status Sig : Enabled
                                           Precedence
                                                            : 4
Class Fwding State : Down
Flags
        : None
```

```
Local Pw Bits : lacIngressFault lacEgressFault pwFwdingStandby

Peer Pw Bits : lacIngressFault lacEgressFault pwFwdingStandby

Peer Fault Ip : None

Peer Vccv CV Bits : lspPing bfdFaultDet

Peer Vccv CC Bits : pwe3ControlWord mplsRouterAlertLabel

---snip---
```

In case of failure, the access link can be protected by MC-APS. An MPLS network failure can be protected by pseudowire redundancy. Node failure can be protected by the combination of MC-APS and pseudowire redundancy.

Step 9. Inter-Chassis Backup (ICB) pseudowire configuration.

Configuring Inter-Chassis Backup (ICB) is optional. It can reduce traffic impact by forwarding traffic on ICB spoke SDPs during MC-APS switchover. The ICB spoke SDP cannot be added to the endpoint if the SAP is not part of an MC-APS (or MC-LAG) instance. Conversely, a SAP which is not part of a MC-APS (or MC-LAG) instance cannot be added to an endpoint which already has an ICB spoke SDP. Forwarding between ICBs is blocked on the same node. The user has to explicitly indicate the spoke SDP is actually an ICB at creation time. Figure 5 shows some setup examples where ICBs are required.

After configuring ICB spoke SDPs, the Apipe will be in admin/oper up/up status on all PE routers.

ICB SDPs are configured and associated to endpoints, as shown in Figure 5: ICB spoke SDPs and association with the endpoints.

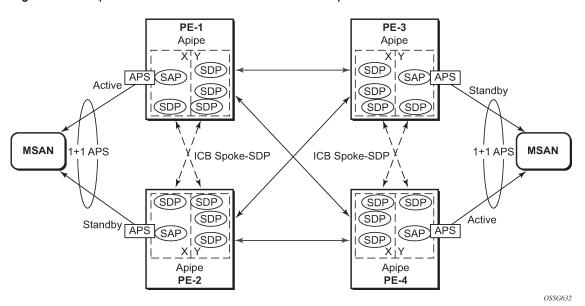


Figure 5: ICB spoke SDPs and association with the endpoints

Two ICB spoke SDPs must be configured in the Apipe service on each PE router, one in each endpoint. The same SDP IDs can be used for the ICBs since the far-end will be the same. However, the VC-id must be different. The ICB spoke SDPs must cross, meaning one end should be associated with endpoint X and the other end (on the other PE) should be associated with endpoint Y.

An ICB is always the last forwarding resort. Only one spoke SDP will be forwarding. If there is an ICB and an MC-APS SAP in an endpoint, the ICB will only forward if the SAP goes down. If an ICB resides in an endpoint together with other spoke SDPs the ICB will only forward if there is no other active spoke SDP.

The following shows the additional configuration for ICB on each PE:

```
# on PE-1
configure
    service
        apipe 1
            spoke-sdp 12:1 endpoint "X" icb create
            spoke-sdp 12:2 endpoint "Y" icb create
            exit
        exit
    exit
exit
# on PE-2
configure
    service
        apipe 1
            spoke-sdp 21:1 endpoint "Y" icb create
            exit
            spoke-sdp 21:2 endpoint "X" icb create
            exit
        exit
    exit
exit
# on PE-3
configure
   service
        apipe 1
            spoke-sdp 34:1 endpoint "X" icb create
            spoke-sdp 34:2 endpoint "Y" icb create
            exit
        exit
    exit
exit
# on PE-4
configure
    service
        apipe 1
            spoke-sdp 43:1 endpoint "Y" icb create
            exit
            spoke-sdp 43:2 endpoint "X" icb create
            exit
        exit
    exit
exit
```

Step 10. Verification of active objects for each endpoint

The following command shows which objects are configured for each endpoint and which is the active object at this moment:

On PE-1, both the SAP and the spoke SDP 14:1 are active. The other objects do not forward traffic.

Step 11. Other types of setups

The following figures show other setups that combine MC-APS and pseudowire redundancy.

Figure 6: Additional setup example 1 (part 1)

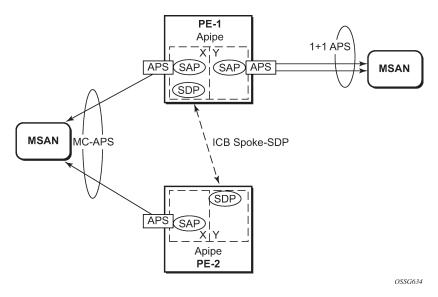


Figure 7: Additional setup example 1 (part 2)

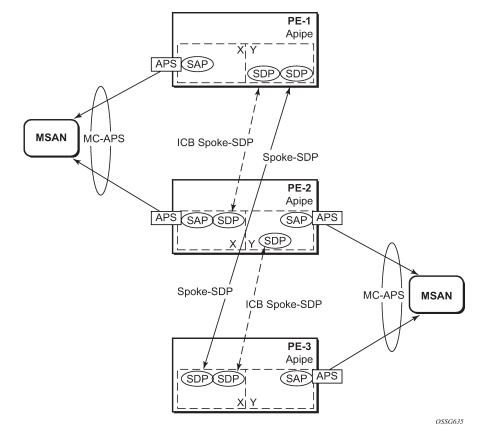


Figure 8: Additional setup example 2 (part 1a)


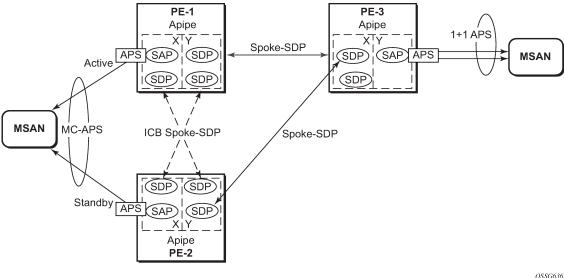


Figure 9: Additional setup example 2 (part 1b)

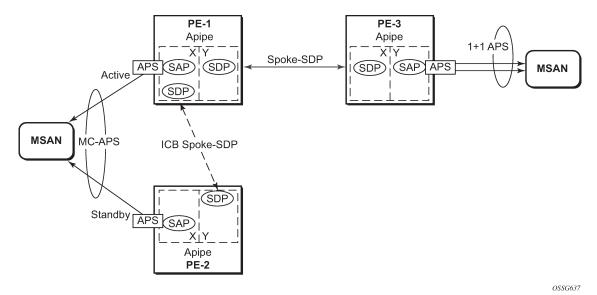

PE-3 Apipe SAP APS SDP (SDP) (SDP) Spoke-SDP MSAN MC-APS x ICB Spoke-SDP PE-1 Spoke-SDP Apipe (SDP) (SDP) $\overline{X}\overline{Y}$ SAP Spoke-SDP (SDP) SAP APS SAP (SDP) SAP APS (SDP) X_|Y (SDP) Apipe Spoke-SDP PF-4 MSAN MC-APS Spoke-SDP PE-5 Apipe SAP SAP SAP) APS Spoke-SDP (SDP) APS (SDP) SAP (SDP. SDP X|Y(SDP) (SDP) Apipe Spoke-SDP PE-2 Spoke-SDP ICB Spoke-SDP MC-APS MSAN (SDP) (SDP) (SDP) SAP APS (SDP) X|YApipe PE-6 OSSG638

Figure 10: Additional setup example 2 (part 2)

Forced switchover

MC-APS convergence can be forced with the **tools perform aps** command:

```
*A:PE-1# tools perform aps force
- force <aps-id> {protect|working} [number <number>]

<aps-id> : aps-<group-id> aps - keyword group-id - [1..128]

<protect|working> : keyword
<number> : [1-2]
```

After the forced switchover, it is important to clear the forced switchover:

<number> : [1-2]

Conclusion

In addition to Multi-Chassis LAG, Multi-Chassis APS provides a solution for both network redundancy and access node redundancy. It supports ATM VLL and Ethernet VLL with ATM SAP. Access links and PE nodes are protected by APS and the MPLS network is protected by pseudowire redundancy/FRR. With this feature, Nokia can provide resilient end-to-end solutions.

Multi-Chassis LAG and Pseudowire Redundancy Interworking

This chapter provides information about Multi-Chassis Link Aggregation (MC-LAG) and pseudowire redundancy interworking.

Topics in this chapter include:

- Applicability
- Overview
- Configuration
- Conclusion

Applicability

MC-LAG is supported only on Ethernet MDAs, and this only for access ports, because the LAG group must be in access mode.

This chapter was initially written for SR OS Release 7.0.R5. However, the CLI in the current edition is based on SR OS Release 19.10.R2.

Overview

MC-LAG

MC-LAG is an extension to the LAG feature to provide not only link redundancy but also node-level redundancy. This feature provides a Nokia added value solution which is not defined in any IEEE standard.

A proprietary messaging system between redundant-pair nodes supports coordinating the LAG switchover.

Multi-chassis LAG supports LAG switchover coordination: one node connected to two redundant-pair peer nodes with the LAG. During the LACP negotiation, the redundant-pair peer nodes act like a single node using active/stand-by signaling to ensure that only links of one peer node are used at a time.

Pseudowire redundancy


Pseudowire (PW) redundancy provides the ability to protect a pseudowire with a secondary preprovisioned pseudowire and to switch traffic over to the secondary standby pseudowire in case of a SAP and/or network failure condition. Normally, pseudowires are redundant by the virtue of the SDP redundancy mechanism. For instance, if the SDP relies on an RSVP LSP that is protected by a secondary standby path and/or by Fast-Reroute paths, the pseudowire is also protected.

However, there are a few applications in which SDP redundancy does not protect the end-to-end pseudowire path, for example when there are two different destination SR-series PE nodes for the same VLL service.

The main use case for PW redundancy is a scenario where dual homed CPEs or access nodes connected to two SR-series PE nodes are located in different POPs. The other use case is the scenario where service resiliency for broadband service subscribers is required, for example when a pair of active and standby BRAS nodes are provisioned, or where active and standby links to the same BRAS node are provisioned.

Example topology


Figure 11: MC-LAG example topology

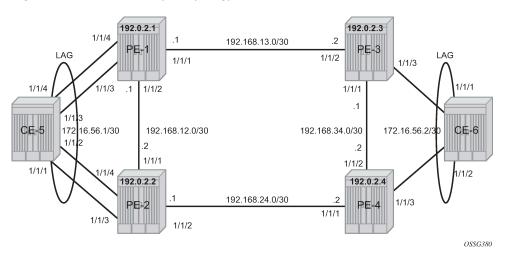


This section describes a setup which contains two CEs and four PEs. The CEs can be any routing/ switching device that support the OUT_OF_SYNC signaling as described in IEEE Standard 802.3-2005 section 3 section 43.6.1. Figure 11: MC-LAG example topology shows the physical topology of the setup.

Figure 12: Network resiliency shows the use of both MC-LAG in the access network and pseudowire redundancy in the core network to provide a resilient end-to-end VLL service between CE-5 and CE-6.

Figure 12: Network resiliency

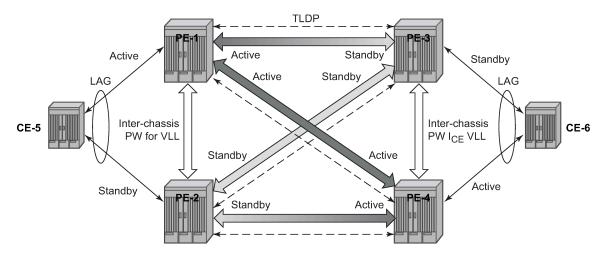

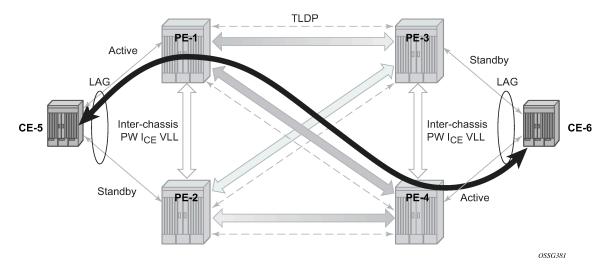

When an SDP is in standby, it sends the pseudowire status bit pwFwdingStandby to its peer.

Configuration

It is assumed that the following base configuration has been implemented on the PEs:

- Cards, MDAs, and ports
- Router interfaces
- · IGP configured and converged
- MPLS
- · SDPs configured between all PE routers

Either OSPF or IS-IS can be used as the IGP. Also, several protocols can be used for signaling the transport MPLS labels. Alternatively, GRE can be used for the transport tunnels. Likewise, several protocols can be used for signaling the SDPs. In this example, OSPF and LDP are used.

The following command is used to check if OSPF has converged (for example, on PE-1):

Route Table (Router: Base)				
<pre>Dest Prefix[Flags] Next Hop[Interface Name]</pre>	Туре	Proto	Age Metric	Pref
192.0.2.1/32 system	Local	Local	00h16m53s 0	0
192.0.2.2/32 192.168.12.2	Remote	0SPF	00h14m26s 1000	10
192.0.2.3/32 192.168.13.2	Remote	0SPF	00h14m21s 1000	10
192.0.2.4/32 192.168.12.2	Remote	0SPF	00h14m21s 2000	10
192.168.12.0/30 int-PE-1-PE-2	Local	Local	00h16m53s 0	0
192.168.13.0/30 int-PE-1-PE-3	Local	Local	00h16m53s 0	0
192.168.24.0/30 192.168.12.2	Remote	0SPF	00h14m26s 2000	10
192.168.34.0/30 192.168.13.2	Remote	0SPF	00h14m21s 2000	10
No. of Routes: 8 Flags: n = Number of times nexthop is re B = BGP backup route available L = LFA nexthop available S = Sticky ECMP requested	peated			

The following command shows that the SDPs are up:

MC-LAG for Epipe services

Step 1 - MC-LAG configuration on CEs.

The LAG configuration on the CEs is only included for completeness; any CE device could be used.

Auto-negotiation must be switched off or set to limited on all ports that will be included into the LAG in order to guarantee a specific port speed.



Note:

Disabling autonegotiation on Gigabit ports is not allowed because the IEEE 802.3 specification for Gigabit Ethernet requires autonegotiation to be enabled for far end fault detection.

Configure LACP on the LAG with at least one side of the LAG in active mode.

```
*A:CE-5# configure port 1/1/[1..4] ethernet autonegotiate limited
*A:CE-5# configure port 1/1/[1..4] no shutdown

# on CE-5:
configure
    lag 1
        port 1/1/1
        port 1/1/2
        port 1/1/3
        port 1/1/4
        lacp active administrative-key 32768
        no shutdown
    exit
exit
```

Step 2 - LAG configuration on PEs.

The PE ports connected to the CEs must be configured as access ports because they will be used in the redundant pseudowire service. The LAG must also be configured in access mode.

The LAG encapsulation type (null | dot1q | qinq) must match the port encapsulation type of the LAG members.

Auto-negotiation must be switched off or configured to limited.

Configure LACP on the LAG. At least 1 side of the LAG (PE or CE) must be configured in active mode.

```
# on PE-1:
configure
    port 1/1/3
        ethernet
            mode access
            autonegotiate limited
        exit
        no shutdown
    exit
    port 1/1/4
        ethernet
            mode access
            autonegotiate limited
        exit
        no shutdown
    exit
    lag 1
        mode access
        port 1/1/3
        port 1/1/4
        lacp active administrative-key 32768
        no shutdown
    exit
exit
```

Step 3 - MC-LAG configuration on PE-1 and PE-2

The redundant PEs must act as one virtual node toward the CE. They have to be able to communicate the same LACP parameters to the CE side.

The following parameters uniquely identify a LAG instance:

- · lacp-key
- · system-id
- · system-priority

These three parameters must be configured with the same value on both redundant PEs.

Multi-chassis redundancy requires a peering session (which operates by an IP connection using UDP destination port 1025) that is configured toward the redundant PE system address to which MC-LAG redundancy is enabled, as follows. The peering session can be configured with MD5 authentication.

```
# on PE-1:
configure
    redundancy
    multi-chassis
    peer 192.0.2.2 create
        authentication-key "GBeGhtqKlY06VZKF2QK+xAzSig==" hash2
        mc-lag
        lag 1 lacp-key 1 system-id 00:00:00:00:00:01 system-priority 100
        no shutdown
        exit
        no shutdown
        exit
        no shutdown
        exit
```

```
# on PE-2:
configure
    redundancy
    multi-chassis
    peer 192.0.2.1 create
        authentication-key "GBeGhtqKlY06VZKF2QK+xF3iEg==" hash2
        mc-lag
        lag 1 lacp-key 1 system-id 00:00:00:00:00:01 system-priority 100
        no shutdown
        exit
        no shutdown
        exit
        no shutdown
        exit
```

Step 4 - MC-LAG verification.

Verify MC peers showing that the authentication and admin state are enabled.

```
Sync: Not-configured
```

Step 5 - Verify MC-LAG peer status and LAG parameters.

There is a fixed keepalive timer of 1 second. The **hold-on-neighbor-failure multiplier** command indicates the interval that the standby node will wait for packets from the active node before assuming a redundant-neighbor failure. The **hold-on-neighbor-failure** *<multiplier>* command is configurable in the **config>redundancy>multi-chassis>peer>mc-lag** context. The standby node will also assume a redundant-neighbor failure when there is no route available to the redundant-neighbor.

```
# on PE-1:
configure
    redundancy
    multi-chassis
        peer 192.0.2.2
        mc-lag
        hold-on-neighbor-failure 10
        exit
        exit
        exit
        exit
        exit
```

In this example, the *lag-id* is 1 on both redundant PEs. This is not mandatory. If the *lag-id* on PE-2 is, for example 2, the following should be configured on PE-1:

```
# on PE-1:
configure
    redundancy
    multi-chassis
        peer 192.0.2.2
        mc-lag
        lag 1 lacp-key 1 system-id 00:00:00:00:00:01 remote-lag 2
        exit
        exit
```

Step 6 - Verify MC-LAG

*A:PE-1# show	lag 1					
Lag Data						
Lag-id	Adm	0pr	Weighted	Threshold	Up-Count	MC Act/Stdby
1	up	up	No	0	2	active
*A:PE-2# show	lag 1					
Lag Data	=======	======	=======	=======	=======	
Lag-id	Adm	0pr	Weighted	Threshold	Up-Count	MC Act/Stdby
1	up	down	No	0	0	standby

In this case, the LAG on PE-1 is active (operationally up) whereas the LAG on PE-2 is standby (operationally down).

The default selection criteria is highest number of links and priority. In this example, the number of links and the priority of the links is the same on both redundant PEs. Whichever PE's LAG gets the operational status *up* first, will be the active LAG.

LAG ports of one PE could be preferred over the other PE by configuring port priority. For example, the following command lowers the priority of the LAG ports on PE-1, thus giving this LAG higher preference. The default priority is 32768, but it is modified to a value of 10, as follows:

```
# on PE-1:
configure
    lag 1
        port 1/1/3 priority 10
        port 1/1/4 priority 10
```

The selection criteria can be configured as highest-count, highest-weight or best-port (the default is highest count).

```
*A:PE-1# configure lag 1 selection-criteria
- selection-criteria [best-port|highest-count|highest-weight] [slave-to-partner]
[subgroup-hold-time <hold-time>]
- no selection-criteria

<br/>
*Slave-to-partner> : keyword <br/>
<hold-time> : [0..2000] tenths of a second | infinite
```

If highest-weight is configured, the sum of the weights of the LAG members is considered. The weight of an individual LAG member is calculated as priority 65535 (the default is 32768).

Step 7 - Verify detailed MC-LAG status on PE-1

	escription												
D	etails												
L	ag-id dm hres. Last Cl	:	1			Mode	9			: acce	ess		
D	ynamic Cost onfigured Add	ress :	false 04:0f:ff	:00:01	:41	Enca Lag-	Encap Type Lag-IfIndex Adapt Qos (access)				: null : 1342177281		
H P	ardware Addre old-time Down er-Link-Hash	:	<pre>0.0 sec disabled</pre>		:41	Port	Type	(acces	S)	: dis	ndard		
P	nclude-Egr-Ha er FP Ing Que er FP SAP Ins	uing :	disabled			Ford Per	Per FP Egr Queuing : Access Booking Factor:						
Α	ccess Bandwid ccess Availab ccess Booked	le BW :	0										
L.	ACP ACP Transmit :	: Intvl :	enabled fast			Mode LACE	Mode LACP xmit stdby Slave-to-partner			<pre>: active : enabled</pre>			
S M	election Crite UX control	eria : :	highest- coupled	count		Slav	/e-to-p	artner		: disa	abled		
S S S	ubgrp hold ti ubgrp selecte ubgrp count	me : d :	⊍.⊍ sec 1 1			Rema Subg	Jip Cai	time didate		: -			
S	ystem Id dmin Key	:	04:0f:ff 32768	:00:00	:00	Syst Oper	em Pri Key	ority		: 32768 : 1			
P P S	election Crito UX control ubgrp hold tiu ubgrp selecte ubgrp count ystem Id dmin Key rtr System Id rtr Oper Key tandby Signal ort hashing orts Up eights Up onitor oper g	: : ing :	04:1f:ff 32768 lacp	:00:00	:00	Prti	Prtr System Priority				: 32768		
P P	ort hashing orts Up	: :	port-spe 2	ed		Port		t spee			bps		
		·					J	its Up					
M	C Peer Address C System Id C Admin Key C Lacp ID in	s : :	192.0.2. 00:00:00	2 :00:00	:01	MC F	Peer La System	g-id Priori	ty	: 1 : 100			
M M	C Admin Key C Lacp ID in (C Selection L	use :	true local ma	ster d	ecideo	MC A MC 6	extende	Standb d time	out	: act:	se		
М	C Config Misma	atch :	no misma	tch									
Р	 ort-id 	Adm	Act/Std	by Opr		rimary	/ Sub	-group		Force	d Prio		
1	/1/3 /1/4		active active							-	10 10		
- P -	 ort-id 	Role	Exp	Def	Dist	Col	Syn	Aggr	Time	out /	Activity		
	/1/3 /1/3	actor partner	No No	No No	Yes Yes	Yes Yes	Yes Yes	Yes Yes	Yes Yes		Yes Yes		
1	/1/4 /1/4 /1/4	actor partner	No	No No	Yes Yes	Yes Yes	Yes Yes	Yes Yes	Yes Yes	`	Yes Yes		

After changing the LAG port priorities from default (32768) to 10, the LAG on PE-1 is in up/up state and the ports are in up/active/up status. This show command also displays actor and partner bits set in the LACP messages.

Step 8 - MC-LAG configuration on PE-3 and PE-4.


The MC-LAG configuration on PE-3 and PE-4 is similar to the configuration on PE-1 and PE-2. In this case, the priority of the LAG port on PE-4 is lowered to obtain the behavior in Figure 12: Network resiliency where the LAGs on PE-1 and PE-4 are active.

Step 9 - Pseudowire configuration.

Configure an Epipe service on every PE and create endpoints X and Y (the endpoint names can be any text string). Traffic can only be forwarded between two endpoints, for example, it is not possible for objects associated with the same endpoint to forward traffic to each other.

Associate the SAPs and spoke SDPs with the endpoints as shown in Figure 13: Association of SAPs/SDPs and endpoints.

Figure 13: Association of SAPs/SDPs and endpoints

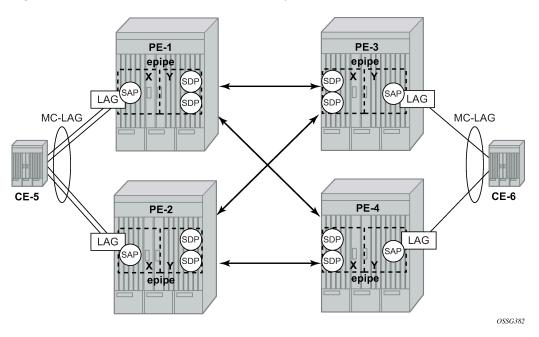

```
# on PE-1:
configure
    service
        epipe 1 name "Epipe 1" customer 1 create
            endpoint "X" create
            exit
            endpoint "Y" create
            exit
            service-mtu 1400
            sap lag-1 endpoint "X" create
            exit
            spoke-sdp 13:1 endpoint "Y" create
            exit
            spoke-sdp 14:1 endpoint "Y" create
            exit
            no shutdown
        exit
    exit
exit
```

Likewise, an Epipe service, endpoints, SAPs and spoke SDPs must be configured on the other PE routers.

Step 10 - Pseudowire verification.

Services			=====		
ServiceId	Type	Adm	0pr	CustomerId	Service Name
	Epipe IES intVpls	Up	Up Down Down	1	Epipe 1 _tmnx_InternalIesService _tmnx_InternalVplsService

======================================		====	====:		
ServiceId	Type	Adm	0pr	CustomerId	Service Name
	Epipe IES intVpls	- 1	Down Down Down	1	Epipe 1 _tmnx_InternalIesService _tmnx_InternalVplsService
Matching Serv	vices : 3				

*A:PE-4# show	w service	servi	ce-us:	ing 	
ServiceId	 Туре	Adm	0pr	CustomerId	Service Name
	Epipe IES intVpls	Up	Up Down Down	1	Epipe 1 _tmnx_InternalIesService _tmnx_InternalVplsService
Matching Ser	vices : 3				

The Epipe service on PE-2 and PE-3 is down and up on PE-1 and PE-4. This reflects the standby behavior shown in Figure 12: Network resiliency. However, after configuring ICB spoke SDPs (described later in this chapter), the Epipe will be in up/up status on all PE routers.

Step 11 - Verify SDP status

Local pseudowire bits indicate the status of the pseudowire on the PE node. These pseudowire bits will be sent to the peer. Peer pseudowire bits indicate the status of the pseudowire on the peer, as sent by the peer. The following example is taken on PE-2:

```
*A:PE-2# show service id 1 sdp 23:1 detail
Service Destination Point (Sdp Id : 23:1) Details
______
 Sdp Id 23:1 -(192.0.2.3)
Description : (Not Specified)
SDP Id
                    : 23:1
SDP Id : 23:1
Spoke Descr : (Not Specified)
VC Type : Ether
Admin Path MTU : 0
Delivery : MPLS
Far End : 192.0.2.3
                                                   Type
                                                                       : Spoke
                                                   VC Tag
                                                                       : n/a
                                                   VC Tag : n/a
Oper Path MTU : 1492
                                                   Tunnel Far End :
Oper Tunnel Far End: 192.0.2.3
LSP Types : LDP
Hash Label : Disa
Hash Label : Disabled
Oper Hash Label : Disabled
Entropy Label : Disabled
                                                   Hash Lbl Sig Cap : Disabled
Admin State
                   : Up
                                                   Oper State
                                                                      : Up
MinReqd SdpOperMTU : 1400
Ingress Label 52400
                                                   Collect Stats : Disabled 
Egress Label : 524282
                     : 524283
Ingr Mac Fltr-Id : n/a
                                                   Egr Mac Fltr-Id : n/a
Ingr IP Fltr-Id : n/a
                                                   Egr IP Fltr-Id : n/a
Ingr IPv6 Fltr-Id : n/a
                                                   Egr IPv6 Fltr-Id : n/a
                                                   Oper ControlWord : False
Admin ControlWord : Not Preferred
Admin BW(Kbps) : 0
BFD Template : None
BFD-Enabled : no
                                                   Oper BW(Kbps)
                                                                      : 0
                                                   BFD-Encap
                                                                      : ipv4
Last Status Change : 01/07/2020 12:51:04
                                                   Signaling
                                                                      : TLDP
Last Mgmt Change : 01/07/2020 12:50:53
Endpoint : Y
PW Status Sig : Enabled
Force Vlan-Vc : Disabled
                                                   Precedence
                                                                       : 4
                                                   Force Qing-Vc
                                                                      : none
Class Fwding State : Down
                : None
Flags
Local Pw Bits : lacIngressFault lacEgressFault pwFwdingStandby
Peer Pw Bits : lacIngressFault lacEgressFault pwFwdingStandby
Peer Fault Ip : None
Peer Vccv CV Bits : lspPing bfdFaultDet
Peer Vccv CC Bits : mplsRouterAlertLabel
---snip---
Segment Routing
ISIS : disabled
```

```
OSPF : disabled
TE-LSP : disabled

Number of SDPs : 1
```

In this example, the remote side of the SDP is sending lacIngressFault lacEgressFault pwFwdingStandby flags. This is because the Epipe service on PE-3 is down because the MC-LAG is in standby/down status.

Link and node protection can be tested. The access links are protected by the MC-LAG, the PE routers are protected by the combination of MC-LAG/pseudowire redundancy. The SDPs can be protected by FRR, unless GRE is used.

Revertive behavior is expected when different MC-LAG port priorities are configured or if the number of MC-LAG ports is different on the MC-LAG peers: convergence takes place when the active PE fails and convergence takes place again when that PE is online again.

In case of revertive behavior, MC-LAG convergence might take less time than the setup of the spoke SDPs, thus creating a temporary black-hole. To avoid this situation, it is best to configure **hold-time up** on the LAG ports. In that case, the ports are kept in a down state for a configured period of time after the node has rebooted. This is done to ensure that the SDPs are operationally up when the MC-LAG convergence takes place. The **hold-time up** is expressed in seconds.

```
# on PE-1:
configure
   port 1/1/3
      ethernet
         hold-time up 50
   exit
   exit
   port 1/1/4
      ethernet
        hold-time up 50
   exit
exit
```

Step 12 - Inter-Chassis Backup (ICB) pseudowire configuration.

In this setup, the configuration of ICBs is optional. It can be used to speed up convergence by forwarding in-flight packets during MC-LAG transition. Figure 15: Additional setup example 1 shows some setup examples where ICBs are required. ICBs cannot be configured at endpoints where the other object is a standard SAP, only MC-LAG SAPs and pseudowires are allowed with ICBs.

ICB SDPs and associated to endpoints as shown in Figure 14: ICB spoke SDPs and their association with the endpoints.

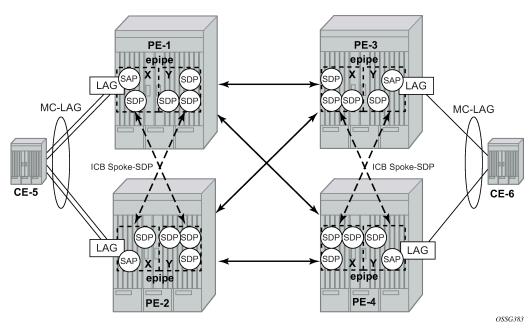


Figure 14: ICB spoke SDPs and their association with the endpoints

Two ICB spoke SDPs must be configured in the Epipe service on each PE router, one in each endpoint. Different SDP IDs can be used for the ICBs (as opposed to the regular pseudowires), but this is not necessary, because the far-end will be the same. The **vc-id** must be different however.

The ICB spoke SDPs must cross, one end should be associated with endpoint *X* and the other end (on the other PE) should be associated with endpoint *Y*. After configuring the ICB spoke SDPs, the Epipe service will be up/up on all four PE routers.

Only one spoke SDP will be forwarding. If there is an ICB and a MC-LAG SAP in an endpoint, the ICB will only forward if the SAP goes down. If an ICB resides in an endpoint together with other spoke SDPs, the ICB will only forward if there is no other active spoke SDP.

The following output shows the additional Epipe service configuration on each PE:

```
# on PE-1:
configure
    service
        epipe 1
            spoke-sdp 12:1 endpoint "X" icb create
            spoke-sdp 12:2 endpoint "Y" icb create
            exit
# on PE-2:
configure
    service
        epipe 1
            spoke-sdp 21:1 endpoint "Y" icb create
            exit
            spoke-sdp 21:2 endpoint "X" icb create
            exit
# on PE-3:
```

```
configure
    service
    epipe 1
        spoke-sdp 34:1 endpoint "X" icb create
        exit
        spoke-sdp 34:2 endpoint "Y" icb create
        exit

# on PE-4:
configure
    service
    epipe 1
        spoke-sdp 43:1 endpoint "Y" icb create
        exit
        spoke-sdp 43:2 endpoint "X" icb create
        exit
        spoke-sdp 43:2 endpoint "X" icb create
        exit
```

Step 13 - Verification of active objects for each endpoint.

The following command shows which objects are configured for each endpoint and which is the active object at this moment:

```
*A:PE-1# show service id 1 endpoint
 Service 1 endpoints
Endpoint name : X
Description : (Not Specified)
Creation Origin : manual
Revert time : 0
Act Hold Delay : 0
Standby Signaling Master : false
Standby Signaling Slave : false
Tx Active : lag-1
Tx Active Up Time : 0d 00:09:47
Revert Time Count Down : never
Tx Active Change Count : 1
Last Tx Active Change : 01/07/2020 12:49:52
 ______
Members
 SAP : lag-1
Endpoint name : Y

Description : (Not Specified)

Creation Origin : manual

Revert time : 0

Act Hold Delay : 0

Standby Signaling Master : false

Standby Signaling Slave : false

Tx Active (SDP) : 14:1

Tx Active Up Time : 0d 00:06:02

Revert Time Count Down : never

Tx Active Change Count : 2


Last Tx Active Change : 01/07/2020 12:53:37
 ______
 Members
 Spoke-sdp: 12:2 Prec:4 (icb)
                                                                                   Oper Status: Up
 Spoke-sdp: 13:1 Prec:4
                                                                                   Oper Status: Up
 Spoke-sdp: 14:1 Prec:4
                                                                                   Oper Status: Up
```

On PE-1, the SAP and the spoke SDP 14:1 are active. The other objects do not forward traffic.

Step 14 - Other types of setups.

Figure 15: Additional setup example 1 and Figure 16: Additional setup example 2 show other setups that combine MC-LAG and pseudowire redundancy.

Figure 15: Additional setup example 1

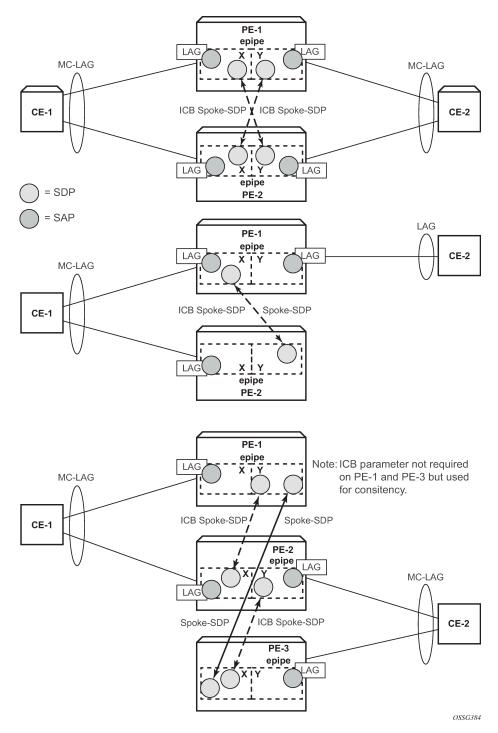

PE-1 PE-3 LAG Spokeepipe epipe LAG SDP MC-LAG CE-2 ICB Spoke-SDP ICB Spoke-SDP CE-1 ke-SDP LAG epipe = SDP PE-2 PE-1 PE-3 LAG Spokeepipe epipe SDP MC-LAG CE-2 ICB Spoke-SDP ICB Spoke-SDP CE-1 epipe PE-2 PE-3 epipe PE-1 LAG MC-LAG Spoke-SDP epipe ICB VICB Spoke-SDP Spoke-SDP CE-2 Spoke-SDP / MCD-LAG LAG epipe PE-4 CE-1 PE-5 epipe PE-2 LAG MC-LAG epipe ICB V/ Spoke-SDP ∧ ICB Spoke-SDP CE-3 Spoke-SDP LAG

Figure 16: Additional setup example 2

3HE 20790 AAAE TQZZA © 2025 Nokia. 40

epipe

OSSG386

MC-LAG for VPLS services

MC-LAG can also be configured for VPLS services. When the MC-LAG converges, the PE that transitions to standby state for the MC-LAG will send out an LDP address withdrawal message to all peers configured in the VPLS service. Both types of SDPs (spoke and mesh) support this feature. The PE peers will then flush all the MAC addresses learned via the PE that sent the LDP MAC address withdrawal message.

Because a VPLS service is a multipoint service, pseudowire redundancy is not required. The MC-LAG redundancy configuration is identical.

Forced switchover

MC-LAG convergence can be forced with the tools perform lag command:

```
*A:PE-1# tools perform lag force
 - force all-mc {active|standby}
 - force lag-id <lag-id> [sub-group <sub-group-id>] {active|standby}
 - force peer-mc <ip-address> {active|standby}
-:ay-10> : [1..800]
<sub-group-id> : [1..16]
<all-mc>
                  : keyword
<all-mc>
<ip-address>
                 : ipv4-address - a.b.c.d
                    ipv6-address - x:x:x:x:x:x:x:x (eight 16-bit pieces)
                                   x:x:x:x:x:x:d.d.d.d
                                    x - [0..FFFF]H
                                    d - [0..255]D
<active|standby>
                   : keywords
*A:PE-1# tools perform lag force lag-id 1 standby
*A:PE-1# show lag 1
______
```

After the forced switchover, it is important to clear the forced switchover:

				d - [0	255]D	
*A:PE-1# too	s perfor	m lag cl	ear-force	lag-id 1		
*A:PE-1# show	u lag 1					
Lag Data				=======	=======	
Lag-id	Adm	0pr	Weighted	Threshold	Up-Count	MC Act/Stdby
1	ир	up	No	0	2	active

Conclusion

MC-LAG is a Nokia added value redundancy feature that offers fast access link convergence in Epipe and VPLS services for CE devices that support standard LACP. PE node convergence for VPLS services is enhanced by using LDP address withdrawal messages to flush the FDB on the PE peers. PE node convergence for Epipes is guaranteed by using pseudowire redundancy.

Port Cross-Connect (PXC)

This chapter provides information about Port Cross-Connect (PXC).

Topics in this chapter include:

- Applicability
- Overview
- Configuration
- Conclusion

Applicability

The chapter was initially written for SR OS Release 14.0.R5, but the CLI in the current edition is based on SR OS Release 25.3.R2.

Overview

The Port Cross-Connect (PXC) feature allows for a port, or number of ports, to be logically looped to themselves. The purpose of looping a port in this manner is to provide an "anchor point" function, such that traffic may ingress the node through any interface/port and be redirected to that anchor point.

When traffic is passed through the egress data path of the PXC, it can be used for additional packet processing that cannot be supported on the ingress data path, such as the removal of an encapsulation header. When traffic is looped back to the ingress data path of the PXC, it is processed as if it were the conventional service termination point. This essentially decouples the Input/Output (I/O) port through which packets ingress the node from the I/O port that implements the service termination. This decoupling removes the previous constraint for pseudowire-port (pw-port) whereby the I/O port through which packets ingress and egress the node was bound and could not be changed during, for example, a reconvergence event.

PXC provides two modes of operation: Distributed Versatile Service Module (DVSM) mode and Application Specific (AS) mode.


- The DVSM mode provides functionality like that of the VSM2 card, enabling the user to create an
 internal loopback through the card. This allows for back-to-back configurations similar to a VLAN crossconnect.
- The AS mode creates a Forwarding Path Extension (FPE) context through which the system can
 automatically create cross-connects to simplify user provisioning. Use-case examples for AS mode
 include PW port for business VPN services, VXLAN termination on a non-system interface, ESM over
 pseudowire, and GRE tunnel termination.

This chapter describes the generic principles of PXC, combined with examples of both DVSM mode and AS mode.

Example topology

The topology shown in Figure 17: Example topology is used within this chapter to illustrate the use of PXC. PE-2, PE-3, and PE-5 form part of Autonomous System 64496 and run IS-IS level 2 together with LDP for the MPLS control plane. PE-2, PE-3, and PE-5 also peer in IBGP for the VPN-IPv4 address family. Test ports are connected to all PEs (in the case of PE-2 and PE-3, via CE routers) for the purpose of validating IP connectivity.

Figure 17: Example topology

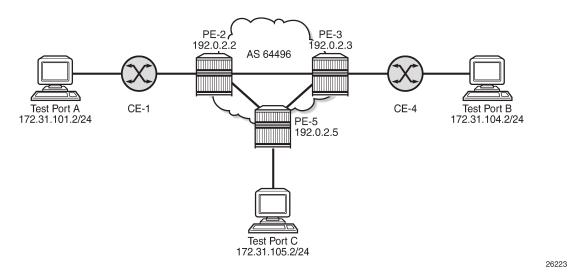

PE-5 hosts the PXC.

Configuration

PXC configuration

PXCs are created within the **port-xc** context and can be numbered from 1 to 256.

```
*A:PE-5# configure port-xc pxc ?
- pxc <pxc-id> [create]
- no pxc <pxc-id>

<pxc-id> : [1..256]
<create> : keyword

[no] description - Configure the description of the PXC
[no] port - Configure the port of the PXC
[no] shutdown - Administratively enable/disable the PXC
```

A PXC can consist of a single non-redundant port, or for redundancy and increased capacity, can consist of multiple ports that form member links of a Link Aggregation Group (LAG). Both options are described here.

Non-redundant PXC

A port must be assigned to the PXC before it is put into a **no shutdown** state, and that port must be in a **shutdown** state when it is assigned. There is no requirement for any kind of optical transceiver to be inserted in the port assigned to the PXC; it is only a logical loopback. When the port is assigned to the PXC, it cannot be used for any other purpose besides a PXC-based service assignment (for example, a regular SAP cannot be configured on this port).

```
# on PE-5:
configure
    port-xc
    pxc 1 create
        description "PXC non-redundant"
        port 1/1/c20/1
        no shutdown
    exit
    exit
```

After the PXC has been put into a **no shutdown** state, two PXC sub-ports are automatically created by the system. The PXC sub-ports are identified by .a and .b suffixes of the parent PXC (in this example, pxc-1) and are created in hybrid mode with an MTU of 9208 bytes, both of which are non-configurable. The 9208-byte MTU represents the default port MTU (in this example, 9212 bytes) minus four bytes to allow for an internal VLAN tag that is used to identify each back-to-back sub-port. Finally, the encapsulation is set to dot1q, which is the default for hybrid ports. Q-in-Q encapsulation is also supported. It is also possible to configure dot1q encapsulation on one PXC sub-port and Q-in-Q encapsulation on the opposing PXC sub-port if, for example, there is a requirement to expose more VLAN tags on one side of the loop than the other side of the loop.

After the PXC creation, the PXC sub-port CLI configuration is automatically generated and can be accessed in the same way as a conventional physical port, using the syntax "port pxc-n.l" where "n" represents the assigned PXC number and "l" represents the sub-port letter (a or b). As shown in the previous output, the sub-ports are in an admin down state following automatic creation and need to be manually put into a **no shutdown** state, as follows:

```
# on PE-5:
configure
   port pxc-1.a
      no shutdown
   exit
```

```
port pxc-1.b
no shutdown
exit
```

The physical port assigned to the PXC must also now be put into a **no shutdown** state in order for the PXC to become operational:

```
# on PE-5:
configure
  port 1/1/c20/1
    no shutdown
  exit
```


The command in the following output verifies the operational state of the PXC:

Similarly, the operational state of each of the sub-ports can be verified as follows. The physical link is indicated as being present even though there is no transceiver installed in this port.

Figure 18: Non-redundant PXC shows a representation of the non-redundant PXC configuration. Both upstream and downstream traffic passes twice through the FP data-path and port. For example, downstream traffic passes through the FP complex and PXC-1.b. The traffic is then looped back to PXC-1.a, and back into the FP complex. Similarly, upstream traffic passes through the FP complex to PXC-1.a. It is then looped back to PXC-1.b and back into the FP complex.

26224

Figure 18: Non-redundant PXC

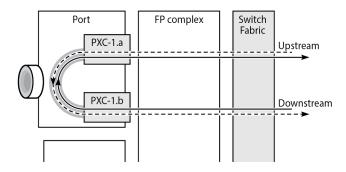

When using a PXC, the physical port effectively simulates two (sub-)ports, which creates two egress traffic paths: one upstream and one downstream. When the receive side of the PXC port receives those paths, it needs to distinguish between them, and this is where the internal additional VLAN tag is used.

The difference between this PXC configuration and a conventional port not looped or configured as PXC is as follows. With a conventional port, ingress traffic passes through the port and ingress data-path of the FP complex only once, and egress traffic passes through the egress data-path of the FP complex and port only once.

Redundant PXC

For a redundant PXC, the fundamental building blocks are identical to those of the non-redundant PXC, but there are a few additional configuration steps required to construct the LAGs to which the redundant PXC ports belong.

The redundant PXC example consists of two ports: 1/1/c21/1 and 1/1/c22/1 in the following output. In this case, the redundant PXC ports belong to the same IMM, but different IMMs can be used for increased redundancy. Two PXCs are created and each one is assigned one of the redundant PXC ports. Both PXCs are enabled, as well as their sub-ports and the associated physical ports. The configuration of PXC 2 and PXC 3 on PE-5 is as follows:

```
# on PE-5:
configure
    port-xc
    pxc 2 create
         description "PXC redundant"
         port 1/1/c21/1
         no shutdown
    exit
    pxc 3 create
         description "PXC redundant"
         port 1/1/c22/1
         no shutdown
    exit
    exit
```

As with the non-redundant PXC, when the PXC has been put into a **no shutdown** state, two PXC subports with .a and .b suffixes are automatically created by the system for each PXC port:

```
*A:PE-5# show port pxc 2
```

```
Ports on Port Cross Connect 2

Port Admin Link Port State State MTU MTU Bndl Mode Encp Type MDIMDX

pxc-2.a Down No Down 9208 9208 - hybr dotq cgige pxc-2.b Down No Down 9208 9208 - hybr dotq cgige

*A:PE-5# show port pxc 3

Port Admin Link Port Cfg Oper LAG/ Port Port Port C/QS/S/XFP/ Id State State MTU MTU Bndl Mode Encp Type MDIMDX

pxc-3.a Down No Down 9208 9208 - hybr dotq cgige pxc-3.b Down No Down 9208 9208 - hybr dotq cgige
```

The PXC sub-ports, together with the physical port, must then all be put into a no shutdown state:

```
# on PE-5:
configure
   port pxc-2.a
       no shutdown
   exit
   port pxc-2.b
       no shutdown
   exit
   port pxc-3.a
       no shutdown
   port pxc-3.b
       no shutdown
    port 1/1/c21/1
       no shutdown
   port 1/1/c22/1
       no shutdown
```

After the associated components have been put into a **no shutdown** state, the operational state of the PXCs can be verified:


PXC	Admin	Oper	Port	Description
Id	State	State	Id	
3	Up	Up	1/1/c22/1	PXC redundant

The PXC sub-ports are then associated with two LAGs to essentially form an internal back-to-back LAG. To do this, both sub-ports with the .a suffix belong to one LAG instance, and both sub-ports with the .b suffix belong to the other LAG instance. Like any other LAG member links, PXC sub-ports in a LAG must be configured with the same physical attributes, such as speed and duplex. Both LAG instances are configured with **mode hybrid** to match the mode of the physical ports. Setting the mode to **hybrid** automatically sets the **encap-type** to **dot1q**.

```
# on PE-5:
configure
    lag 1 name "lag-1"
        mode hybrid
        encap-type dot1q
        port pxc-2.a
        port pxc-3.a
        no shutdown
    exit
    lag 2 name "lag-2"
        mode hybrid
        encap-type dot1q
        port pxc-2.b
        port pxc-3.b
        no shutdown
    exit
```

Figure 19: PXC redundant mode with LAG shows a representation of the redundant PXC with LAG. Both upstream and downstream traffic passes twice through the FP data-path and port.

Figure 19: PXC redundant mode with LAG

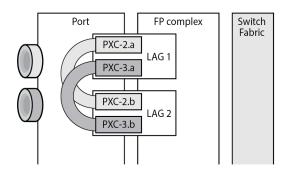

26225

When the LAGs are configured and the associated PXC sub-ports assigned as member links, the operational status can be verified. Note that at the LAG level, each of the configured LAG instances is not aware that it is internally connected to another LAG instance, even though the member sub-ports are logically looped. It would be possible, for example, to put LAG 1 into an admin shutdown state and not affect the operational state of LAG 2. LACP is not supported for PXC LAG; however, it is possible to run the 802.3ah Ethernet in the First Mile (EFM) at PXC sub-port level, if required.

```
*A:PE-5# show lag 1 detail
```

Description		•						
Details								
Lag-id Lag-name	:	1					hybrid	d
Adm Thres. Last Cleared Dynamic Cost Configured Address Hardware Address Hold-time Down Per-Link-Hash	: : : : :	up 04/29/2025 07 false e4:81:84:ed:0 e4:81:84:ed:0 0.0 sec disabled	l8:75	Thres. Encap Lag-If	Type Index	: :	dot1q 13421	77281 ibute
Include-Egr-Hash-C Per FP Ing Queuing Per FP SAP Instance	:	disabled		Per FP	Egr Queuing	:	disab	led
Access Bandwidth Access Available BN Access Booked BW LACP LACP fallback Fallback timeout Standby Signaling Port hashing Ports Up Hash-Weights Up	N :	0 disabled none N/A lacp port-speed 2			Booking Facto			
Monitor oper group Adaptive loadbal.	:	N/A		Tolera	nce	:	N/A	
Port-id Adı		Act/Stdby 0)pr	Primary	Sub-group	F	orced	Prio
pxc-2.a up pxc-3.a up		active u	 iр	yes	1			32768 32768

DVSM mode

DVSM mode enables the creation of a back-to-back cross-connect. This back-to-back connection can be network-to-network, access-to-access, or a combination such as network-to-access. To provide an example of using DVSM mode, PE-3 in Figure 17: Example topology functions as a Layer 2 backhaul device, and PE-5 housing the PXC functions as the Layer 3 service edge. A pseudowire is extended from PE-3 to PE-5, where it is terminated in a VPRN, providing point-to-point connectivity between CE-4 and PE-5.

VLAN 100 is extended from CE-4 to PE-3, where it is indexed into an Epipe service. The SAP is service-delimiting; therefore, the VLAN is removed before frames are encapsulated into the pseudowire. The Epipe then has a single non-redundant spoke-SDP to PE-5 with VC-ID 11. The service configuration on PE-3 is as follows:

```
# on PE-3:
configure
    service
    sdp 35 mpls create
    far-end 192.0.2.5
```

```
ldp
    keep-alive
        shutdown
    exit
    no shutdown
exit
epipe 11 name "Epipe 11" customer 1 create
    sap 1/1/c3/1:100 create
        no shutdown
    exit
    spoke-sdp 35:11 create
        no shutdown
    exit
    spoke-sdp 35:11 create
        no shutdown
exit
    no shutdown
exit
    no shutdown
exit
```

At PE-5, the configuration of the corresponding end of the Epipe service is shown in the following output. This service consists of a single spoke-SDP toward PE-3 with VC-ID 11 to match the VC-ID advertised by PE-3, and a single SAP toward the PXC port. The syntax takes the form "pxc-n.l:vlan" where "n" is the PXC identifier, "I" is the sub-port letter (in this case .a), and "vlan" represents the VLAN identifier of the SAP.

As shown in the following output, the Epipe service uses PXC 1, which is the non-redundant PXC port. This is only an example; it could similarly use the redundant PXC port, in which case the SAP syntax would be the conventional LAG syntax (for example, lag-1:100, lag-2:100). Although VLAN 100 is used both at PE-3's Epipe SAP and PE-5's Epipe PXC SAP, there is no correlation or dependence between the two. Both VLAN tags are service-delimiting and are subsequently stripped before the Ethernet frame is encapsulated into the pseudowire payload, so any valid VLAN value could be used at either point. The service configuration on PE-5 is as follows:

```
# on PE-5:
configure
   service
        sdp 53 mpls create
            far-end 192.0.2.3
            ldp
            keep-alive
               shutdown
            exit
            no shutdown
        epipe 11 name "Epipe 11" customer 1 create
            sap pxc-1.a:100 create
                no shutdown
            exit
            spoke-sdp 53:11 create
                no shutdown
            exit
            no shutdown
        exit
```

The VPRN configuration at the corresponding side of the PXC port is shown in the following output. The VPRN has two interfaces: the first is toward a directly connected test port used to verify IP connectivity, and the second ("to-CE-4") is toward CE-4 and has a SAP with a PXC syntax. The PXC syntax represents the same PXC and VLAN identifiers as the preceding Epipe configuration, but the PXC sub-port is .b, to represent the "other side" of the PXC logical loopback. Therefore, the VLAN values must match to create the back-to-back connection. Although not shown in the output (for brevity), a BGP session is configured

between PE-5 and CE-4 for route exchange. The remainder of the VPRN parameters are generic and are not described here.

```
# on PE-5:
configure
    service
        vprn 10 name "VPRN 10 using PXC DVSM" customer 1 create
             autonomous-system 64496
             interface "Test-Port-C" create
                 address 172.31.105.1/24
                 sap 1/1/c10/1:100 create
             exit
             interface "to-CE-4" create
                 address 192.168.45.2/30
                 sap pxc-1.b:100 create
                 exit
             exit
             bgp-ipvpn
                 mpls
                     auto-bind-tunnel
                          resolution any
                     exit
                     route-distinguisher 64496:10
                     vrf-import "vrf10-import"
vrf-export "vrf10-export"
                     no shutdown
                 exit
             exit
             bgp
                 group "EBGP"
             ---snip---
             no shutdown
        exit
```

PXC port dimensioning

When the VPRN service at PE-5 is put into a **no shutdown** state, the EBGP session to CE-4 is established. The relevant routes are exchanged between CE-4 and PE-5 and traffic can be exchanged between test ports B (connected to CE-4) and C (connected to PE-5). Initially, traffic is sent from test port B toward port C at a rate of 100 packets/s. Traffic is intentionally sent in only one direction (in this example) to emphasize a point regarding PXC port dimensioning and capacity planning, as follows.

The PXC in use by the Epipe/VPRN service is PXC 1, which uses physical port 1/1/c20/1. The following output shows a snapshot of a monitor command against the physical port. Although traffic is only being sent in a single direction (test port B behind CE-4 toward test port C connected to PE-5), the input/output rate of packets per second is the same at 100 packets/s. This is because the physical port consists of two PXC sub-ports that are looped.

Octets	51600	51600
Packets	100	100
Errors	0	0
Bits	412800	412800
Utilization (% of port capacity)	~0.00	~0.00

In this example, traffic is output from pxc-1.a when traffic is sent from the Epipe SAP into the PXC port, and traffic is input at pxc-1.b when traffic is received by the VPRN SAP from the PXC port. Because both upstream/ingress traffic and downstream/egress traffic are seen as output packets using the available capacity of the physical port, this needs to be considered when capacity is being planned.

QoS continuity

The application of ingress/egress SAP QoS policies is fundamentally the same for a PXC-based SAP as it is for a conventional SAP. However, there is a difference with regard to how ingress Forwarding Class (FC) mappings are maintained throughout the PXC in DVSM mode. On a conventional SAP, ingress packets are classified and mapped to an FC. That FC mapping is maintained (as part of the fabric header) when the packet transits through the system and is ultimately used to define the egress queue and egress marking, such as MPLS EXP bits or dot1p bits.

However, the PXC sub-ports are subtly different. Consider SAP ingress traffic entering the VPRN at PE-5 from the locally connected test port C destined toward test port B at CE-4. At the ingress to PE-5, this traffic is mapped to FC Expedited Forwarding (EF) and forwarded into the PXC port through SAP pxc-1.b:100. When the traffic is forwarded out of the (PXC) SAP, the fabric header is removed as if it were a conventional SAP, and therefore, the information conveying the FC mapping is lost. When the traffic arrives at the opposing PXC sub-port SAP (in this case, pxc-1.a:100), a further FC classification is undertaken, and without some non-default configuration, traffic is classified as FC Best Effort (BE). Therefore, it is a requirement to use non-default ingress/egress QoS policies through the PXC port to maintain FC continuity. A relatively simple way to do to this is through the use of dot1p markings.

To illustrate how this FC continuity is achieved, and in general how QoS is applied to PXC ports, an example of the relevant policies applied to PE-5's egress traffic toward CE-4 is used.

The first of the following outputs provides an example of the SAP-egress QoS policy applied at the VPRN PXC SAP (pxc-1.b:100). There are three classes in use: BE, Assured-Forwarding (AF), and EF. These FCs are remapped to queues 1, 2, and 3, respectively, and each queue is mapped to a parent H-QoS scheduler. Because the FCs must be maintained through the PXC loop, dot1p markings are used to distinguish between them. FC EF uses dot1p 5, FC AF uses dot1p 3, and FC BE uses dot1p 1. The SAP egress QoS policy is configured on PE-5 as follows:

```
queue 2
    dot1p 3
exit
fc be create
    queue 1
    dot1p 1
exit
fc ef create
    queue 3
    dot1p 5
exit
exit
```

The configuration of the Tier 1 scheduler "aggregate-rate" referenced by the child queues in the preceding SAP-egress QoS policy is shown in the following output. The scheduler in turn references a **port-scheduler-policy** using the **port-parent** command. Parenting to a port-scheduler is optional, but allows for inclusion of Preamble and Inter-Frame Gap (IFG) in the QoS scheduling algorithm, which is otherwise not included by a conventional H-QoS scheduler. The **port-scheduler-policy** "port-scheduler" is not referenced directly by the Tier 1 scheduler, but rather the port-scheduler is inherited by any child queues on the port to which the port-scheduler is applied. In this case, the **port-scheduler-policy** "port-scheduler" is applied to the PXC sub-port pxc-1.b as follows:

```
# on PE-5:
configure
    aos
        port-scheduler-policy "port-scheduler" create
        scheduler-policy "egress-hqos-scheduler" create
            tier 1
                scheduler "aggregate-rate" create
                    port-parent
                    rate 1
                exit
            exit
        exit
    exit
    port pxc-1.b
        ethernet
            egress-scheduler-policy "port-scheduler"
        no shutdown
    exit
```

Finally, the SAP-egress QoS policy is applied to the PXC sub-port SAP within the VPRN interface context. The H-QoS scheduler is also attached and an override of the rate configured. In summary, the SAP-egress QoS policy configuration looks exactly like that used on a conventional SAP, other than the dot1p markings used for FC continuity, which may not always be used or required.

```
exit
exit
qos 2
exit
exit
exit
exit
```

On the opposing side of the PXC loop, the dot1p markings imposed by the VPRN SAP egress are used to reclassify traffic back to its original FC mapping. The following output shows the SAP-ingress QoS policy applied at the Epipe PXC sub-port SAP (pxc-1.a:100). As shown in this output, dot1p 5 is mapped to FC EF, dot1p 3 is mapped to FC AF, and dot1p 1 is mapped to FC BE, thereby retaining the FC mappings through the PXC port.

```
# on PE-5:
configure
    qos
        sap-ingress 11 name "SAP ingress 11" create
            queue 1 create
            queue 2 best-effort create
                rate max cir max
            exit
            queue 3 expedite create
               rate max cir max
            exit
            fc "af" create
                queue 2
            exit
            fc "be" create
                queue 1
            exit
            fc "ef" create
                queue 3
            exit
            dot1p 1 fc "be"
            dot1p 3 fc "af"
            dot1p 5 fc "ef"
        exit
```

The preceding configuration shows the required QoS policies for downstream traffic (VPRN egress to Epipe ingress). Corresponding QoS policies must also be configured for upstream traffic (Epipe egress to VPRN ingress). For brevity, they are not shown here.

AS mode

AS mode creates an FPE context that is used to provide information to the system about which PXC ports or LAGs are paired, so that the configuration process can be simplified by automatic provisioning of cross-connects. To illustrate the use of AS mode, the redundant PXC (formed of LAG 1 and 2) configured earlier in this chapter is used. However, redundancy is not a requirement. Non-redundant PXC ports can also be used with AS mode.

For AS mode, a similar setup to the DVSM example is used, with Epipe termination into a VPRN. This provides a generic view of the applicability of AS mode, but also allows a direct comparison between the DVSM and AS mode approaches. Again, PE-3 in Figure 17: Example topology functions as a Layer 2 backhaul device and PE-5 hosts the PXC functions as the Layer 3 service edge. A pseudowire is extended from PE-3 to PE-5 where it is terminated in a VPRN, providing point-to-point connectivity between CE-4 and PE-5.

The configuration of the Epipe service at PE-3 is as follows:

```
# on PE-3:
configure
    service
    epipe 13 name "Epipe 13" customer 1 create
        sap 1/1/c3/1:100.* create
            no shutdown
    exit
    spoke-sdp 35:13 create
            force-vlan-vc-forwarding
            no shutdown
    exit
        no shutdown
    exit
        no shutdown
    exit
        no shutdown
    exit
```

CE-4 uses Q-in-Q encapsulation on the PE-CE link to PE-3 with SVLAN tag 100 and CVLAN tag 1024. At PE-3, it is indexed into an Epipe service using a q.* SAP to make the CVLAN tag transparent (part of the payload). As the spoke-SDP toward PE-5 is configured with **force-vlan-vc-forwarding**, both SVLAN and CVLAN tags are encapsulated in the pseudowire payload.

As in the previous configuration example, LAG 1 and LAG 2 are used for PXC redundancy. LAG 1 has the PXC sub-ports pxc-2.a and pxc-3.a as member links, while LAG 2 has the PXC sub-ports pxc-2.b and pxc-3.b as member links. For AS mode, the next requirement is to configure the FPE construct and assign the paired LAG instances to that FPE. When entering the **fwd-path-ext** context, the **sdp-id-range** must be configured before any FPE instances can be created. The **sdp-id-range** allocates a block of SDP identifiers to be used for the automatic cross-connects between service applications and the FPE.

After the **sdp-id-range** is configured, the FPE instance is created and the user enters the **fpe** context. The **path** command is used to assign redundant or non-redundant PXC objects to the FPE. In the case of a non-redundant FPE, the **path** command refers to a **pxc** instance. In the case of a redundant FPE, the **path** syntax requires that each of the paired LAG instances is assigned to cross-connect "a" or cross-connect "b".

Each FPE has two fundamental components, known as the transit side and the terminating side. The transit side is the side where additional traffic preprocessing is carried out, such as header removal or manipulation. It can be considered as the side closest to the network. The terminating side is the side where the preprocessed traffic is terminated in a service. When an FPE is used, the system automatically assigns cross-connect "a" to the transit side, and cross-connect "b" to the terminating side. In the following example, the **path xc-a lag-1 xc-b lag-2** command assigns LAG 1 to cross-connect "a" and LAG 2 to cross-connect "b". This means that LAG 1 is the transit side while LAG 2 is the terminating side.

The application of the FPE also needs to be configured. In this example, **pw-port-extension** is configured to allow for support of pseudowire-SAP (including Enhanced Subscriber Management (ESM) over pseudowire). The other available options (for example, vxlan-termination) are beyond the scope of this chapter.

After the LAG instance is assigned to the FPE, it can no longer be used for other general purposes, such as IP interfaces or SAPs. Any attempt to do so is blocked in CLI. The operational state of the FPE can be verified as follows:

It is also useful to be able to identify the services and pw-ports that are mapped to an FPE. This can be obtained using the **show fwd-path-ext fpe <number> associations** command.

The next step is to configure a pseudowire-port (pw-port) to be used for terminating services. The creation of the **pw-port** creates a new context in which the only required configuration is to define the encapsulation type as dot1q or qinq. In this instance, the **pw-port** supports **encap-type qinq**.

```
# on PE-5:
configure
   pw-port 1 create
     encap-type qinq
   exit
```

The operational state of the pw-port is captured as a reference at this point, so that a comparison can be made later in the configuration process.

At PE-5, the spoke-SDP from PE-3 must be linked to the configured pw-port (pw-port 1) via the FPE. To do this, an Epipe service must be used that is configured for multi-segment pseudowire working, using the creation-time attribute **vc-switching**. The Epipe service consists of a single spoke-SDP toward PE-3 with a VC-ID matching that signaled by PE-3 (VC-ID 13). The second endpoint within the Epipe service uses the **pw-port 1 fpe 1** command to reference the previously configured pw-port and FPE objects. This command essentially creates an internal cross-connect between the Epipe service and the pw-port via the configured FPE object. The configuration is as follows:

The following output shows the SDPs belonging to the preceding vc-switched Epipe service configured. The first SDP with identifier 53:13 is the pseudowire toward PE-3 with VC-ID 13. The second SDP has identifier 17280:1 allocated from the preconfigured **sdp-id-range**, and has a type of **Fpe**. In the configuration of **fpe 1**, the **path** command assigned LAG 1 to cross-connect "a" (**xc-a**) and LAG 2 to cross-connect "b" (**xc-b**). Also, cross-connect "b" is always automatically assigned to the terminate side of the FPE. Therefore, the Far End address is shown as fpe_1.b, to terminate the service.

With the vc-switching Epipe service configured and operational, the state of the pw-port can again be shown in the following output. Before the configuration of the vc-switching Epipe, the pw-port had no SDP identifier or VC-ID. Now both entries exist; automatically created by the system when **pw-port 1 fpe 1** was

configured as an endpoint within the vc-switching Epipe. The SDP identifier of 17281 is allocated from the preconfigured **sdp-id-range**.


The output for SDP 17281 shows that the Far End is fpe_1.a (transit), the Delivery (Del) is MPLS, the LSP type is FPE (F), and that no signaling (Sig) is used for this internal SDP, as follows:

*A:PE-	*A:PE-5# show service sdp 17281								
Service Destination Point (Sdp Id : 17281)									
SdpId	AdmMTU	OprMTU	Far End	Adm	0pr		Del	LSP	Sig
17281	0	9186	fpe_1.a	Up	Up		MPLS	F	None

In SR OS, the combination of SDP ID and VC-ID is always associated with a service. When using AS mode, the system automatically creates an internal VPLS service with ID 2147483649 and a name of _tmnx_InternalVplsService. This VPLS includes all internal SDPs dynamically created for binding pwports to the transit side of the corresponding FPE. The VPLS is an internal construct that does not affect forwarding.

Figure 20: AS mode with redundant FPE shows the components of the FPE from vc-switching Epipe to pw-port.

Figure 20: AS mode with redundant FPE

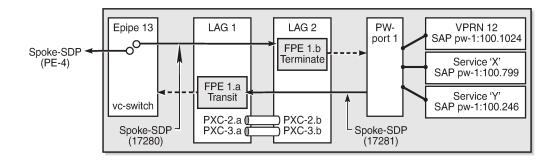

26266

Next, bind the VPRN service to the pw-port with the relevant VLAN delimiters. CE-4 is using SVLAN tag 100 and CVLAN tag 1024 and both VLANs are encapsulated inside the pseudowire as payload. The following VPRN configuration has two interfaces: the first is toward a directly connected test port used to verify IP connectivity, and the second is toward CE-4 and has a SAP with a pw-port syntax. The SAP pw-1:100.1024 represents pw-port 1 with Q-in-Q encapsulation using SVLAN tag 100 and CVLAN tag 1024 as service delimiters. Although not shown (for brevity), a BGP session is configured between PE-5

and CE-4 for route exchange. The remainder of the VPRN parameters are generic and are not described here.

```
# on PE-5:
configure
    service
        vprn 12 name "VPRN 12 using PXC AS" customer 1 create
            autonomous-system 64496
            interface "Test-Port-C" create
                address 172.31.105.1/24
                sap 1/1/c10/1:100 create
                exit
            exit
            interface "to-CE-4" create
                address 192.168.45.2/30
                sap pw-1:100.1024 create
                exit
            exit
            bgp-ipvpn
                mpls
                    auto-bind-tunnel
                         resolution any
                    exit
                    route-distinguisher 64496:12
                    vrf-target target:64496:12
                    no shutdown
                exit
            exit
            bap
                group "EBGP"
            ---snip--
            no shutdown
            exit
        exit
```

FPE port dimensioning

After the VPRN service at PE-5 is put into a **no shutdown** state, the EBGP session to CE-4 is established. The relevant routes are exchanged between CE-4 and PE-5 and traffic can be exchanged between test ports B (behind CE-4) and C (connected to PE-5). Initially, traffic is sent unidirectionally from test port C (connected to PE-5) toward port B (connected to CE-4) at a rate of 100 packets/s. To provide a level of entropy for the generated traffic, 100 destination IP addresses are used in the range 172.31.104.2 through 172.31.104.101, and 100 source IP addresses are used in the range 172.31.105.2 through 172.31.105.101.

The following output shows a snapshot of a monitor command against LAG 2 (xc-b, or terminating side) incorporating both physical ports. First, note that the input and output rate of packets per second are equal at 100 packets/s, which is not intuitive for a unidirectional traffic flow. This is because the LAG statistics are essentially a copy of the physical port statistics and the physical port consists of two PXC sub-ports that are looped. Logically, this unidirectional traffic flow is forwarded in a single upstream direction from pxc-2.a/pxc-3.a to pxc-2.b/pxc-3.b. Physically, the unidirectional traffic is transmitted by ports 1/1/c21/1 and 1/1/c22/1, then received by the same ports through the loop. Second, note that traffic is load-balanced over both member links (PXC sub-ports) of the LAG. This is because conventional LAG load-balancing mechanisms are used for the FPE LAG, which in the case of a VPRN SAP-to-network relies on source/ destination IP address (with optional Layer 4, which is not currently configured).

```
*A:PE-5# monitor lag 2 rate interval 3
```

Monitor statist	ics for LAG ID 2			
Port-id	Input packets Input bytes Input errors [Input util	%]	Output packets Output bytes Output errors [Out	:put util %]
snip				
At time t = 9 s	ec (Mode: Rate)			
1/1/c21/1! 1/1/c22/1!	41 22041 0 59 32159	~0.00	41 22041 0 59 32159	~0.00
Totals ! indicates tha	100 54200 0 t the port is assigned to	~0.00 a port-	- -	~0.00

Traffic is then generated unidirectionally upstream from test port B (connected to CE-4) toward port C (connected to PE-5) at a rate of 100 packets/s. Again, to provide a level of entropy for the generated traffic, 100 destination IP addresses are used in the range 172.31.105.2 through 172.31.105.101, and 100 source IP addresses are used in the range 172.31.104.2 through 172.31.104.101. The input/output rates of packets per second are the same, as previously explained. Again, traffic is load-balanced over both member links (PXC sub-ports). This is because hashing of traffic through a vc-switched Epipe service uses source/destination IP information (and optional Layer 4 information, which is not currently configured).

Monitor stati	istics for LAG ID 2			
Port-id	Input packets Input bytes Input errors [In		Output packets Output bytes Output errors [Output util %]
snip				
At time $t = 9$	9 sec (Mode: Rate)			
1/1/c21/1! 1/1/c22/1!	44 23848 0 56 30352	~0.00	56 30352	~0.00
Totals	100 54200 0	~0.00	100 54200	~0.00

QoS continuity

When using AS mode, the FPE construct creates internal cross-connects between the vc-switching Epipe and the pw-port. These internal cross-connects function as MPLS tunnels that transit through internal network interfaces on the PXC sub-ports. The internal network interfaces use the default network policy 1 for egress marking and ingress classification/FC mapping. Like all default QoS policies, this network policy cannot be modified (or deleted). Also, it is not possible to use a non-default network policy, because there is no router interface to which the non-default policy can be attached.

The internal cross-connects also use the default network-queue policy named "default". While this policy also cannot be modified, it is possible to configure and apply a non-default network-queue policy (including a port-scheduler-policy, if required) at PXC sub-port level. An example of how this is applied is shown in the following output. Where redundant PXC ports are used in an LAG instance, the queue-policy must be applied to the primary link of the LAG, which is then automatically applied to all other member links. (The primary link of the LAG can be identified using the command "show lag n port".)

To demonstrate QoS continuity through the FPE, the following is established:

- Downstream: Traffic is generated from test port C (connected to PE-5) toward test port B (connected to CE-4) with DiffServ marking EF at a rate of 100 packets/s. At PE-5 SAP ingress, this traffic is mapped into FC EF.
- Upstream: Traffic is generated from test port B (connected to CE-4) toward test port C (connected to PE-5) with DiffServ marking EF at a rate of 100 packets/s. At PE-3, a SAP-ingress QoS policy is used to map the traffic into FC EF.
- The default network QoS policy 1 is used on all network interfaces at PE-3 and PE-5. On egress, this
 policy marks FC EF as MPLS EXP 5. On ingress, MPLS EXP 5 is mapped to FC EF.
- The default network queue-policy "default" is used on all network interfaces at PE-3 and PE-5. This
 maps FC EF traffic to queue 6 at ingress and egress.

First, QoS continuity for downstream traffic is validated. The following output shows the relatively simple SAP-egress QoS policy that is applied to the egress of the VPRN interface (pw-port) toward CE-4. No classification of traffic and mapping to FCs are present in the policy, because the classification and mapping have already taken place on the SAP ingress at PE-5 (the SAP facing the test port C).

```
exit
queue 3 expedite create
    parent "aggregate-rate" cir-level 3
    rate 2000 cir 2000
exit
fc af create
    queue 2
exit
fc be create
    queue 1
exit
fc ef create
    queue 3
exit
exit
```

The configuration of the Tier 1 scheduler "aggregate-rate" referenced by the child queues in the preceding SAP-egress QoS policy is as follows. The Tier 1 scheduler references a **port-scheduler-policy** using the command **port-parent**. Parenting to a port-scheduler is optional, but allows for inclusion of Preamble and IFG in the QoS scheduling algorithm, which otherwise are not included. The Tier 1 scheduler does not directly reference the port-scheduler-policy by name, but rather inherits any port-scheduler configured on the port to which the child queues are mapped. In this example, the port-scheduler-policy "port-scheduler" is applied to PXC sub-port pxc-2.b (terminating side). This is the primary link of LAG 2 and ensures that the same port-scheduler-policy is automatically applied to other member ports.

```
# on PE-5:
configure
   qos
        port-scheduler-policy "port-scheduler" create
        scheduler-policy "egress-hqos-scheduler" create
            tier 1
                scheduler "aggregate-rate" create
                    port-parent
                    rate 1
                exit
            exit
      exit
   exit
   port pxc-2.b
        ethernet
            egress-scheduler-policy "port-scheduler"
       no shutdown
   exit
```

Finally, the SAP-egress QoS policy is applied to the pw-port SAP within the VPRN. The egress H-QoS scheduler is also attached and an override of the rate is configured.

```
exit
qos 12
exit
exit
exit
```

When traffic is generated downstream from test port C toward CE-4 in FC EF at a rate of 100 packets/s, the first point of verification is the VPRN pw-port SAP egress. The following output is a **monitor** of the SAP showing that traffic is correctly mapped to queue 3.

```
*A:PE-5# monitor service id 12 sap pw-1:100.1024 rate
Monitor statistics for Service 12 SAP pw-1:100.1024
______
At time t = 11 sec (Mode: Rate)
---snip---
Sap per Queue Stats
               Packets
                                       Octets
                                                             % Port
                                                             Util.
---snip---
Egress Queue 3
For. In/InplusProf : 0
                                                             0.00
                                       51600
Dro. In/InplusProf : 0
Dro. Out/ExcProf
                                                             0.04
                                                             0.00
                                         0
                                                             0.00
```

Monitoring of network interfaces does not show queue statistics (and is not supported on PXC sub-ports), but a verification of the sub-port statistics on the transit side (LAG 1) shows that packets are incrementing in ingress queue 6 on both sub-ports, as follows:

```
*A:PE-5# show port pxc-2.a detail | match "Ingress Queue 6" post-lines 4
Ingress Queue 6
                  Packets
                                                0ctets
    In Profile forwarded : 711
                                                  382518
    In Profile dropped :
                            0
                                                  0
    Out Profile forwarded :
                            0
                                                   0
                                                   0
    Out Profile dropped :
                            0
*A:PE-5# show port pxc-3.a detail | match "Ingress Queue 6" post-lines 4
Ingress Queue 6
                    Packets
                                                0ctets
    In Profile forwarded : 404
                                                  217352
    In Profile dropped :
                            0
                                                   0
    Out Profile forwarded :
                            0
                                                  0
    Out Profile dropped :
                            0
                                                   0
```

The last point of verification is the network egress interface toward PE-3. Again, a check at the physical port level shows that packets are incrementing in egress queue 6. Therefore, we can conclude that QoS/FC continuity is maintained in the downstream direction.

```
*A:PE-5# show port 1/1/c2/1 detail | match "Egress Queue 6" post-lines 4
Egress Queue 6 Packets Octets
In/Inplus Prof fwded : 2394 1297548
In/Inplus Prof dropped: 0 0
Out/Exc Prof fwded : 0 0
```

```
Out/Exc Prof dropped : 0 0
```

Next, the upstream QoS continuity is verified. PE-3 is marking traffic generated by test port B to FC EF, which in turn is marked as MPLS EXP 5 by PE-3's default network QoS policy. The following output taken at PE-5 shows that packets are incrementing in ingress queue 6 of the network interface toward PE-3 and confirms that traffic is correctly marked as FC EF at ingress.

```
*A:PE-5# show port 1/1/c2/1 detail | match "Ingress Queue 6" post-lines 4
Ingress Queue 6
                            Packets
                                                    0ctets
    In Profile forwarded :
                               3458
                                                       1874236
                               0
                                                        0
     In Profile dropped
    Out Profile forwarded :
                               0
                                                       0
    Out Profile dropped
                               0
                                                        0
```

The next point of verification is the egress side of the PXC sub-ports (pxc-2.a and pxc-3.a) forming the transit side (LAG 1). The sub-port statistics verify that packets are incrementing in egress queue 6 of both sub-ports (as traffic is being load-balanced).

```
*A:PE-5# show port pxc-2.a detail | match "Egress Queue 6" post-lines 4
Egress Queue 6
                             Packets
                                                     0ctets
     In/Inplus Prof fwded :
                                12441
                                                        6693258
     In/Inplus Prof dropped:
                                0
                                                        0
    Out/Exc Prof fwded
                                0
                                                        0
    Out/Exc Prof dropped :
                                                        0
*A:PE-5# show port pxc-3.a detail | match "Egress Queue 6" post-lines 4
Egress Queue 6
                             Packets
                                                     0ctets
     In/Inplus Prof fwded :
                                12893
                                                        6936434
    In/Inplus Prof dropped:
                                Θ
                                                        0
    Out/Exc Prof fwded
                                0
                                                        0
                         :
    Out/Exc Prof dropped :
                                0
                                                        0
```

PXC sub-ports operate in hybrid mode. When the upstream traffic arrives on the PXC sub-ports that form the terminating side of the FPE (pxc-2.b and pxc-3.b), it is mapped to the pw-port SAP-ingress queues, bypassing the ingress network QoS policy and associated ingress network queues. As a result, the MPLS EXP-to-FC mapping cannot be fulfilled and traffic requires reclassification and remapping to the correct FC by the SAP-ingress QoS policy. The following output shows the SAP-ingress QoS policy applied to the pw-port SAP within the VPRN. Because the EXP-to-FC mapping could not be completed, FC reclassification is required to map traffic to its original FC before transiting the FPE. In this example, DSCP is used. Also, FC EF is mapped to queue 3.

```
#on PE-5:
configure
   aos
      sap-ingress 12 create
            queue 1 create
                parent "aggregate-rate" level 2 weight 10
            exit
            queue 2 best-effort create
                parent "aggregate-rate" level 2 weight 40 cir-level 2
                rate 5000 cir max
            exit
            queue 3 expedite create
                parent "aggregate-rate" cir-level 3
                rate 2000 cir 2000
            queue 11 multipoint create
                rate max cir max
```

```
exit

fc "af" create
    queue 2

exit

fc "be" create
    queue 1

exit

fc "ef" create
    queue 3

exit

dscp af31 fc "af"

dscp be fc "be"

dscp ef fc "ef"

exit
```

For completeness, the configuration of the Tier 1 scheduler "aggregate-rate" referenced by the child queues in the preceding SAP-ingress QoS policy is as follows. Unlike the egress counterpart, there is no parenting to a port-scheduler because this is an egress function only.

The SAP-ingress QoS policy is applied to the pw-port SAP within the VPRN, together with the ingress H-QoS scheduler. An override of the scheduler rate is also applied.

```
# on PE-5:
configure
   service
        vprn 12 name "VPRN 12 using PXC AS" customer 1 create
            interface "to-CE-4" create
                sap pw-1:100.1024 create
                    ingress
                        scheduler-policy "ingress-hqos-scheduler"
                        scheduler-override
                            scheduler "aggregate-rate" create
                                rate 25000
                            exit
                        exit
                        qos 12
                    exit
                exit
            exit
```

With the SAP-ingress policy applied, a monitor output of the SAP in the following output verifies that the packets are being received in queue 3 at a rate of 100 packets/s. This verifies the FC continuity in the upstream direction, noting that reclassification and remapping of FC is required at SAP ingress.

snip				
Sap per Queue Sta	ts			
	Packets	0ctets	% Port Util.	
snip				
Ingress Queue 3 (Unicast) (Priority)			
Off. HiPrio	: 0	Θ	0.00	
Off. LowPrio	: 100	51647	0.04	
Dro. HiPrio	: 0	Θ	0.00	
Dro. LowPrio	: 0	Θ	0.00	
For. InProf	: 0	Θ	0.00	
For. OutProf	: 100	51647	0.04	

OAM continuity

The FPE pw-port functionality may be used by redundant routers to provide resilient service termination for a Layer 2 backhaul node implementing a mechanism such as active/standby pseudowire. In SR OS, an active/standby pseudowire is modeled as an Epipe or VPLS service with an endpoint object containing two spoke-SDPs. This form of redundancy relies on the propagation of the Pseudowire Status TLV within an LDP Notification message to convey the operational status of the pseudowires and thereby indicate which one of the pseudowires is active and which one is standby.

The FPE construct uses the concept of a multi-segment pseudowire, implementing Switching-PE (S-PE) functionality to instantiate dynamic cross-connects through the FPE. To verify that LDP status signaling is maintained through this S-PE function, the following is established:

- The Epipe service at PE-3 used for Layer 2 backhaul to the FPE is modified to include an endpoint object referenced by two spoke-SDPs.
- The first spoke-SDP has a far end of PE-2 and is configured as precedence primary, so becomes the
 active pseudowire.
- The second spoke-SDP has a far end of PE-5 and is configured with the default precedence 4, so becomes the standby pseudowire.
- Because the endpoint object is configured for standby-signaling-master, PE-3 signals a status of standby toward PE-5.

For completeness, the configuration of the Epipe service at PE-3 is as follows:

```
# on PE-3:
configure
    service
    epipe 13 name "Epipe 13" customer 1 create
        endpoint "redundant-Layer3" create
             standby-signaling-master
        exit
        sap 1/1/c3/1:100.* create
             no shutdown
        exit
        spoke-sdp 32:13 endpoint "redundant-Layer3" create
                  precedence primary
                   no shutdown
        exit
        spoke-sdp 35:13 endpoint "redundant-Layer3" create
                   no shutdown
```

```
exit
no shutdown
exit
```

As shown in the following output, PE-3 has the spoke-SDP to PE-5 (sdp 35:13) as administratively and operationally up, but is signaling a status of standby (pwFwdingStandby).

At PE-5, the signaled status is acknowledged at the far end of the pseudowire in the Peer Pw Bits field.

Typically, an S-PE propagates the status TLV received from one pseudowire segment into the opposing pseudowire segment to provide end-to-end status signaling. However, when using FPE, the SR OS Service Manager process correlates between a pseudowire and its corresponding pw-port SAPs, so can take the necessary actions based upon the operational state of each. Therefore, it is not necessary for the S-PE to propagate the status TLV from one segment to another. This is illustrated in the following output at PE-5, which shows the second segment of the multi-segment pseudowire toward the terminating side fpe_1.b. As described, the status bits are not copied between single segments and all local or peer pseudowire bits remain unset.

The pw-port 1 used throughout in this example is internally bound to SDP 17281:

The following output shows that SDP 17281 is operationally down with the flag "stitchingSvcTxDown":

```
*A:PE-5# show service sdp 17281 detail | match "SDP: 17281 Pw-port: 1" post-lines 12 SDP: 17281 Pw-port: 1

VC-Id : 100001 Admin Status : up Encap : qinq Oper Status : down
```

```
VC Type : ether
Dot1Q Ethertype : 0x8100 QinQ Ethertype : 0x8100
```

Dot1Q Ethertype : 0x8100
Control Word : Not Preferred
Entropy Label : Disabled
Service MTU : default

Admin Ingress label : 524281 Admin Egress label : 524282

Oper Flags : stitchingSvcTxDown
Monitor Oper-Group : (Not Specified)

At service level, the first of the following two outputs shows the state of the SAP bound to pw-port 1. As shown, the operational state is down with an indication that this is caused by the port being operationally down. The second output shows that this SAP status is propagated to IP interface level because the interface "to-CE-4" is also shown as operationally down.

*A:PE-5# show router 12 interfa	ace "to-C	E-4"		
Interface Table (Service: 12)				
Interface-Name IP-Address	Adm	0pr(v4/v6)	Mode	Port/SapId PfxState
to-CE-4 192.168.45.2/30	Up	Down /Down	VPRN	pw-1:100.1024 n/a
Interfaces : 1				

To verify a failover, the state of the active/standby pseudowire is transitioned by failing the active pseudowire between PE-3 and PE-2. This causes PE-3 to declare the pseudowire to PE-5 active, which clears the standby status bits. This action causes the SDP (17281) bound to pw-port 1 to become operationally up, followed by pw-port 1 and its associated SAPs, followed by the VPRN IP interface "to-CE-4".

```
258 2025/04/30 08:49:57.221 UTC WARNING: SNMP #2005 vprn12 to-CE-4
"Interface to-CE-4 is operational"

257 2025/04/30 08:49:57.220 UTC MAJOR: SVCMGR #2210 Base
"Processing of an access port state change event is finished and the status of all affected SAPs on port pw-1 has been updated."

256 2025/04/30 08:49:57.220 UTC MINOR: SVCMGR #2313 Base
"Status of SDP Bind 53:13 in service 13 (customer 1) peer PW status bits changed to none"

255 2025/04/30 08:49:57.220 UTC MINOR: SVCMGR #2103 Base
"Status of service 2147483649 (customer 1) changed to administrative state: up, operational state: up"
```

This example in the AS mode section illustrates how notification of a downstream failure is propagated through the components of the PXC in AS mode and reflected in the status of the pw-port (and its associated services). Also, if a pw-port fails because of a PXC failure (for example, the physical port fails), it is just as important that the operational state is propagated externally. In the case of pseudowire

backhaul (as in the example), this would be achieved by setting the LDP pseudowire status bits to psnIngressFault and psnEgressFault toward the far end.

Conclusion

This chapter demonstrates the principles of PXC configuration. The PXC can be used to provide a relatively simple back-to-back cross-connect operation in DVSM mode, or it can be used in AS mode to provide an integrated path through the FPE with automated cross-connects used to simplify the provisioning process. In both DVSM mode and AS mode, the PXC can be configured as redundant or non-redundant. A relatively simple use-case of terminating an Epipe into a VPRN has been demonstrated for both modes.

There are a large number of use-cases where frame/packet preprocessing is required before service termination. The workaround for these use-cases has previously been a physical external loop, but can now be resolved logically and internally through use of the PXC.

Customer document and product support



Customer documentation

Customer documentation welcome page



Technical support

Product support portal



Documentation feedback

Customer documentation feedback