



Nokia Service Router Linux

Release 23.3

Log Events Guide

3HE 19177 AAAA TQZZA
Edition 01
April 2023

Nokia is committed to diversity and inclusion. We are continuously reviewing our customer documentation and consulting with standards bodies to ensure that terminology is inclusive and aligned with the industry. Our future customer documentation will be updated accordingly.

This document includes Nokia proprietary and confidential information, which may not be distributed or disclosed to any third parties without the prior written consent of Nokia.

This document is intended for use by Nokia's customers ("You"/"Your") in connection with a product purchased or licensed from any company within Nokia Group of Companies. Use this document as agreed. You agree to notify Nokia of any errors you may find in this document; however, should you elect to use this document for any purpose(s) for which it is not intended, You understand and warrant that any determinations You may make or actions You may take will be based upon Your independent judgment and analysis of the content of this document.

Nokia reserves the right to make changes to this document without notice. At all times, the controlling version is the one available on Nokia's site.

No part of this document may be modified.

NO WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF AVAILABILITY, ACCURACY, RELIABILITY, TITLE, NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS MADE IN RELATION TO THE CONTENT OF THIS DOCUMENT. IN NO EVENT WILL NOKIA BE LIABLE FOR ANY DAMAGES, INCLUDING BUT NOT LIMITED TO SPECIAL, DIRECT, INDIRECT, INCIDENTAL OR CONSEQUENTIAL OR ANY LOSSES, SUCH AS BUT NOT LIMITED TO LOSS OF PROFIT, REVENUE, BUSINESS INTERRUPTION, BUSINESS OPPORTUNITY OR DATA THAT MAY ARISE FROM THE USE OF THIS DOCUMENT OR THE INFORMATION IN IT, EVEN IN THE CASE OF ERRORS IN OR OMISSIONS FROM THIS DOCUMENT OR ITS CONTENT.

Copyright and trademark: Nokia is a registered trademark of Nokia Corporation. Other product names mentioned in this document may be trademarks of their respective owners.

The registered trademark Linux® is used pursuant to a sublicense from the Linux Foundation, the exclusive licensee of Linus Torvalds, owner of the mark on a worldwide basis.

© 2023 Nokia.

Table of contents

1	About this guide.....	19
1.1	Precautionary and information messages.....	19
1.2	Conventions.....	19
2	Log events overview.....	21
2.1	Example log event.....	21
2.2	Log event properties.....	22
3	What's new.....	24
4	aaa.....	25
4.1	serverDown.....	25
4.2	serverGroupDown.....	25
4.3	serverRouteUnavailable.....	25
4.4	serverTimeout.....	26
4.5	sessionClosed.....	26
4.6	sessionDisconnected.....	27
4.7	sessionOpened.....	27
4.8	userAuthenticationFailed.....	28
4.9	userAuthenticationSucceeded.....	28
5	acl.....	29
5.1	aclCmplIpv4MatchedPacket.....	29
5.2	aclCmplIpv6MatchedPacket.....	29
5.3	aclInterfaceInputIpv4MatchedPacket.....	29
5.4	aclInterfaceInputIpv6MatchedPacket.....	30
5.5	aclInterfaceOutputIpv4MatchedPacket.....	30
5.6	aclInterfaceOutputIpv6MatchedPacket.....	31
5.7	aclTcamProgComplete.....	31
5.8	platformAclHighUtilization.....	32
5.9	platformAclHighUtilizationLowered.....	32
5.10	platformTcamHighUtilization.....	33
5.11	platformTcamHighUtilizationLowered.....	33

6	arpnd	35
6.1	ipArpEntryUpdated	35
6.2	ipSubinterfaceDuplicateIpv4Address	35
6.3	ipSubinterfaceDuplicateIpv6Address	36
6.4	ipSubinterfaceDuplicateMacAddress	36
6.5	ipSubinterfaceInvalidArp	36
6.6	ipSubinterfaceInvalidIpv6NeighborSolicitation	37
6.7	ipv6NeighborEntryUpdated	37
7	bfd	39
7.1	bfdDownEvent	39
7.2	bfdMaxSessionActive	39
7.3	bfdProtocolClientAdd	40
7.4	bfdProtocolClientRemove	40
7.5	bfdSessionDeleted	41
7.6	bfdSessionUp	41
7.7	bfdWarmrebootAdjustTimers	42
7.8	bfdWarmrebootRestoreTimers	42
7.9	microbfdDownEvent	42
7.10	microbfdMaxSessionActive	43
7.11	microbfdSessionDeleted	43
7.12	microbfdSessionUp	44
7.13	sbfdechoDownEvent	44
7.14	sbfdechoMaxSessionActive	45
7.15	sbfdechoSessionDeleted	45
7.16	sbfdechoSessionUp	46
8	bgp	47
8.1	bgpIncomingDynamicPeerLimitReached	47
8.2	bgpIncomingInterfaceDynamicPeerLimitReached	47
8.3	bgpInstanceConvergenceStateTransition	48
8.4	bgpLowMemory	48
8.5	bgpNeighborBackwardTransition	48
8.6	bgpNeighborClosedTCPConn	49
8.7	bgpNeighborEstablished	49

8.8	bgpNeighborGRHelpingStarted.....	50
8.9	bgpNeighborGRHelpingStopped.....	50
8.10	bgpNeighborHoldTimeExpired.....	51
8.11	bgpNeighborInvalidLocalIP.....	51
8.12	bgpNeighborNoOpenReceived.....	51
8.13	bgpNeighborPrefixLimitReached.....	52
8.14	bgpNeighborPrefixLimitThresholdReached.....	52
8.15	bgpNeighborUnknownRemoteIP.....	53
8.16	bgpNLRIInvalid.....	53
8.17	bgpNotificationReceivedFromNeighbor.....	54
8.18	bgpNotificationSentToNeighbor.....	54
8.19	bgpOutgoingDynamicPeerLimitReached.....	55
8.20	bgpPathAttributeDiscarded.....	55
8.21	bgpPathAttributeMalformed.....	56
8.22	bgpRouteWithdrawnDueToError.....	56
8.23	bgpUpdateInvalid.....	57
9	bridgetable.....	58
9.1	evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitHighUtilization.....	58
9.2	evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitHighUtilization Lowered.....	58
9.3	evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitLowered.....	59
9.4	evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitReached.....	59
9.5	I2SubinterfaceBridgeTableDuplicateMacAddressDeleted.....	60
9.6	I2SubinterfaceBridgeTableDuplicateMacAddressDetected.....	60
9.7	I2SubinterfaceBridgeTableMacLimitHighUtilization.....	61
9.8	I2SubinterfaceBridgeTableMacLimitHighUtilizationLowered.....	61
9.9	I2SubinterfaceBridgeTableMacLimitLowered.....	62
9.10	I2SubinterfaceBridgeTableMacLimitReached.....	62
9.11	networkInstanceBridgeTableDuplicateMacAddressDeleted.....	63
9.12	networkInstanceBridgeTableDuplicateMacAddressDetected.....	63
9.13	networkInstanceBridgeTableMacLimitHighUtilization.....	63
9.14	networkInstanceBridgeTableMacLimitHighUtilizationLowered.....	64
9.15	networkInstanceBridgeTableMacLimitLowered.....	64
9.16	networkInstanceBridgeTableMacLimitReached.....	65
9.17	networkInstanceBridgeTableProxyArpLimitHighUtilization.....	65
9.18	networkInstanceBridgeTableProxyArpLimitHighUtilizationLowered.....	66

9.19	networkInstanceBridgeTableProxyArpNdDuplicateIpAddressDeleted.....	66
9.20	networkInstanceBridgeTableProxyArpNdDuplicateIpAddressDetected.....	67
9.21	networkInstanceBridgeTableProxyNdLimitHighUtilization.....	67
9.22	networkInstanceBridgeTableProxyNdLimitHighUtilizationLowered.....	68
9.23	systemBridgeTableMacLimitHighUtilization.....	68
9.24	systemBridgeTableMacLimitHighUtilizationLowered.....	69
9.25	systemBridgeTableMacLimitLowered.....	69
9.26	systemBridgeTableMacLimitReached.....	70
9.27	systemBridgeTableProxyArpLimitHighUtilization.....	70
9.28	systemBridgeTableProxyArpLimitHighUtilizationLowered.....	70
9.29	systemBridgeTableProxyNdLimitHighUtilization.....	71
9.30	systemBridgeTableProxyNdLimitHighUtilizationLowered.....	71
9.31	systemMulticastIidLimitHighUtilization.....	72
9.32	systemMulticastIidLimitHighUtilizationLowered.....	72
9.33	vxlanInterfaceBridgeTableMulticastDestinationsLimitHighUtilization.....	73
9.34	vxlanInterfaceBridgeTableMulticastDestinationsLimitHighUtilizationLowered.....	73
9.35	vxlanInterfaceBridgeTableMulticastDestinationsLimitLowered.....	74
9.36	vxlanInterfaceBridgeTableMulticastDestinationsLimitReached.....	74
10	chassis.....	76
10.1	platformDatapathResourceHighUtilization.....	76
10.2	platformDatapathResourceHighUtilizationLowered.....	76
10.3	platformDatapathResourceLimitCleared.....	77
10.4	platformDatapathResourceLimitReached.....	77
10.5	platformMtuHighUtilization.....	77
10.6	platformMtuHighUtilizationLowered.....	78
10.7	platformPipelineResourceHighUtilization.....	78
10.8	platformPipelineResourceHighUtilizationLowered.....	79
10.9	platformPipelineResourceLimitCleared.....	79
10.10	platformPipelineResourceLimitReached.....	80
10.11	portDown.....	80
10.12	portUp.....	81
10.13	subinterfaceDown.....	81
10.14	subinterfaceUp.....	82
10.15	transceiverChannelHighInputPowerAlarm.....	82
10.16	transceiverChannelHighInputPowerAlarmClear.....	83

10.17	transceiverChannelHighInputPowerWarning.....	83
10.18	transceiverChannelHighInputPowerWarningClear.....	83
10.19	transceiverChannelHighLaserBiasCurrentAlarm.....	84
10.20	transceiverChannelHighLaserBiasCurrentAlarmClear.....	84
10.21	transceiverChannelHighLaserBiasCurrentWarning.....	85
10.22	transceiverChannelHighLaserBiasCurrentWarningClear.....	85
10.23	transceiverChannelHighOutputPowerAlarm.....	86
10.24	transceiverChannelHighOutputPowerAlarmClear.....	86
10.25	transceiverChannelHighOutputPowerWarning.....	86
10.26	transceiverChannelHighOutputPowerWarningClear.....	87
10.27	transceiverChannelLowInputPowerAlarm.....	87
10.28	transceiverChannelLowInputPowerAlarmClear.....	88
10.29	transceiverChannelLowInputPowerWarning.....	88
10.30	transceiverChannelLowInputPowerWarningClear.....	89
10.31	transceiverChannelLowLaserBiasCurrentAlarm.....	89
10.32	transceiverChannelLowLaserBiasCurrentAlarmClear.....	89
10.33	transceiverChannelLowLaserBiasCurrentWarning.....	90
10.34	transceiverChannelLowLaserBiasCurrentWarningClear.....	90
10.35	transceiverChannelLowOutputPowerAlarm.....	91
10.36	transceiverChannelLowOutputPowerAlarmClear.....	91
10.37	transceiverChannelLowOutputPowerWarning.....	92
10.38	transceiverChannelLowOutputPowerWarningClear.....	92
10.39	transceiverHighInputPowerAlarm.....	92
10.40	transceiverHighInputPowerAlarmClear.....	93
10.41	transceiverHighInputPowerWarning.....	93
10.42	transceiverHighInputPowerWarningClear.....	94
10.43	transceiverHighLaserBiasCurrentAlarm.....	94
10.44	transceiverHighLaserBiasCurrentAlarmClear.....	95
10.45	transceiverHighLaserBiasCurrentWarning.....	95
10.46	transceiverHighLaserBiasCurrentWarningClear.....	95
10.47	transceiverHighOutputPowerAlarm.....	96
10.48	transceiverHighOutputPowerAlarmClear.....	96
10.49	transceiverHighOutputPowerWarning.....	97
10.50	transceiverHighOutputPowerWarningClear.....	97
10.51	transceiverLowInputPowerAlarm.....	97
10.52	transceiverLowInputPowerAlarmClear.....	98

10.53	transceiverLowInputPowerWarning.....	98
10.54	transceiverLowInputPowerWarningClear.....	99
10.55	transceiverLowLaserBiasCurrentAlarm.....	99
10.56	transceiverLowLaserBiasCurrentAlarmClear.....	99
10.57	transceiverLowLaserBiasCurrentWarning.....	100
10.58	transceiverLowLaserBiasCurrentWarningClear.....	100
10.59	transceiverLowOutputPowerAlarm.....	101
10.60	transceiverLowOutputPowerAlarmClear.....	101
10.61	transceiverLowOutputPowerWarning.....	101
10.62	transceiverLowOutputPowerWarningClear.....	102
10.63	transceiverModuleDown.....	102
10.64	transceiverModuleHighTemperatureAlarm.....	103
10.65	transceiverModuleHighTemperatureAlarmClear.....	103
10.66	transceiverModuleHighTemperatureWarning.....	104
10.67	transceiverModuleHighTemperatureWarningClear.....	104
10.68	transceiverModuleHighVoltageAlarm.....	104
10.69	transceiverModuleHighVoltageAlarmClear.....	105
10.70	transceiverModuleHighVoltageWarning.....	105
10.71	transceiverModuleHighVoltageWarningClear.....	106
10.72	transceiverModuleLowTemperatureAlarm.....	106
10.73	transceiverModuleLowTemperatureAlarmClear.....	106
10.74	transceiverModuleLowTemperatureWarning.....	107
10.75	transceiverModuleLowTemperatureWarningClear.....	107
10.76	transceiverModuleLowVoltageAlarm.....	108
10.77	transceiverModuleLowVoltageAlarmClear.....	108
10.78	transceiverModuleLowVoltageWarning.....	108
10.79	transceiverModuleLowVoltageWarningClear.....	109
10.80	transceiverModuleUp.....	109
11	debug.....	110
11.1	setAllConfigLevels.....	110
11.2	setAllStartupLevels.....	110
11.3	setHighBaselineLogLevels.....	110
12	dhcp.....	112
12.1	dhcp6ClientAddressDeclined.....	112

12.2	dhcp6ClientIpv6AddressValidLifetimeExpired.....	112
12.3	dhcp6ClientRebindAttempted.....	112
12.4	dhcp6ClientReconfigureMsgDropped.....	113
12.5	dhcp6ClientRenewSuccess.....	113
12.6	dhcpClientAddressDeclined.....	114
12.7	dhcpClientLeaseExpired.....	114
12.8	dhcpClientRebindAttempted.....	115
12.9	dhcpClientRenewSuccess.....	115
12.10	dhcipv4RelayAdminDisable.....	116
12.11	dhcipv4RelayAdminEnable.....	116
12.12	dhcipv4RelayAllDhcpv4ServersUnreachable.....	117
12.13	dhcipv4RelayOperDown.....	117
12.14	dhcipv4RelayOperUp.....	118
12.15	dhcipv6RelayAdminDisable.....	118
12.16	dhcipv6RelayAdminEnable.....	118
12.17	dhcipv6RelayAllDhcpv6ServersUnreachable.....	119
12.18	dhcipv6RelayOperDown.....	119
12.19	dhcipv6RelayOperUp.....	120
12.20	giAddressMismatch.....	120
12.21	sourceAddressMismatch.....	121
13	ethcfm.....	122
13.1	ClearErrorCcm.....	122
13.2	ClearLossOfContinuity.....	122
13.3	ClearMacStatus.....	122
13.4	ClearMismerge.....	123
13.5	clearOneWayDmTCA.....	123
13.6	ClearRemoteCcm.....	124
13.7	ClearRemoteDefectIndication.....	124
13.8	clearTwoWayDmTCA.....	125
13.9	clearTwoWaySlmAvgflrTCA.....	125
13.10	clearTwoWaySlmHliTCA.....	126
13.11	clearTwoWaySlmUnavailTCA.....	126
13.12	ClearUnexpectedMegLevel.....	126
13.13	ClearUnexpectedMep.....	127
13.14	ClearUnexpectedPeriod.....	127

13.15	ClearXconCcm.....	128
13.16	linktraceCompleted.....	128
13.17	loopbackCompleted.....	129
13.18	oneWayDmCompleted.....	129
13.19	RaiseErrorCcm.....	129
13.20	RaiseLossOfContinuity.....	130
13.21	RaiseMacStatus.....	130
13.22	RaiseMismerge.....	131
13.23	raiseOneWayDmTCA.....	131
13.24	RaiseRemoteCcm.....	132
13.25	RaiseRemoteDefectIndication.....	132
13.26	raiseTwoWayDmTCA.....	133
13.27	raiseTwoWaySlmAvgflrTCA.....	133
13.28	raiseTwoWaySlmHliTCA.....	134
13.29	raiseTwoWaySlmUnavailTCA.....	134
13.30	RaiseUnexpectedMegLevel.....	135
13.31	RaiseUnexpectedMep.....	135
13.32	RaiseUnexpectedPeriod.....	136
13.33	RaiseXconCcm.....	136
13.34	twoWayDmCompleted.....	136
13.35	TwoWaySlmAvailabilityState.....	137
13.36	twoWaySlmCompleted.....	137
14	evpn.....	139
14.1	ethernetsegmentNetworkInstanceBgpInstanceDfStatusChanged.....	139
14.2	ethernetsegmentPreferenceOperValueChanged.....	139
14.3	evpnAutoDiscoveryEviRouteAddDroppedDueToUnexpectedEthTag.....	140
14.4	evpnAutoDiscoveryEviRouteWithdrawDroppedDueToUnexpected EthTag.....	140
14.5	evpnAutoDiscoveryEviRouteWithdrawnDueToUnexpectedVni.....	141
14.6	evpnInclMcastRouteAddDroppedDueToUnexpectedEthTag.....	141
14.7	evpnInclMcastRouteWithdrawDroppedDueToUnexpectedEthTag.....	142
14.8	evpnInclMcastRouteWithdrawnDueToUnexpectedVni.....	142
14.9	evpnIpPrefixRouteNotImportedDueToUnexpectedVni.....	143
14.10	evpnIpPrefixRouteWithdrawnDueToNoGwMac.....	144
14.11	evpnIpPrefixRouteWithdrawnDueToUnexpectedGwIp.....	144
14.12	evpnMacRouteAddDroppedDueToUnexpectedEthTag.....	145

14.13	evpnMacRouteWithdrawDroppedDueToUnexpectedEthTag.....	145
14.14	evpnMacRouteWithdrawnDueToUnexpectedVni.....	146
15	gnmi.....	147
15.1	globalConfigUpdate.....	147
15.2	gnmiServerStart.....	147
15.3	gnmiServerStop.....	147
15.4	networkInstanceConfigUpdate.....	148
15.5	subscriptionEnd.....	148
15.6	subscriptionRequestReceived.....	149
15.7	subscriptionStart.....	149
15.8	unixSocketGnmiOperDown.....	150
15.9	unixSocketGnmiOperUp.....	150
16	gribi.....	151
16.1	globalConfigUpdate.....	151
16.2	gribiServerStart.....	151
16.3	gribiServerStop.....	151
16.4	networkInstanceConfigUpdate.....	152
16.5	unixSocketGribiOperDown.....	152
16.6	unixSocketGribiOperUp.....	153
17	igmp.....	154
17.1	igmpCModeRxQueryVersionMismatch.....	154
17.2	igmpMaxNumberOfGroupSourcesReached.....	154
17.3	igmpMaxNumberOfGroupsReached.....	155
17.4	igmpMaxNumberOfSourcesReached.....	155
17.5	igmpRxQueryVersionMismatch.....	156
18	isis.....	157
18.1	isisAdjacencyBfdSessionSetupFailed.....	157
18.2	isisAdjacencyChange.....	157
18.3	isisAdjacencyRestartStatusChange.....	157
18.4	isisAreaMismatch.....	158
18.5	isisAuthDataFail.....	158
18.6	isisAuthTypeMismatch.....	159
18.7	isisCircuitIdsExhausted.....	159

18.8	isisCircuitMtuTooLow.....	160
18.9	isisCorruptedLspDetected.....	160
18.10	isisLdpSyncExited.....	161
18.11	isisLdpSyncTimerStarted.....	161
18.12	isisLspFragmentTooLarge.....	162
18.13	isisLspPurge.....	162
18.14	isisLspSequenceNumberSkip.....	163
18.15	isisMaxAreaAddressesMismatch.....	163
18.16	isisMaxLspSequenceNumberExceeded.....	163
18.17	isisOverloadEntry.....	164
18.18	isisOverloadExit.....	164
18.19	isisOwnLspPurge.....	165
18.20	isisSystemIdLengthMismatch.....	165
18.21	isisVersionMismatch.....	166
19	json.....	167
19.1	authenticationError.....	167
19.2	globalConfigUpdate.....	167
19.3	httpJsonRpcOperDown.....	167
19.4	httpJsonRpcOperUp.....	168
19.5	httpsJsonRpcOperDown.....	168
19.6	httpsJsonRpcOperUp.....	169
19.7	jsonRpcRequestReceived.....	169
19.8	jsonRpcResponseSent.....	170
19.9	networkInstanceConfigUpdate.....	170
19.10	unixSocketJsonRpcOperDown.....	171
19.11	unixSocketJsonRpcOperUp.....	171
19.12	userAuthenticated.....	172
19.13	userAuthenticationErrorWrongPassword.....	172
20	lag.....	173
20.1	lagDown.....	173
20.2	lagDownMinLinks.....	173
20.3	lagMemberLinkAdded.....	173
20.4	lagMemberLinkRemoved.....	174
20.5	lagMemberOperDown.....	174

20.6	lagMemberOperUp.....	175
20.7	lagUp.....	175
21	ldp.....	177
21.1	ldpInterfaceDown.....	177
21.2	ldpInterfaceUp.....	177
21.3	ldpIpv4InstanceDown.....	177
21.4	ldpIpv4InstanceUp.....	178
21.5	ldpSessionDown.....	178
21.6	ldpSessionFecLimitReached.....	179
21.7	ldpSessionLocalIPv4Overload.....	179
21.8	ldpSessionPeerIPv4Overload.....	180
21.9	ldpSessionUp.....	180
21.10	ldpTargetDown.....	181
21.11	ldpTargetUp.....	181
22	license.....	183
22.1	licenseExpirySoon.....	183
23	linux.....	184
23.1	cpuUsageCritical.....	184
23.2	cpuUsageHigh.....	184
23.3	cpuUsageNormal.....	185
23.4	dateAndTimeChanged.....	185
23.5	domainChanged.....	185
23.6	hostnameChanged.....	186
23.7	memoryUsageCritical.....	186
23.8	memoryUsageFull.....	187
23.9	memoryUsageHigh.....	187
23.10	memoryUsageNormal.....	187
23.11	partitionStateChange.....	188
23.12	partitionUsageCritical.....	188
23.13	partitionUsageFull.....	189
23.14	partitionUsageNormal.....	189
23.15	partitionUsageWarning.....	190
23.16	serviceConfigChanged.....	190

23.17	serviceDownInNetworkInstance.....	190
23.18	serviceUpInNetworkInstance.....	191
23.19	tlsProfileExpired.....	191
23.20	tlsProfileExpiresSoon.....	192
24	lldp.....	193
24.1	remotePeerAdded.....	193
24.2	remotePeerRemoved.....	193
24.3	remotePeerUpdated.....	193
25	log.....	195
25.1	bufferRollover.....	195
25.2	configUpdate.....	195
25.3	fileRollover.....	195
25.4	networkNamespaceChanged.....	196
25.5	subsystemFacilityChanged.....	196
26	mgmt.....	198
26.1	checkpointGenerated.....	198
26.2	checkpointRevertRequestReceived.....	198
26.3	commitFailed.....	198
26.4	commitSucceeded.....	199
26.5	exclusiveConfigSessionBlockedByOtherSessionError.....	199
26.6	exclusiveConfigSessionError.....	200
26.7	privateConfigSessionError.....	200
26.8	privateSharedMismatch.....	201
26.9	sharedConfigSessionBlockedByOtherSessionError.....	201
27	mirror.....	202
27.1	mirrorDestinationDelete.....	202
27.2	mirrorDestinationOperDown.....	202
27.3	mirrorDestinationOperUP.....	203
27.4	mirrorDestnationAdd.....	203
27.5	mirrorInstanceAdminDisable.....	203
27.6	mirrorInstanceAdminEnable.....	204
27.7	mirrorInstanceOperDown.....	204
27.8	mirrorInstanceOperUp.....	205

27.9	mirrorSourceAdd.....	205
27.10	mirrorSourceDelete.....	206
28	mld.....	207
28.1	mldCModeRxQueryVersionMismatch.....	207
28.2	mldMaxNumberOfGroupSourcesReached.....	207
28.3	mldMaxNumberOfGroupsReached.....	208
28.4	mldMaxNumberOfSourcesReached.....	208
28.5	mldRxQueryVersionMismatch.....	209
29	netinst.....	210
29.1	networkInstanceInterfaceDown.....	210
29.2	networkInstanceInterfaceUp.....	210
29.3	networkInstanceStateDown.....	210
29.4	networkInstanceStateUp.....	211
30	ospf.....	212
30.1	ospfAdjacencyBfdSessionSetupFailed.....	212
30.2	ospfAdjacencyChange.....	212
30.3	ospfAdjacencyRestartStatusChange.....	212
30.4	ospfAsMaxAgeLSA.....	213
30.5	ospfExportLimitReached.....	213
30.6	ospfExportLimitWarning.....	214
30.7	ospfFailure.....	214
30.8	ospflfLdpSyncStateChange.....	215
30.9	ospflfRxBadPacket.....	215
30.10	ospflfStateChange.....	216
30.11	ospfLsdbApproachingOverflow.....	216
30.12	ospfLsdbOverflow.....	217
30.13	ospfNbrMtuMismatch.....	217
30.14	ospfOverloadEntry.....	218
30.15	ospfOverloadExit.....	218
30.16	ospfOverloadWarning.....	218
30.17	ospfSpfRunRestarted.....	219
30.18	ospfSpfRunsStopped.....	219
30.19	ospflfAuthDataFailure.....	220

31	p4rt	221
31.1	globalConfigUpdate	221
31.2	networkInstanceConfigUpdate	221
31.3	networkInstanceP4rtOperDown	221
31.4	networkInstanceP4rtOperUp	222
31.5	p4rtServerStart	222
31.6	p4rtServerStop	223
31.7	unixSocketP4rtOperDown	223
31.8	unixSocketP4rtOperUp	224
32	pim	225
32.1	pimGroupInSSMRange	225
32.2	pimIfNeighborLoss	225
32.3	pimIfNeighborUp	225
32.4	pimInvalidJoinPrune	226
32.5	pimInvalidRegister	226
33	platform	228
33.1	airflowCorrected	228
33.2	airflowMismatch	228
33.3	componentBooting	229
33.4	componentDown	229
33.5	componentFailed	229
33.6	componentInserted	230
33.7	componentLocatorDisabled	230
33.8	componentLocatorEnabled	231
33.9	componentPowerDown	231
33.10	componentPowerUp	231
33.11	componentRemoved	232
33.12	componentRestarted	232
33.13	componentTemperatureExceeded	233
33.14	componentTemperatureFailure	233
33.15	componentTemperatureNormal	234
33.16	componentUp	234
33.17	controlModuleActivityChange	235

33.18	controlModuleConfigSynchronized.....	235
33.19	controlModuleImageSynchronized.....	235
33.20	controlModuleInSync.....	236
33.21	controlModuleOverlaySynchronized.....	236
33.22	controlModuleSyncLost.....	237
33.23	controlModuleSyncStart.....	237
33.24	fantrayEmpty.....	238
33.25	linecardCapacityDegraded.....	238
33.26	linecardCapacityNormal.....	239
33.27	platformLowPower.....	239
33.28	platformLowReservePower.....	239
33.29	platformNoPowerRedundancy.....	240
33.30	platformNormalPower.....	240
33.31	platformPowerRedundancyRecovered.....	241
33.32	psuInputDown.....	241
33.33	psuInputUp.....	242
33.34	psuOutputDown.....	242
33.35	psuOutputUp.....	242
33.36	psuTemperatureFault.....	243
33.37	psuTemperatureNormal.....	243
33.38	systemInServiceSoftwareUpgrade.....	244
33.39	systemReboot.....	244
33.40	systemWarmReboot.....	244
33.41	systemWarmRebootAborted.....	245
34	qos.....	246
34.1	platformQoSProfileHighUtilization.....	246
34.2	platformQoSProfileHighUtilizationLowered.....	246
35	ra_guard-agent.....	247
35.1	ra_guardAdd.....	247
35.2	ra_guardRemove.....	247
36	sflow.....	248
36.1	sFlowAgentChange.....	248
36.2	sFlowCollectorUnreachable.....	248

37	sync.....	249
37.1	syncFreqClockQLChange.....	249
37.2	syncFreqClockRefChange.....	249
37.3	syncFreqClockStateChange.....	249
37.4	syncFreqInstanceAlarmChange.....	250
37.5	syncFreqInstanceQLChange.....	250
37.6	syncPTPParentChange.....	251
37.7	syncPTPPortPTSFUnusable.....	251
37.8	syncPTPTimeRecoveryState.....	252

1 About this guide

This document provides guidance for operators to interpret log events for the Nokia Service Router Linux (SR Linux). This document is intended for users who need to access and understand log events for SR Linux.

**Note:**

This manual covers the current release and may also contain some content that will be released in later maintenance loads. See the *SR Linux Release Notes* for information about features supported in each load.

Configuration and command outputs shown in this guide are examples only; actual displays may differ depending on supported functionality and user configuration.

1.1 Precautionary and information messages

The following are information symbols used in the documentation.



DANGER: Danger warns that the described activity or situation may result in serious personal injury or death. An electric shock hazard could exist. Before you begin work on this equipment, be aware of hazards involving electrical circuitry, be familiar with networking environments, and implement accident prevention procedures.



WARNING: Warning indicates that the described activity or situation may, or will, cause equipment damage, serious performance problems, or loss of data.



Caution: Caution indicates that the described activity or situation may reduce your component or system performance.



Note: Note provides additional operational information.



Tip: Tip provides suggestions for use or best practices.

1.2 Conventions

Nokia SR Linux documentation uses the following command conventions.

- **Bold** indicates a command that the user must enter.
- Input and output examples are displayed in Courier text.
- An open right angle bracket indicates a progression of menu choices or simple command sequence (often selected from a user interface). Example: **start > connect to**
- A vertical bar (|) indicates a mutually exclusive argument.
- Square brackets ([]) indicate optional elements.

- Braces ({}) indicate a required choice. When braces are contained within square brackets, they indicate a required choice within an optional element.
- *Italic* indicates a variable.

Generic IP addresses are used in examples. Replace these with the appropriate IP addresses used in the system.

2 Log events overview

This section provides general information about the log events described in this guide for the Nokia Service Router Linux (SR Linux).

For more information about logging, see the *SR Linux Configuration Basics Guide*.

2.1 Example log event

The following contains an example log event entry from this guide for the `bgpNeighborBackwardTransition` log event.

Table 1: bgpNeighborBackwardTransition properties

Property name	Value
Application name	bgp
Event name	bgpNeighborBackwardTransition
Default severity	warning
Message format string	In network-instance <code>\$network-instance\$</code> , the BGP session with <code>\$peer-address\$</code> moved from higher state <code>\$last-state\$</code> to lower state <code>\$session-state\$</code> due to event <code>\$last-event\$</code>
Cause	No routes can be exchanged with this peer
Effect	N/A

The table title for a log event entry is the event name. Each entry contains the information described in the table that follows.

Table 2: Log event entry field descriptions

Label	Description
Application name	Name of the application generating the log message
Event name	Name of the log event
Default severity	Severity level of the log event (see Table 3: Log event entry field descriptions for the severity level)
Message format string	Text description of the log event
Cause	Cause of the log event

Label	Description
Effect	Effect of the log event

2.2 Log event properties

Log events that are forwarded to a destination are formatted. All application-generated events have the following properties:

- time stamp in UTC or local time
- generating application
- router name identifying the VRF-ID that generated the event
- subject identifying the affected object
- short message describing the event

A log event with a memory, console, or file destination has the following format:

```
nnnn YYYY/MM/DD HH:MM:SS.SS TZONE <severity>: <application> <router-name>
<subject>
<message>
```

Format properties are described in [Table 3: Log event entry field descriptions](#).

Table 3: Log event entry field descriptions

Label	Description
nnnn	Log event entry sequence number
YYYY/MM/DD	UTC or local date stamp for the log event entry: YYYY — Year MM — Month DD — Day
HH:MM:SS.SS	UTC time stamp for the event: HH — Hours (24-hour format) MM — Minutes SS.SS — Seconds.hundredths of a second
TZONE	Time zone (for example, UTC, EDT)
<severity>	Severity level of the log event: emerg — System is unusable alert — Action must be taken immediately crit — Critical conditions err — Error conditions

Label	Description
	warning — Warning conditions notice — Normal but significant condition info — Informational messages debug — Debug-level messages
<application>	Name of the application generating the log event message
<router>	Router name representing the VRF-ID that generated the log event
<subject>	Subject/affected object for the log event
<message>	Text description of the log event

3 What's new

Table 4: Event Changes

Event Name	Change
ldpTargetDown	New
ldpTargetUp	New
networkInstanceBridgeTableProxyArpDuplicateIpAddressDeleted	Dropped
networkInstanceBridgeTableProxyArpDuplicateIpAddressDetected	Dropped
networkInstanceBridgeTableProxyArpNdDuplicateIpAddressDeleted	New
networkInstanceBridgeTableProxyArpNdDuplicateIpAddressDetected	New
systemMulticastIdLimitHighUtilization	New
systemMulticastIdLimitHighUtilizationLowered	New
sync	New

4 aaa

4.1 serverDown

Table 5: serverDown properties

Property name	Value
Application name	aaa
Event name	serverDown
Default severity	error
Message format string	Server <i>server_address</i> in group <i>server_group</i> is down
Cause	The specified server is down, either via being unreachable, or a timeout.
Effect	The specified server can no longer be used for authentication, authorization, or accounting transactions.

4.2 serverGroupDown

Table 6: serverGroupDown properties

Property name	Value
Application name	aaa
Event name	serverGroupDown
Default severity	critical
Message format string	All servers in server group <i>server_group</i> are down
Cause	All servers within the specified server group are no longer available.
Effect	The specified server group can no longer be used for authentication, authorization, or accounting transactions.

4.3 serverRouteUnavailable

Table 7: serverRouteUnavailable properties

Property name	Value
Application name	aaa
Event name	serverRouteUnavailable
Default severity	error
Message format string	No route available to reach remote server <i>server_address</i> in server group <i>server_group</i> via network instance <i>network_instance</i>
Cause	No routes are available in the specified network instance to reach the remote server.
Effect	The specified server can no longer be used for authentication, authorization, or accounting transactions.

4.4 serverTimeout

Table 8: serverTimeout properties

Property name	Value
Application name	aaa
Event name	serverTimeout
Default severity	error
Message format string	Server <i>server_address</i> in group <i>server_group</i> has timed out
Cause	The connection between the AAA manager and the remote server has timed out. The server will be tried again in 30 seconds, or immediately if a valid response is received.
Effect	The specified server can no longer be used for authentication, authorization, or accounting transactions.

4.5 sessionClosed

Table 9: sessionClosed properties

Property name	Value
Application name	aaa
Event name	sessionClosed
Default severity	notice
Message format string	Closed session for user <i>user_name</i> from host <i>remote_host</i>
Cause	The specified user has closed a session on the system.
Effect	None.

4.6 sessionDisconnected

Table 10: sessionDisconnected properties

Property name	Value
Application name	aaa
Event name	sessionDisconnected
Default severity	notice
Message format string	Session for user <i>user_name</i> from remote host <i>remote_host</i> disconnected by administrative action
Cause	The specified user has been disconnected from the system by an administrators action.
Effect	The specified user is disconnected.

4.7 sessionOpened

Table 11: sessionOpened properties

Property name	Value
Application name	aaa
Event name	sessionOpened
Default severity	notice

Property name	Value
Message format string	Opened session for user <i>user_name</i> from host <i>remote_host</i>
Cause	The specified user has opened a session on the system.
Effect	None.

4.8 userAuthenticationFailed

Table 12: userAuthenticationFailed properties

Property name	Value
Application name	aaa
Event name	userAuthenticationFailed
Default severity	warning
Message format string	User <i>user_name</i> authentication failed from host <i>remote_host</i>
Cause	The specified user has failed authentication.
Effect	None.

4.9 userAuthenticationSucceeded

Table 13: userAuthenticationSucceeded properties

Property name	Value
Application name	aaa
Event name	userAuthenticationSucceeded
Default severity	notice
Message format string	User <i>user_name</i> successfully authenticated from host <i>remote_host</i>
Cause	The specified user has successfully authenticated.
Effect	None.

5 acl

5.1 aclCpmlpv4MatchedPacket

Table 14: *aclCpmlpv4MatchedPacket* properties

Property name	Value
Application name	acl
Event name	aclCpmlpv4MatchedPacket
Default severity	notice
Message format string	An IPv4 packet, len <i>packet-length</i> , protocol <i>ip-protocol</i> , received by linecard <i>incoming-linecard</i> was <i>action</i> by entry <i>sequence-id</i> of the IPv4 cpm-filter. <i>source-ip(source-port) -> dest-ip(dest-port)</i>
Cause	This event is generated when an IPv4 packet matches an entry of the CPM IPv4 filter and that entry specifies a log action
Effect	None

5.2 aclCpmlpv6MatchedPacket

Table 15: *aclCpmlpv6MatchedPacket* properties

Property name	Value
Application name	acl
Event name	aclCpmlpv6MatchedPacket
Default severity	notice
Message format string	An IPv6 packet, len <i>packet-length</i> , protocol <i>last-next-header</i> , received by linecard <i>incoming-linecard</i> was <i>action</i> by entry <i>sequence-id</i> of the IPv6 cpm-filter. <i>source-ip(source-port) -> dest-ip(dest-port)</i>
Cause	This event is generated when an IPv6 packet matches an entry of the CPM IPv6 filter and that entry specifies a log action
Effect	None

5.3 aclInterfaceInputIpv4MatchedPacket

Table 16: *aclInterfaceInputIpv4MatchedPacket* properties

Property name	Value
Application name	acl
Event name	aclInterfaceInputIpv4MatchedPacket
Default severity	notice
Message format string	An IPv4 packet, len <i>packet-length</i> , protocol <i>ip-protocol</i> , received on <i>incoming-interface</i> was <i>action</i> by entry <i>sequence-id</i> of filter <i>filter-name</i> . <i>source-ip(source-port) -> dest-ip(dest-port)</i>
Cause	This event is generated when an IPv4 packet matches an entry of an IPv4 filter applied to ingress traffic on a subinterface and that entry specifies a log action
Effect	None

5.4 aclInterfaceInputIpv6MatchedPacket

Table 17: *aclInterfaceInputIpv6MatchedPacket* properties

Property name	Value
Application name	acl
Event name	aclInterfaceInputIpv6MatchedPacket
Default severity	notice
Message format string	An IPv6 packet, len <i>packet-length</i> , protocol <i>last-next-header</i> , received on <i>incoming-interface</i> was <i>action</i> by entry <i>sequence-id</i> of filter <i>filter-name</i> . <i>source-ip(source-port) -> dest-ip(dest-port)</i>
Cause	This event is generated when an IPv6 packet matches an entry of an IPv6 filter applied to ingress traffic on a subinterface and that entry specifies a log action
Effect	None

5.5 aclInterfaceOutputIpv4MatchedPacket

Table 18: *aclInterfaceOutputIpv4MatchedPacket* properties

Property name	Value
Application name	acl
Event name	aclInterfaceOutputIpv4MatchedPacket
Default severity	notice
Message format string	An IPv4 packet, len <i>packet-length</i> , protocol <i>ip-protocol</i> , intended for transmit on <i>outgoing-interface</i> was <i>action</i> by entry <i>sequence-id</i> of filter <i>filter-name</i> . <i>source-ip(source-port) -> dest-ip(dest-port)</i>
Cause	This event is generated when an IPv4 packet matches an entry of an IPv4 filter applied to egress traffic on a subinterface and that entry specifies a log action
Effect	None

5.6 aclInterfaceOutputIpv6MatchedPacket

Table 19: *aclInterfaceOutputIpv6MatchedPacket* properties

Property name	Value
Application name	acl
Event name	aclInterfaceOutputIpv6MatchedPacket
Default severity	notice
Message format string	An IPv6 packet, len <i>packet-length</i> , protocol <i>last-next-header</i> , intended for transmit on <i>outgoing-interface</i> was <i>action</i> by entry <i>sequence-id</i> of filter <i>filter-name</i> . <i>source-ip(source-port) -> dest-ip(dest-port)</i>
Cause	This event is generated when an IPv6 packet matches an entry of an IPv6 filter applied to egress traffic on a subinterface and that entry specifies a log action
Effect	None

5.7 aclTcamProgComplete

Table 20: aclTcamProgComplete properties

Property name	Value
Application name	acl
Event name	aclTcamProgComplete
Default severity	notice
Message format string	All TCAM banks on all linecards have been reprogrammed with the latest ACL configuration changes.
Cause	This event is generated when all TCAM banks on all linecards have been reprogrammed with the latest ACL configuration changes.
Effect	None

5.8 platformAclHighUtilization

Table 21: platformAclHighUtilization properties

Property name	Value
Application name	acl
Event name	platformAclHighUtilization
Default severity	warning
Message format string	The ACL resource called <i>resource-name</i> has reached <i>threshold</i> % or more utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> . Only <i>free-entries</i> entries are remaining.
Cause	This event is generated when the utilization of an ACL resource has increased to a level that may warrant concern if further resources are consumed
Effect	None

5.9 platformAclHighUtilizationLowered

Table 22: platformAclHighUtilizationLowered properties

Property name	Value
Application name	acl
Event name	platformAclHighUtilizationLowered
Default severity	notice
Message format string	The ACL resource called <i>resource-name</i> has decreased back to <i>threshold%</i> or less utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> .
Cause	This event is generated when the utilization of an ACL resource has decreased to a level that may no longer warrant concern
Effect	None

5.10 platformTcamHighUtilization

Table 23: platformTcamHighUtilization properties

Property name	Value
Application name	acl
Event name	platformTcamHighUtilization
Default severity	warning
Message format string	The TCAM resource called <i>resource-name</i> has reached <i>threshold%</i> or more utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> . Only <i>free-entries</i> entries are remaining.
Cause	This event is generated when the utilization of a TCAM resource has increased to a level that may warrant concern if further resources are consumed
Effect	None

5.11 platformTcamHighUtilizationLowered

Table 24: platformTcamHighUtilizationLowered properties

Property name	Value
Application name	acl
Event name	platformTcamHighUtilizationLowered
Default severity	notice
Message format string	The TCAM resource called <i>resource-name</i> has decreased back to <i>threshold%</i> or less utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> .
Cause	This event is generated when the utilization of a TCAM resource has decreased to a level that may no longer warrant concern
Effect	None

6 arpnd

6.1 ipArpEntryUpdated

Table 25: *ipArpEntryUpdated* properties

Property name	Value
Application name	arpnd
Event name	ipArpEntryUpdated
Default severity	informational
Message format string	The ARP entry for <i>ipv4-address</i> on <i>interface.subinterface-index</i> has been updated from mac <i>old-mac</i> type <i>old-type</i> to mac <i>new-mac</i> and type <i>new-type</i> .
Cause	This event is generated whenever an existing static or dynamic ARP entry for an IPv4 address is overwritten. This could be a triggered by a change of entry type (static vs dynamic) or a change of MAC address or a change of the subinterface binding.
Effect	None

6.2 ipSubinterfaceDuplicateIpv4Address

Table 26: *ipSubinterfaceDuplicateIpv4Address* properties

Property name	Value
Application name	arpnd
Event name	ipSubinterfaceDuplicateIpv4Address
Default severity	notice
Message format string	The IPv4 address <i>ipv4-address</i> assigned to <i>interface.subinterface-index</i> is being used by another host or router on the same subnet.
Cause	This event is generated when ARP detects that another system is using the same IPv4 address
Effect	Unreliable communications

6.3 ipSubinterfaceDuplicateIpv6Address

Table 27: ipSubinterfaceDuplicateIpv6Address properties

Property name	Value
Application name	arpnd
Event name	ipSubinterfaceDuplicateIpv6Address
Default severity	notice
Message format string	The IPv6 address <i>ipv6-address</i> assigned to <i>interface.subinterface-index</i> is being used by another host or router on the same subnet.
Cause	This event is generated when IPv6 DAD detects that another system is using the same IPv6 address
Effect	Unreliable communications

6.4 ipSubinterfaceDuplicateMacAddress

Table 28: ipSubinterfaceDuplicateMacAddress properties

Property name	Value
Application name	arpnd
Event name	ipSubinterfaceDuplicateMacAddress
Default severity	notice
Message format string	The MAC address <i>mac-address</i> used by <i>interface.subinterface-index</i> is being used by another host or router on the same subnet.
Cause	This event is generated when ARP or IPv6 Neighbor Discovery detects that another system is using the same MAC address
Effect	Unreliable communications

6.5 ipSubinterfaceInvalidArp

Table 29: ipSubinterfaceInvalidArp properties

Property name	Value
Application name	arpnd

Property name	Value
Event name	ipSubinterfacelInvalidArp
Default severity	notice
Message format string	An ARP request for <i>ipv4-address</i> was received on <i>interface.subinterface-index</i> and there is no matching IPv4 subnet.
Cause	This event is generated when ARP receives an ARP request for an invalid IPv4 address
Effect	None

6.6 ipSubinterfacelInvalidIpv6NeighborSolicitation

Table 30: *ipSubinterfacelInvalidIpv6NeighborSolicitation* properties

Property name	Value
Application name	arpnd
Event name	ipSubinterfacelInvalidIpv6NeighborSolicitation
Default severity	notice
Message format string	An IPv6 neighbor solicitation for <i>ipv6-address</i> was received on <i>interface.subinterface-index</i> and there is no matching IPv6 subnet.
Cause	This event is generated when IPv6 neighbor discovery receives a NS message for an invalid IPv6 address
Effect	None

6.7 ipv6NeighborEntryUpdated

Table 31: *ipv6NeighborEntryUpdated* properties

Property name	Value
Application name	arpnd
Event name	ipv6NeighborEntryUpdated
Default severity	informational
Message format string	The IPv6 neighbor discovery entry for <i>ipv6-address</i> on <i>interface.subinterface-index</i> has been updated from mac <i>old-mac</i> type <i>old-type</i> to mac <i>new-mac</i> and type <i>new-type</i> .

Property name	Value
Cause	This event is generated whenever an existing static or dynamic neighbor entry for an IPv6 address is overwritten. This could be a triggered by a change of entry type (static vs dynamic) or a change of MAC address or a change of the subinterface binding.
Effect	None

7 bfd

7.1 bfdDownEvent

Table 32: *bfdDownEvent* properties

Property name	Value
Application name	bfd
Event name	bfdDownEvent
Default severity	warning
Message format string	BFD: Network-instance <i>network-instance</i> - Session from <i>local-address:local-discriminator</i> to <i>remote-address:remote-discriminator</i> has transitioned to the <i>down-state</i> state with local-diagnostic code: <i>local-diagnostic-str (local-diagnostic-code)</i> and remote-diagnostic code: <i>remote-diagnostic-str (remote-diagnostic-code)</i>
Cause	This notification is generated when a BFD session transitions to the Down or Admin Down state from an Up state.
Effect	The specified BFD session is now down. If the new state is Down, the session may be down due to a failure see the local or remote diagnostic code. If the new state is Admin-Down the session is down due to administrative reasons.

7.2 bfdMaxSessionActive

Table 33: *bfdMaxSessionActive* properties

Property name	Value
Application name	bfd
Event name	bfdMaxSessionActive
Default severity	warning
Message format string	BFD: Network-instance <i>network-instance</i> - Session from <i>local-address</i> to <i>remote-address</i> requested by <i>client-protocol</i> could not be created because the maximum number of BFD sessions <i>bfd-max-session</i> are active.

Property name	Value
Cause	This notification is generated when a BFD session cannot be created because the maximum number of BFD sessions are already active.
Effect	No more BFD sessions can be created until some existing sessions are removed.

7.3 bfdProtocolClientAdd

Table 34: bfdProtocolClientAdd properties

Property name	Value
Application name	bfd
Event name	bfdProtocolClientAdd
Default severity	notice
Message format string	BFD: Network-instance <i>network-instance</i> - The protocol <i>client-protocol</i> is now using BFD session from <i>local-address:local-discriminator</i> to <i>remote-address: remote-discriminator</i>
Cause	This notification is generated when a new protocol begins to use a BFD session to track liveliness.
Effect	The specified protocol will be notified by BFD if the associated sessions transitions from an Up to a Down state. It will be up to the receiving protocol to determine the course of action.

7.4 bfdProtocolClientRemove

Table 35: bfdProtocolClientRemove properties

Property name	Value
Application name	bfd
Event name	bfdProtocolClientRemove
Default severity	notice
Message format string	BFD: Network-instance <i>network-instance</i> - The protocol <i>client-protocol</i> using BFD session from <i>local-address:local-discriminator</i> to <i>remote-address: remote-discriminator</i> has been cleared

Property name	Value
Cause	This notification is generated when a protocol stops using a BFD session to track liveliness.
Effect	The specified protocol will no longer be notified by BFD if the associated sessions transitions from an Up to a Down state

7.5 bfdSessionDeleted

Table 36: bfdSessionDeleted properties

Property name	Value
Application name	bfd
Event name	bfdSessionDeleted
Default severity	notice
Message format string	BFD: Network-instance <i>network-instance</i> - Session from <i>local-address:local-discriminator</i> to <i>remote-address:remote-discriminator</i> has been deleted
Cause	This notification is generated when a BFD session has been removed from the configuration.
Effect	The BFD session has been removed.

7.6 bfdSessionUp

Table 37: bfdSessionUp properties

Property name	Value
Application name	bfd
Event name	bfdSessionUp
Default severity	notice
Message format string	BFD: Network-instance <i>network-instance</i> - Session from <i>local-address:local-discriminator</i> to <i>remote-address:remote-discriminator</i> is UP
Cause	This notification is generated when a BFD session transitions to the up state.
Effect	The BFD session is now operational.

7.7 bfdWarmrebootAdjustTimers

Table 38: bfdWarmrebootAdjustTimers properties

Property name	Value
Application name	bfd
Event name	bfdWarmrebootAdjustTimers
Default severity	notice
Message format string	BFD: Warm reboot adjustment of BFD timers initiated
Cause	This notification is generated when BFD is notified to adjust timers in preparation for warm reboot.
Effect	The timers on warm reboot capable BFD sessions are adjusted to keep the sessions UP during the warm reboot

7.8 bfdWarmrebootRestoreTimers

Table 39: bfdWarmrebootRestoreTimers properties

Property name	Value
Application name	bfd
Event name	bfdWarmrebootRestoreTimers
Default severity	notice
Message format string	BFD: Warm reboot restoration of BFD timers initiated
Cause	This notification is generated when BFD is notified to restore timers at completion of warm reboot.
Effect	The timers on warm reboot capable BFD sessions are restored to their configured values

7.9 microbfdDownEvent

Table 40: microbfdDownEvent properties

Property name	Value
Application name	bfd

Property name	Value
Event name	microbfdDownEvent
Default severity	warning
Message format string	BFD: LAG <i>lag-interface</i> member <i>member-interface</i> - Session from <i>local-address:local-discriminator</i> to <i>remote-address:remote-discriminator</i> has transitioned to the <i>down-state</i> state with local-diagnostic code: <i>local-diagnostic-str (local-diagnostic-code)</i> and remote-diagnostic code: <i>remote-diagnostic-str (remote-diagnostic-code)</i>
Cause	This notification is generated when a BFD session transitions to the Down or Admin Down state from an Up state.
Effect	The specified BFD session is now down. If the new state is Down, the session may be down due to a failure see the local or remote diagnostic code. If the new state is Admin-Down the session is down due to administrative reasons.

7.10 microbfdMaxSessionActive

Table 41: *microbfdMaxSessionActive* properties

Property name	Value
Application name	bfd
Event name	microbfdMaxSessionActive
Default severity	warning
Message format string	BFD: LAG <i>lag-interface</i> member <i>member-interface</i> - Session from <i>local-address</i> to <i>remote-address</i> could not be created because the maximum number of BFD sessions <i>bfd-max-session</i> are active.
Cause	This notification is generated when a BFD session cannot be created because the maximum number of BFD sessions are already active.
Effect	No more BFD sessions can be created until some existing sessions are removed.

7.11 microbfdSessionDeleted

Table 42: *microbfdSessionDeleted* properties

Property name	Value
Application name	bfd
Event name	microbfdSessionDeleted
Default severity	notice
Message format string	BFD: LAG <i>lag-interface</i> member <i>member-interface</i> - Session from <i>local-address:local-discriminator</i> to <i>remote-address:remote-discriminator</i> has been deleted
Cause	This notification is generated when a BFD session has been removed from the configuration.
Effect	The BFD session has been removed.

7.12 microbfdSessionUp

Table 43: *microbfdSessionUp* properties

Property name	Value
Application name	bfd
Event name	microbfdSessionUp
Default severity	notice
Message format string	BFD: LAG <i>lag-interface</i> member <i>member-interface</i> - Session from <i>local-address:local-discriminator</i> to <i>remote-address:remote-discriminator</i> is UP
Cause	This notification is generated when a BFD session transitions to the up state.
Effect	The BFD session is now operational.

7.13 sbfdechoDownEvent

Table 44: *sbfdechoDownEvent* properties

Property name	Value
Application name	bfd
Event name	sbfdechoDownEvent
Default severity	warning
Message format string	BFD: BFD: SR Policy Id <i>policy-id</i> Color <i>color</i> Endpoint <i>endpoint</i> Network-instance <i>network-instance</i> - Sbfd Echo Session discriminator <i>local-discriminator</i> has transitioned to the <i>down-state</i> state with local-diagnostic code: <i>local-diagnostic-str</i> (<i>local-diagnostic-code</i>)
Cause	This notification is generated when a BFD session transitions to the Down or Admin Down state from an Up state.
Effect	The specified BFD session is now down. If the new state is Down, the session may be down due to a failure see the local or remote diagnostic code. If the new state is Admin-Down the session is down due to administrative reasons.

7.14 sbfdechoMaxSessionActive

Table 45: *sbfdechoMaxSessionActive* properties

Property name	Value
Application name	bfd
Event name	sbfdechoMaxSessionActive
Default severity	warning
Message format string	BFD: SR Policy Id <i>policy-id</i> Color <i>color</i> Endpoint <i>endpoint</i> Network-instance <i>network-instance</i> - Sbfd Echo Session requested by <i>client-protocol</i> could not be created because the maximum number of BFD sessions <i>bfd-max-session</i> are active.
Cause	This notification is generated when a BFD session cannot be created because the maximum number of BFD sessions are already active.
Effect	No more BFD sessions can be created until some existing sessions are removed.

7.15 sbfdechoSessionDeleted

Table 46: *sbfdechoSessionDeleted* properties

Property name	Value
Application name	bfd
Event name	sbfdechoSessionDeleted
Default severity	notice
Message format string	BFD: SR Policy Id <i>policy-id</i> Color <i>color</i> Endpoint <i>endpoint</i> Network-instance <i>network-instance</i> - Sbfd Echo Session discriminator <i>local-discriminator</i> has been deleted
Cause	This notification is generated when a BFD session has been removed from the configuration.
Effect	The BFD session has been removed.

7.16 sbfdechoSessionUp

Table 47: *sbfdechoSessionUp* properties

Property name	Value
Application name	bfd
Event name	sbfdechoSessionUp
Default severity	notice
Message format string	BFD: SR Policy Id <i>policy-id</i> Color <i>color</i> Endpoint <i>endpoint</i> Network-instance <i>network-instance</i> - Sbfd Echo Session discriminator <i>local-discriminator</i> is UP
Cause	This notification is generated when a BFD session transitions to the up state.
Effect	The BFD session is now operational.

8 bgp

8.1 bgpIncomingDynamicPeerLimitReached

Table 48: *bgpIncomingDynamicPeerLimitReached* properties

Property name	Value
Application name	bgp
Event name	bgpIncomingDynamicPeerLimitReached
Default severity	notice
Message format string	In network-instance <i>network-instance</i> , an incoming BGP connection from <i>peer-address</i> was rejected because the limit for the maximum number of incoming dynamic peers, <i>max-sessions</i> , has been reached.
Cause	The configured limit on the number of incoming sessions associated with dynamic peers has been reached.
Effect	The incoming connection attempt is rejected.

8.2 bgpIncomingInterfaceDynamicPeerLimitReached

Table 49: *bgpIncomingInterfaceDynamicPeerLimitReached* properties

Property name	Value
Application name	bgp
Event name	bgpIncomingInterfaceDynamicPeerLimitReached
Default severity	notice
Message format string	In network-instance <i>network-instance</i> , an incoming BGP connection from <i>peer-address</i> was rejected because the limit for the maximum number of incoming interface dynamic peers, <i>max-sessions</i> , has been reached for the interface <i>interface</i> .
Cause	This event is generated when the dynamic session limit for this interface is reached.
Effect	The incoming connection attempt is rejected.

8.3 bgpInstanceConvergenceStateTransition

Table 50: *bgpInstanceConvergenceStateTransition* properties

Property name	Value
Application name	bgp
Event name	bgpInstanceConvergenceStateTransition
Default severity	notice
Message format string	In network-instance <i>network-instance</i> , the BGP convergence state for the <i>address-family</i> address family transitioned from the <i>previous-state</i> state to the <i>new-state</i> state
Cause	This event is generated when the BGP convergence process is being tracked and a state transition occurs
Effect	Dependent on the new state

8.4 bgpLowMemory

Table 51: *bgpLowMemory* properties

Property name	Value
Application name	bgp
Event name	bgpLowMemory
Default severity	critical
Message format string	In network-instance <i>network-instance</i> , the BGP session with <i>peer-address</i> was terminated immediately because BGP has out of memory.
Cause	BGP has run out of memory and this peer has been shutdown to reclaim some memory.
Effect	No routes can be exchanged with this peer.

8.5 bgpNeighborBackwardTransition

Table 52: *bgpNeighborBackwardTransition* properties

Property name	Value
Application name	bgp
Event name	bgpNeighborBackwardTransition
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , the BGP session with <i>peer-address</i> moved from higher state <i>last-state</i> to lower state <i>session-state</i> due to event <i>last-event</i>
Cause	This event is generated when the BGP FSM moves from a higher numbered state to a lower numbered state.
Effect	No routes can be exchanged with this peer.

8.6 bgpNeighborClosedTCPConn

Table 53: *bgpNeighborClosedTCPConn* properties

Property name	Value
Application name	bgp
Event name	bgpNeighborClosedTCPConn
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , the BGP session with <i>peer-address</i> was closed because the neighbor closed the TCP connection.
Cause	The router received a TCP FIN message from its peer.
Effect	No routes can be exchanged with this peer.

8.7 bgpNeighborEstablished

Table 54: *bgpNeighborEstablished* properties

Property name	Value
Application name	bgp
Event name	bgpNeighborEstablished

Property name	Value
Default severity	notice
Message format string	In network-instance <i>network-instance</i> , the BGP session with <i>peer-address</i> moved into the ESTABLISHED state
Cause	The BGP session entered the ESTABLISHED state.
Effect	Routes of negotiated address families can now be exchanged with this peer.

8.8 bgpNeighborGRHelpingStarted

Table 55: *bgpNeighborGRHelpingStarted* properties

Property name	Value
Application name	bgp
Event name	bgpNeighborGRHelpingStarted
Default severity	notice
Message format string	In network-instance <i>network-instance</i> , the router has started providing GR helper service to the neighbor <i>peer-address</i>
Cause	GR helper is activated
Effect	Routes previously received from the peer, prior to its restart, are retained as stale until the stale-routes-time expires.

8.9 bgpNeighborGRHelpingStopped

Table 56: *bgpNeighborGRHelpingStopped* properties

Property name	Value
Application name	bgp
Event name	bgpNeighborGRHelpingStopped
Default severity	notice
Message format string	In network-instance <i>network-instance</i> , the router has stopped providing GR helper service to the neighbor <i>peer-address</i>
Cause	GR helper is deactivated

Property name	Value
Effect	Any remaining stale routes are immediately removed.

8.10 bgpNeighborHoldTimeExpired

Table 57: *bgpNeighborHoldTimeExpired* properties

Property name	Value
Application name	bgp
Event name	bgpNeighborHoldTimeExpired
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , the BGP session with <i>peer-address</i> was terminated because a KEEPALIVE message was not received before the holdtime limit of <i>negotiated-hold-time</i> was reached.
Cause	BGP did not receive a KEEPALIVE message from the peer before the negotiated holdtime expired.
Effect	No routes can be exchanged with this peer.

8.11 bgpNeighborInvalidLocalIP

Table 58: *bgpNeighborInvalidLocalIP* properties

Property name	Value
Application name	bgp
Event name	bgpNeighborInvalidLocalIP
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , an incoming BGP connection from <i>peer-address</i> was rejected because the destination IP address does not match the allowed local-address, <i>local-address</i> .
Cause	BGP configuration does not allow an incoming BGP connection to this IP address.
Effect	No routes can be exchanged with this peer.

8.12 bgpNeighborNoOpenReceived

Table 59: *bgpNeighborNoOpenReceived* properties

Property name	Value
Application name	bgp
Event name	bgpNeighborNoOpenReceived
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , the BGP session with <i>peer-address</i> was terminated because an OPEN message was not received before the configured holdtime limit was reached.
Cause	BGP did not receive an OPEN message from the peer before the configured holdtime expired.
Effect	No routes can be exchanged with this peer.

8.13 bgpNeighborPrefixLimitReached

Table 60: *bgpNeighborPrefixLimitReached* properties

Property name	Value
Application name	bgp
Event name	bgpNeighborPrefixLimitReached
Default severity	notice
Message format string	In network-instance <i>network-instance</i> , the number of <i>family</i> routes received from the neighbor <i>peer-address</i> has exceeded the configured limit.
Cause	The number of received routes from the peer has exceeded the configured limit for the associated address family.
Effect	If prevent-teardown is false, the session is torn down. Otherwise, no effect. Routes above the limit are still received and processed.

8.14 bgpNeighborPrefixLimitThresholdReached

Table 61: *bgpNeighborPrefixLimitThresholdReached* properties

Property name	Value
Application name	bgp
Event name	bgpNeighborPrefixLimitThresholdReached
Default severity	notice
Message format string	In network-instance <i>network-instance</i> , the number of <i>family</i> routes received from the neighbor <i>peer-address</i> has exceeded the configured threshold, which is <i>warning-threshold-pct%</i> of the limit.
Cause	The number of received routes from the peer has exceeded the configured threshold for the associated address family.
Effect	No effect. Routes above the threshold are still received and processed.

8.15 bgpNeighborUnknownRemoteIP

Table 62: *bgpNeighborUnknownRemoteIP* properties

Property name	Value
Application name	bgp
Event name	bgpNeighborUnknownRemoteIP
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , an incoming BGP connection from <i>peer-address</i> was rejected because the source IP address does not match the address of any configured neighbor or any dynamic-neighbor block.
Cause	BGP configuration does not allow an incoming BGP connection from this IP address.
Effect	No routes can be exchanged with this peer.

8.16 bgpNLRIInvalid

Table 63: bgpNLRIInvalid properties

Property name	Value
Application name	bgp
Event name	bgpNLRIInvalid
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , a route for NLRI <i>niri</i> was received from neighbor <i>peer-address</i> and it was ignored because it is considered an invalid NLRI.
Cause	The router received an UPDATE with an invalid NLRI
Effect	The route associated with the NLRI is not added or removed from the BGP RIB.

8.17 bgpNotificationReceivedFromNeighbor

Table 64: bgpNotificationReceivedFromNeighbor properties

Property name	Value
Application name	bgp
Event name	bgpNotificationReceivedFromNeighbor
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , the BGP session with <i>peer-address</i> was closed because the neighbor sent a NOTIFICATION with code <i>last-notification-error-code</i> and subcode <i>last-notification-error-subcode</i>
Cause	The router received a NOTIFICATION message from its peer.
Effect	No routes can be exchanged with this peer.

8.18 bgpNotificationSentToNeighbor

Table 65: *bgpNotificationSentToNeighbor* properties

Property name	Value
Application name	bgp
Event name	bgpNotificationSentToNeighbor
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , the BGP session with <i>peer-address</i> was closed because the router sent this neighbor a NOTIFICATION with code <i>last-notification-error-code</i> and subcode <i>last-notification-error-subcode</i>
Cause	The router sent a NOTIFICATION message to its peer.
Effect	No routes can be exchanged with this peer.

8.19 bgpOutgoingDynamicPeerLimitReached

Table 66: *bgpOutgoingDynamicPeerLimitReached* properties

Property name	Value
Application name	bgp
Event name	bgpOutgoingDynamicPeerLimitReached
Default severity	notice
Message format string	In network-instance <i>network-instance</i> , no session was initiated towards the LLDP-discovered address <i>peer-address</i> because the limit for the maximum number of outgoing dynamic peers, <i>max-sessions</i> , has been reached.
Cause	The configured limit on the number of outgoing sessions associated with dynamic peers has been reached.
Effect	No connection attempt is made by the router.

8.20 bgpPathAttributeDiscarded

Table 67: *bgpPathAttributeDiscarded* properties

Property name	Value
Application name	bgp
Event name	bgpPathAttributeDiscarded
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , a path attribute of type <i>attribute-type</i> and length <i>attribute-length</i> was discarded in a route received from the neighbor <i>peer-address</i> .
Cause	The path attribute was malformed and the attribute-discard approach is used for this type of attribute.
Effect	The intended meaning of that path attribute is not applied but the UPDATE message is still processed for new reachability information.

8.21 bgpPathAttributeMalformed

Table 68: *bgpPathAttributeMalformed* properties

Property name	Value
Application name	bgp
Event name	bgpPathAttributeMalformed
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , a path attribute of type <i>attribute-type</i> and length <i>attribute-length</i> that was received in a route from the neighbor <i>peer-address</i> was considered malformed.
Cause	The router considers a path attribute to be malformed, for example not the expected length. The UPDATE message can still be parsed though.
Effect	Dependent on the type of the malformed path attribute. Either the malformed attribute is discarded or else the entire UPDATE message is considered to have unreachable NLRI.

8.22 bgpRouteWithdrawnDueToError

Table 69: *bgpRouteWithdrawnDueToError* properties

Property name	Value
Application name	bgp
Event name	bgpRouteWithdrawnDueToError
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , a route for NLRI <i>nlri</i> was received from neighbor <i>peer-address</i> and it was considered withdrawn because of a recoverable error in the UPDATE message.
Cause	The router received a malformed UPDATE and the malformed path attribute(s) require as a treat-as-withdraw error handling behavior for the included set of routes.
Effect	There is no reachability for the NLRI in the malformed UPDATE message.

8.23 bgpUpdateInvalid

Table 70: *bgpUpdateInvalid* properties

Property name	Value
Application name	bgp
Event name	bgpUpdateInvalid
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , an UPDATE message received from neighbor <i>peer-address</i> was considered invalid and caused the connection to be closed because the NLRI could not be parsed correctly.
Cause	The router received a malformed UPDATE which made it is impossible to identify all of the NLRI correctly.
Effect	The session is shutdown.

9 bridgetable

9.1 evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitHighUtilization

Table 71: evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitHighUtilization
Default severity	warning
Message format string	The number of Evpn-Mpls Multicast Destinations in the bridge table for bgp-instance <i>bgp-instance</i> on network-instance <i>network-instance</i> has reached <i>pct-threshold%</i> of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of Evpn-Mpls Multicast Destinations in the bgp-instance reaches the warning threshold percentage of the allowed limit.
Effect	None

9.2 evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitHighUtilization Lowered

Table 72: evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of Evpn-Mpls Multicast Destinations in the bridge table for bgp-instance <i>bgp-instance</i> on network-instance <i>network-instance</i> is now below a <i>pct-threshold%</i> minus 5% of the allowed limit of <i>maximum-entries</i> .

Property name	Value
Cause	This event is generated when the number of Evpn-Mpls Multicast Destinations in the bgp-instance is 5% below the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

9.3 evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitLowered

Table 73: *evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitLowered* properties

Property name	Value
Application name	bridgetable
Event name	evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitLowered
Default severity	notice
Message format string	The number of Evpn-Mpls Multicast Destinations in the bridge table for bgp-instance <i>bgp-instance</i> on network-instance <i>network-instance</i> is now below the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of Evpn-Mpls Multicast Destinations in a bgp-instance goes below the allowed limit, after being above the allowed limit
Effect	New Evpn-Mpls Multicast Destinations can be added to the multicast list of the network-instance.

9.4 evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitReached

Table 74: *evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitReached* properties

Property name	Value
Application name	bridgetable
Event name	evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitReached
Default severity	warning
Message format string	The number of Evpn-Mpls Multicast Destinations in the bridge table for bgp-instance <i>bgp-instance</i> on network-instance <i>network-instance</i> is at the allowed limit of <i>maximum-entries</i> .

Property name	Value
Cause	This event is generated when the number of Evpn-Mpls Multicast Destinations in a bgp-instance is at the allowed limit.
Effect	New Evpn-Mpls Multicast Destinations cannot be added to the multicast list of the network-instance.

9.5 I2SubinterfaceBridgeTableDuplicateMacAddressDeleted

Table 75: I2SubinterfaceBridgeTableDuplicateMacAddressDeleted properties

Property name	Value
Application name	bridgetable
Event name	I2SubinterfaceBridgeTableDuplicateMacAddressDeleted
Default severity	notice
Message format string	A duplicate MAC address <i>mac-address</i> detected on sub-interface <i>interface.subinterface-index</i> is now deleted.
Cause	This event is generated when a duplicate MAC address is deleted.
Effect	The duplicate mac-address is now deleted.

9.6 I2SubinterfaceBridgeTableDuplicateMacAddressDetected

Table 76: I2SubinterfaceBridgeTableDuplicateMacAddressDetected properties

Property name	Value
Application name	bridgetable
Event name	I2SubinterfaceBridgeTableDuplicateMacAddressDetected
Default severity	notice
Message format string	A duplicate MAC address <i>mac-address</i> was detected on sub-interface <i>interface.subinterface-index</i> .
Cause	This event is generated when a duplicate MAC address is detected, qualified by the bridge-table mac-duplication configuration under the network-instance and the sub-interfaces configured under the network-instance.

Property name	Value
Effect	depending on the mac-duplication configuration, traffic destined to the duplicate mac-address maybe blackholed or not reprogrammed against any other sub-interface on the network-instance

9.7 I2SubinterfaceBridgeTableMacLimitHighUtilization

Table 77: I2SubinterfaceBridgeTableMacLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	I2SubinterfaceBridgeTableMacLimitHighUtilization
Default severity	warning
Message format string	The number of MAC addresses in the bridge table for sub-interface <i>interface.subinterface-index</i> has reached <i>pct-threshold%</i> of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table for a sub-interface reaches the configured warning threshold percentage of the allowed limit.
Effect	None

9.8 I2SubinterfaceBridgeTableMacLimitHighUtilizationLowered

Table 78: I2SubinterfaceBridgeTableMacLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	I2SubinterfaceBridgeTableMacLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of MAC addresses in the bridge table for sub-interface <i>interface.subinterface-index</i> is below <i>pct-threshold%</i> (minus 5%) of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table for a sub-interface is below 5% minus the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.

Property name	Value
Effect	None

9.9 I2SubinterfaceBridgeTableMacLimitLowered

Table 79: I2SubinterfaceBridgeTableMacLimitLowered properties

Property name	Value
Application name	bridgetable
Event name	I2SubinterfaceBridgeTableMacLimitLowered
Default severity	notice
Message format string	The number of MAC addresses in the bridge table for the sub-interface <i>interface.subinterface-index</i> is below the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table for a sub-interface is below the allowed limit, after being above the allowed limit
Effect	new mac-addresses for the sub-interface can now be added to the bridge table.

9.10 I2SubinterfaceBridgeTableMacLimitReached

Table 80: I2SubinterfaceBridgeTableMacLimitReached properties

Property name	Value
Application name	bridgetable
Event name	I2SubinterfaceBridgeTableMacLimitReached
Default severity	warning
Message format string	The number of MAC addresses in the bridge table for the sub-interface <i>interface.subinterface-index</i> has reached the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table for the sub-interface is at the allowed limit.
Effect	new mac-addresses for the sub-interface cannot be added in the bridge table.

9.11 networkInstanceBridgeTableDuplicateMacAddressDeleted

Table 81: networkInstanceBridgeTableDuplicateMacAddressDeleted properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableDuplicateMacAddressDeleted
Default severity	notice
Message format string	A duplicate MAC address <i>mac-address</i> detected on <i>network-instance</i> is now deleted.
Cause	This event is generated when a duplicate MAC address is deleted.
Effect	The duplicate mac-address is now deleted.

9.12 networkInstanceBridgeTableDuplicateMacAddressDetected

Table 82: networkInstanceBridgeTableDuplicateMacAddressDetected properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableDuplicateMacAddressDetected
Default severity	notice
Message format string	A duplicate MAC address <i>mac-address</i> was detected on <i>network-instance</i> .
Cause	This event is generated when a duplicate MAC address is detected, qualified by the bridge-table mac-duplication configuration under the network-instance and the sub-interfaces configured under the network-instance.
Effect	depending on the mac-duplication configuration, traffic destined to the duplicate mac-address maybe blackholed or not reprogrammed against any other sub-interface on the network-instance

9.13 networkInstanceBridgeTableMacLimitHighUtilization

Table 83: networkInstanceBridgeTableMacLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableMacLimitHighUtilization
Default severity	warning
Message format string	The number of MAC addresses in the bridge table of network-instance <i>network-instance</i> has reached <i>pct-threshold</i> % of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table of a network-instance reaches the configured warning threshold percentage of the allowed limit.
Effect	None

9.14 networkInstanceBridgeTableMacLimitHighUtilizationLowered

Table 84: networkInstanceBridgeTableMacLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableMacLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of MAC addresses in the bridge table of network-instance <i>network-instance</i> is now at <i>pct-threshold</i> % minus 5% of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table of the network-instance is at 5% minus the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

9.15 networkInstanceBridgeTableMacLimitLowered

Table 85: networkInstanceBridgeTableMacLimitLowered properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableMacLimitLowered
Default severity	notice
Message format string	The number of MAC addresses in the bridge table of network-instance <i>network-instance</i> is now below the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table of a network-instance goes below the allowed limit, after being above the allowed limit
Effect	new mac-addresses can now be added to the bridge table.

9.16 networkInstanceBridgeTableMacLimitReached

Table 86: networkInstanceBridgeTableMacLimitReached properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableMacLimitReached
Default severity	warning
Message format string	The number of MAC addresses in the bridge table of network-instance <i>network-instance</i> is at the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table of a network-instance is at the allowed limit.
Effect	new mac-addresses cannot be added in the bridge table.

9.17 networkInstanceBridgeTableProxyArpLimitHighUtilization

Table 87: networkInstanceBridgeTableProxyArpLimitHighUtilization properties

Property name	Value
Application name	bridgetable

Property name	Value
Event name	networkInstanceBridgeTableProxyArpLimitHighUtilization
Default severity	warning
Message format string	The number of proxy ARP entries in the bridge table of network-instance <i>network-instance</i> has reached <i>pct-threshold</i> % of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of proxy ARP entries in the bridge table of a network-instance reaches the warning threshold percentage of the allowed limit.
Effect	None

9.18 networkInstanceBridgeTableProxyArpLimitHighUtilizationLowered

Table 88: networkInstanceBridgeTableProxyArpLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableProxyArpLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of proxy ARP entries in the bridge table of network-instance <i>network-instance</i> is now at <i>pct-threshold</i> % minus 5% of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of proxy ARP entries in the bridge table of the network-instance is at 5% minus the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

9.19 networkInstanceBridgeTableProxyArpNdDuplicateIpAddressDeleted

Table 89: networkInstanceBridgeTableProxyArpNdDuplicateIpAddressDeleted properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableProxyArpNdDuplicateIpAddressDeleted

Property name	Value
Default severity	notice
Message format string	A duplicate proxy IP <i>ip-address</i> detected on <i>network-instance</i> is now deleted.
Cause	This event is generated when a duplicate proxy IP is deleted.
Effect	The duplicate proxy IP is now deleted.

9.20 networkInstanceBridgeTableProxyArpNdDuplicateIpAddressDetected

Table 90: networkInstanceBridgeTableProxyArpNdDuplicateIpAddressDetected properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableProxyArpNdDuplicateIpAddressDetected
Default severity	notice
Message format string	A duplicate link-layer-address <i>new-mac-address</i> was detected for proxy IP <i>ip-address</i> link-layer-address <i>old-mac-address</i> on <i>network-instance</i> .
Cause	This event is generated when when duplicate detection criteria is met when a new link-layer-address overwrites the existing link-layer-address for the proxy IP on the network-instance.
Effect	A traffic disruption may occur if both systems are active

9.21 networkInstanceBridgeTableProxyNdLimitHighUtilization

Table 91: networkInstanceBridgeTableProxyNdLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableProxyNdLimitHighUtilization
Default severity	warning
Message format string	The number of proxy ND entries in the bridge table of network-instance <i>network-instance</i> has reached <i>pct-threshold%</i> of the allowed limit of <i>maximum-entries</i> .

Property name	Value
Cause	This event is generated when the number of proxy ND entries in the bridge table of a network-instance reaches the warning threshold percentage of the allowed limit.
Effect	None

9.22 networkInstanceBridgeTableProxyNdLimitHighUtilizationLowered

Table 92: networkInstanceBridgeTableProxyNdLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableProxyNdLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of proxy ND entries in the bridge table of network-instance <i>network-instance</i> is now at <i>pct-threshold%</i> minus 5% of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of proxy ND entries in the bridge table of the network-instance is at 5% minus the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

9.23 systemBridgeTableMacLimitHighUtilization

Table 93: systemBridgeTableMacLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	systemBridgeTableMacLimitHighUtilization
Default severity	warning
Message format string	The number of MAC addresses in the bridge table of the system has reached <i>pct-threshold%</i> of the allowed limit of <i>maximum-entries</i> .

Property name	Value
Cause	This event is generated when the number of MAC addresses in the bridge table of the system reaches the configured warning threshold percentage of the allowed limit.
Effect	None

9.24 systemBridgeTableMacLimitHighUtilizationLowered

Table 94: systemBridgeTableMacLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	systemBridgeTableMacLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of MAC addresses in the bridge table of the system is now at <i>pct-threshold%</i> minus 5% of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table of the system is at 5% minus the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

9.25 systemBridgeTableMacLimitLowered

Table 95: systemBridgeTableMacLimitLowered properties

Property name	Value
Application name	bridgetable
Event name	systemBridgeTableMacLimitLowered
Default severity	notice
Message format string	The number of MAC addresses in the bridge table of the system is now below the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table of the system goes below the allowed limit, after being above the allowed limit

Property name	Value
Effect	new mac-addresses can now be added to the bridge table.

9.26 systemBridgeTableMacLimitReached

Table 96: systemBridgeTableMacLimitReached properties

Property name	Value
Application name	bridgetable
Event name	systemBridgeTableMacLimitReached
Default severity	warning
Message format string	The number of MAC addresses in the bridge table of the system is at the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table of the system is at the allowed limit.
Effect	new mac-addresses cannot be added in any bridge table in the system.

9.27 systemBridgeTableProxyArpLimitHighUtilization

Table 97: systemBridgeTableProxyArpLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	systemBridgeTableProxyArpLimitHighUtilization
Default severity	warning
Message format string	The number of proxy ARP entries in the bridge table of the system has reached <i>pct-threshold%</i> of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of proxy ARP entries in the bridge table the system reaches the warning threshold percentage of the allowed limit.
Effect	None

9.28 systemBridgeTableProxyArpLimitHighUtilizationLowered

Table 98: systemBridgeTableProxyArpLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	systemBridgeTableProxyArpLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of proxy ARP entries in the bridge table of the system is now at <i>pct-threshold%</i> minus 5% of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of proxy ARP entries in the bridge table of the system is at 5% minus the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

9.29 systemBridgeTableProxyNdLimitHighUtilization

Table 99: systemBridgeTableProxyNdLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	systemBridgeTableProxyNdLimitHighUtilization
Default severity	warning
Message format string	The number of proxy ND entries in the bridge table of the system has reached <i>pct-threshold%</i> of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of proxy ND entries in the bridge table the system reaches the warning threshold percentage of the allowed limit.
Effect	None

9.30 systemBridgeTableProxyNdLimitHighUtilizationLowered

Table 100: systemBridgeTableProxyNdLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	systemBridgeTableProxyNdLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of proxy ND entries in the bridge table of the system is now at <i>pct-threshold%</i> minus 5% of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of proxy ND entries in the bridge table of the system is at 5% minus the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

9.31 systemMulticastIdLimitHighUtilization

Table 101: systemMulticastIdLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	systemMulticastIdLimitHighUtilization
Default severity	warning
Message format string	The multicast id usage of the system has reached <i>pct-threshold%</i> of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the multicast id usage of the system reaches the configured warning threshold percentage of the allowed limit.
Effect	None

9.32 systemMulticastIdLimitHighUtilizationLowered

Table 102: systemMulticastIdLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	systemMulticastIdLimitHighUtilizationLowered
Default severity	notice
Message format string	The multicast id usage of the system is now at <i>pct-threshold%</i> minus 5% of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the multicast id usage of the system is at 5% minus the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

9.33 vxlanInterfaceBridgeTableMulticastDestinationsLimitHighUtilization

Table 103: vxlanInterfaceBridgeTableMulticastDestinationsLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	vxlanInterfaceBridgeTableMulticastDestinationsLimitHighUtilization
Default severity	warning
Message format string	The number of Vxlan Multicast Destinations in the bridge table for the vxlan-interface <i>tunnel-interface.vxlan-interface</i> has reached <i>pct-threshold%</i> of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of Vxlan Multicast Destinations in the vxlan-interface reaches the warning threshold percentage of the allowed limit.
Effect	None

9.34 vxlanInterfaceBridgeTableMulticastDestinationsLimitHighUtilizationLowered

Table 104: vxlanInterfaceBridgeTableMulticastDestinationsLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	vxlanInterfaceBridgeTableMulticastDestinationsLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of Vxlan Multicast Destinations in the bridge table for the vxlan-interface <i>tunnel-interface.vxlan-interface</i> is now below a <i>pct-threshold%</i> minus 5% of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of Vxlan Multicast Destinations in the vxlan-interface is 5% below the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

9.35 vxlanInterfaceBridgeTableMulticastDestinationsLimitLowered

Table 105: vxlanInterfaceBridgeTableMulticastDestinationsLimitLowered properties

Property name	Value
Application name	bridgetable
Event name	vxlanInterfaceBridgeTableMulticastDestinationsLimitLowered
Default severity	notice
Message format string	The number of Vxlan Multicast Destinations in the bridge table for the vxlan-interface <i>tunnel-interface.vxlan-interface</i> is now below the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of Vxlan Multicast Destinations in a vxlan-interface goes below the allowed limit, after being above the allowed limit
Effect	New Vxlan Multicast Destinations can be added to the vxlan-interface.

9.36 vxlanInterfaceBridgeTableMulticastDestinationsLimitReached

Table 106: vxlanInterfaceBridgeTableMulticastDestinationsLimitReached properties

Property name	Value
Application name	bridgetable
Event name	vxlanInterfaceBridgeTableMulticastDestinationsLimitReached
Default severity	warning
Message format string	The number of Vxlan Multicast Destinations in the bridge table for the vxlan-interface <i>tunnel-interface.vxlan-interface</i> is at the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of Vxlan Multicast Destinations in a vxlan-interface is at the allowed limit.
Effect	New Vxlan Multicast Destinations cannot be added to the vxlan-interface.

10 chassis

10.1 platformDatapathResourceHighUtilization

Table 107: platformDatapathResourceHighUtilization properties

Property name	Value
Application name	chassis
Event name	platformDatapathResourceHighUtilization
Default severity	warning
Message format string	The datapath resource called <i>resource-name</i> has reached <i>threshold%</i> or more utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i>
Cause	This event is generated when the utilization of a datapath resource has increased to a level that may warrant concern if further resources are consumed
Effect	None

10.2 platformDatapathResourceHighUtilizationLowered

Table 108: platformDatapathResourceHighUtilizationLowered properties

Property name	Value
Application name	chassis
Event name	platformDatapathResourceHighUtilizationLowered
Default severity	notice
Message format string	The datapath resource called <i>resource-name</i> has decreased back to <i>threshold%</i> or less utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i>
Cause	This event is generated when the utilization of a datapath resource has decreased to a level that may no longer warrant concern
Effect	None

10.3 platformDatapathResourceLimitCleared

Table 109: platformDatapathResourceLimitCleared properties

Property name	Value
Application name	chassis
Event name	platformDatapathResourceLimitCleared
Default severity	notice
Message format string	The datapath resource called <i>resource-name</i> has decreased from 100% utilization back to 95% or less utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i>
Cause	This event is generated when the utilization of a datapath resource has decreased to a level such that resource exhaustion is no longer imminent
Effect	None

10.4 platformDatapathResourceLimitReached

Table 110: platformDatapathResourceLimitReached properties

Property name	Value
Application name	chassis
Event name	platformDatapathResourceLimitReached
Default severity	warning
Message format string	The datapath resource called <i>resource-name</i> has reached 100% utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i>
Cause	This event is generated when the utilization of a datapath resource has exhausted the resource
Effect	None

10.5 platformMtuHighUtilization

Table 111: platformMtuHighUtilization properties

Property name	Value
Application name	chassis
Event name	platformMtuHighUtilization
Default severity	warning
Message format string	The MTU resource called <i>resource-name</i> has reached <i>threshold%</i> or more utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> . Only <i>free-entries</i> entries are remaining.
Cause	This event is generated when the utilization of an MTU resource has increased to a level that may warrant concern if further resources are consumed
Effect	None

10.6 platformMtuHighUtilizationLowered

Table 112: platformMtuHighUtilizationLowered properties

Property name	Value
Application name	chassis
Event name	platformMtuHighUtilizationLowered
Default severity	notice
Message format string	The MTU resource called <i>resource-name</i> has decreased back to <i>threshold%</i> or less utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> .
Cause	This event is generated when the utilization of an MTU resource has decreased to a level that may no longer warrant concern
Effect	None

10.7 platformPipelineResourceHighUtilization

Table 113: platformPipelineResourceHighUtilization properties

Property name	Value
Application name	chassis
Event name	platformPipelineResourceHighUtilization
Default severity	warning
Message format string	The pipeline resource called <i>resource-name</i> has reached <i>threshold%</i> or more utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> , pipeline <i>pipeline</i>
Cause	This event is generated when the utilization of a pipeline resource has increased to a level that may warrant concern if further resources are consumed
Effect	None

10.8 platformPipelineResourceHighUtilizationLowered

Table 114: platformPipelineResourceHighUtilizationLowered properties

Property name	Value
Application name	chassis
Event name	platformPipelineResourceHighUtilizationLowered
Default severity	notice
Message format string	The pipeline resource called <i>resource-name</i> has decreased back to <i>threshold%</i> or less utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> , pipeline <i>pipeline</i>
Cause	This event is generated when the utilization of a pipeline resource has decreased to a level that may no longer warrant concern
Effect	None

10.9 platformPipelineResourceLimitCleared

Table 115: platformPipelineResourceLimitCleared properties

Property name	Value
Application name	chassis
Event name	platformPipelineResourceLimitCleared
Default severity	notice
Message format string	The pipeline resource called <i>resource-name</i> has decreased from 100% utilization back to 95% or less utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> , <i>pipeline</i>
Cause	This event is generated when the utilization of a pipeline resource has decreased to a level such that resource exhaustion is no longer imminent
Effect	None

10.10 platformPipelineResourceLimitReached

Table 116: platformPipelineResourceLimitReached properties

Property name	Value
Application name	chassis
Event name	platformPipelineResourceLimitReached
Default severity	warning
Message format string	The pipeline resource called <i>resource-name</i> has reached 100% utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> , <i>pipeline</i>
Cause	This event is generated when the utilization of a pipeline resource has exhausted the resource
Effect	None

10.11 portDown

Table 117: portDown properties

Property name	Value
Application name	chassis
Event name	portDown
Default severity	warning
Message format string	Interface <i>interface_name</i> is now down for reason: <i>oper_down_reason</i>
Cause	The interface has transitioned from the up state to the down state
Effect	The interface is now down

10.12 portUp

Table 118: portUp properties

Property name	Value
Application name	chassis
Event name	portUp
Default severity	notice
Message format string	Interface <i>interface_name</i> is now up
Cause	The interface has transitioned from the down state to the up state
Effect	The interface is now up

10.13 subinterfaceDown

Table 119: subinterfaceDown properties

Property name	Value
Application name	chassis
Event name	subinterfaceDown
Default severity	warning

Property name	Value
Message format string	The subinterface <i>subinterface_name</i> is now down for reason: <i>oper_down_reason</i>
Cause	This event is generated when the subinterface has transitioned from the up state to the down state
Effect	The subinterface is now down

10.14 subinterfaceUp

Table 120: subinterfaceUp properties

Property name	Value
Application name	chassis
Event name	subinterfaceUp
Default severity	notice
Message format string	The subinterface <i>subinterface_name</i> is now up
Cause	This event is generated when the subinterface has transitioned from the down state to the up state.
Effect	The subinterface is now up

10.15 transceiverChannelHighInputPowerAlarm

Table 121: transceiverChannelHighInputPowerAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighInputPowerAlarm
Default severity	critical
Message format string	The input power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> dBm or more
Cause	The input power of the optical channel has increased
Effect	High input power may affect transceiver performance

10.16 transceiverChannelHighInputPowerAlarmClear

Table 122: transceiverChannelHighInputPowerAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighInputPowerAlarmClear
Default severity	informational
Message format string	The input power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> dBm
Cause	The input power of the optical channel has decreased
Effect	High input power may affect transceiver performance

10.17 transceiverChannelHighInputPowerWarning

Table 123: transceiverChannelHighInputPowerWarning properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighInputPowerWarning
Default severity	warning
Message format string	The input power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> dBm or more
Cause	The input power of the optical channel has increased
Effect	High input power may affect transceiver performance

10.18 transceiverChannelHighInputPowerWarningClear

Table 124: transceiverChannelHighInputPowerWarningClear properties

Property name	Value
Application name	chassis

Property name	Value
Event name	transceiverChannelHighInputPowerWarningClear
Default severity	informational
Message format string	The input power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> dBm
Cause	The input power of the optical channel has decreased
Effect	High input power may affect transceiver performance

10.19 transceiverChannelHighLaserBiasCurrentAlarm

Table 125: transceiverChannelHighLaserBiasCurrentAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighLaserBiasCurrentAlarm
Default severity	critical
Message format string	The laser bias current supplied to channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> mA or more
Cause	Laser bias increases with temperature and age. Consider lowering the ambient temperature or replacing the laser.
Effect	High laser bias may affect transceiver performance

10.20 transceiverChannelHighLaserBiasCurrentAlarmClear

Table 126: transceiverChannelHighLaserBiasCurrentAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighLaserBiasCurrentAlarmClear
Default severity	informational

Property name	Value
Message format string	The laser bias current supplied to channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> mA
Cause	Laser bias current has decreased
Effect	High laser bias may affect transceiver performance

10.21 transceiverChannelHighLaserBiasCurrentWarning

Table 127: *transceiverChannelHighLaserBiasCurrentWarning* properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighLaserBiasCurrentWarning
Default severity	warning
Message format string	The laser bias current supplied to channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> mA or more
Cause	Laser bias increases with temperature and age. Consider lowering the ambient temperature or replacing the laser.
Effect	High laser bias may affect transceiver performance

10.22 transceiverChannelHighLaserBiasCurrentWarningClear

Table 128: *transceiverChannelHighLaserBiasCurrentWarningClear* properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighLaserBiasCurrentWarningClear
Default severity	informational
Message format string	The laser bias current supplied to channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> mA
Cause	Laser bias current has decreased

Property name	Value
Effect	High laser bias may affect transceiver performance

10.23 transceiverChannelHighOutputPowerAlarm

Table 129: transceiverChannelHighOutputPowerAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighOutputPowerAlarm
Default severity	critical
Message format string	The output power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> dBm or more
Cause	The output power of the optical channel has increased
Effect	High output power may affect transceiver performance

10.24 transceiverChannelHighOutputPowerAlarmClear

Table 130: transceiverChannelHighOutputPowerAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighOutputPowerAlarmClear
Default severity	informational
Message format string	The output power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> dBm
Cause	The output power of the optical channel has decreased
Effect	High output power may affect transceiver performance

10.25 transceiverChannelHighOutputPowerWarning

Table 131: transceiverChannelHighOutputPowerWarning properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighOutputPowerWarning
Default severity	warning
Message format string	The output power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> dBm or more
Cause	The output power of the optical channel has increased
Effect	High output power may affect transceiver performance

10.26 transceiverChannelHighOutputPowerWarningClear

Table 132: transceiverChannelHighOutputPowerWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighOutputPowerWarningClear
Default severity	informational
Message format string	The output power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> dBm
Cause	The output power of the optical channel has decreased
Effect	High output power may affect transceiver performance

10.27 transceiverChannelLowInputPowerAlarm

Table 133: transceiverChannelLowInputPowerAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowInputPowerAlarm

Property name	Value
Default severity	critical
Message format string	The input power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> dBm or less
Cause	The input power of the optical channel has decreased
Effect	Low input power may affect transceiver performance

10.28 transceiverChannelLowInputPowerAlarmClear

Table 134: *transceiverChannelLowInputPowerAlarmClear* properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowInputPowerAlarmClear
Default severity	informational
Message format string	The input power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> dBm
Cause	The input power of the optical channel has increased
Effect	Low input power may affect transceiver performance

10.29 transceiverChannelLowInputPowerWarning

Table 135: *transceiverChannelLowInputPowerWarning* properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowInputPowerWarning
Default severity	warning
Message format string	The input power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> dBm or less
Cause	The input power of the optical channel has decreased

Property name	Value
Effect	Low input power may affect transceiver performance

10.30 transceiverChannelLowInputPowerWarningClear

Table 136: transceiverChannelLowInputPowerWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowInputPowerWarningClear
Default severity	informational
Message format string	The input power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> dBm
Cause	The input power of the optical channel has increased
Effect	Low input power may affect transceiver performance

10.31 transceiverChannelLowLaserBiasCurrentAlarm

Table 137: transceiverChannelLowLaserBiasCurrentAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowLaserBiasCurrentAlarm
Default severity	critical
Message format string	The laser bias current supplied to channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> mA or less
Cause	The laser bias current of the optical channel has decreased
Effect	Low laser bias current may affect transceiver performance

10.32 transceiverChannelLowLaserBiasCurrentAlarmClear

Table 138: transceiverChannelLowLaserBiasCurrentAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowLaserBiasCurrentAlarmClear
Default severity	informational
Message format string	The laser bias current supplied to channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> mA
Cause	The laser bias current of the optical channel has increased
Effect	Low laser bias current may affect transceiver performance

10.33 transceiverChannelLowLaserBiasCurrentWarning

Table 139: transceiverChannelLowLaserBiasCurrentWarning properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowLaserBiasCurrentWarning
Default severity	warning
Message format string	The laser bias current supplied to channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> mA or less
Cause	The laser bias current of the optical channel has decreased
Effect	Low laser bias current may affect transceiver performance

10.34 transceiverChannelLowLaserBiasCurrentWarningClear

Table 140: transceiverChannelLowLaserBiasCurrentWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowLaserBiasCurrentWarningClear

Property name	Value
Default severity	informational
Message format string	The laser bias current supplied to channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> mA
Cause	The laser bias current of the optical channel has increased
Effect	Low laser bias current may affect transceiver performance

10.35 transceiverChannelLowOutputPowerAlarm

Table 141: *transceiverChannelLowOutputPowerAlarm* properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowOutputPowerAlarm
Default severity	critical
Message format string	The output power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> dBm or less
Cause	The output power of the optical channel has decreased
Effect	Low output power may affect transceiver performance

10.36 transceiverChannelLowOutputPowerAlarmClear

Table 142: *transceiverChannelLowOutputPowerAlarmClear* properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowOutputPowerAlarmClear
Default severity	informational
Message format string	The output power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> dBm
Cause	The output power of the optical channel has increased

Property name	Value
Effect	Low output power may affect transceiver performance

10.37 transceiverChannelLowOutputPowerWarning

Table 143: transceiverChannelLowOutputPowerWarning properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowOutputPowerWarning
Default severity	warning
Message format string	The output power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> dBm or less
Cause	The output power of the optical channel has decreased
Effect	Low output power may affect transceiver performance

10.38 transceiverChannelLowOutputPowerWarningClear

Table 144: transceiverChannelLowOutputPowerWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowOutputPowerWarningClear
Default severity	informational
Message format string	The output power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> dBm
Cause	The output power of the optical channel has increased
Effect	Low output power may affect transceiver performance

10.39 transceiverHighInputPowerAlarm

Table 145: transceiverHighInputPowerAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverHighInputPowerAlarm
Default severity	critical
Message format string	The input power measured for the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> dBm or more
Cause	The input power of the optics has increased
Effect	High input power may affect transceiver performance

10.40 transceiverHighInputPowerAlarmClear

Table 146: transceiverHighInputPowerAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverHighInputPowerAlarmClear
Default severity	informational
Message format string	The input power measured for the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> dBm
Cause	The input power of the optics has decreased
Effect	High input power may affect transceiver performance

10.41 transceiverHighInputPowerWarning

Table 147: transceiverHighInputPowerWarning properties

Property name	Value
Application name	chassis
Event name	transceiverHighInputPowerWarning
Default severity	warning

Property name	Value
Message format string	The input power measured for the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> dBm or more
Cause	The input power of the optics has increased
Effect	High input power may affect transceiver performance

10.42 transceiverHighInputPowerWarningClear

Table 148: *transceiverHighInputPowerWarningClear* properties

Property name	Value
Application name	chassis
Event name	transceiverHighInputPowerWarningClear
Default severity	informational
Message format string	The input power measured for the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> dBm
Cause	The input power of the opticsl has decreased
Effect	High input power may affect transceiver performance

10.43 transceiverHighLaserBiasCurrentAlarm

Table 149: *transceiverHighLaserBiasCurrentAlarm* properties

Property name	Value
Application name	chassis
Event name	transceiverHighLaserBiasCurrentAlarm
Default severity	critical
Message format string	The laser bias current supplied to the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> mA or more
Cause	Laser bias increases with temperature and age. Consider lowering the ambient temperature or replacing the laser.
Effect	High laser bias may affect transceiver performance

10.44 transceiverHighLaserBiasCurrentAlarmClear

Table 150: transceiverHighLaserBiasCurrentAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverHighLaserBiasCurrentAlarmClear
Default severity	informational
Message format string	The laser bias current supplied to the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> mA
Cause	Laser bias current has decreased
Effect	High laser bias may affect transceiver performance

10.45 transceiverHighLaserBiasCurrentWarning

Table 151: transceiverHighLaserBiasCurrentWarning properties

Property name	Value
Application name	chassis
Event name	transceiverHighLaserBiasCurrentWarning
Default severity	warning
Message format string	The laser bias current supplied to the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> mA or more
Cause	Laser bias increases with temperature and age. Consider lowering the ambient temperature or replacing the laser.
Effect	High laser bias may affect transceiver performance

10.46 transceiverHighLaserBiasCurrentWarningClear

Table 152: transceiverHighLaserBiasCurrentWarningClear properties

Property name	Value
Application name	chassis

Property name	Value
Event name	transceiverHighLaserBiasCurrentWarningClear
Default severity	informational
Message format string	The laser bias current supplied to the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> mA
Cause	Laser bias current has decreased
Effect	High laser bias may affect transceiver performance

10.47 transceiverHighOutputPowerAlarm

Table 153: transceiverHighOutputPowerAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverHighOutputPowerAlarm
Default severity	critical
Message format string	The output power measured for the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> dBm or more
Cause	The output power of the optics has increased
Effect	High output power may affect transceiver performance

10.48 transceiverHighOutputPowerAlarmClear

Table 154: transceiverHighOutputPowerAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverHighOutputPowerAlarmClear
Default severity	informational
Message format string	The output power measured for the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> dBm
Cause	The output power of the optics has decreased

Property name	Value
Effect	High output power may affect transceiver performance

10.49 transceiverHighOutputPowerWarning

Table 155: transceiverHighOutputPowerWarning properties

Property name	Value
Application name	chassis
Event name	transceiverHighOutputPowerWarning
Default severity	warning
Message format string	The output power measured for the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> dBm or more
Cause	The output power of the optics has increased
Effect	High output power may affect transceiver performance

10.50 transceiverHighOutputPowerWarningClear

Table 156: transceiverHighOutputPowerWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverHighOutputPowerWarningClear
Default severity	informational
Message format string	The output power measured for the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> dBm
Cause	The output power of the optics has decreased
Effect	High output power may affect transceiver performance

10.51 transceiverLowInputPowerAlarm

Table 157: transceiverLowInputPowerAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverLowInputPowerAlarm
Default severity	critical
Message format string	The input power measured for the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> dBm or less
Cause	The input power of the optics has decreased
Effect	Low input power may affect transceiver performance

10.52 transceiverLowInputPowerAlarmClear

Table 158: transceiverLowInputPowerAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverLowInputPowerAlarmClear
Default severity	informational
Message format string	The input power measured for the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> dBm
Cause	The input power of the optics has increased
Effect	Low input power may affect transceiver performance

10.53 transceiverLowInputPowerWarning

Table 159: transceiverLowInputPowerWarning properties

Property name	Value
Application name	chassis
Event name	transceiverLowInputPowerWarning
Default severity	warning

Property name	Value
Message format string	The input power measured for the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> dBm or less
Cause	The input power of the optics has decreased
Effect	Low input power may affect transceiver performance

10.54 transceiverLowInputPowerWarningClear

Table 160: *transceiverLowInputPowerWarningClear* properties

Property name	Value
Application name	chassis
Event name	transceiverLowInputPowerWarningClear
Default severity	informational
Message format string	The input power measured for the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> dBm
Cause	The input power of the optics has increased
Effect	Low input power may affect transceiver performance

10.55 transceiverLowLaserBiasCurrentAlarm

Table 161: *transceiverLowLaserBiasCurrentAlarm* properties

Property name	Value
Application name	chassis
Event name	transceiverLowLaserBiasCurrentAlarm
Default severity	critical
Message format string	The laser bias current supplied to the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> mA or less
Cause	The laser bias current of the optics has decreased
Effect	Low laser bias current may affect transceiver performance

10.56 transceiverLowLaserBiasCurrentAlarmClear

Table 162: transceiverLowLaserBiasCurrentAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverLowLaserBiasCurrentAlarmClear
Default severity	informational
Message format string	The laser bias current supplied to the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> mA
Cause	The laser bias current of the optics has increased
Effect	Low laser bias current may affect transceiver performance

10.57 transceiverLowLaserBiasCurrentWarning

Table 163: transceiverLowLaserBiasCurrentWarning properties

Property name	Value
Application name	chassis
Event name	transceiverLowLaserBiasCurrentWarning
Default severity	warning
Message format string	The laser bias current supplied to the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> mA or less
Cause	The laser bias current of the optics has decreased
Effect	Low laser bias current may affect transceiver performance

10.58 transceiverLowLaserBiasCurrentWarningClear

Table 164: transceiverLowLaserBiasCurrentWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverLowLaserBiasCurrentWarningClear
Default severity	informational

Property name	Value
Message format string	The laser bias current supplied to the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> mA
Cause	The laser bias current of the optics has increased
Effect	Low laser bias current may affect transceiver performance

10.59 transceiverLowOutputPowerAlarm

Table 165: *transceiverLowOutputPowerAlarm* properties

Property name	Value
Application name	chassis
Event name	transceiverLowOutputPowerAlarm
Default severity	critical
Message format string	The output power measured for the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> dBm or less
Cause	The output power of the optics has decreased
Effect	Low output power may affect transceiver performance

10.60 transceiverLowOutputPowerAlarmClear

Table 166: *transceiverLowOutputPowerAlarmClear* properties

Property name	Value
Application name	chassis
Event name	transceiverLowOutputPowerAlarmClear
Default severity	informational
Message format string	The output power measured for the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> dBm
Cause	The output power of the optics has increased
Effect	Low output power may affect transceiver performance

10.61 transceiverLowOutputPowerWarning

Table 167: transceiverLowOutputPowerWarning properties

Property name	Value
Application name	chassis
Event name	transceiverLowOutputPowerWarning
Default severity	warning
Message format string	The output power measured for the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> dBm or less
Cause	The output power of the optics has decreased
Effect	Low output power may affect transceiver performance

10.62 transceiverLowOutputPowerWarningClear

Table 168: transceiverLowOutputPowerWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverLowOutputPowerWarningClear
Default severity	informational
Message format string	The output power measured for the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> dBm
Cause	The output power of the optics has increased
Effect	Low output power may affect transceiver performance

10.63 transceiverModuleDown

Table 169: transceiverModuleDown properties

Property name	Value
Application name	chassis
Event name	transceiverModuleDown
Default severity	warning

Property name	Value
Message format string	The transceiver associated with the interface <i>interface_name</i> is now down
Cause	The transceiver oper-state has transitioned from the up state to any lower state
Effect	The transceiver is not operational

10.64 transceiverModuleHighTemperatureAlarm

Table 170: transceiverModuleHighTemperatureAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverModuleHighTemperatureAlarm
Default severity	critical
Message format string	The temperature of the transceiver associated with the interface <i>interface_name</i> has increased to <i>high_threshold</i> degrees C or more
Cause	The temperature of the transceiver module has increased
Effect	High temperatures may affect transceiver performance

10.65 transceiverModuleHighTemperatureAlarmClear

Table 171: transceiverModuleHighTemperatureAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverModuleHighTemperatureAlarmClear
Default severity	informational
Message format string	The temperature of the transceiver associated with the interface <i>interface_name</i> has decreased below <i>high_threshold</i> degrees C
Cause	The temperature of the transceiver module has decreased
Effect	High temperatures may affect transceiver performance

10.66 transceiverModuleHighTemperatureWarning

Table 172: transceiverModuleHighTemperatureWarning properties

Property name	Value
Application name	chassis
Event name	transceiverModuleHighTemperatureWarning
Default severity	warning
Message format string	The temperature of the transceiver associated with the interface <i>interface_name</i> has increased to <i>high_threshold</i> degrees C or more
Cause	The temperature of the transceiver module has increased
Effect	High temperatures may affect transceiver performance

10.67 transceiverModuleHighTemperatureWarningClear

Table 173: transceiverModuleHighTemperatureWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverModuleHighTemperatureWarningClear
Default severity	informational
Message format string	The temperature of the transceiver associated with the interface <i>interface_name</i> has decreased below <i>high_threshold</i> degrees C
Cause	The temperature of the transceiver module has decreased
Effect	High temperatures may affect transceiver performance

10.68 transceiverModuleHighVoltageAlarm

Table 174: transceiverModuleHighVoltageAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverModuleHighVoltageAlarm

Property name	Value
Default severity	critical
Message format string	The voltage of the transceiver associated with the interface <i>interface_name</i> has increased to <i>high_threshold</i> Volts or more
Cause	The voltage supplied to the transceiver module has increased
Effect	High voltages may affect transceiver performance

10.69 transceiverModuleHighVoltageAlarmClear

Table 175: *transceiverModuleHighVoltageAlarmClear* properties

Property name	Value
Application name	chassis
Event name	transceiverModuleHighVoltageAlarmClear
Default severity	informational
Message format string	The voltage of the transceiver associated with the interface <i>interface_name</i> has decreased below <i>high_threshold</i> Volts
Cause	The voltage supplied to the transceiver module has decreased
Effect	High voltages may affect transceiver performance

10.70 transceiverModuleHighVoltageWarning

Table 176: *transceiverModuleHighVoltageWarning* properties

Property name	Value
Application name	chassis
Event name	transceiverModuleHighVoltageWarning
Default severity	warning
Message format string	The voltage of the transceiver associated with the interface <i>interface_name</i> has increased to <i>high_threshold</i> Volts or more
Cause	The voltage supplied to the transceiver module has increased
Effect	High voltages may affect transceiver performance

10.71 transceiverModuleHighVoltageWarningClear

Table 177: transceiverModuleHighVoltageWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverModuleHighVoltageWarningClear
Default severity	informational
Message format string	The voltage of the transceiver associated with the interface <i>interface_name</i> has decreased below <i>high_threshold</i> Volts
Cause	The voltage supplied to the transceiver module has decreased
Effect	High voltages may affect transceiver performance

10.72 transceiverModuleLowTemperatureAlarm

Table 178: transceiverModuleLowTemperatureAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverModuleLowTemperatureAlarm
Default severity	critical
Message format string	The temperature of the transceiver associated with the interface <i>interface_name</i> has decreased to <i>low_threshold</i> degrees C or less
Cause	The temperature of the transceiver module has decreased
Effect	Low temperatures may affect transceiver performance

10.73 transceiverModuleLowTemperatureAlarmClear

Table 179: transceiverModuleLowTemperatureAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverModuleLowTemperatureAlarmClear

Property name	Value
Default severity	informational
Message format string	The temperature of the transceiver associated with the interface <i>interface_name</i> has increased above <i>low_threshold</i> degrees C
Cause	The temperature of the transceiver module has increased
Effect	Low temperatures may affect transceiver performance

10.74 transceiverModuleLowTemperatureWarning

Table 180: transceiverModuleLowTemperatureWarning properties

Property name	Value
Application name	chassis
Event name	transceiverModuleLowTemperatureWarning
Default severity	warning
Message format string	The temperature of the transceiver associated with the interface <i>interface_name</i> has decreased to <i>low_threshold</i> degrees C or less
Cause	The temperature of the transceiver module has decreased
Effect	Low temperatures may affect transceiver performance

10.75 transceiverModuleLowTemperatureWarningClear

Table 181: transceiverModuleLowTemperatureWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverModuleLowTemperatureWarningClear
Default severity	informational
Message format string	The temperature of the transceiver associated with the interface <i>interface_name</i> has increased above <i>low_threshold</i> degrees C
Cause	The temperature of the transceiver module has increased
Effect	Low temperatures may affect transceiver performance

10.76 transceiverModuleLowVoltageAlarm

Table 182: transceiverModuleLowVoltageAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverModuleLowVoltageAlarm
Default severity	critical
Message format string	The voltage of the transceiver associated with the interface <i>interface_name</i> has decreased to <i>low_threshold</i> Volts or less
Cause	The voltage supplied to the transceiver module has decreased
Effect	Low voltages may affect transceiver performance

10.77 transceiverModuleLowVoltageAlarmClear

Table 183: transceiverModuleLowVoltageAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverModuleLowVoltageAlarmClear
Default severity	informational
Message format string	The voltage of the transceiver associated with the interface <i>interface_name</i> has increased above <i>low_threshold</i> Volts
Cause	The voltage supplied to the transceiver module has increased
Effect	Low voltages may affect transceiver performance

10.78 transceiverModuleLowVoltageWarning

Table 184: transceiverModuleLowVoltageWarning properties

Property name	Value
Application name	chassis
Event name	transceiverModuleLowVoltageWarning

Property name	Value
Default severity	warning
Message format string	The voltage of the transceiver associated with the interface <i>interface_name</i> has decreased to <i>low_threshold</i> Volts or less
Cause	The voltage supplied to the transceiver module has decreased
Effect	Low voltages may affect transceiver performance

10.79 transceiverModuleLowVoltageWarningClear

Table 185: *transceiverModuleLowVoltageWarningClear* properties

Property name	Value
Application name	chassis
Event name	transceiverModuleLowVoltageWarningClear
Default severity	informational
Message format string	The voltage of the transceiver associated with the interface <i>interface_name</i> has increased above <i>low_threshold</i> Volts
Cause	The voltage supplied to the transceiver module has increased
Effect	Low voltages may affect transceiver performance

10.80 transceiverModuleUp

Table 186: *transceiverModuleUp* properties

Property name	Value
Application name	chassis
Event name	transceiverModuleUp
Default severity	notice
Message format string	The transceiver associated with the interface <i>interface_name</i> is now up
Cause	The transceiver oper-state has transitioned from any other state to the up state
Effect	The transceiver is now operational

11 debug

11.1 setAllConfigLevels

Table 187: setAllConfigLevels properties

Property name	Value
Application name	debug
Event name	setAllConfigLevels
Default severity	informational
Message format string	App config debug log levels set to: <i>new_level</i> .
Cause	Configuration of debug log levels that can be received by program parameter or via idb.
Effect	Sticky levels are losable only to another configuration setting.

11.2 setAllStartupLevels

Table 188: setAllStartupLevels properties

Property name	Value
Application name	debug
Event name	setAllStartupLevels
Default severity	informational
Message format string	App debug startup log levels set to: <i>new_level</i> (configuration can override).
Cause	Restrain of logging verbosity internal to some programs
Effect	If configuration is set, and goes away, the startup levels are respected.

11.3 setHighBaselineLogLevels

Table 189: setHighBaselineLogLevels properties

Property name	Value
Application name	debug
Event name	setHighBaselineLogLevels
Default severity	informational
Message format string	Default (startup), and runtime app debug log levels set to: <i>new_level</i> . Except for modules: <i>{configured_list}</i>
Cause	Boot phase time is up, and verbose messages are suppressed in a beta build with .
Effect	Internal setting to all levels. If module levels are configured, they restore to the setting.

12 dhcp

12.1 dhcp6ClientAddressDeclined

Table 190: dhcp6ClientAddressDeclined properties

Property name	Value
Application name	dhcp
Event name	dhcp6ClientAddressDeclined
Default severity	notice
Message format string	DHCPv6 client running on <i>subinterface_name</i> was given a duplicate IPv6 address by the DHCP server <i>server_ip</i>
Cause	The DHCP server assigned an IPv6 address that is already in use on the same subnet
Effect	The subinterface will try to acquire a new IPv6 address

12.2 dhcp6ClientIpv6AddressValidLifetimeExpired

Table 191: dhcp6ClientIpv6AddressValidLifetimeExpired properties

Property name	Value
Application name	dhcp
Event name	dhcp6ClientIpv6AddressValidLifetimeExpired
Default severity	warning
Message format string	The IPv6 address <i>assigned_ip</i> obtained by the DHCPv6 client running on <i>subinterface_name</i> has become invalid
Cause	The DHCPv6 client was not successful in renewing or rebinding the IA_NA lease before the valid lifetime of the IPv6 address expired
Effect	The subinterface has no DHCP-assigned IPv6 address

12.3 dhcp6ClientRebindAttempted

Table 192: dhcp6ClientRebindAttempted properties

Property name	Value
Application name	dhcp
Event name	dhcp6ClientRebindAttempted
Default severity	informational
Message format string	DHCPv6 client running on <i>subinterface_name</i> is attempting to rebind its IA_NA lease for the IPv6 address <i>requested_ip</i>
Cause	The DHCPv6 client could not renew its assigned IPv6 address before the timer T2 expired
Effect	The IPv6 address may become deprecated and then invalid if the rebind is not successful

12.4 dhcp6ClientReconfigureMsgDropped

Table 193: dhcp6ClientReconfigureMsgDropped properties

Property name	Value
Application name	dhcp
Event name	dhcp6ClientReconfigureMsgDropped
Default severity	notice
Message format string	The DHCPv6 client running on <i>subinterface_name</i> dropped a RECONFIGURE message received from the server <i>server_ip</i>
Cause	The DHCPv6 client received a message that it was not supposed to receive (because it did not include a Reconfigure Accept option in its SOLICIT msg)
Effect	None

12.5 dhcp6ClientRenewSuccess

Table 194: dhcp6ClientRenewSuccess properties

Property name	Value
Application name	dhcp
Event name	dhcp6ClientRenewSuccess
Default severity	informational
Message format string	DHCPv6 client running on <i>subinterface_name</i> successfully renewed the IPv6 address <i>requested_ip</i> for a new lease duration of <i>new_lease_time</i> seconds from server <i>server_ip</i>
Cause	The DHCPv6 client received a success REPLY in response to its RENEW
Effect	The subinterface remains operational with its existing DHCP-assigned IPv6 address

12.6 dhcpClientAddressDeclined

Table 195: dhcpClientAddressDeclined properties

Property name	Value
Application name	dhcp
Event name	dhcpClientAddressDeclined
Default severity	notice
Message format string	DHCP client running on <i>subinterface_name</i> was given a duplicate IPv4 address by the DHCP server <i>server_ip</i>
Cause	The DHCP server assigned an IPv4 address that is already in use on the same subnet
Effect	The subinterface will try to acquire a new IPv4 address after a 10s delay

12.7 dhcpClientLeaseExpired

Table 196: dhcpClientLeaseExpired properties

Property name	Value
Application name	dhcp
Event name	dhcpClientLeaseExpired
Default severity	warning
Message format string	The DHCP lease for address <i>assigned_ip</i> obtained by the DHCP client running on <i>subinterface_name</i> and obtained from server <i>server_ip</i> has expired
Cause	The DHCP client was not successful in renewing or rebinding the lease
Effect	The subinterface has no DHCP-assigned IPv4 address

12.8 dhcpClientRebindAttempted

Table 197: dhcpClientRebindAttempted properties

Property name	Value
Application name	dhcp
Event name	dhcpClientRebindAttempted
Default severity	informational
Message format string	DHCP client running on <i>subinterface_name</i> is attempting to rebind its lease for the IP address <i>requested_ip</i>
Cause	The DHCP client could not renew its assigned IPv4 address before the timer T2 expired
Effect	The lease may expire if the rebind is not successful

12.9 dhcpClientRenewSuccess

Table 198: dhcpClientRenewSuccess properties

Property name	Value
Application name	dhcp
Event name	dhcpClientRenewSuccess

Property name	Value
Default severity	informational
Message format string	DHCP client running on <i>subinterface_name</i> successfully renewed the IP address <i>requested_ip</i> for a new lease duration of <i>new_lease_time</i> seconds from server <i>server_ip</i>
Cause	The DHCP client received a DHCPACK response to its DHCPREQUEST
Effect	The subinterface remains operational with its existing DHCP-assigned IPv4 address

12.10 dhcpv4RelayAdminDisable

Table 199: *dhcpv4RelayAdminDisable* properties

Property name	Value
Application name	dhcp
Event name	dhcpv4RelayAdminDisable
Default severity	warning
Message format string	DHCPv4 Relay on sub-interface <i>subinterface_name</i> has changed to administrative disable state
Cause	The DHCPv4 Relay admin state has changed from enable to disable due to configuration change
Effect	The DHCPv4 Relay admin state is disable on the mentioned sub-interface

12.11 dhcpv4RelayAdminEnable

Table 200: *dhcpv4RelayAdminEnable* properties

Property name	Value
Application name	dhcp
Event name	dhcpv4RelayAdminEnable
Default severity	warning
Message format string	DHCPv4 Relay on sub-interface <i>subinterface_name</i> has changed to administrative enable state

Property name	Value
Cause	The DHCPv4 Relay admin state has changed from disable to enable due to configuration change
Effect	The DHCPv4 Relay admin state is enable on the mentioned sub-interface

12.12 dhcpv4RelayAllDhcpv4ServersUnreachable

Table 201: dhcpv4RelayAllDhcpv4ServersUnreachable properties

Property name	Value
Application name	dhcp
Event name	dhcpv4RelayAllDhcpv4ServersUnreachable
Default severity	critical
Message format string	All DHCPv4 Servers <i>dhcpv4_server_list</i> configured under DHCPv4 Relay on sub-interface <i>subinterface_name</i> are unreachable for network instance <i>network_instance</i>
Cause	All The DHCPv4 Servers configured under DHCPv4 Relay are unreachable
Effect	The DHCPv4 Relay oper state is down on the mentioned sub-interface

12.13 dhcpv4RelayOperDown

Table 202: dhcpv4RelayOperDown properties

Property name	Value
Application name	dhcp
Event name	dhcpv4RelayOperDown
Default severity	critical
Message format string	DHCPv4 Relay on sub-interface <i>subinterface_name</i> has changed to operational down state
Cause	The DHCPv4 Relay oper state has changed from up to down
Effect	The DHCPv4 Relay oper state is down on the mentioned sub-interface

12.14 dhcpv4RelayOperUp

Table 203: dhcpv4RelayOperUp properties

Property name	Value
Application name	dhcp
Event name	dhcpv4RelayOperUp
Default severity	warning
Message format string	DHCPv4 Relay on sub-interface <i>subinterface_name</i> has changed to operational up state
Cause	The DHCPv4 Relay oper state has changed from down to up
Effect	The DHCPv4 Relay oper state is up on the mentioned sub-interface

12.15 dhcpv6RelayAdminDisable

Table 204: dhcpv6RelayAdminDisable properties

Property name	Value
Application name	dhcp
Event name	dhcpv6RelayAdminDisable
Default severity	warning
Message format string	DHCPv6 Relay on sub-interface <i>subinterface_name</i> has changed to administrative disable state
Cause	The DHCPv6 Relay admin state has changed from enable to disable due to configuration change
Effect	The DHCPv6 Relay admin state is disable on the mentioned sub-interface

12.16 dhcpv6RelayAdminEnable

Table 205: dhcpv6RelayAdminEnable properties

Property name	Value
Application name	dhcp

Property name	Value
Event name	dhcpv6RelayAdminEnable
Default severity	warning
Message format string	DHCPv6 Relay on sub-interface <i>subinterface_name</i> has changed to administrative enable state
Cause	The DHCPv6 Relay admin state has changed from disable to enable due to configuration change
Effect	The DHCPv6 Relay admin state is enable on the mentioned sub-interface

12.17 dhcpv6RelayAllDhcpv6ServersUnreachable

Table 206: *dhcpv6RelayAllDhcpv6ServersUnreachable* properties

Property name	Value
Application name	dhcp
Event name	dhcpv6RelayAllDhcpv6ServersUnreachable
Default severity	critical
Message format string	All DHCPv6 Servers <i>dhcpv6_server_list</i> configured under DHCPv6 Relay on sub-interface <i>subinterface_name</i> are unreachable for network instance <i>network_instance</i>
Cause	All The DHCPv6 Servers configured under DHCPv6 Relay are unreachable
Effect	The DHCPv6 Relay oper state is down on the mentioned sub-interface

12.18 dhcpv6RelayOperDown

Table 207: *dhcpv6RelayOperDown* properties

Property name	Value
Application name	dhcp
Event name	dhcpv6RelayOperDown
Default severity	critical

Property name	Value
Message format string	DHCPv6 Relay on sub-interface <i>subinterface_name</i> has changed to operational down state
Cause	The DHCPv6 Relay oper state has changed from up to down
Effect	The DHCPv6 Relay oper state is down on the mentioned sub-interface

12.19 dhcpv6RelayOperUp

Table 208: *dhcpv6RelayOperUp* properties

Property name	Value
Application name	dhcp
Event name	dhcpv6RelayOperUp
Default severity	warning
Message format string	DHCPv6 Relay on sub-interface <i>subinterface_name</i> has changed to operational up state
Cause	The DHCPv6 Relay oper state has changed from down to up
Effect	The DHCPv6 Relay oper state is up on the mentioned sub-interface

12.20 giAddressMismatch

Table 209: *giAddressMismatch* properties

Property name	Value
Application name	dhcp
Event name	giAddressMismatch
Default severity	critical
Message format string	Gi-Address for DHCPv4 Relay on sub-interface <i>subinterface_name</i> does not match any of the configured IPv4 addresses under sub-interface
Cause	The gi-address for DHCPv4 Relay does not match any of the configured IPv4 addresses under sub-interface
Effect	The DHCPv4 Relay oper state is down on the mentioned sub-interface

12.21 sourceAddressMismatch

Table 210: sourceAddressMismatch properties

Property name	Value
Application name	dhcp
Event name	sourceAddressMismatch
Default severity	critical
Message format string	source-address for DHCPv6 Relay on sub-interface <i>subinterface_name</i> does not match any of the configured IPv6 addresses under sub-interface
Cause	The source-address for DHCPv6 Relay does not match any of the configured IPv6 addresses under sub-interface
Effect	The DHCPv6 Relay oper state is down on the mentioned sub-interface

13 ethcfm

13.1 ClearErrorCcm

Table 211: ClearErrorCcm properties

Property name	Value
Application name	ethcfm
Event name	ClearErrorCcm
Default severity	notice
Message format string	ETHCFM: The condition of unexpected period (UNP) on MEP <i>domain-id/association-id/mep-id</i> is cleared.
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level, correct MEG ID, correct MEP ID, correct period.
Effect	The MEP has cleared a defect.

13.2 ClearLossOfContinuity

Table 212: ClearLossOfContinuity properties

Property name	Value
Application name	ethcfm
Event name	ClearLossOfContinuity
Default severity	notice
Message format string	ETHCFM: The condition of loss of continuity (LOC) on MEP <i>domain-id/association-id/mep-id</i> is cleared.
Cause	This notification is generated when a MEP receives CCM frames from a peer MEP during an interval equal to 3.5 times the CCM transmission period.
Effect	The MEP has cleared a defect.

13.3 ClearMacStatus

Table 213: ClearMacStatus properties

Property name	Value
Application name	ethcfm
Event name	ClearMacStatus
Default severity	notice
Message format string	ETHCFM: The condition of loss of continuity (LOC) on MEP <i>domain-id/association-id/mep-id</i> is cleared.
Cause	This notification is generated when a MEP receives CCM frames from a peer MEP during an interval equal to 3.5 times the CCM transmission period.
Effect	The MEP has cleared a defect.

13.4 ClearMismmerge

Table 214: ClearMismmerge properties

Property name	Value
Application name	ethcfm
Event name	ClearMismmerge
Default severity	notice
Message format string	ETHCFM: The condition of mismmerge (MMG) on MEP <i>domain-id/association-id/mep-id</i> is cleared.
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level, correct MEG ID.
Effect	The MEP has cleared a defect.

13.5 clearOneWayDmTCA

Table 215: clearOneWayDmTCA properties

Property name	Value
Application name	ethcfm

Property name	Value
Event name	clearOneWayDmTCA
Default severity	notice
Message format string	ETHCFM: A TCA is cleared for one-way delay measurement PM test ' <i>domain-id/association-id/mep-id/session-id/ mi-type/bin-type/direction</i> '.
Cause	This notification is generated when the result of performance monitoring of an one-way delay measurement has fallen below the clear-threshold.
Effect	The alarm is cleared.

13.6 ClearRemoteCcm

Table 216: ClearRemoteCcm properties

Property name	Value
Application name	ethcfm
Event name	ClearRemoteCcm
Default severity	notice
Message format string	ETHCFM: The condition of loss of continuity (LOC) on MEP <i>domain-id/association-id/mep-id</i> is cleared.
Cause	This notification is generated when a MEP receives CCM frames from a peer MEP during an interval equal to 3.5 times the CCM transmission period.
Effect	The MEP has cleared a defect.

13.7 ClearRemoteDefectIndication

Table 217: ClearRemoteDefectIndication properties

Property name	Value
Application name	ethcfm
Event name	ClearRemoteDefectIndication
Default severity	notice

Property name	Value
Message format string	ETHCFM: The remote defect indication (RDI) condition on MEP <i>domain-id/association-id/mep-id</i> is cleared.
Cause	This notification is generated when a MEP receives a CCM frame with the RDI field clear.
Effect	The MEP has cleared a defect.

13.8 clearTwoWayDmTCA

Table 218: *clearTwoWayDmTCA* properties

Property name	Value
Application name	ethcfm
Event name	clearTwoWayDmTCA
Default severity	notice
Message format string	ETHCFM: A TCA is cleared for two-way delay measurement PM test ' <i>domain-id/association-id/mep-id/session-id/ mi-type/bin-type/direction</i> '.
Cause	This notification is generated when the result of performance monitoring of a two-way delay measurement has fallen below the clear-threshold.
Effect	The alarm is cleared.

13.9 clearTwoWaySlmAvgflrTCA

Table 219: *clearTwoWaySlmAvgflrTCA* properties

Property name	Value
Application name	ethcfm
Event name	clearTwoWaySlmAvgflrTCA
Default severity	notice
Message format string	ETHCFM: A TCA is cleared for average flr of two-way synthetic loss measurement PM test ' <i>domain-id/association-id/mep-id/session-id/ mi-type/direction</i> '.
Cause	This notification is generated when the average flr of a two-way synthetic loss measurement has fallen below the clear-threshold.

Property name	Value
Effect	The alarm is cleared.

13.10 clearTwoWaySlmHliTCA

Table 220: clearTwoWaySlmHliTCA properties

Property name	Value
Application name	ethcfm
Event name	clearTwoWaySlmHliTCA
Default severity	notice
Message format string	ETHCFM: A TCA is cleared for high loss of two-way synthetic loss measurement PM test ' domain-id/association-id/mep-id/session-id/ mi-type/direction'.
Cause	This notification is generated when the high loss interval of a two-way synthetic loss measurement has fallen below the clear-threshold.
Effect	The alarm is cleared.

13.11 clearTwoWaySlmUnavailTCA

Table 221: clearTwoWaySlmUnavailTCA properties

Property name	Value
Application name	ethcfm
Event name	clearTwoWaySlmUnavailTCA
Default severity	notice
Message format string	ETHCFM: A TCA is cleared for unavailability of two-way synthetic loss measurement PM test ' domain-id/association-id/mep-id/session-id/ mi-type/direction'.
Cause	This notification is generated when the unavailability intervals of a two-way synthetic loss measurement has fallen below the clear-threshold.
Effect	The alarm is cleared.

13.12 ClearUnexpectedMegLevel

Table 222: ClearUnexpectedMegLevel properties

Property name	Value
Application name	ethcfm
Event name	ClearUnexpectedMegLevel
Default severity	notice
Message format string	ETHCFM: The condition of unexpected MEG level (UNL) on MEP <i>domain-id/association-id/mep-id</i> is cleared.
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level.
Effect	The MEP has cleared a defect.

13.13 ClearUnexpectedMep

Table 223: ClearUnexpectedMep properties

Property name	Value
Application name	ethcfm
Event name	ClearUnexpectedMep
Default severity	notice
Message format string	ETHCFM: The condition of unexpected MEP (UNM) on MEP <i>domain-id/association-id/mep-id</i> is cleared.
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level, correct MEG ID, correct MEP ID.
Effect	The MEP has cleared a defect.

13.14 ClearUnexpectedPeriod

Table 224: ClearUnexpectedPeriod properties

Property name	Value
Application name	ethcfm
Event name	ClearUnexpectedPeriod

Property name	Value
Default severity	notice
Message format string	ETHCFM: The condition of unexpected period (UNP) on MEP <i>domain-id/association-id/mep-id</i> is cleared.
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level, correct MEG ID, correct MEP ID, correct period.
Effect	The MEP has cleared a defect.

13.15 ClearXconCcm

Table 225: ClearXconCcm properties

Property name	Value
Application name	ethcfm
Event name	ClearXconCcm
Default severity	notice
Message format string	ETHCFM: The condition of unexpected MEG level (UNL) on MEP <i>domain-id/association-id/mep-id</i> is cleared.
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level.
Effect	The MEP has cleared a defect.

13.16 linktraceCompleted

Table 226: linktraceCompleted properties

Property name	Value
Application name	ethcfm
Event name	linktraceCompleted
Default severity	notice
Message format string	ETHCFM: A linktrace test from MEP <i>domain-id/association-id/mep-id</i> to the destination address ' <i>target</i> ' has completed.
Cause	This notification is generated when an on-demand linktrace test was successfully completed.

Property name	Value
Effect	The test result is stored in the MEP object.

13.17 loopbackCompleted

Table 227: loopbackCompleted properties

Property name	Value
Application name	ethcfm
Event name	loopbackCompleted
Default severity	notice
Message format string	ETHCFM: A loopback test from MEP <i>domain-id/association-id/mep-id</i> to the destination address ' <i>target</i> ' has completed.
Cause	This notification is generated when an on-demand loopback test was successfully completed.
Effect	The test result is stored in the MEP object.

13.18 oneWayDmCompleted

Table 228: oneWayDmCompleted properties

Property name	Value
Application name	ethcfm
Event name	oneWayDmCompleted
Default severity	notice
Message format string	ETHCFM: An one-way delay measurement test from MEP <i>domain-id/association-id/mep-id</i> to the destination address ' <i>target</i> ' has completed.
Cause	This notification is generated when an on-demand one-way delay measurement test was successfully completed.
Effect	The test result is stored in the MEP object.

13.19 RaiseErrorCcm

Table 229: RaiseErrorCcm properties

Property name	Value
Application name	ethcfm
Event name	RaiseErrorCcm
Default severity	warning
Message format string	ETHCFM: MEP <i>domain-id/ association-id/mep-id</i> has a condition of unexpected period (UNP).
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level, correct MEG ID, correct MEP ID, but with a period field value different than its own CCM transmission period.
Effect	The MEP has a defect.

13.20 RaiseLossOfContinuity

Table 230: RaiseLossOfContinuity properties

Property name	Value
Application name	ethcfm
Event name	RaiseLossOfContinuity
Default severity	warning
Message format string	ETHCFM: MEP <i>domain-id/ association-id/mep-id</i> has a condition of loss of continuity (LOC).
Cause	This notification is generated when a MEP receives no CCM frames from a peer MEP during an interval equal to 3.5 times the CCM transmission period.
Effect	The MEP has a defect.

13.21 RaiseMacStatus

Table 231: RaiseMacStatus properties

Property name	Value
Application name	ethcfm
Event name	RaiseMacStatus
Default severity	warning
Message format string	ETHCFM: MEP <i>domain-id/ association-id/mep-id</i> has a condition of loss of continuity (LOC).
Cause	This notification is generated when a MEP receives no CCM frames from a peer MEP during an interval equal to 3.5 times the CCM transmission period.
Effect	The MEP has a defect.

13.22 RaiseMismmerge

Table 232: RaiseMismmerge properties

Property name	Value
Application name	ethcfm
Event name	RaiseMismmerge
Default severity	warning
Message format string	ETHCFM: MEP <i>domain-id/ association-id/mep-id</i> has a condition of mismmerge (MMG).
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level but incorrect MEG ID.
Effect	The MEP has a defect.

13.23 raiseOneWayDmTCA

Table 233: raiseOneWayDmTCA properties

Property name	Value
Application name	ethcfm

Property name	Value
Event name	raiseOneWayDmTCA
Default severity	warning
Message format string	ETHCFM: A TCA is raised for one-way delay measurement PM test ' <i>domain-id/association-id/mep-id/session-id/ mi-type/bin-type/direction</i> '.
Cause	This notification is generated when the result of performance monitoring of a one-way delay measurement has reached or exceeded the raise-threshold.
Effect	An alarm is raised.

13.24 RaiseRemoteCcm

Table 234: RaiseRemoteCcm properties

Property name	Value
Application name	ethcfm
Event name	RaiseRemoteCcm
Default severity	warning
Message format string	ETHCFM: MEP <i>domain-id/ association-id/mep-id</i> has a condition of loss of continuity (LOC).
Cause	This notification is generated when a MEP receives no CCM frames from a peer MEP during an interval equal to 3.5 times the CCM transmission period.
Effect	The MEP has a defect.

13.25 RaiseRemoteDefectIndication

Table 235: RaiseRemoteDefectIndication properties

Property name	Value
Application name	ethcfm
Event name	RaiseRemoteDefectIndication
Default severity	warning

Property name	Value
Message format string	ETHCFM: MEP <i>domain-id/ association-id/mep-id</i> has a condition of remote defect indication (RDI).
Cause	This notification is generated when a MEP receives a CCM frame with the RDI field set.
Effect	The MEP has a defect.

13.26 raiseTwoWayDmTCA

Table 236: *raiseTwoWayDmTCA* properties

Property name	Value
Application name	ethcfm
Event name	raiseTwoWayDmTCA
Default severity	warning
Message format string	ETHCFM: A TCA is raised for two-way delay measurement PM test ' <i>domain-id/association-id/mep-id/session-id/ mi-type/bin-type/direction</i> '.
Cause	This notification is generated when the result of performance monitoring of a two-way delay measurement has reached or exceeded the raise-threshold.
Effect	An alarm is raised.

13.27 raiseTwoWaySlmAvgflrTCA

Table 237: *raiseTwoWaySlmAvgflrTCA* properties

Property name	Value
Application name	ethcfm
Event name	raiseTwoWaySlmAvgflrTCA
Default severity	warning
Message format string	ETHCFM: A TCA is raised for average flr of two-way synthetic loss measurement PM test ' <i>domain-id/association-id/mep-id/session-id/ mi-type/direction</i> '.

Property name	Value
Cause	This notification is generated when the average flr of a two-way synthetic loss measurement has reached or exceeded the raise-threshold.
Effect	An alarm is raised.

13.28 raiseTwoWaySlmHliTCA

Table 238: raiseTwoWaySlmHliTCA properties

Property name	Value
Application name	ethcfm
Event name	raiseTwoWaySlmHliTCA
Default severity	warning
Message format string	ETHCFM: A TCA is raised for high loss of two-way synthetic loss measurement PM test ' domain-id/association-id/mep-id/session-id/ mi-type/direction'.
Cause	This notification is generated when the high loss intervals of a two-way synthetic loss measurement has reached or exceeded the raise-threshold.
Effect	An alarm is raised.

13.29 raiseTwoWaySlmUnavailTCA

Table 239: raiseTwoWaySlmUnavailTCA properties

Property name	Value
Application name	ethcfm
Event name	raiseTwoWaySlmUnavailTCA
Default severity	warning
Message format string	ETHCFM: A TCA is raised for unavailability of two-way synthetic loss measurement PM test ' domain-id/association-id/mep-id/session-id/ mi-type/direction'.

Property name	Value
Cause	This notification is generated when the unavailability intervals of a two-way synthetic loss measurement has reached or exceeded the raise-threshold.
Effect	An alarm is raised.

13.30 RaiseUnexpectedMegLevel

Table 240: RaiseUnexpectedMegLevel properties

Property name	Value
Application name	ethcfm
Event name	RaiseUnexpectedMegLevel
Default severity	warning
Message format string	ETHCFM: MEP <i>domain-id/ association-id/mep-id</i> has a condition of unexpected MEG level (UNL).
Cause	This notification is generated when a MEP receives a CCM frame with incorrect MEG level.
Effect	The MEP has a defect.

13.31 RaiseUnexpectedMep

Table 241: RaiseUnexpectedMep properties

Property name	Value
Application name	ethcfm
Event name	RaiseUnexpectedMep
Default severity	warning
Message format string	ETHCFM: MEP <i>domain-id/ association-id/mep-id</i> has a condition of unexpected MEP (UNM).
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level, correct MEG ID but with unexpected MEP ID.
Effect	The MEP has a defect.

13.32 RaiseUnexpectedPeriod

Table 242: RaiseUnexpectedPeriod properties

Property name	Value
Application name	ethcfm
Event name	RaiseUnexpectedPeriod
Default severity	warning
Message format string	ETHCFM: MEP <i>domain-id/ association-id/mep-id</i> has a condition of unexpected period (UNP).
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level, correct MEG ID, correct MEP ID, but with a period field value different than its own CCM transmission period.
Effect	The MEP has a defect.

13.33 RaiseXconCcm

Table 243: RaiseXconCcm properties

Property name	Value
Application name	ethcfm
Event name	RaiseXconCcm
Default severity	warning
Message format string	ETHCFM: MEP <i>domain-id/ association-id/mep-id</i> has a condition of unexpected MEG level (UNL).
Cause	This notification is generated when a MEP receives a CCM frame with incorrect MEG level.
Effect	The MEP has a defect.

13.34 twoWayDmCompleted

Table 244: twoWayDmCompleted properties

Property name	Value
Application name	ethcfm
Event name	twoWayDmCompleted
Default severity	notice
Message format string	ETHCFM: A two-way delay measurement test from MEP <i>domain-id/association-id/mep-id</i> to the destination address ' <i>target</i> ' has completed.
Cause	This notification is generated when an on-demand two-way delay measurement test was successfully completed.
Effect	The test result is stored in the MEP object.

13.35 TwoWaySImAvailabilityState

Table 245: TwoWaySImAvailabilityState properties

Property name	Value
Application name	ethcfm
Event name	TwoWaySImAvailabilityState
Default severity	notice
Message format string	ETHCFM: The availability state has transited to ' <i>availability</i> ' in two-way synthetic loss measurement PM test ' <i>domain-id/ association-id/mep-id/ session-id/mi-type/direction</i> ' at ' <i>transition-time</i> '.
Cause	This notification is generated when the availability of a two-way synthetic loss measurement has transited from Available to Unavailable or vice versa.
Effect	The notice is sent.

13.36 twoWaySImCompleted

Table 246: twoWaySImCompleted properties

Property name	Value
Application name	ethcfm
Event name	twoWaySImCompleted
Default severity	notice
Message format string	ETHCFM: A two-way synthetic loss measurement test from MEP <i>domain-id/association-id/mep-id</i> to the destination address ' <i>target</i> ' has completed.
Cause	This notification is generated when an on-demand two-way synthetic loss measurement test was successfully completed.
Effect	The test result is stored in the MEP object.

14 evpn

14.1 ethernetsegmentNetworkInstanceBgpInstanceDfStatusChanged

Table 247: *ethernetsegmentNetworkInstanceBgpInstanceDfStatusChanged* properties

Property name	Value
Application name	evpn
Event name	ethernetsegmentNetworkInstanceBgpInstanceDfStatusChanged
Default severity	notice
Message format string	BGP-EVPN attachment circuit on ethernet segment <i>ethernet-segment</i> on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is now a <i>designated-forwarding-status</i> .
Cause	This event is generated when there is a change in the ethernet segment attachment circuit designated forwarder state.
Effect	The forwarding state of the ethernet segment attachment circuit is changed.

14.2 ethernetsegmentPreferenceOperValueChanged

Table 248: *ethernetsegmentPreferenceOperValueChanged* properties

Property name	Value
Application name	evpn
Event name	ethernetsegmentPreferenceOperValueChanged
Default severity	notice
Message format string	The Oper DF preference value changed to <i>oper-preference</i> and/or the DP value changed to <i>do-not-preempt</i> on ethernet-segment <i>ethernet-segment</i>
Cause	This event is generated when there is a change in the ethernet segment operational preference value or the do not preempt value.
Effect	The designated forwarder state of the ethernet segment's attachment circuit might change.

14.3 evpnAutoDiscoveryEviRouteAddDroppedDueToUnexpectedEthTag

Table 249: *evpnAutoDiscoveryEviRouteAddDroppedDueToUnexpectedEth Tag properties*

Property name	Value
Application name	evpn
Event name	evpnAutoDiscoveryEviRouteAddDroppedDueToUnexpectedEthTag
Default severity	warning
Message format string	BGP-EVPN Auto Discovery Evi route received with route-distinguisher <i>route-distinguisher</i> and ethernet segment identifier <i>ethernet-segment-id</i> add on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is dropped because the Ethernet Tag Identifier <i>received-ethernet-tag</i> received in the route, does not match locally configured Ethernet Tag Identifier <i>local-ethernet-tag</i> on the bgp-instance
Cause	This event is generated when a received Ethernet Tag Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The designated forwarder election on this ethernet-segment-id for this EVI will be affected. The mac-address's on this ethernet-segment will not be programmed in the bridge-table

14.4 evpnAutoDiscoveryEviRouteWithdrawDroppedDueToUnexpectedEthTag

Table 250: *evpnAutoDiscoveryEviRouteWithdrawDroppedDueToUnexpectedEth Tag properties*

Property name	Value
Application name	evpn
Event name	evpnAutoDiscoveryEviRouteWithdrawDroppedDueToUnexpectedEth Tag
Default severity	warning
Message format string	BGP-EVPN Auto Discovery Evi route received with route-distinguisher <i>route-distinguisher</i> and ethernet segment identifier <i>ethernet-segment-id</i> delete on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is dropped because the Ethernet Tag Identifier <i>received-ethernet-tag</i> received in the route, does not match locally configured Ethernet Tag Identifier <i>local-ethernet-tag</i> on the bgp-instance

Property name	Value
Cause	This event is generated when a received Ethernet Tag Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The designated forwarder election on this ethernet-segment-id for this EVI will be affected. The mac-address's on this ethernet-segment if programmed in the bridge-table, will not be deleted or updated

14.5 evpnAutoDiscoveryEviRouteWithdrawnDueToUnexpectedVni

Table 251: *evpnAutoDiscoveryEviRouteWithdrawnDueToUnexpectedVni* properties

Property name	Value
Application name	evpn
Event name	evpnAutoDiscoveryEviRouteWithdrawnDueToUnexpectedVni
Default severity	warning
Message format string	BGP-EVPN Auto Discovery Evi route received with route-distinguisher <i>route-distinguisher</i> and ethernet segment identifier <i>ethernet-segment-id</i> on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is withdrawn because the VXLAN Network Identifier <i>received-vni</i> received in the route, does not match locally configured VXLAN Network Identifier <i>local-vni</i> on the bgp-instance
Cause	This event is generated when a received VXLAN Network Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The designated forwarder election on this ethernet-segment-id for this EVI will be affected. The mac-address's on this ethernet-segment will not be programmed in the bridge-table

14.6 evpnInclMcastRouteAddDroppedDueToUnexpectedEthTag

Table 252: *evpnInclMcastRouteAddDroppedDueToUnexpectedEthTag* properties

Property name	Value
Application name	evpn
Event name	evpnInclMcastRouteAddDroppedDueToUnexpectedEthTag
Default severity	warning

Property name	Value
Message format string	BGP-EVPN Inclusive Multicast route received with route-distinguisher <i>route-distinguisher</i> and originating IP <i>originating-ip-address</i> add on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is dropped because the Ethernet Tag Identifier <i>received-ethernet-tag</i> received in the route, does not match locally configured Ethernet Tag Identifier <i>local-ethernet-tag</i> on the bgp-instance
Cause	This event is generated when a received Ethernet Tag Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The Virtual Tunnel End Point for the received VXLAN Network Identifier is not programmed in the multicast flood list of bridge-table

14.7 evpnInclMcastRouteWithdrawDroppedDueToUnexpectedEthTag

Table 253: *evpnInclMcastRouteWithdrawDroppedDueToUnexpectedEthTag* properties

Property name	Value
Application name	evpn
Event name	evpnInclMcastRouteWithdrawDroppedDueToUnexpectedEthTag
Default severity	warning
Message format string	BGP-EVPN Inclusive Multicast route received with route-distinguisher <i>route-distinguisher</i> and originating IP <i>originating-ip-address</i> withdraw on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is dropped because the Ethernet Tag Identifier <i>received-ethernet-tag</i> received in the route, does not match locally configured Ethernet Tag Identifier <i>local-ethernet-tag</i> on the bgp-instance
Cause	This event is generated when a received Ethernet Tag Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The Virtual Tunnel End Point for the received VXLAN Network Identifier if programmed in the multicast flood list of bridge-table, might not be removed

14.8 evpnInclMcastRouteWithdrawnDueToUnexpectedVni

Table 254: *evpnInclMcastRouteWithdrawnDueToUnexpectedVni* properties

Property name	Value
Application name	evpn
Event name	evpnInclMcastRouteWithdrawnDueToUnexpectedVni
Default severity	warning
Message format string	BGP-EVPN Inclusive Multicast route received with route-distinguisher <i>route-distinguisher</i> and originating IP <i>originating-ip-address</i> on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is withdrawn because the VXLAN Network Identifier <i>received-vni</i> received in the route, does not match locally configured VXLAN Network Identifier <i>local-vni</i> on the bgp-instance
Cause	This event is generated when a received VXLAN Network Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The Virtual Tunnel End Point for the received VXLAN Network Identifier is not programmed in the multicast flood list of bridge-table

14.9 evpnIpPrefixRouteNotImportedDueToUnexpectedVni

Table 255: *evpnIpPrefixRouteNotImportedDueToUnexpectedVni* properties

Property name	Value
Application name	evpn
Event name	evpnIpPrefixRouteNotImportedDueToUnexpectedVni
Default severity	warning
Message format string	BGP-EVPN IP-PREFIX <i>ip-prefix</i> LENGTH <i>prefix-length</i> received with route-distinguisher <i>route-distinguisher</i> on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is not imported because the VXLAN Network Identifier <i>received-vni</i> received in the route, does not match the locally configured VXLAN Network Identifier on the bgp-instance
Cause	This event is generated when a received VXLAN Network Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The IP-Prefix is not programmed in the route-table

14.10 evpnIpPrefixRouteWithdrawnDueToNoGwMac

Table 256: *evpnIpPrefixRouteWithdrawnDueToNoGwMac* properties

Property name	Value
Application name	evpn
Event name	evpnIpPrefixRouteWithdrawnDueToNoGwMac
Default severity	warning
Message format string	BGP-EVPN IP-PREFIX <i>ip-prefix</i> LENGTH <i>prefix-length</i> received with route-distinguisher <i>route-distinguisher</i> on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is withdrawn because the route is received without a Gateway MAC Address and that is not allowed in an EVPN Interface-less bgp instance for VXLAN tunnels
Cause	This event is generated when a received IP Prefix route does not contain the required GW Mac and therefore it is not allowed in the local EVPN Interface-less bgp instance of the network-instance
Effect	The ip-prefix is not programmed in the route table of the network instance

14.11 evpnIpPrefixRouteWithdrawnDueToUnexpectedGwIp

Table 257: *evpnIpPrefixRouteWithdrawnDueToUnexpectedGwIp* properties

Property name	Value
Application name	evpn
Event name	evpnIpPrefixRouteWithdrawnDueToUnexpectedGwIp
Default severity	warning
Message format string	BGP-EVPN IP-PREFIX <i>ip-prefix</i> LENGTH <i>prefix-length</i> received with route-distinguisher <i>route-distinguisher</i> on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is withdrawn because the non-zero Gateway IP Address <i>gw-ip-address</i> received in the route is not allowed in an EVPN Interface-less bgp instance of the network-instance
Cause	This event is generated when a received Gateway IP Address in the IP Prefix routes is non-zero and therefore not allowed in the local EVPN Interface-less bgp instance of the network-instance

Property name	Value
Effect	The ip-prefix is not programmed in the route table of the network instance

14.12 evpnMacRouteAddDroppedDueToUnexpectedEthTag

Table 258: *evpnMacRouteAddDroppedDueToUnexpectedEthTag* properties

Property name	Value
Application name	evpn
Event name	evpnMacRouteAddDroppedDueToUnexpectedEthTag
Default severity	warning
Message format string	BGP-EVPN MAC <i>mac-address</i> IP <i>ip-address</i> received with route-distinguisher <i>route-distinguisher</i> add on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is dropped because the Ethernet Tag Identifier <i>received-ethernet-tag</i> received in the route, does not match locally configured Ethernet Tag Identifier <i>local-ethernet-tag</i> on the bgp-instance
Cause	This event is generated when a received Ethernet Tag Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The mac-address is not programmed in the bridge-table AND/OR the mac-address/ip-address pair is not programmed in the ARP or Neighbor discovery table

14.13 evpnMacRouteWithdrawDroppedDueToUnexpectedEthTag

Table 259: *evpnMacRouteWithdrawDroppedDueToUnexpectedEthTag* properties

Property name	Value
Application name	evpn
Event name	evpnMacRouteWithdrawDroppedDueToUnexpectedEthTag
Default severity	warning
Message format string	BGP-EVPN MAC <i>mac-address</i> IP <i>ip-address</i> received with route-distinguisher <i>route-distinguisher</i> delete on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is dropped because the Ethernet Tag Identifier <i>received-ethernet-tag</i> received in the route, does

Property name	Value
	not match locally configured Ethernet Tag Identifier <i>local-ethernet-tag</i> on the bgp-instance
Cause	This event is generated when a received Ethernet Tag Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The mac-address if programmed in the bridge-table AND/OR the mac-address/ip-address pair if programmed in the ARP or Neighbor discovery table, might not be removed

14.14 evpnMacRouteWithdrawnDueToUnexpectedVni

Table 260: *evpnMacRouteWithdrawnDueToUnexpectedVni* properties

Property name	Value
Application name	evpn
Event name	evpnMacRouteWithdrawnDueToUnexpectedVni
Default severity	warning
Message format string	BGP-EVPN MAC <i>mac-address</i> IP <i>ip-address</i> received with route-distinguisher <i>route-distinguisher</i> on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is withdrawn because the VXLAN Network Identifier <i>received-vni</i> received in the route, does not match locally configured VXLAN Network Identifier <i>local-vni</i> on the bgp-instance
Cause	This event is generated when a received VXLAN Network Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The mac-address is not programmed in the bridge-table AND/OR the mac-address/ip-address pair is not programmed in the ARP or Neighbor discovery table

15 gnmi

15.1 globalConfigUpdate

Table 261: *globalConfigUpdate* properties

Property name	Value
Application name	gnmi
Event name	globalConfigUpdate
Default severity	informational
Message format string	gNMI server global configuration updated.
Cause	A global configuration change has been made, resulting in gNMI configuration being regenerated.
Effect	May result in gNMI server(s) start or stop depending on the configuration change.

15.2 gnmiServerStart

Table 262: *gnmiServerStart* properties

Property name	Value
Application name	gnmi
Event name	gnmiServerStart
Default severity	informational
Message format string	gNMI server started for network instance <i>network_instance</i> source address <i>source_address</i> port number <i>gnmi_socket</i> .
Cause	gNMI server has started for the mentioned network instance, source address and port number.
Effect	gNMI server is ready to receive and process requests for the mentioned network instance, source address and port number.

15.3 gnmiServerStop

Table 263: gnmiServerStop properties

Property name	Value
Application name	gnmi
Event name	gnmiServerStop
Default severity	informational
Message format string	gNMI server stopped for network <i>network_instance</i> source address <i>source_address</i> port number <i>gnmi_socket</i> .
Cause	gNMI server has stopped for the mentioned network instance, source address and port number.
Effect	gNMI server is not ready to receive and process requests for the mentioned network instance, source address and port number.

15.4 networkInstanceConfigUpdate

Table 264: networkInstanceConfigUpdate properties

Property name	Value
Application name	gnmi
Event name	networkInstanceConfigUpdate
Default severity	informational
Message format string	gNMI server network instance <i>network_instance</i> configuration updated.
Cause	A configuration change has been made in the mentioned network instance, resulting in gNMI server configuration being regenerated.
Effect	May result in gNMI server start or stop depending on the configuration change.

15.5 subscriptionEnd

Table 265: subscriptionEnd properties

Property name	Value
Application name	gnmi

Property name	Value
Event name	subscriptionEnd
Default severity	informational
Message format string	Subscription for path ' <i>path</i> ' requested by <i>peer_address:socket</i> has finished.
Cause	A subscription has finished based on the request from mentioned peer.
Effect	none.

15.6 subscriptionRequestReceived

Table 266: *subscriptionRequestReceived* properties

Property name	Value
Application name	gnmi
Event name	subscriptionRequestReceived
Default severity	informational
Message format string	Subscription request from peer <i>peer_address:socket</i> is received.
Cause	A subscription request is received from the mentioned peer.
Effect	gNMI server will process the request.

15.7 subscriptionStart

Table 267: *subscriptionStart* properties

Property name	Value
Application name	gnmi
Event name	subscriptionStart
Default severity	informational
Message format string	Subscription for path ' <i>path</i> ' requested by <i>peer_address:socket</i> has started.
Cause	A subscription has started based on the request from mentioned peer.
Effect	none.

15.8 unixSocketGnmiOperDown

Table 268: *unixSocketGnmiOperDown* properties

Property name	Value
Application name	gnmi
Event name	unixSocketGnmiOperDown
Default severity	critical
Message format string	Unix Domain Socket gNMI server is no longer operational.
Cause	The Unix domain socket gNMI server has transitioned from any other operational state to the down state.
Effect	Unix Domain Socket gNMI server is now down.

15.9 unixSocketGnmiOperUp

Table 269: *unixSocketGnmiOperUp* properties

Property name	Value
Application name	gnmi
Event name	unixSocketGnmiOperUp
Default severity	warning
Message format string	Unix domain socket gNMI server is operational.
Cause	The Unix domain socket gNMI server has transitioned from any other operational state to the up state.
Effect	Unix domain socket gNMI server is now up.

16 gribi

16.1 globalConfigUpdate

Table 270: *globalConfigUpdate* properties

Property name	Value
Application name	gribi
Event name	globalConfigUpdate
Default severity	informational
Message format string	Gribi server global configuration updated.
Cause	A global configuration change has been made, resulting in Gribi configuration being regenerated.
Effect	May result in Gribi server(s) start or stop depending on the configuration change.

16.2 gribiServerStart

Table 271: *gribiServerStart* properties

Property name	Value
Application name	gribi
Event name	gribiServerStart
Default severity	informational
Message format string	Gribi server started for network instance <i>network_instance</i> source address <i>source_address</i> port number <i>gribi_socket</i> .
Cause	Gribi server has started for the mentioned network instance, source address and port number.
Effect	Gribi server is ready to receive and process requests for the mentioned network instance, source address and port number.

16.3 gribiServerStop

Table 272: *gribiServerStop* properties

Property name	Value
Application name	gribi
Event name	gribiServerStop
Default severity	informational
Message format string	Gribi server stopped for network <i>network_instance</i> source address <i>source_address</i> port number <i>gribi_socket</i> .
Cause	Gribi server has stopped for the mentioned network instance, source address and port number.
Effect	Gribi server is not ready to receive and process requests for the mentioned network instance, source address and port number.

16.4 networkInstanceConfigUpdate

Table 273: *networkInstanceConfigUpdate* properties

Property name	Value
Application name	gribi
Event name	networkInstanceConfigUpdate
Default severity	informational
Message format string	Gribi server network instance <i>network_instance</i> configuration updated.
Cause	A configuration change has been made in the mentioned network instance, resulting in Gribi server configuration being regenerated.
Effect	May result in Gribi server start or stop depending on the configuration change.

16.5 unixSocketGribiOperDown

Table 274: *unixSocketGribiOperDown* properties

Property name	Value
Application name	gribi

Property name	Value
Event name	unixSocketGribiOperDown
Default severity	critical
Message format string	Unix Domain Socket Gribi server is no longer operational.
Cause	The Unix domain socket Gribi server has transitioned from any other operational state to the down state.
Effect	Unix Domain Socket Gribi server is now down.

16.6 unixSocketGribiOperUp

Table 275: *unixSocketGribiOperUp* properties

Property name	Value
Application name	gribi
Event name	unixSocketGribiOperUp
Default severity	warning
Message format string	Unix domain socket Gribi server is operational.
Cause	The Unix domain socket Gribi server has transitioned from any other operational state to the up state.
Effect	Unix domain socket Gribi server is now up.

17 igmp

17.1 igmpCModeRxQueryVersionMismatch

Table 276: *igmpCModeRxQueryVersionMismatch* properties

Property name	Value
Application name	igmp
Event name	igmpCModeRxQueryVersionMismatch
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - Mismatch between the interface <i>subinterface</i> compatible mode(<i>igmpInterfaceOperVersion</i>) and the version of the IGMP query (version <i>igmpQuerierVersion</i>) received on the interface.
Cause	This event is generated when the IGMP interface receives a query with a version that is higher than the interface's compatible mode.
Effect	IGMP interfaces will ignore any Queries with a version higher than the interface's compatibility mode.

17.2 igmpMaxNumberOfGroupSourcesReached

Table 277: *igmpMaxNumberOfGroupSourcesReached* properties

Property name	Value
Application name	igmp
Event name	igmpMaxNumberOfGroupSourcesReached
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - The number of group/source combinations learned on interface <i>subinterface</i> has exceeded the maximum limit of <i>igmpInterfaceMaxGroupSources</i> .
Cause	This event is generated when an attempt is made to learn a source when the number of group/source combinations on the IGMP interface is equal to the maximum number of group-sources configured on the interface.

Property name	Value
Effect	IGMP interfaces will not learn any new sources for a given group when the configured maximum number of group-sources has been reached.

17.3 igmpMaxNumberOfGroupsReached

Table 278: *igmpMaxNumberOfGroupsReached* properties

Property name	Value
Application name	igmp
Event name	igmpMaxNumberOfGroupsReached
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - The number of groups learned on interface <i>subinterface</i> has exceeded the maximum limit of <i>igmp InterfaceMaxGroups</i> .
Cause	This event is generated when an attempt is made to learn a group when the number of groups on the IGMP interface is equal to the maximum number of groups configured on the interface.
Effect	IGMP interfaces will not learn any new groups when the configured maximum number of groups has been reached.

17.4 igmpMaxNumberOfSourcesReached

Table 279: *igmpMaxNumberOfSourcesReached* properties

Property name	Value
Application name	igmp
Event name	igmpMaxNumberOfSourcesReached
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - The number of sources learned on interface <i>subinterface</i> has exceeded the maximum limit of <i>igmp InterfaceMaxSources</i> .
Cause	This event is generated when an attempt is made to learn a source when the number of sources for this group on the IGMP interface is equal to the maximum number of sources per group configured on the interface.

Property name	Value
Effect	IGMP interfaces will not learn any new sources for a given group when the configured maximum number of sources for the group has been reached.

17.5 igmpRxQueryVersionMismatch

Table 280: *igmpRxQueryVersionMismatch* properties

Property name	Value
Application name	igmp
Event name	igmpRxQueryVersionMismatch
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - IGMP <i>vigmpQuerierVersion</i> query received on interface <i>subinterface</i> configured as IGMP <i>vigmpInterfaceAdminVersion</i> .
Cause	This event is generated when the IGMP interface is configured as IGMPv3 and receives an IGMPv1 Query or IGMPv2 General Query.
Effect	IGMP interfaces configured as IGMPv3 will ignore IGMPv1 and IGMPv2 General Queries.

18 isis

18.1 isisAdjacencyBfdSessionSetupFailed

Table 281: *isisAdjacencyBfdSessionSetupFailed* properties

Property name	Value
Application name	isis
Event name	isisAdjacencyBfdSessionSetupFailed
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , BFD session setup failed for the <i>level</i> IS-IS adjacency with system <i>sys_id</i> , using interface <i>subinterface</i> . Failure reason: <i>bfd_failure_reason</i> .
Cause	This event is generated when BFD session setup fails with an adjacent neighbor.
Effect	Fast failure detection may not be possible.

18.2 isisAdjacencyChange

Table 282: *isisAdjacencyChange* properties

Property name	Value
Application name	isis
Event name	isisAdjacencyChange
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , the <i>level</i> IS-IS adjacency with system <i>sys_id</i> , using interface <i>subinterface</i> , moved to state <i>adj_state</i> .
Cause	This event is generated when an IS-IS adjacency enters or leaves the up state.
Effect	IS-IS traffic can only be forwarded along adjacencies that are up.

18.3 isisAdjacencyRestartStatusChange

Table 283: *isisAdjacencyRestartStatusChange* properties

Property name	Value
Application name	isis
Event name	isisAdjacencyRestartStatusChange
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , the graceful restart status for the <i>level</i> IS-IS adjacency on interface <i>subinterface</i> moved to new state <i>restart_status</i> .
Cause	This event is generated when the graceful restart status of a neighbor changes.
Effect	None

18.4 isisAreaMismatch

Table 284: *isisAreaMismatch* properties

Property name	Value
Application name	isis
Event name	isisAreaMismatch
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , a level1 PDU was received on interface <i>subinterface</i> with no Area Addresses matching the areas to which this IS router belongs. The PDU starts with: <i>pdu_fragment</i>
Cause	This event is generated to alert of a possible area-id misconfiguration inside a L1 area.
Effect	L1 adjacency cannot form

18.5 isisAuthDataFail

Table 285: isisAuthDataFail properties

Property name	Value
Application name	isis
Event name	isisAuthDataFail
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , a <i>level</i> PDU was received on interface <i>subinterface</i> with unexpected or incorrect data in the Authentication TLV. The PDU starts with: <i>pdu_fragment</i>
Cause	This event could be caused by incorrect keychain configuration in this router or its neighbor.
Effect	PDU's are dropped, with the effect depending on the PDU type

18.6 isisAuthTypeMismatch

Table 286: isisAuthTypeMismatch properties

Property name	Value
Application name	isis
Event name	isisAuthTypeMismatch
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , a <i>level</i> PDU was received on interface <i>subinterface</i> with an unrecognized or unsupported authentication type in TLV 10. The PDU starts with: <i>pdu_fragment</i>
Cause	This event could be caused by incorrect keychain configuration in this router or its neighbor.
Effect	PDU's are dropped, with the effect depending on the PDU type

18.7 isisCircuitIdsExhausted

Table 287: *isisCircuitIdsExhausted* properties

Property name	Value
Application name	isis
Event name	isisCircuitIdsExhausted
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , the IS-IS interface <i>subinterface</i> is operationally down because the limit of 255 circuit IDs available to LAN interfaces was reached.
Cause	This event is caused by having too many LAN interfaces.
Effect	LAN adjacencies are not formed

18.8 isisCircuitMtuTooLow

Table 288: *isisCircuitMtuTooLow* properties

Property name	Value
Application name	isis
Event name	isisCircuitMtuTooLow
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , a <i>level</i> LSP PDU or SNP PDU could not be transmitted on interface <i>subinterface</i> because the IP MTU is only <i>operational_subif_mtu</i> and an MTU of at least <i>required_mtu</i> is required.
Cause	The port MTU is too small and/or the <i>lsp-mtu-size</i> is too large.
Effect	PDUs are dropped

18.9 isisCorruptedLspDetected

Table 289: *isisCorruptedLspDetected* properties

Property name	Value
Application name	isis

Property name	Value
Event name	isisCorruptedLspDetected
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , the LSP PDU with ID <i>lsp_id</i> in the <i>level</i> database has become corrupted.
Cause	Memory corruption or other.
Effect	LSP is removed

18.10 isisLdpSyncExited

Table 290: *isisLdpSyncExited* properties

Property name	Value
Application name	isis
Event name	isisLdpSyncExited
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , the LDP synchronization state has ended on IS-IS interface <i>subinterface</i> , and now the state is <i>sync_state</i>
Cause	The LDP synchronization timer can be stopped because of a tools command, hold-down timer expiry or indication from the LDP peer that End-of-LIB has been received. When LDP sync is exited IS-IS resumes advertising a normal metric for the interface.
Effect	Transit traffic can start using this interface again.

18.11 isisLdpSyncTimerStarted

Table 291: *isisLdpSyncTimerStarted* properties

Property name	Value
Application name	isis
Event name	isisLdpSyncTimerStarted
Default severity	warning

Property name	Value
Message format string	In network-instance <i>network_instance</i> , the LDP synchronization timer has started on IS-IS interface <i>subinterface</i>
Cause	The sync timer is started when LDP synchronization is configured and the LDP adjacency comes up with the LDP peer. When this timer expires IS-IS will resume advertisement of a normal metric for the interface.
Effect	Transit traffic will continue to avoid using this interface.

18.12 isisLspFragmentTooLarge

Table 292: *isisLspFragmentTooLarge* properties

Property name	Value
Application name	isis
Event name	isisLspFragmentTooLarge
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , the <i>level</i> LSP PDU fragment <i>lsp_id</i> received on interface <i>subinterface</i> could not be accepted because the configured LSP MTU size is too small. An LSP MTU size of at least <i>required_lsp_mtu</i> bytes is required.
Cause	Misconfiguration of LSP MTU size
Effect	LSP PDU is not accepted

18.13 isisLspPurge

Table 293: *isisLspPurge* properties

Property name	Value
Application name	isis
Event name	isisLspPurge
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , the LSP PDU with ID <i>lsp_id</i> in the <i>level</i> database has been purged by <i>purge_originator</i> .
Cause	LSP lifetime expired or other reason

Property name	Value
Effect	The PDU is removed

18.14 isisLspSequenceNumberSkip

Table 294: *isisLspSequenceNumberSkip* properties

Property name	Value
Application name	isis
Event name	isisLspSequenceNumberSkip
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , the LSP with id <i>lsp_id</i> in the <i>level</i> database was re-originated with a sequence number that incremented by more than one.
Cause	There may be another IS router configured with the same system ID.
Effect	None

18.15 isisMaxAreaAddressesMismatch

Table 295: *isisMaxAreaAddressesMismatch* properties

Property name	Value
Application name	isis
Event name	isisMaxAreaAddressesMismatch
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , a <i>level</i> PDU was received on interface <i>subinterface</i> with an unexpected Max Area Addresses value in the IS-IS PDU header. The PDU starts with: <i>pdu_fragment</i>
Cause	Misconfiguration of max area addresses in the neighbor
Effect	The PDU is dropped

18.16 isisMaxLspSequenceNumberExceeded

Table 296: *isisMaxLspSequenceNumberExceeded* properties

Property name	Value
Application name	isis
Event name	isisMaxLspSequenceNumberExceeded
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , the LSP with id <i>lsp_id</i> in the <i>level</i> database was purged because the sequence number was already at its maximum value and could not be incremented.
Cause	A possible cause could be that the same system-id is configured on multiple systems; when 2 systems have the same system-id they both keep incrementing the LSP sequence number, causing the sequence counter to rollover.
Effect	The PDU is purged and reachability may be temporarily lost

18.17 isisOverloadEntry

Table 297: *isisOverloadEntry* properties

Property name	Value
Application name	isis
Event name	isisOverloadEntry
Default severity	warning
Message format string	In the IS-IS instance of network-instance <i>network_instance</i> , the <i>level</i> database has entered the overload state.
Cause	Overload bit configuration
Effect	No transit traffic is routed through the overloaded router.

18.18 isisOverloadExit

Table 298: isisOverloadExit properties

Property name	Value
Application name	isis
Event name	isisOverloadExit
Default severity	warning
Message format string	In the IS-IS instance of network-instance <i>network_instance</i> , the <i>level</i> database has exited from the overload state.
Cause	Overload bit configuration
Effect	Transit traffic can again be routed through the router.

18.19 isisOwnLspPurge

Table 299: isisOwnLspPurge properties

Property name	Value
Application name	isis
Event name	isisOwnLspPurge
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , a <i>level</i> LSP PDU was received with the system ID of this IS router and age equal to zero. The purge originator was <i>purge_originator</i> .
Cause	LSP lifetime expired or other reason
Effect	The PDU is removed

18.20 isisSystemIdLengthMismatch

Table 300: isisSystemIdLengthMismatch properties

Property name	Value
Application name	isis
Event name	isisSystemIdLengthMismatch

Property name	Value
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , a <i>level</i> PDU was received on interface <i>subinterface</i> with an unexpected System ID length in the IS-IS PDU header. The PDU starts with: <i>pdu_fragment</i>
Cause	Misconfiguration of system ID length in the neighbor
Effect	The PDU is dropped

18.21 isisVersionMismatch

Table 301: *isisVersionMismatch* properties

Property name	Value
Application name	isis
Event name	isisVersionMismatch
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , a <i>level</i> PDU was received on interface <i>subinterface</i> with an IS-IS protocol version not matching the expected value. The PDU starts with: <i>pdu_fragment</i>
Cause	Unsupported IS-IS version
Effect	PDU's cannot be exchanged

19 json

19.1 authenticationError

Table 302: authenticationError properties

Property name	Value
Application name	json
Event name	authenticationError
Default severity	informational
Message format string	No username/password received, authentication needed
Cause	A user has failed to authenticate.
Effect	That user can't establish a configuration session.

19.2 globalConfigUpdate

Table 303: globalConfigUpdate properties

Property name	Value
Application name	json
Event name	globalConfigUpdate
Default severity	informational
Message format string	JSON RPC server global configuration updated.
Cause	A global configuration change has been made, resulting in json rpc configuration being regenerated.
Effect	May result in json rpc process(es) start or stop depending on the configuration change.

19.3 httpJsonRpcOperDown

Table 304: httpJsonRpcOperDown properties

Property name	Value
Application name	json
Event name	httpJsonRpcOperDown
Default severity	critical
Message format string	HTTP JSON RPC server for network instance <i>network_instance</i> is no longer operational.
Cause	The httpJsonRpcOperDown event is generated when HTTP JSON RPC server on the mentioned network instance has transitioned from any other operational state to the down state.
Effect	HTTP JSON RPC server on the mentioned network instance is now down.

19.4 httpJsonRpcOperUp

Table 305: httpJsonRpcOperUp properties

Property name	Value
Application name	json
Event name	httpJsonRpcOperUp
Default severity	warning
Message format string	HTTP JSON RPC server for network instance <i>network_instance</i> is operational.
Cause	The httpJsonRpcOperUp event is generated when HTTP JSON RPC server on the mentioned network instance has transitioned from any other operational state to the up state.
Effect	HTTP JSON RPC server on the mentioned network instance is now up.

19.5 httpsJsonRpcOperDown

Table 306: *httpsJsonRpcOperDown* properties

Property name	Value
Application name	json
Event name	httpsJsonRpcOperDown
Default severity	critical
Message format string	HTTPS JSON RPC server for network instance <i>network_instance</i> is no longer operational.
Cause	The httpsJsonRpcOperDown event is generated when HTTPs JSON RPC server on the mentioned network instance has transitioned from any other operational state to the down state.
Effect	HTTPS JSON RPC server on the mentioned network instance is now down.

19.6 httpsJsonRpcOperUp

Table 307: *httpsJsonRpcOperUp* properties

Property name	Value
Application name	json
Event name	httpsJsonRpcOperUp
Default severity	warning
Message format string	HTTPS JSON RPC server for network instance <i>network_instance</i> is operational.
Cause	The httpsJsonRpcOperUp event is generated when HTTPs JSON RPC server on the mentioned network instance has transitioned from any other operational state to the up state.
Effect	HTTPS JSON RPC server on the mentioned network instance is now up.

19.7 jsonRpcRequestReceived

Table 308: jsonRpcRequestReceived properties

Property name	Value
Application name	json
Event name	jsonRpcRequestReceived
Default severity	informational
Message format string	Request received for session id <i>session_id</i> username <i>username</i> .
Cause	A JSON RPC Request is received.
Effect	JSON RPC server processes That Request.

19.8 jsonRpcResponseSent

Table 309: jsonRpcResponseSent properties

Property name	Value
Application name	json
Event name	jsonRpcResponseSent
Default severity	informational
Message format string	Response sent for session id <i>session_id</i> username <i>username</i> .
Cause	A JSON RPC Response is sent.
Effect	none.

19.9 networkInstanceConfigUpdate

Table 310: networkInstanceConfigUpdate properties

Property name	Value
Application name	json
Event name	networkInstanceConfigUpdate
Default severity	informational

Property name	Value
Message format string	JSON RPC server network instance <i>network_instance</i> configuration updated.
Cause	A configuration change has been made in the mentioned network instance, resulting in json rpc configuration being regenerated.
Effect	May result in json rpc process(es) start or stop depending on the configuration change.

19.10 unixSocketJsonRpcOperDown

Table 311: *unixSocketJsonRpcOperDown* properties

Property name	Value
Application name	json
Event name	unixSocketJsonRpcOperDown
Default severity	critical
Message format string	Unix Domain Socket JSON RPC server is no longer operational.
Cause	The Unix Domain Socket JSON RPC server has transitioned from any other operational state to the down state.
Effect	Unix Domain Socket JSON RPC server is now down.

19.11 unixSocketJsonRpcOperUp

Table 312: *unixSocketJsonRpcOperUp* properties

Property name	Value
Application name	json
Event name	unixSocketJsonRpcOperUp
Default severity	warning
Message format string	Unix Domain Socket JSON RPC server is operational.
Cause	The Unix Domain Socket JSON RPC server has transitioned from any other operational state to the up state.
Effect	Unix Domain Socket JSON RPC server is now up.

19.12 userAuthenticated

Table 313: userAuthenticated properties

Property name	Value
Application name	json
Event name	userAuthenticated
Default severity	informational
Message format string	User <i>username</i> authenticated.
Cause	A user has been successfully authenticated.
Effect	That user is ready to start a configuration session.

19.13 userAuthenticationErrorWrongPassword

Table 314: userAuthenticationErrorWrongPassword properties

Property name	Value
Application name	json
Event name	userAuthenticationErrorWrongPassword
Default severity	informational
Message format string	User <i>username</i> authentication failure, invalid username or password.
Cause	A user has failed to authenticate.
Effect	That user can't establish a configuration session.

20 lag

20.1 lagDown

Table 315: lagDown properties

Property name	Value
Application name	lag
Event name	lagDown
Default severity	warning
Message format string	LAG Interface <i>interface_name</i> : The operational state has transitioned to Down
Cause	This warning is generated when a LAG transitions to the down state.
Effect	The LAG is now down and any associated subinterfaces will also be brought down.

20.2 lagDownMinLinks

Table 316: lagDownMinLinks properties

Property name	Value
Application name	lag
Event name	lagDownMinLinks
Default severity	warning
Message format string	LAG Interface <i>interface_name</i> : The active number of member links has fallen below the min-links threshold
Cause	This warning is generated when a LAG transitions to the down state because the number of active links has dropped below the min-link threshold
Effect	The LAG is now down and any associated subinterfaces will also be brought down.

20.3 lagMemberLinkAdded

Table 317: lagMemberLinkAdded properties

Property name	Value
Application name	lag
Event name	lagMemberLinkAdded
Default severity	notice
Message format string	LAG Interface <i>interface_name</i> : The member-link <i>member-interface</i> has been added
Cause	This notification is generated when a new member-link is added to a LAG.
Effect	A new member link is now available to the LAG bundle.

20.4 lagMemberLinkRemoved

Table 318: lagMemberLinkRemoved properties

Property name	Value
Application name	lag
Event name	lagMemberLinkRemoved
Default severity	notice
Message format string	LAG Interface <i>interface_name</i> : The member-link <i>member-interface</i> has been removed
Cause	This notification is generated when a new member-link is removed from a LAG.
Effect	The specified interfaces is no longer a member of the LAG bundle.

20.5 lagMemberOperDown

Table 319: lagMemberOperDown properties

Property name	Value
Application name	lag
Event name	lagMemberOperDown

Property name	Value
Default severity	warning
Message format string	LAG Interface <i>interface_name</i> : The member-link <i>member-interface</i> operational state has transitioned to Down
Cause	This notification is generated when a member-link transitions to the down state.
Effect	The member link is now down and will not forward traffic.

20.6 lagMemberOperUp

Table 320: lagMemberOperUp properties

Property name	Value
Application name	lag
Event name	lagMemberOperUp
Default severity	warning
Message format string	LAG Interface <i>interface_name</i> : The member-link <i>member-interface</i> operational state has transitioned to Up
Cause	This notification is generated when a member-link transitions to the up state.
Effect	The member link is now operational.

20.7 lagUp

Table 321: lagUp properties

Property name	Value
Application name	lag
Event name	lagUp
Default severity	notice
Message format string	LAG Interface <i>interface_name</i> : The operational state has transitioned to Up
Cause	This notification is generated when a LAG transitions to the up state.

Property name	Value
Effect	The LAG is now operational.

21 ldp

21.1 ldpInterfaceDown

Table 322: ldpInterfaceDown properties

Property name	Value
Application name	ldp
Event name	ldpInterfaceDown
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , LDP has changed oper-state to DOWN on interface <i>subinterface</i> . The reason is <i>oper_down_reason</i>
Cause	This event is generated when LDP ceases to be functional on a subinterface.
Effect	LDP drops its adjacencies and sessions with other routers reachable through this subinterface.

21.2 ldpInterfaceUp

Table 323: ldpInterfaceUp properties

Property name	Value
Application name	ldp
Event name	ldpInterfaceUp
Default severity	notice
Message format string	In network-instance <i>network_instance</i> , LDP is now up and functional on interface <i>subinterface</i> .
Cause	This event is generated when LDP becomes functional on a subinterface.
Effect	LDP can form adjacencies and sessions with other routers reachable through this subinterface.

21.3 Idplpv4InstanceDown

Table 324: *Idplpv4InstanceDown* properties

Property name	Value
Application name	ldp
Event name	ldplpv4InstanceDown
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , LDP-IPv4 has changed oper-state to DOWN. The reason is <i>oper_down_reason</i>
Cause	This event is generated when LDP ceases to becomes functional for IPv4 adjacencies, FECs and addresses.
Effect	LDP cannot form IPv4 adjacencies and sessions with other such routers.

21.4 Idplpv4InstanceUp

Table 325: *Idplpv4InstanceUp* properties

Property name	Value
Application name	ldp
Event name	ldplpv4InstanceUp
Default severity	notice
Message format string	In network-instance <i>network_instance</i> , LDP-IPv4 is now up and functional.
Cause	This event is generated when LDP becomes functional for IPv4 adjacencies, FECs and addresses.
Effect	LDP can form IPv4 adjacencies and sessions with other such routers reachable through LDP interfaces that are operational.

21.5 ldpSessionDown

Table 326: ldpSessionDown properties

Property name	Value
Application name	ldp
Event name	ldpSessionDown
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , the LDP session with peer <i>peer_ldp_id</i> has changed to non-existent.
Cause	This event is generated when an LDP session transitions into the non-existent state from a higher state.
Effect	LDP immediately deletes FEC-label and address bindings received from this peer.

21.6 ldpSessionFecLimitReached

Table 327: ldpSessionFecLimitReached properties

Property name	Value
Application name	ldp
Event name	ldpSessionFecLimitReached
Default severity	warning
Message format string	The number of FECs received from the LDP peer <i>peer_ldp_id</i> has reached the configured limit of <i>fec_limit</i> .
Cause	The number of FECs accepted from the peer has reached the configured limit. If the number of FECs go below the limit and again start to increase and hit the limit a second time, a new event is generated if 2 or more minutes have elapsed since the previous event. If the FEC limit is changed and the current number of FECs is equal to or higher than the limit then the event is generated immediately.
Effect	If the peer supports the overload capability then the session will go into overload. If the peer doesn't support the overload capability then excess FECs will trigger the sending of label release messages back to the peer.

21.7 ldpSessionLocalIPv4Overload

Table 328: ldpSessionLocalIPv4Overload properties

Property name	Value
Application name	ldp
Event name	ldpSessionLocalIPv4Overload
Default severity	warning
Message format string	The LDP session with peer <i>peer_ldp_id</i> has entered overload for IPv4 FECs because this router sent an overload TLV to the peer.
Cause	The local router has received too many IPv4 FECs.
Effect	The local router is requesting the peer to stop sending further IPv4 FECs.

21.8 ldpSessionPeerIPv4Overload

Table 329: ldpSessionPeerIPv4Overload properties

Property name	Value
Application name	ldp
Event name	ldpSessionPeerIPv4Overload
Default severity	warning
Message format string	The LDP session with peer <i>peer_ldp_id</i> has entered overload for IPv4 FECs because the peer sent an overload TLV.
Cause	The peer router has received too many IPv4 FECs.
Effect	The local router stops sending further IPv4 FECs to the peer.

21.9 ldpSessionUp

Table 330: ldpSessionUp properties

Property name	Value
Application name	ldp
Event name	ldpSessionUp

Property name	Value
Default severity	notice
Message format string	In network-instance <i>network_instance</i> , an LDP session is now up and operational with peer <i>peer_ldp_id</i> .
Cause	This event is generated when an LDP session transitions into the operational state from a lower state.
Effect	LDP can exchange FEC-label and address bindings with this peer.

21.10 ldpTargetDown

Table 331: ldpTargetDown properties

Property name	Value
Application name	ldp
Event name	ldpTargetDown
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , LDP has changed oper-state to DOWN on target <i>target</i> . The reason is <i>oper_down_reason</i>
Cause	This event is generated when LDP ceases to be functional on a target.
Effect	LDP drops its adjacencies and sessions with other routers reachable through this target.

21.11 ldpTargetUp

Table 332: ldpTargetUp properties

Property name	Value
Application name	ldp
Event name	ldpTargetUp
Default severity	notice
Message format string	In network-instance <i>network_instance</i> , LDP is now up and functional on target <i>target</i> .
Cause	This event is generated when LDP becomes functional on a target.

Property name	Value
Effect	LDP can form adjacencies and sessions with other routers reachable through this target.

22 license

22.1 licenseExpirySoon

Table 333: *licenseExpirySoon* properties

Property name	Value
Application name	license
Event name	licenseExpirySoon
Default severity	warning
Message format string	License <i>license_name</i> expires at <i>expires_at_date_time</i> , current time: <i>current_date_time</i>
Cause	The license specified will expire in less than 30 days.
Effect	If no new license is provided before the expiry, the system becomes unlicensed.

23 linux

23.1 cpuUsageCritical

Table 334: *cpuUsageCritical* properties

Property name	Value
Application name	linux
Event name	cpuUsageCritical
Default severity	critical
Message format string	CPU utilization on <i>component_type</i> module <i>slot</i> is above 90% on average for the last minute, current usage <i>cpu_usage_percentage%</i>
Cause	Applications or other system tasks have consumed more than 90% of available CPU resources on average over the last minute.
Effect	Processes may be scheduled at a slower rate than required, resulting in potential application failures or slow downs.

23.2 cpuUsageHigh

Table 335: *cpuUsageHigh* properties

Property name	Value
Application name	linux
Event name	cpuUsageHigh
Default severity	warning
Message format string	CPU utilization on <i>component_type</i> module <i>slot</i> is above 80% on average for the last minute, current usage <i>cpu_usage_percentage%</i>
Cause	Applications or other system tasks have consumed more than 80% of available CPU resources on average over the last minute.
Effect	No immediate effect, if utilization continues to increase, processes may be scheduled at a slower rate than required, resulting in potential application failures or slow downs.

23.3 cpuUsageNormal

Table 336: *cpuUsageNormal* properties

Property name	Value
Application name	linux
Event name	cpuUsageNormal
Default severity	notice
Message format string	CPU utilization on <i>component_type</i> module <i>slot</i> is below 70% on average for the last minute, current usage <i>cpu_usage_percentage%</i>
Cause	CPU consumption on the specified slot has returned to normal levels - below 70%, after triggering a <i>cpuUsageHigh</i> / <i>cpuUsageCritical</i> event.
Effect	None.

23.4 dateAndTimeChanged

Table 337: *dateAndTimeChanged* properties

Property name	Value
Application name	linux
Event name	dateAndTimeChanged
Default severity	notice
Message format string	System date and time changed to <i>date_and_time</i>
Cause	The system time has been changed either manually, or via NTP, to the specified time.
Effect	Local time on the system has changed.

23.5 domainChanged

Table 338: *domainChanged* properties

Property name	Value
Application name	linux

Property name	Value
Event name	domainChanged
Default severity	informational
Message format string	System domain name changed to <i>domain_name</i>
Cause	System configuration change to the domain name has been made.
Effect	The system uses the new domain name.

23.6 hostnameChanged

Table 339: *hostnameChanged* properties

Property name	Value
Application name	linux
Event name	hostnameChanged
Default severity	informational
Message format string	System host name changed to <i>host_name</i>
Cause	System configuration change to the host name has been made.
Effect	The system uses the new host name.

23.7 memoryUsageCritical

Table 340: *memoryUsageCritical* properties

Property name	Value
Application name	linux
Event name	memoryUsageCritical
Default severity	critical
Message format string	Memory utilization on <i>component_type</i> module <i>slot</i> is above 90%, current usage <i>memory_usage_percentage%</i>
Cause	Applications or other in-memory items have consumed more than 90% of the memory on the specified module.

Property name	Value
Effect	No immediate effect, if utilization continues to increase, new memory allocations may fail, resulting in potential application failures.

23.8 memoryUsageFull

Table 341: *memoryUsageFull* properties

Property name	Value
Application name	linux
Event name	memoryUsageFull
Default severity	emergency
Message format string	Memory utilization on <i>component_type</i> module <i>slot</i> is full
Cause	Applications or other in-memory items have consumed 100% of the memory on the specified module.
Effect	Further memory allocations will fail, likely leading to application failures and eventual module restart.

23.9 memoryUsageHigh

Table 342: *memoryUsageHigh* properties

Property name	Value
Application name	linux
Event name	memoryUsageHigh
Default severity	warning
Message format string	Memory utilization on <i>component_type</i> module <i>slot</i> is above 70%, current usage <i>memory_usage_percentage%</i>
Cause	Applications or other in-memory items have consumed more than 70% of the memory on the specified slot.
Effect	No immediate effect, if utilization continues to increase, new memory allocations may fail, resulting in potential application failures.

23.10 memoryUsageNormal

Table 343: *memoryUsageNormal* properties

Property name	Value
Application name	linux
Event name	memoryUsageNormal
Default severity	notice
Message format string	Memory utilization on <i>component_type</i> module <i>slot</i> is below 60%, current usage <i>memory_usage_percentage%</i>
Cause	Memory consumption on the specified slot has returned to normal levels - below 60%
Effect	None.

23.11 partitionStateChange

Table 344: *partitionStateChange* properties

Property name	Value
Application name	linux
Event name	partitionStateChange
Default severity	alert
Message format string	Partition <i>partition</i> has changed state to <i>current_state</i>
Cause	The specified partition has transitioned to a new state.
Effect	Depending on the state, the partition may now be unusable, read-only, or read-write.

23.12 partitionUsageCritical

Table 345: *partitionUsageCritical* properties

Property name	Value
Application name	linux
Event name	partitionUsageCritical

Property name	Value
Default severity	critical
Message format string	Partition <i>partition_label</i> usage on <i>component_type</i> module <i>slot</i> is higher than 90%, current usage <i>partition_usage_percentage%</i>
Cause	The specified partition is almost full, and action should be taken to remove unneeded files.
Effect	None.

23.13 partitionUsageFull

Table 346: *partitionUsageFull* properties

Property name	Value
Application name	linux
Event name	partitionUsageFull
Default severity	alert
Message format string	Partition <i>partition_label</i> on <i>component_type</i> module <i>slot</i> is full
Cause	The specified partition is full.
Effect	Write actions to this partition will fail.

23.14 partitionUsageNormal

Table 347: *partitionUsageNormal* properties

Property name	Value
Application name	linux
Event name	partitionUsageNormal
Default severity	notice
Message format string	Partition <i>partition_label</i> on <i>component_type</i> module <i>slot</i> is below 70%, current usage <i>partition_usage_percentage%</i>
Cause	Utilization of the specified partition is below 70%, after previously being higher than 80%.
Effect	None.

23.15 partitionUsageWarning

Table 348: *partitionUsageWarning* properties

Property name	Value
Application name	linux
Event name	partitionUsageWarning
Default severity	warning
Message format string	Partition <i>partition_label</i> usage on <i>component_type</i> module <i>slot</i> is higher than 80%, current usage <i>partition_usage_percentage</i> %
Cause	The specified partition is almost full, and action should be taken to remove unneeded files.
Effect	None.

23.16 serviceConfigChanged

Table 349: *serviceConfigChanged* properties

Property name	Value
Application name	linux
Event name	serviceConfigChanged
Default severity	notice
Message format string	Service <i>service_name</i> configuration changed, service reloaded
Cause	The specified service configuration has been changed, and linux_mgr has reloaded the service.
Effect	New configuration for the service is now in effect.

23.17 serviceDownInNetworkInstance

Table 350: *serviceDownInNetworkInstance* properties

Property name	Value
Application name	linux

Property name	Value
Event name	serviceDownInNetworkInstance
Default severity	warning
Message format string	Service <i>service_name</i> is no longer operational in network instance <i>net_inst</i>
Cause	The specified service has been disabled in the specified network instance.
Effect	Functionality provided by the service is no longer available in the specified network instance.

23.18 serviceUpInNetworkInstance

Table 351: *serviceUpInNetworkInstance* properties

Property name	Value
Application name	linux
Event name	serviceUpInNetworkInstance
Default severity	notice
Message format string	Service <i>service_name</i> is now operational in network instance <i>net_inst</i>
Cause	The specified service has been started in the specified network instance.
Effect	Functionality provided by the service is now available in the specified network instance.

23.19 tlsProfileExpired

Table 352: *tlsProfileExpired* properties

Property name	Value
Application name	linux
Event name	tlsProfileExpired
Default severity	warning
Message format string	Certificate in TLS profile <i>tls_profile</i> has expired

Property name	Value
Cause	The certificate used in the specified TLS profile has an expiration date in the past.
Effect	Authentication using the specified TLS profile may fail.

23.20 tlsProfileExpiresSoon

Table 353: *tlsProfileExpiresSoon* properties

Property name	Value
Application name	linux
Event name	tlsProfileExpiresSoon
Default severity	warning
Message format string	Certificate in TLS profile <i>tls_profile</i> expires at <i>expires_at_date_time</i>
Cause	The certificate used in the specified TLS profile will expire in the next 30 days.
Effect	Authentication using the specified TLS profile may fail once the certificate expires.

24 lldp

24.1 remotePeerAdded

Table 354: remotePeerAdded properties

Property name	Value
Application name	lldp
Event name	remotePeerAdded
Default severity	informational
Message format string	LLDP remote peer added on interface <i>interface_name</i> : System <i>remote_system_name</i> with chassis ID <i>remote_chassis_id</i> , port <i>remote_port_id</i> with MAC <i>remote_port_mac</i>
Cause	A new LLDP PDU has been received on the interface, resulting in the creation of an LLDP peer.
Effect	A new peer has been added to LLDP.

24.2 remotePeerRemoved

Table 355: remotePeerRemoved properties

Property name	Value
Application name	lldp
Event name	remotePeerRemoved
Default severity	informational
Message format string	LLDP remote peer removed on interface <i>interface_name</i> : System <i>remote_system_name</i> with chassis ID <i>remote_chassis_id</i> , port <i>remote_port_id</i> with MAC <i>remote_port_mac</i>
Cause	The TTL for the remote peer has expired without a new LLDP PDU being received.
Effect	The peer has been removed from LLDP.

24.3 remotePeerUpdated

Table 356: remotePeerUpdated properties

Property name	Value
Application name	lldp
Event name	remotePeerUpdated
Default severity	informational
Message format string	LLDP remote peer updated on interface <i>interface_name</i> : System <i>remote_system_name</i> with chassis ID <i>remote_chassis_id</i> , port <i>remote_port_id</i> with MAC <i>remote_port_mac</i>
Cause	The LLDP peer has sent new information in a LLDP PDU, without the TTL for the peer expiring.
Effect	The peer has been updated in LLDP.

25 log

25.1 bufferRollover

Table 357: *bufferRollover* properties

Property name	Value
Application name	log
Event name	bufferRollover
Default severity	informational
Message format string	Buffer <i>buffer_name</i> has been rolled over
Cause	The buffer has reached its configured max size, and log manager has rolled it over.
Effect	A new buffer has been opened for writing, and the old buffer has been archived. This may result in older buffers being removed from the system.

25.2 configUpdate

Table 358: *configUpdate* properties

Property name	Value
Application name	log
Event name	configUpdate
Default severity	informational
Message format string	Logging configuration updated
Cause	A configuration change has been made, resulting in rsyslogd configuration being regenerated.
Effect	Rsyslogd configuration has been modified, and the process has been restarted.

25.3 fileRollover

Table 359: fileRollover properties

Property name	Value
Application name	log
Event name	fileRollover
Default severity	informational
Message format string	File <i>file_path</i> / <i>file_name</i> has been rolled over
Cause	The file has reached its configured max size, and log manager has rolled it over.
Effect	A new log file has been opened for writing, and the old log file has been archived. This may result in older logs being removed from the system.

25.4 networkNamespaceChanged

Table 360: networkNamespaceChanged properties

Property name	Value
Application name	log
Event name	networkNamespaceChanged
Default severity	informational
Message format string	Logging network namespace has changed from <i>old_net_namespace</i> to <i>new_net_namespace</i>
Cause	Configuration has been modified, resulting in the rsyslogd using the new network namespace to reach remote syslog servers.
Effect	Rsyslogd will use the new network namespace for reachability to remote syslog servers.

25.5 subsystemFacilityChanged

Table 361: subsystemFacilityChanged properties

Property name	Value
Application name	log

Property name	Value
Event name	subsystemFacilityChanged
Default severity	informational
Message format string	Logging output facility has changed from <i>old_facility</i> to <i>new_facility</i>
Cause	Configuration has been modified, resulting in the output facility of our subsystems changing.
Effect	Subsystems will now output logs to the newly configured facility.

26 mgmt

26.1 checkpointGenerated

Table 362: *checkpointGenerated* properties

Property name	Value
Application name	mgmt
Event name	checkpointGenerated
Default severity	informational
Message format string	Generated checkpoint <i>checkpoint_name</i> with comment <i>checkpoint_comment</i> on the following path <i>checkpoint_file_path</i> .
Cause	A configuration checkpoint generated on the mentioned path.
Effect	The mentioned checkpoint is stored to the filesystem.

26.2 checkpointRevertRequestReceived

Table 363: *checkpointRevertRequestReceived* properties

Property name	Value
Application name	mgmt
Event name	checkpointRevertRequestReceived
Default severity	warning
Message format string	Configuration is going to be reverted to checkpoint <i>checkpoint_id</i> name <i>checkpoint_name</i> comment <i>checkpoint_comment</i> .
Cause	Configuration revert request was received.
Effect	Configuration is going to be reverted to the specified checkpoint and applied to running datastore.

26.3 commitFailed

Table 364: commitFailed properties

Property name	Value
Application name	mgmt
Event name	commitFailed
Default severity	warning
Message format string	Error while committing configuration changes for user <i>username</i> session <i>session_id</i> (<i>message</i>).
Cause	Unsuccessful commit due to error(s)
Effect	Configuration changes are not applied to running datastore

26.4 commitSucceeded

Table 365: commitSucceeded properties

Property name	Value
Application name	mgmt
Event name	commitSucceeded
Default severity	informational
Message format string	All changes have been committed successfully by user <i>username</i> session <i>session_id</i> .
Cause	A successful commit
Effect	Configuration changes applied to running datastore

26.5 exclusiveConfigSessionBlockedByOtherSessionError

Table 366: exclusiveConfigSessionBlockedByOtherSessionError properties

Property name	Value
Application name	mgmt
Event name	exclusiveConfigSessionBlockedByOtherSessionError
Default severity	informational

Property name	Value
Message format string	Cannot start an exclusive configuration session for candidate name <i>candidate_name</i> , there is other configuration session in progress - session id <i>session_id</i> username <i>username</i> candidate name <i>candidate_name</i> .
Cause	Candidate datastore is locked due to other active session in progress
Effect	Exclusive configuration session Error

26.6 exclusiveConfigSessionError

Table 367: *exclusiveConfigSessionError* properties

Property name	Value
Application name	mgmt
Event name	exclusiveConfigSessionError
Default severity	informational
Message format string	Cannot start an exclusive configuration session, there is already another exclusive configuration session in progress - session id <i>session_id</i> username <i>username</i> candidate name <i>candidate_name</i> .
Cause	Candidate datastore is locked due to other active session in progress
Effect	Exclusive configuration session Error

26.7 privateConfigSessionError

Table 368: *privateConfigSessionError* properties

Property name	Value
Application name	mgmt
Event name	privateConfigSessionError
Default severity	informational
Message format string	Cannot start a configuration session for candidate name <i>candidate_name</i> by user <i>username</i> , the candidate is owned by user <i>candidate_username</i> .
Cause	Candidate datastore is owned by different user

Property name	Value
Effect	Private configuration session Error

26.8 privateSharedMismatch

Table 369: privateSharedMismatch properties

Property name	Value
Application name	mgmt
Event name	privateSharedMismatch
Default severity	informational
Message format string	Cannot start a configuration session for candidate name <i>candidate_name</i> by user <i>username</i> , cannot use private candidate with shared session or vice versa.
Cause	Candidate was created as private and the requested configuration session is shared or vice versa
Effect	Private shared configuration mismatch Error

26.9 sharedConfigSessionBlockedByOtherSessionError

Table 370: sharedConfigSessionBlockedByOtherSessionError properties

Property name	Value
Application name	mgmt
Event name	sharedConfigSessionBlockedByOtherSessionError
Default severity	informational
Message format string	Cannot start a shared configuration session for candidate name <i>candidate_name</i> , there is other configuration session in progress - session id <i>session_id</i> username <i>username</i> candidate name <i>candidate_name</i> .
Cause	Candidate datastore is locked due to other active session in progress
Effect	Shared configuration session Error

27 mirror

27.1 mirrorDestinationDelete

Table 371: *mirrorDestinationDelete* properties

Property name	Value
Application name	mirror
Event name	mirrorDestinationDelete
Default severity	warning
Message format string	Mirror destination <i>mirror_destination</i> is removed from configuration under mirror instance <i>mirror_instance_name</i>
Cause	Mirror destination is removed from configuration under the mentioned mirror instance
Effect	Packets will no longer be mirrored towards the mentioned mirror destination under the mentioned mirror instance

27.2 mirrorDestinationOperDown

Table 372: *mirrorDestinationOperDown* properties

Property name	Value
Application name	mirror
Event name	mirrorDestinationOperDown
Default severity	critical
Message format string	Mirror destination <i>mirror_destination</i> is operationally down under mirror instance <i>mirror_instance_name</i>
Cause	Mirror destination oper state has changed from up to down the mentioned mirror instance
Effect	The oper state is down for the mentioned mirror destination under the mentioned mirror instance. Packets will no longer be mirrored towards the mentioned mirror destination

27.3 mirrorDestinationOperUP

Table 373: *mirrorDestinationOperUP* properties

Property name	Value
Application name	mirror
Event name	mirrorDestinationOperUP
Default severity	warning
Message format string	Mirror destination <i>mirror_destination</i> is operationally up under mirror instance <i>mirror_instance_name</i>
Cause	Mirror destination oper state has changed from down to up the mentioned mirror instance
Effect	The oper state is up for the mentioned mirror destination under the mentioned mirror instance

27.4 mirrorDestnationAdd

Table 374: *mirrorDestnationAdd* properties

Property name	Value
Application name	mirror
Event name	mirrorDestnationAdd
Default severity	warning
Message format string	Mirror destination <i>mirror_destination</i> is added to configuration under mirror instance <i>mirror_instance_name</i>
Cause	Mirror destination is added in configuration under the mentioned mirror instance
Effect	Packets from mirror source(s) configured under the mentioned mirror instance will be mirrored towards the mentioned mirror destination configured under the same mirror instance if mirror instance, mirror source(s) and mirror dest are operational up

27.5 mirrorInstanceAdminDisable

Table 375: mirrorInstanceAdminDisable properties

Property name	Value
Application name	mirror
Event name	mirrorInstanceAdminDisable
Default severity	warning
Message format string	Mirror instance <i>mirror_instance_name</i> has changed to administrative disable state
Cause	The mirror instance admin state has changed from enable to disable due to configuration change
Effect	The admin state is disable for the mentioned mirror instance

27.6 mirrorInstanceAdminEnable

Table 376: mirrorInstanceAdminEnable properties

Property name	Value
Application name	mirror
Event name	mirrorInstanceAdminEnable
Default severity	warning
Message format string	Mirror instance <i>mirror_instance_name</i> has changed to administrative enable state
Cause	The mirror instance admin state has changed from disable to enable due to configuration change
Effect	The admin state is enable for the mentioned mirror instance

27.7 mirrorInstanceOperDown

Table 377: mirrorInstanceOperDown properties

Property name	Value
Application name	mirror
Event name	mirrorInstanceOperDown

Property name	Value
Default severity	critical
Message format string	Mirror instance <i>mirror_instance_name</i> has changed to operational down state due to <i>oper_down_reason</i>
Cause	The mirror instance oper state has changed from up to down
Effect	The oper state is down on the mentioned mirror instance

27.8 mirrorInstanceOperUp

Table 378: *mirrorInstanceOperUp* properties

Property name	Value
Application name	mirror
Event name	mirrorInstanceOperUp
Default severity	warning
Message format string	Mirror instance <i>mirror_instance_name</i> has changed to operational up state
Cause	The mirror instance oper state has changed from down to up
Effect	The oper state is up for the mentioned mirror instance

27.9 mirrorSourceAdd

Table 379: *mirrorSourceAdd* properties

Property name	Value
Application name	mirror
Event name	mirrorSourceAdd
Default severity	warning
Message format string	Mirror source <i>mirror_source</i> is added to configuration under mirror instance <i>mirror_instance_name</i>
Cause	Mirror source is added in configuration under the mentioned mirror instance

Property name	Value
Effect	Packets on the mentioned mirror source will be mirrored towards the mirror destination configured under the mentioned mirror instance if mirror instance, mirror source and mirror dest are operational up

27.10 mirrorSourceDelete

Table 380: mirrorSourceDelete properties

Property name	Value
Application name	mirror
Event name	mirrorSourceDelete
Default severity	warning
Message format string	Mirror source <i>mirror_source</i> is removed from configuration under mirror instance <i>mirror_instance_name</i>
Cause	Mirror source is removed from configuration under the mentioned mirror instance
Effect	Packets on the mentioned mirror source will no longer be mirrored towards the mirror destination configured under the mentioned mirror instance

28 mld

28.1 mldCModeRxQueryVersionMismatch

Table 381: *mldCModeRxQueryVersionMismatch* properties

Property name	Value
Application name	mld
Event name	mldCModeRxQueryVersionMismatch
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - Mismatch between the interface <i>subinterface</i> compatible mode(<i>mldInterfaceOperVersion</i>) and the version of the MLD query (version <i>mldQuerierVersion</i>) received on the interface.
Cause	This event is generated when the MLD interface receives a query with a version that is higher than the interface's compatible mode.
Effect	MLD interfaces will ignore any Queries with a version higher than the interface's compatibility mode.

28.2 mldMaxNumberOfGroupSourcesReached

Table 382: *mldMaxNumberOfGroupSourcesReached* properties

Property name	Value
Application name	mld
Event name	mldMaxNumberOfGroupSourcesReached
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - The number of group/source combinations learned on interface <i>subinterface</i> has exceeded the maximum limit of <i>mldInterfaceMaxGroupSources</i> .
Cause	This event is generated when an attempt is made to learn a source when the number of group/source combinations on the MLD interface is equal to the maximum number of group-sources configured on the interface.

Property name	Value
Effect	MLD interfaces will not learn any new sources for a given group when the configured maximum number of group-sources has been reached.

28.3 mldMaxNumberOfGroupsReached

Table 383: *mldMaxNumberOfGroupsReached* properties

Property name	Value
Application name	mld
Event name	mldMaxNumberOfGroupsReached
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - The number of groups learned on interface <i>subinterface</i> has exceeded the maximum limit of <i>mldInterface MaxGroups</i> .
Cause	This event is generated when an attempt is made to learn a group when the number of groups on the MLD interface is equal to the maximum number of groups configured on the interface.
Effect	MLD interfaces will not learn any new groups when the configured maximum number of groups has been reached.

28.4 mldMaxNumberOfSourcesReached

Table 384: *mldMaxNumberOfSourcesReached* properties

Property name	Value
Application name	mld
Event name	mldMaxNumberOfSourcesReached
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - The number of sources learned on interface <i>subinterface</i> has exceeded the maximum limit of <i>mld InterfaceMaxSources</i> .
Cause	This event is generated when an attempt is made to learn a source when the number of sources for this group on the MLD interface is equal to the maximum number of sources per group configured on the interface.

Property name	Value
Effect	MLD interfaces will not learn any new sources for a given group when the configured maximum number of sources for the group has been reached.

28.5 mldRxQueryVersionMismatch

Table 385: *mldRxQueryVersionMismatch* properties

Property name	Value
Application name	mld
Event name	mldRxQueryVersionMismatch
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - MLDv <i>mldQuerierVersion</i> query received on interface <i>subinterface</i> configured as MLDv <i>mldInterfaceAdminVersion</i> .
Cause	This event is generated when the MLD interface is configured as MLDv2 and receives an MLDv1 General Query.
Effect	MLD interfaces configured as MLDv2 will ignore MLDv1 General Queries.

29 netinst

29.1 networkInstanceInterfaceDown

Table 386: networkInstanceInterfaceDown properties

Property name	Value
Application name	netinst
Event name	networkInstanceInterfaceDown
Default severity	warning
Message format string	The interface <i>networkinstance_interface_name</i> in network-instance <i>networkinstance_name</i> is now down for reason: <i>oper_down_reason</i>
Cause	This event is generated when the network instance interface has transitioned from the up state to the down state
Effect	The network instance interface is now down

29.2 networkInstanceInterfaceUp

Table 387: networkInstanceInterfaceUp properties

Property name	Value
Application name	netinst
Event name	networkInstanceInterfaceUp
Default severity	notice
Message format string	The interface <i>networkinstance_interface_name</i> in network-instance <i>networkinstance_name</i> is now up
Cause	This event is generated when the network instance interface has transitioned from the down state to the up state.
Effect	The network instance interface is now up

29.3 networkInstanceStateDown

Table 388: networkInstanceStateDown properties

Property name	Value
Application name	netinst
Event name	networkInstanceStateDown
Default severity	warning
Message format string	Network Instance <i>networkinstance_name</i> is now down
Cause	The network instance has transitioned from the up state to the down state
Effect	The network instance is now down

29.4 networkInstanceStateUp

Table 389: networkInstanceStateUp properties

Property name	Value
Application name	netinst
Event name	networkInstanceStateUp
Default severity	notice
Message format string	Network Instance <i>networkinstance_name</i> is now up
Cause	The network instance has transitioned from the down state to the up state
Effect	The network instance is now up

30 ospf

30.1 ospfAdjacencyBfdSessionSetupFailed

Table 390: ospfAdjacencyBfdSessionSetupFailed properties

Property name	Value
Application name	ospf
Event name	ospfAdjacencyBfdSessionSetupFailed
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : BFD session setup failed for the OSPF neighbor <i>ospfNbrRtrId</i> , using interface <i>subinterface</i> . Failure reason: <i>bfd_failure_reason</i> .
Cause	This event is generated when BFD session setup fails with an adjacent OSPF neighbor.
Effect	Fast failure detection may not be possible.

30.2 ospfAdjacencyChange

Table 391: ospfAdjacencyChange properties

Property name	Value
Application name	ospf
Event name	ospfAdjacencyChange
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : Adjacency with neighbor <i>ospfNbrRtrId</i> , using interface <i>subinterface</i> , moved to state <i>ospfNbrState</i> due to event <i>ospfNbrEvent</i> .
Cause	This event is generated when an OSPF Neighbor changes state.
Effect	OSPF routing information can only utilized from neighbors in an up state.

30.3 ospfAdjacencyRestartStatusChange

Table 392: ospfAdjacencyRestartStatusChange properties

Property name	Value
Application name	ospf
Event name	ospfAdjacencyRestartStatusChange
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : The graceful restart status for OSPF neighbor <i>ospfNbrRtrId</i> on interface <i>subinterface</i> moved to new state <i>restart_status</i> .
Cause	This event is generated when the graceful restart status of a neighbor changes.
Effect	None

30.4 ospfAsMaxAgeLSA

Table 393: ospfAsMaxAgeLSA properties

Property name	Value
Application name	ospf
Event name	ospfAsMaxAgeLSA
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> area <i>ospfAreaId</i> : Max aged LSA <i>ospfLsdbLsid</i> type <i>ospfLsdbType</i> advertising router <i>ospfLsdbRtrId</i> .
Cause	One of the LSAs in the router's link-state database has reached its maximum age limit.
Effect	The Max Age LSA will be flushed from the LSDB.

30.5 ospfExportLimitReached

Table 394: ospfExportLimitReached properties

Property name	Value
Application name	ospf
Event name	ospfExportLimitReached
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : The export-limit <i>ospfExportLimit</i> is reached, additional routes will not be exported by OSPF.
Cause	This event is generated when OSPF has exported the maximum number of routes.
Effect	OSPF will not export any more routes.

30.6 ospfExportLimitWarning

Table 395: ospfExportLimitWarning properties

Property name	Value
Application name	ospf
Event name	ospfExportLimitWarning
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : OSPF has reached <i>ospfExportLimitLogPercent%</i> of the export-limit <i>ospfExportLimit</i> .
Cause	This event is generated when OSPF has exported the maximum number of routes.
Effect	OSPF will not export any more routes.

30.7 ospfFailure

Table 396: ospfFailure properties

Property name	Value
Application name	ospf
Event name	ospfFailure
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : has failed due to <i>ospfFailureReason</i> .
Cause	OSPF encountered an event forcing it to go down.
Effect	OSPF goes down and will restart after a timeout.

30.8 ospflLdpSyncStateChange

Table 397: ospflLdpSyncStateChange properties

Property name	Value
Application name	ospf
Event name	ospflLdpSyncStateChange
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : Interface <i>subinterface</i> , ldp-sync-state moved to state <i>ospflLdpSync State</i>
Cause	This event is generated when an OSPF interface ldp-synchronization changes state.
Effect	Metric of the interface changes to or from infinity.

30.9 ospflRxBadPacket

Table 398: ospflRxBadPacket properties

Property name	Value
Application name	ospf
Event name	ospflRxBadPacket

Property name	Value
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : A bad packet was received on interface <i>subinterface</i> from <i>ospfPacketSrc Address</i> in packet type <i>ospfPacketType</i>
Cause	This event is generated An OSPF packet has been received on an interface that cannot be parsed.
Effect	Bad packet is discarded

30.10 ospflfStateChange

Table 399: ospflfStateChange properties

Property name	Value
Application name	ospf
Event name	ospflfStateChange
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : Interface <i>subinterface</i> , moved to state <i>ospflfState</i> due to event <i>ospfIfEvent</i>
Cause	This event is generated when an OSPF interface changes state.
Effect	An OSPF adjacency can not be established if the interface state is down or loop.

30.11 ospfLsdbApproachingOverflow

Table 400: ospfLsdbApproachingOverflow properties

Property name	Value
Application name	ospf
Event name	ospfLsdbApproachingOverflow
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : The number of external LSAs has exceeded 90% of the configured limit <i>ospfExtLsdbLimit</i> .

Property name	Value
Cause	The number of external LSAs in the router's link-state database has exceeded ninety percent of the configured limit.
Effect	Warning only, normal behavior will continue.

30.12 ospfLsdbOverflow

Table 401: ospfLsdbOverflow properties

Property name	Value
Application name	ospf
Event name	ospfLsdbOverflow
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : The number of external LSAs has exceeded the configured limit <i>ospfExtLsdbLimit</i> .
Cause	The number of external LSAs in the router's link-state database has exceeded the configured limit.
Effect	No additional external LSA will be added.

30.13 ospfNbrMtuMismatch

Table 402: ospfNbrMtuMismatch properties

Property name	Value
Application name	ospf
Event name	ospfNbrMtuMismatch
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : Neighbor <i>ospfNbrRtrId</i> , using interface <i>subinterface</i> , signaled an unacceptable MTU.
Cause	This event is generated when an OSPF Neighbor signals an incorrect MTU.
Effect	An OSPF adjacency cannot be established if there is an MTU mismatch.

30.14 ospfOverloadEntry

Table 403: ospfOverloadEntry properties

Property name	Value
Application name	ospf
Event name	ospfOverloadEntry
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : the LSDB database has entered the overload state due to <i>ospfOverload Reason</i> .
Cause	Overload bit configuration
Effect	No transit traffic is routed through the overloaded router.

30.15 ospfOverloadExit

Table 404: ospfOverloadExit properties

Property name	Value
Application name	ospf
Event name	ospfOverloadExit
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : the LSDB database has exited the overload state.
Cause	Overload bit cleared
Effect	The OSPF instance has cleared the overload state.

30.16 ospfOverloadWarning

Table 405: ospfOverloadWarning properties

Property name	Value
Application name	ospf

Property name	Value
Event name	ospfOverloadWarning
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : <i>ospfOverloadReason</i> .
Cause	Overload bit configuration
Effect	No transit traffic is routed through the overloaded router.

30.17 ospfSpfRunRestarted

Table 406: *ospfSpfRunRestarted* properties

Property name	Value
Application name	ospf
Event name	ospfSpfRunRestarted
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : SPF runs resumed - memory resources available.
Cause	There are sufficient memory resources on the system to run the SPF to completion.
Effect	OSPF stops running SPFs until enough memory resources become available OSPF will resume running the SPFs as required.

30.18 ospfSpfRunsStopped

Table 407: *ospfSpfRunsStopped* properties

Property name	Value
Application name	ospf
Event name	ospfSpfRunsStopped
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : SPF runs stopped - insufficient memory resources.

Property name	Value
Cause	There are insufficient memory resources on the system to run the SPF to completion.
Effect	OSPF stops running SPF's until enough memory resources become available.

30.19 ospfAuthDataFailure

Table 408: ospfAuthDataFailure properties

Property name	Value
Application name	ospf
Event name	ospfAuthDataFailure
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : A packet received on interface <i>subinterface</i> from <i>ospfPacketSrcAddress</i> and packet type <i>ospfPacketType</i> , failed authentication with <i>ospfAuth Error</i>
Cause	This event is caused by interface from a router whose authentication key or authentication type conflicts with this router's authentication key or authentication type.
Effect	PDU's are dropped, with the effect depending on the PDU type

31 p4rt

31.1 globalConfigUpdate

Table 409: globalConfigUpdate properties

Property name	Value
Application name	p4rt
Event name	globalConfigUpdate
Default severity	informational
Message format string	P4RT server global configuration updated.
Cause	A global configuration change has been made, resulting in P4RT configuration being regenerated.
Effect	May result in P4RT server(s) start or stop depending on the configuration change.

31.2 networkInstanceConfigUpdate

Table 410: networkInstanceConfigUpdate properties

Property name	Value
Application name	p4rt
Event name	networkInstanceConfigUpdate
Default severity	informational
Message format string	P4RT server network instance <i>network_instance</i> configuration updated.
Cause	A configuration change has been made in the mentioned network instance, resulting in P4RT server configuration being regenerated.
Effect	May result in P4RT server start or stop depending on the configuration change.

31.3 networkInstanceP4rtOperDown

Table 411: networkInstanceP4rtOperDown properties

Property name	Value
Application name	p4rt
Event name	networkInstanceP4rtOperDown
Default severity	critical
Message format string	P4RT server in network instance <i>network_instance</i> is no longer operational.
Cause	The P4RT server in the specified network instance has transitioned from any other operational state to the down state.
Effect	P4RT is no longer available in the specified network instance.

31.4 networkInstanceP4rtOperUp

Table 412: networkInstanceP4rtOperUp properties

Property name	Value
Application name	p4rt
Event name	networkInstanceP4rtOperUp
Default severity	warning
Message format string	P4RT server in network instance <i>network_instance</i> is operational.
Cause	The P4RT server in the specified network instance has transitioned from any other operational state to the up state.
Effect	P4RT is now available in the specified network instance.

31.5 p4rtServerStart

Table 413: p4rtServerStart properties

Property name	Value
Application name	p4rt
Event name	p4rtServerStart

Property name	Value
Default severity	informational
Message format string	P4RT server started for network instance <i>network_instance</i> source address <i>source_address</i> port number <i>p4rt_socket</i> .
Cause	P4RT server has started for the mentioned network instance, source address and port number.
Effect	P4RT server is ready to receive and process requests for the mentioned network instance, source address and port number.

31.6 p4rtServerStop

Table 414: *p4rtServerStop* properties

Property name	Value
Application name	p4rt
Event name	p4rtServerStop
Default severity	informational
Message format string	P4RT server stopped for network <i>network_instance</i> source address <i>source_address</i> port number <i>p4rt_socket</i> .
Cause	P4RT server has stopped for the mentioned network instance, source address and port number.
Effect	P4RT server is not ready to receive and process requests for the mentioned network instance, source address and port number.

31.7 unixSocketP4rtOperDown

Table 415: *unixSocketP4rtOperDown* properties

Property name	Value
Application name	p4rt
Event name	unixSocketP4rtOperDown
Default severity	critical
Message format string	Unix Domain Socket P4RT server is no longer operational.

Property name	Value
Cause	The Unix domain socket P4RT server has transitioned from any other operational state to the down state.
Effect	Unix Domain Socket P4RT server is now down.

31.8 unixSocketP4rtOperUp

Table 416: *unixSocketP4rtOperUp* properties

Property name	Value
Application name	p4rt
Event name	unixSocketP4rtOperUp
Default severity	warning
Message format string	Unix domain socket P4RT server is operational.
Cause	The Unix domain socket P4RT server has transitioned from any other operational state to the up state.
Effect	Unix domain socket P4RT server is now up.

32 pim

32.1 pimGroupInSSMRange

Table 417: *pimGroupInSSMRange* properties

Property name	Value
Application name	pim
Event name	pimGroupInSSMRange
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - received <i>message_type</i> message on interface <i>subinterface</i> for group <i>group_address</i> which is in SSM group range
Cause	The router received a register message, a (*,G) assert message, a (*,G) Join Prune message or a IGMP local membership message for the group defined in SSM address range
Effect	none

32.2 pimIfNeighborLoss

Table 418: *pimIfNeighborLoss* properties

Property name	Value
Application name	pim
Event name	pimIfNeighborLoss
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - lost adjacency with neighbor <i>neighbor_address</i> on interface <i>subinterface</i>
Cause	A PIM adjacency with a neighbor was lost.
Effect	none

32.3 pimIfNeighborUp

Table 419: pimIfNeighborUp properties

Property name	Value
Application name	pim
Event name	pimIfNeighborUp
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - adjacency with neighbor <i>neighbor_address</i> on interface <i>subinterface</i> came up
Cause	A PIM adjacency with a new neighbor was established.
Effect	none

32.4 pimInvalidJoinPrune

Table 420: pimInvalidJoinPrune properties

Property name	Value
Application name	pim
Event name	pimInvalidJoinPrune
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - received invalid Join Prune message from <i>source_address</i> with RP address <i>wrong_rp_address</i> for group <i>group_address</i> . Correct RP address for the group is <i>rp_address</i>
Cause	An invalid Join Prune message was received. A Join Prune message is deemed invalid when there is an RP address disagreement between the router and the PIM Join Prune message.
Effect	The JP is is dropped

32.5 pimInvalidRegister

Table 421: pimInvalidRegister properties

Property name	Value
Application name	pim

Property name	Value
Event name	pimInvalidRegister
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - received invalid Register message from <i>source_address</i> with RP address <i>wrong_rp_address</i> for group <i>group_address</i> . Correct RP address for the group is <i>rp_address</i>
Cause	An invalid PIM Register message was received. A Register message is deemed invalid when there is an RP address disagreement between the router and the PIM Register message.
Effect	The Register is is dropped

33 platform

33.1 airflowCorrected

Table 422: airflowCorrected properties

Property name	Value
Application name	platform
Event name	airflowCorrected
Default severity	notice
Message format string	The <i>type</i> in slot <i>slot</i> now matches the dominant airflow of other modules in the system
Cause	The specified module is now part of the majority (either front to back, or back to front) fans + PSUs in the system. This clearance is triggered when a module moves from being part of the minority to the majority, typically through other modules being plugged/unplugged.
Effect	The specified module is providing correct airflow to the system.

33.2 airflowMismatch

Table 423: airflowMismatch properties

Property name	Value
Application name	platform
Event name	airflowMismatch
Default severity	critical
Message format string	The <i>type</i> in slot <i>slot</i> does not match the airflow of other modules in the system
Cause	The inserted module does not match the airflow direction of other modules in the system.
Effect	The system is working with inefficient cooling, and may trigger thermal protection.

33.3 componentBooting

Table 424: componentBooting properties

Property name	Value
Application name	platform
Event name	componentBooting
Default severity	informational
Message format string	Component <i>type slot</i> has started initialization
Cause	The componentBooting event is generated when the active control module has started initializing the component.
Effect	The specified component has started initializing.

33.4 componentDown

Table 425: componentDown properties

Property name	Value
Application name	platform
Event name	componentDown
Default severity	critical
Message format string	Component <i>type slot</i> is no longer operational
Cause	The componentDown event is generated when a component has transitioned from any other operational state to the down state.
Effect	The specified component is now down.

33.5 componentFailed

Table 426: componentFailed properties

Property name	Value
Application name	platform
Event name	componentFailed

Property name	Value
Default severity	critical
Message format string	Component <i>type slot</i> has failed, reason <i>reason</i>
Cause	The componentFailed event is generated when a component has transitioned from any other operational state to the failed state.
Effect	The specified component is now failed.

33.6 componentInserted

Table 427: componentInserted properties

Property name	Value
Application name	platform
Event name	componentInserted
Default severity	notice
Message format string	Component <i>type slot</i> has been inserted into the system
Cause	The componentInserted event is generated when a component has been initially detected by the active control module.
Effect	The specified component is detected.

33.7 componentLocatorDisabled

Table 428: componentLocatorDisabled properties

Property name	Value
Application name	platform
Event name	componentLocatorDisabled
Default severity	notice
Message format string	Locator LED disabled on <i>type slot</i>
Cause	The componentLocatorDisabled event is generated when the locator LED for the component has been disabled, either via timeout, or via operator action.

Property name	Value
Effect	The specified component's LED is no longer flashing with locator functionality.

33.8 componentLocatorEnabled

Table 429: componentLocatorEnabled properties

Property name	Value
Application name	platform
Event name	componentLocatorEnabled
Default severity	notice
Message format string	Locator LED enabled on <i>type slot</i> for <i>duration</i> seconds
Cause	The componentLocatorEnabled event is generated when the locator LED for the component has been enabled by an operator action.
Effect	The specified component's LED is now flashing with locator functionality.

33.9 componentPowerDown

Table 430: componentPowerDown properties

Property name	Value
Application name	platform
Event name	componentPowerDown
Default severity	critical
Message format string	Component <i>type slot</i> is being powered down due to insufficient power capacity
Cause	The componentPowerDown event is generated when a component is being powered off by the active control module as a means to bring the overall power consumption of the chassis down to a level the available power supplies are able to accommodate.
Effect	The specified component is powering down.

33.10 componentPowerUp

Table 431: componentPowerUp properties

Property name	Value
Application name	platform
Event name	componentPowerUp
Default severity	warning
Message format string	Component <i>type slot</i> is being powered up due to sufficient power capacity
Cause	The componentPowerUp event is generated when a component is being powered on by the active control module, following on from a power down as a result of insufficient power supplies. This event is not generated during normal power on events.
Effect	The specified component is powering on.

33.11 componentRemoved

Table 432: componentRemoved properties

Property name	Value
Application name	platform
Event name	componentRemoved
Default severity	critical
Message format string	Component <i>type slot</i> has been removed from the system
Cause	The componentRemoved event is generated when a component has is no longer detected in the system. This does not necessarily indicate that the component has been physically removed, but indicates that it is no longer detected by the active control module.
Effect	The specified component is no longer detected by the active control module.

33.12 componentRestarted

Table 433: componentRestarted properties

Property name	Value
Application name	platform
Event name	componentRestarted
Default severity	critical
Message format string	Component <i>type slot</i> has been restarted
Cause	The componentRestarting event is generated when the a component has been restarted.
Effect	The specified component has been restarted.

33.13 componentTemperatureExceeded

Table 434: componentTemperatureExceeded properties

Property name	Value
Application name	platform
Event name	componentTemperatureExceeded
Default severity	warning
Message format string	Component <i>type slot</i> has exceeded its temperature threshold, current temperature <i>temperatureC</i>
Cause	The componentTemperatureExceeded event is generated when the component has exceeded its temperature threshold.
Effect	The specified component has a temperature sensor that is overheating, the component may shut down by thermal protection.

33.14 componentTemperatureFailure

Table 435: componentTemperatureFailure properties

Property name	Value
Application name	platform
Event name	componentTemperatureFailure

Property name	Value
Default severity	warning
Message format string	Component <i>type slot</i> has exceeded its safe operating temperature, component will be powered down in 10 seconds. Current temperature <i>temperatureC</i>
Cause	The componentTemperatureFailure event is generated when the component has exceeded its maximum temperature.
Effect	The specified component has a temperature sensor that has overheated, the component will shut down in 10 seconds for thermal protection.

33.15 componentTemperatureNormal

Table 436: componentTemperatureNormal properties

Property name	Value
Application name	platform
Event name	componentTemperatureNormal
Default severity	notice
Message format string	Component <i>type slot</i> temperature is now normal, current temperature <i>temperatureC</i>
Cause	The componentTemperatureNormal event is generated when the component has recovered from a temperature exceeded state.
Effect	The specified component is now within temperature operating limits.

33.16 componentUp

Table 437: componentUp properties

Property name	Value
Application name	platform
Event name	componentUp
Default severity	notice
Message format string	Component <i>type slot</i> is now operational

Property name	Value
Cause	The componentUp event is generated when a component has transitioned from any other operational state to the up state.
Effect	The specified component is now up.

33.17 controlModuleActivityChange

Table 438: controlModuleActivityChange properties

Property name	Value
Application name	platform
Event name	controlModuleActivityChange
Default severity	critical
Message format string	Control module <i>slot</i> has become <i>activity_state</i>
Cause	The controlModuleActivityChange event is generated when there has been an activity change on either control module.
Effect	The specified control module has transitioned to the specified state.

33.18 controlModuleConfigSynchronized

Table 439: controlModuleConfigSynchronized properties

Property name	Value
Application name	platform
Event name	controlModuleConfigSynchronized
Default severity	informational
Message format string	Configuration synchronization with standby control module <i>standby_slot</i> has succeeded
Cause	Configuration has been successfully synchronized between the active and standby control modules.
Effect	The standby control module now has the same configuration as the active.

33.19 controlModuleImageSynchronized

Table 440: controlModuleImageSynchronized properties

Property name	Value
Application name	platform
Event name	controlModuleImageSynchronized
Default severity	informational
Message format string	Image synchronization with standby control module <i>standby_slot</i> has succeeded
Cause	Images have been successfully synchronized between the active and standby control modules.
Effect	The standby control module now has the same images as the active.

33.20 controlModuleInSync

Table 441: controlModuleInSync properties

Property name	Value
Application name	platform
Event name	controlModuleInSync
Default severity	informational
Message format string	Active and standby control modules are now synchronized
Cause	All synchronization activities have completed between the active and standby control modules.
Effect	The standby control module is now ready for a control module switchover, if necessary.

33.21 controlModuleOverlaySynchronized

Table 442: controlModuleOverlaySynchronized properties

Property name	Value
Application name	platform
Event name	controlModuleOverlaySynchronized

Property name	Value
Default severity	informational
Message format string	Overlay synchronization with standby control module <i>standby_slot</i> has succeeded
Cause	Overlays have been successfully synchronized between the active and standby control modules.
Effect	The standby control module now has the same overlay as the active.

33.22 controlModuleSyncLost

Table 443: controlModuleSyncLost properties

Property name	Value
Application name	platform
Event name	controlModuleSyncLost
Default severity	critical
Message format string	Active control module has lost visibility of the standby control module
Cause	Connection between the active and standby control modules has been lost.
Effect	The standby control module is no longer capable of taking over in the event of a failure of the active, no configuration or images are being synchronized.

33.23 controlModuleSyncStart

Table 444: controlModuleSyncStart properties

Property name	Value
Application name	platform
Event name	controlModuleSyncStart
Default severity	informational
Message format string	Active and standby control modules are now synchronizing <i>synchronization_category</i>

Property name	Value
Cause	A synchronization has been triggered between the active and standby control modules.
Effect	Configuration, images, or persistent storage is being synchronized between the active and standby control module.

33.24 fantrayEmpty

Table 445: fantrayEmpty properties

Property name	Value
Application name	platform
Event name	fantrayEmpty
Default severity	critical
Message format string	Component fan-tray <i>slot</i> is not present in the system
Cause	The fantrayEmpty event is generated when a fan-tray has transitioned from any other operational state to the empty state, or is never present.
Effect	The system may have cooling issues.

33.25 linecardCapacityDegraded

Table 446: linecardCapacityDegraded properties

Property name	Value
Application name	platform
Event name	linecardCapacityDegraded
Default severity	critical
Message format string	Linecard <i>slot</i> forwarding complex <i>forwarding-complex</i> fabric capacity degraded
Cause	The specified linecard's forwarding complex has insufficient operational fabric links.
Effect	Packets may be dropped if the linecard's forwarding complex is sending and receiving significant amounts of traffic to the fabric.

33.26 linecardCapacityNormal

Table 447: *linecardCapacityNormal* properties

Property name	Value
Application name	platform
Event name	linecardCapacityNormal
Default severity	informational
Message format string	Linecard <i>slot</i> forwarding complex <i>forwarding-complex</i> fabric capacity normal
Cause	The specified linecard's forwarding complex has sufficient operational fabric links again.
Effect	Normal behavior is restored for sending and receiving traffic to the fabric.

33.27 platformLowPower

Table 448: *platformLowPower* properties

Property name	Value
Application name	platform
Event name	platformLowPower
Default severity	emergency
Message format string	Insufficient power for currently installed components, <i>current_powerW</i> available, <i>required_powerW</i> required
Cause	Available power from operational power supplies is insufficient to power all components in the system.
Effect	Components in the system will be powered down until required power is lower than what is supplied by operational power supplies.

33.28 platformLowReservePower

Table 449: platformLowReservePower properties

Property name	Value
Application name	platform
Event name	platformLowReservePower
Default severity	critical
Message format string	Insufficient reserve power for currently installed components, <i>current_powerW</i> available, <i>required_powerW</i> required
Cause	Available power is less than one power supply capacity extra to power all components in the system.
Effect	Power will be insufficient if one operational power supply is lost.

33.29 platformNoPowerRedundancy

Table 450: platformNoPowerRedundancy properties

Property name	Value
Application name	platform
Event name	platformNoPowerRedundancy
Default severity	warning
Message format string	Power redundancy based on mode <i>redundancy_mode</i> is not available, required PSUs <i>required_psus</i> , operational PSUs <i>active_psus</i>
Cause	The available PSUs are not able to accomodate the configured power redundancy mode.
Effect	The desired power redundancy is not available.

33.30 platformNormalPower

Table 451: platformNormalPower properties

Property name	Value
Application name	platform
Event name	platformNormalPower

Property name	Value
Default severity	informational
Message format string	Sufficient power for currently installed components, <i>current_powerW</i> available, <i>required_powerW</i> required
Cause	Available power from operational power supplies is sufficient to power all components in the system.
Effect	Enough power is available.

33.31 platformPowerRedundancyRecovered

Table 452: *platformPowerRedundancyRecovered* properties

Property name	Value
Application name	platform
Event name	platformPowerRedundancyRecovered
Default severity	informational
Message format string	Power redundancy based on mode <i>redundancy_mode</i> is available, required PSUs <i>required_psus</i> , operational PSUs <i>active_psus</i>
Cause	The available PSUs are able to accomodate the configured power redundancy mode.
Effect	The desired power redundancy is available.

33.32 psuInputDown

Table 453: *psuInputDown* properties

Property name	Value
Application name	platform
Event name	psuInputDown
Default severity	warning
Message format string	Power input on power-supply <i>slot</i> is down
Cause	Input fault on the specified power supply is set.
Effect	The specified power supply can no longer supply power to the system.

33.33 psuInputUp

Table 454: psuInputUp properties

Property name	Value
Application name	platform
Event name	psuInputUp
Default severity	notice
Message format string	Power input on power-supply <i>slot</i> is up
Cause	Input fault on the specified power supply is clear.
Effect	The specified power supply can now supply power to the system.

33.34 psuOutputDown

Table 455: psuOutputDown properties

Property name	Value
Application name	platform
Event name	psuOutputDown
Default severity	warning
Message format string	Power output on power-supply <i>slot</i> is down
Cause	Output fault on the specified power supply is set.
Effect	The specified power supply can no longer supply power to the system.

33.35 psuOutputUp

Table 456: psuOutputUp properties

Property name	Value
Application name	platform
Event name	psuOutputUp
Default severity	notice

Property name	Value
Message format string	Power output on power-supply <i>slot</i> is up
Cause	Output fault on the specified power supply is clear.
Effect	The specified power supply can now supply power to the system.

33.36 psuTemperatureFault

Table 457: *psuTemperatureFault* properties

Property name	Value
Application name	platform
Event name	psuTemperatureFault
Default severity	warning
Message format string	Component <i>type slot</i> has raised a temperature fault, current temperature <i>temperatureC</i>
Cause	The psuTemperatureFault event is generated when the power supply raises a temperature fault.
Effect	The power supply is overheating, and may shut down by thermal protection.

33.37 psuTemperatureNormal

Table 458: *psuTemperatureNormal* properties

Property name	Value
Application name	platform
Event name	psuTemperatureNormal
Default severity	notice
Message format string	Component <i>type slot</i> temperature fault is now clear, current temperature <i>temperatureC</i>
Cause	The psuTemperatureNormal event is generated when the power supply recovered from a temperature fault state.
Effect	The power supply is now within temperature operating limits.

33.38 systemInServiceSoftwareUpgrade

Table 459: systemInServiceSoftwareUpgrade properties

Property name	Value
Application name	platform
Event name	systemInServiceSoftwareUpgrade
Default severity	critical
Message format string	System is upgrading from <i>old_version</i> to <i>new_version</i> , utilizing warm reboot
Cause	The systemInServiceSoftwareUpgrade event is generated when a software triggered in service software upgrade request has been made.
Effect	The control and management plane of the system will go offline, the datapath will continue forwarding based on current state. The system will upgrade the kernel, operating system, and/or applications as needed.

33.39 systemReboot

Table 460: systemReboot properties

Property name	Value
Application name	platform
Event name	systemReboot
Default severity	critical
Message format string	System going down for reboot
Cause	The systemReboot event is generated when a software triggered reboot has been made.
Effect	The system will go offline for reboot.

33.40 systemWarmReboot

Table 461: systemWarmReboot properties

Property name	Value
Application name	platform
Event name	systemWarmReboot
Default severity	critical
Message format string	System going down for warm reboot
Cause	The systemWarmReboot event is generated when a software triggered warm reboot has been made.
Effect	The control and management plane of the system will go offline, the datapath will continue forwarding based on current state.

33.41 systemWarmRebootAborted

Table 462: systemWarmRebootAborted properties

Property name	Value
Application name	platform
Event name	systemWarmRebootAborted
Default severity	critical
Message format string	System has aborted a requested warm reboot due to <i>reason</i>
Cause	The systemWarmRebootAborted event is generated when a software triggered warm reboot request has been aborted, typically due to unsupported configuration.
Effect	The in progress warm reboot has been aborted, no effect to system configuration or state.

34 qos

34.1 platformQoSProfileHighUtilization

Table 463: platformQoSProfileHighUtilization properties

Property name	Value
Application name	qos
Event name	platformQoSProfileHighUtilization
Default severity	warning
Message format string	The QoS resource called <i>resource-name</i> has reached <i>threshold%</i> or more utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> . Only <i>free-entries</i> entries are remaining.
Cause	This event is generated when the utilization of a QoS resource has increased to a level that may warrant concern if further resources are consumed
Effect	None

34.2 platformQoSProfileHighUtilizationLowered

Table 464: platformQoSProfileHighUtilizationLowered properties

Property name	Value
Application name	qos
Event name	platformQoSProfileHighUtilizationLowered
Default severity	notice
Message format string	The QoS resource called <i>resource-name</i> has decreased back to <i>threshold%</i> or less utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> .
Cause	This event is generated when the utilization of a QoS resource has decreased to a level that may no longer warrant concern
Effect	None

35 ra_guard-agent

35.1 ra_guardAdd

Table 465: ra_guardAdd properties

Property name	Value
Application name	ra_guard-agent
Event name	ra_guardAdd
Default severity	notice
Message format string	RA Guard Policy <i>pol-name</i> associated with subinterface <i>if-name</i> , VLAN <i>vlan</i>
Cause	This notification is generated when an RA policy is added to a subinterface.
Effect	The associated RA Policy is now applied to the subinterface.

35.2 ra_guardRemove

Table 466: ra_guardRemove properties

Property name	Value
Application name	ra_guard-agent
Event name	ra_guardRemove
Default severity	notice
Message format string	RA Guard Policy <i>pol-name</i> removed from subinterface <i>if-name</i> , VLAN <i>vlan</i>
Cause	This notification is generated when an RA policy is removed from a subinterface.
Effect	An RA Policy is no longer associated with the specified subinterface.

36 sflow

36.1 sFlowAgentChange

Table 467: sFlowAgentChange properties

Property name	Value
Application name	sflow
Event name	sFlowAgentChange
Default severity	notice
Message format string	SFLOW: The global sFlow Agent has administratively been changed to <i>state</i>
Cause	This notification is generated when a sFlow global process changes administrative state.
Effect	The sFlow global process state has changed.

36.2 sFlowCollectorUnreachable

Table 468: sFlowCollectorUnreachable properties

Property name	Value
Application name	sflow
Event name	sFlowCollectorUnreachable
Default severity	warning
Message format string	SFLOW: Collector <i>collector-id</i> - IP address: <i>collector-ip</i> is unreachable
Cause	This notification is generated when the specified sFlow collector will no longer receive sflow sample data until reachability is restored
Effect	Restore IP reachability to the sFlow collector.

37 sync

37.1 syncFreqClockQLChange

Table 469: syncFreqClockQLChange properties

Property name	Value
Application name	sync
Event name	syncFreqClockQLChange
Default severity	notice
Message format string	The system frequency clock's Quality Level (ql) has transitioned to <i>freq_clock_ql</i>
Cause	This notification is generated when a frequency clock transitions to a new ql.
Effect	The system's frequency clock is synced to remote clock with this ql.

37.2 syncFreqClockRefChange

Table 470: syncFreqClockRefChange properties

Property name	Value
Application name	sync
Event name	syncFreqClockRefChange
Default severity	notice
Message format string	The system frequency clock reference has transitioned to frequency reference instance <i>instance_number</i>
Cause	This notification is generated when a frequency reference instance selected has changed.
Effect	The system frequency clock will follow the new reference.

37.3 syncFreqClockStateChange

Table 471: syncFreqClockStateChange properties

Property name	Value
Application name	sync
Event name	syncFreqClockStateChange
Default severity	notice
Message format string	The system frequency clock state has transitioned to <i>freq_clock_state</i>
Cause	This notification is generated when a frequency clock transitions to a new state.
Effect	The system's frequency clock behavior is based on this state.

37.4 syncFreqInstanceAlarmChange

Table 472: syncFreqInstanceAlarmChange properties

Property name	Value
Application name	sync
Event name	syncFreqInstanceAlarmChange
Default severity	notice
Message format string	Frequency reference instance <i>instance_number</i> . The alarm state has transitioned to <i>alarm_state</i>
Cause	This notification is generated when a frequency Reference instance transitions to a new alarm state.
Effect	If there is an alarm for a frequency reference instance, it will not be qualified for use.

37.5 syncFreqInstanceQLChange

Table 473: syncFreqInstanceQLChange properties

Property name	Value
Application name	sync
Event name	syncFreqInstanceQLChange

Property name	Value
Default severity	notice
Message format string	Frequency reference instance <i>instance_number</i> : The Quality Level (ql) has transitioned to <i>ql_number</i>
Cause	This notification is generated when a frequency reference Instance transitions to a new QL.
Effect	The new QL will be taken into account when for system frequency clock reference selection if ql-selection is set.

37.6 syncPTPParentChange

Table 474: syncPTPParentChange properties

Property name	Value
Application name	sync
Event name	syncPTPParentChange
Default severity	notice
Message format string	PTP has transitioned to new parent <i>parent_clock_mac_address</i> on port <i>parent_clock_port</i> with clockClass of <i>parent_clockclass</i> .
Cause	This notification is generated when the PTP clock transitions to a new parent.
Effect	The ptp clock will follow this new parent clock.

37.7 syncPTPPortPTSFUnusable

Table 475: syncPTPPortPTSFUnusable properties

Property name	Value
Application name	sync
Event name	syncPTPPortPTSFUnusable
Default severity	warning
Message format string	PTP detected excessive noise between PTP port number <i>ptp_neighbor_port_number</i> and parent clock ID <i>ptp_neighbor_clock_id</i> .


Property name	Value
Cause	The PTP process detected excessive noise between the local port and the indicated external Master port.
Effect	Any Announce messages received from the indicated neighbor shall be excluded from the BMCA algorithm until this condition is cleared.

37.8 syncPTPTimeRecoveryState

Table 476: syncPTPTimeRecoveryState properties

Property name	Value
Application name	sync
Event name	syncPTPTimeRecoveryState
Default severity	notice
Message format string	PTP has transitioned to time recovery state of <i>ptp_time_rec_state</i>
Cause	This notification is generated when the PTP clock transitions to a new time recovery state.
Effect	The ptp clock's tim recovery behavior will be based on this state.

Customer document and product support

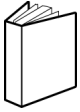

Customer documentation

[Customer documentation welcome page](#)



Technical support

[Product support portal](#)



Documentation feedback

[Customer documentation feedback](#)