



7710 SR OS Basic System Configuration Guide

Software Version: 7710 SR OS 10.0 r1
February 2012
Document Part Number: 93-0097-08-01



This document is protected by copyright. Except as specifically permitted herein, no portion of the provided information can be reproduced in any form, or by any means, without prior written permission from Alcatel-Lucent.
Alcatel, Lucent, Alcatel-Lucent and the Alcatel-Lucent logo are trademarks of Alcatel-Lucent. All other trademarks are the property of their respective owners.
The information presented is subject to change without notice.
Alcatel-Lucent assumes no responsibility for inaccuracies contained herein.

Copyright 2012 Alcatel-Lucent. All rights reserved.

Table of Contents

Preface

Alcatel-Lucent 7710 SR-Series System Configuration Process	15
--	----

CLI Usage

CLI Structure	18
Navigating in the CLI	21
CLI Contexts	21
Basic CLI Commands	23
CLI Environment Commands	26
CLI Monitor Commands	27
Getting Help in the CLI	28
The CLI Command Prompt	30
Displaying Configuration Contexts	31
EXEC Files	32
Entering CLI Commands	33
Command Completion	33
Unordered Parameters	33
Editing Keystrokes	34
Absolute Paths	35
History	37
Entering Numerical Ranges	38
Pipe/Match	40
Redirection	44
VI Editor	45
Summary of vi Commands	45
Using the vi Commands	46
EX Commands	52
Configuration Rollback	53
Feature Behavior	54
MIB Requirements	60
Rescue Configuration	61
Operational Guidelines	62
Basic Command Reference	65

File System Management

The File System	142
Compact Flash Devices	142
URLs	143
Wildcards	145
File Management Tasks	147
Modifying File Attributes	147
Creating Directories	148
Copying Files	149
Moving Files	150
Removing Files and Deleting Directories	150

Table of Contents

Displaying Directory and File Information	151
Repairing the File System	153
File Command Reference	155
Boot Options	
System Initialization	170
Configuration and Image Loading	174
Persistence	176
Lawful Intercept	177
Initial System Startup Process Flow	178
Configuration Notes	179
Configuring Boot File Options with CLI	181
BOF Configuration Overview	182
Basic BOF Configuration	183
Common Configuration Tasks	184
Searching for the BOF	185
Accessing the CLI	187
Console Connection	187
Configuring BOF Parameters	189
Service Management Tasks	190
System Administration Commands	190
Viewing the Current Configuration	190
Modifying and Saving a Configuration	192
Deleting BOF Parameters	193
Saving a Configuration to a Different Filename	194
Rebooting	194
BOF Command Reference	195
System Management	
System Management Parameters	221
System Information	221
System Name	221
System Contact	221
System Location	222
System Coordinates	222
Naming Objects	222
Common Language Location Identifier	223
System Time	224
Time Zones	224
Network Time Protocol (NTP)	226
SNTP Time Synchronization	227
CRON	228
High Availability	229
HA Features	229
Redundancy	230
Software Redundancy	230
Configuration Redundancy	231
Component Redundancy	231
Service Redundancy	232

- Accounting Configuration Redundancy 232
- Nonstop Forwarding 233
- Nonstop Routing (NSR) 234
- CPM Switchover 235
- Synchronization 236
 - Configuration and boot-env Synchronization 236
 - State Database Synchronization 236
- Synchronization and Redundancy 237
 - Active and Standby Designations 238
 - When the Active CFM Goes Offline 239
 - Persistence 240
- Network Synchronization 241
 - Central Synchronization Sub-System 243
 - Synchronization Status Messages (SSM) 245
 - DS1 Signals 245
 - E1 Signals 245
 - SONET/SDH Signals 246
 - DS3/E3 246
 - Synchronous Ethernet 247
 - Clock Source Quality Level Definitions 248
- System-Wide ATM Parameters 251
- Link Layer Discovery Protocol (LLDP) 252
- Administrative Tasks 255
 - Saving Configurations 256
 - Specifying Post-Boot Configuration Files 257
 - Network Timing 258
 - Power Supplies 258
 - Automatic Synchronization 259
 - Boot-Env Option 259
 - Config Option 259
 - Manual Synchronization 260
 - Forcing a Switchover 260
- System Configuration Process Overview 261
- Configuration Notes 262
 - General 262
- Configuring System Management with CLI 263
- System Management 265
 - Saving Configurations 265
- Basic System Configuration 266
- Common Configuration Tasks 267
 - System Information 268
 - System Information Parameters 269
 - Name 269
 - Contact 269
 - Location 270
 - CLLI Code 270
 - Coordinates 271
 - System Time Elements 272
 - Zone 272

Table of Contents

Summer Time Conditions	274
NTP	275
Broadcastclient	277
SNTP	281
CRON	283
Time Range	286
Time of Day	290
ANCP (Access Node Control Protocol)	291
Configuring Synchronization and Redundancy	296
Configuring Persistence	296
Configuring Synchronization	296
Configuring Manual Synchronization	297
Forcing a Switchover	297
Configuring Synchronization Options	298
Configuring Multi-Chassis Redundancy	299
Configuring Power Supply Parameters	301
ATM Parameters	303
Configuring Backup Copies	304
System Administration Parameters	305
Disconnect	305
Set-time	306
Display-config	306
Tech-support	308
Save	308
Reboot	309
Post-Boot Configuration Extension Files	310
Show Command Output and Console Messages	311
System Timing	313
Edit Mode	314
Using the Revert Command	315
Other Editing Commands	316
Forcing a Specific Reference	317
Configuring System Monitoring Thresholds	318
Creating Events	318
System Alarm Contact Inputs	320
Configuring LLDP	321
Standards and Protocol Support	507
Index	513

LIST OF TABLES

Preface

Table 1:	Configuration Process	15
----------	---------------------------------	----

CLI Usage

Table 2:	Console Control Commands	23
Table 3:	Command Syntax Symbols	25
Table 4:	CLI Environment Commands	26
Table 5:	CLI Monitor Command Contexts	27
Table 6:	Online Help Commands	28
Table 7:	Command Editing Keystrokes	34
Table 8:	CLI Range Use Limitations	38
Table 9:	Regular Expression Symbols	42
Table 10:	Special Characters	43
Table 11:	Cutting and Pasting/Deleting Text in vi	46
Table 12:	Inserting New Text	47
Table 13:	Moving the Cursor Within the File	47
Table 14:	Moving the Cursor Around the Screen	49
Table 15:	Replacing Text	49
Table 16:	Searching for Text or Characters	50
Table 17:	Manipulating Character/Line Formatting	51
Table 18:	Saving and Quitting	51
Table 19:	Miscellaneous	51
Table 20:	EX commands	52
Table 21:	Supported Events and Traps	60
Table 22:	Show Alias Output Fields	139

File System Management

Table 23:	URL Types and Syntax	143
Table 24:	File Command Local and Remote File System Support	146

Boot Options

Table 25:	Console Configuration Parameter Values	187
Table 26:	Show BOF Output Fields	211

System Management

Table 27:	System-defined Time Zones	224
Table 28:	Revertive, non-Revertive Timing Reference Switching Operation	244
Table 29:	Synchronization Message Coding and Source Priorities (Value Received on a Port)	248
Table 30:	Synchronization Message Coding and Source Priorities (Transmitted by Interface of Type)	249
Table 31:	System-defined Time Zones	273
Table 32:	Show System CPU Output Fields	439
Table 33:	Show Memory Pool Output Fields	451
Table 34:	Show System SNTP Output Fields	457
Table 35:	Show System Time Output Fields	460
Table 36:	Show System tod-suite Output Fields	462

List of Tables

Table 37:	Show Multi-Chassis Redundancy Output Fields	466
Table 38:	Show Redundancy Multi-chassis MC-Lag Peer Output Fields	470
Table 39:	ShowRedundancy Multi-chassis mc-lag Peer Output Fields	471
Table 40:	Show Redundancy Multi-chassis Sync Output Fields	480
Table 41:	Show Redundancy Multi-chassis Sync Peer Output Fields	481
Table 42:	Show Redundancy Multi-chassis Sync Peer Detail Output Fields	483
Table 43:	Show System Time-range Output Fields	486
Table 44:	System Timing Output Fields	487
Table 45:	Show Synchronization Output Fields	495

LIST OF FIGURES

CLI Usage

Figure 1:	Root Commands	19
Figure 2:	Operational Root Commands	20
Figure 3:	Rollback Operation	53
Figure 4:	Configuration Rollback	56

Boot Options

Figure 5:	System Initialization - Part 1	171
Figure 6:	Files on the Compact Flash	171
Figure 7:	System Initialization - Part 2	174
Figure 8:	System Startup Flow	178

System Management

Figure 9:	Conventional Network Timing Architecture (North American Nomenclature)	241
Figure 10:	Synchronization Reference Selection	243
Figure 11:	LLDP Internal Architecture for a Network Node	253
Figure 12:	Customer Use Example For LLDP	254
Figure 13:	System Configuration and Implementation Flow	261

Preface

About This Guide

This guide describes system concepts and provides configuration explanations and examples to configure 7710 SR-Series boot option file (BOF), file system and system management functions.

This document is organized into functional chapters and provides concepts and descriptions of the implementation flow, as well as Command Line Interface (CLI) syntax and command usage.

Audience

This manual is intended for network administrators who are responsible for configuring the 7710 SR-Series routers. It is assumed that the network administrators have an understanding of networking principles and configurations. Protocols, standards, and processes described in this manual include the following:

- CLI concepts
- File system concepts
- Boot option, configuration, image loading, and initialization procedures
- Basic system management functions such as the system name, router location and coordinates, and CLI code, time zones, Network Time Protocol (NTP), Simple Network Time Protocol (SNTP), and synchronization properties

List of Technical Publications

The 7710 SR documentation set is composed of the following books:

- **7710 SR OS Basic System Configuration Guide**
This guide describes basic system configurations and operations.
- **7710 SR OS System Management Guide**
This guide describes system security and access configurations as well as event logging and accounting logs.
- **7710 SR OS Interface Configuration Guide**
This guide describes card, Media Dependent Adapter (MDA), MCM (MDA Carrier Module), CMA (Compact Media Adapter), and port provisioning.
- **7710 SR OS Router Configuration Guide**
This guide describes logical IP routing interfaces and associated attributes such as an IP address, port, link aggregation group (LAG) as well as IP and MAC-based filtering, VRRP, and Cflowd.
- **OS Routing Protocols Guide**
This guide provides an overview of routing concepts and provides configuration examples for RIP, OSPF, IS-IS, Multicast, BGP, and route policies.
- **7710 SR OS MPLS Guide**
This guide describes how to configure Multiprotocol Label Switching (MPLS) and Label Distribution Protocol (LDP).
- **7710 SR OS Services Guide**
This guide describes how to configure service parameters such as service distribution points (SDPs), customer information, and user services.
- **7710 SR OS OAM and Diagnostic Guide**
This guide describes how to configure features such as service mirroring and Operations, Administration and Management (OAM) tools.
- **7710 SR OS Triple Play Guide**
This guide describes Triple Play services and support provided by the 7710 SR and presents examples to configure and implement various protocols and services.
- **7710 SR Quality of Service Guide**
This guide describes how to configure Quality of Service (QoS) policy management.

Technical Support

If you purchased a service agreement for your 7710 SR router and related products from a distributor or authorized reseller, contact the technical support staff for that distributor or reseller for assistance. If you purchased an Alcatel-Lucent service agreement, contact your welcome center:

Web: http://www1.alcatel-lucent.com/comps/pages/carrier_support.jhtml

Getting Started

In This Chapter

This chapter provides process flow information to configure basic router and system parameters, perform operational functions with directory and file management, and boot option tasks.

Alcatel-Lucent 7710 SR-Series System Configuration Process

[Table 1](#) lists the tasks necessary to configure boot option files (BOF) and system and file management functions. Each chapter in this book is presented in an overall logical configuration flow. Each section describes a software area and provides CLI syntax and command usage to configure parameters for a functional area. After the hardware installation has been properly completed, proceed with the 7710 SR-Series router configuration tasks in the following order:

Table 1: Configuration Process

Area	Task	Chapter
CLI Usage	The CLI structure	CLI Usage on page 17
	Basic CLI commands	Basic CLI Commands on page 23
	Configure environment commands	CLI Environment Commands on page 26
	Configure monitor commands	CLI Monitor Commands on page 27
Operational functions	Directory and file management	File System Management on page 141

Table 1: Configuration Process

Area	Task	Chapter (Continued)
Boot options	Configure boot option files (BOF)	Boot Options on page 169
System configuration	Configure system functions, including host name, address, domain name, and time parameters.	System Management on page 219
Reference	List of IEEE, IETF, and other proprietary entities.	Standards and Protocol Support on page 507

In This Chapter

This chapter provides information about using the command-line interface (CLI).

Topics in this chapter include:

- [CLI Structure on page 18](#)
- [Navigating in the CLI on page 21](#)
- [Basic CLI Commands on page 23](#)
- [CLI Environment Commands on page 26](#)
- [CLI Monitor Commands on page 27](#)
- [Getting Help in the CLI on page 28](#)
- [The CLI Command Prompt on page 30](#)
- [Displaying Configuration Contexts on page 31](#)
- [EXEC Files on page 32](#)
- [Entering CLI Commands on page 33](#)
- [VI Editor on page 45](#)
- [Configuration Rollback on page 53](#)

CLI Structure

Alcatel-Lucent's SR-Series Operating System (OS) CLI is a command-driven interface accessible through the console, Telnet and secure shell (SSH). The CLI can be used for configuration and management of 7710 SR-Series routers.

The 7710 SR-Series CLI command tree is a hierarchical inverted tree. At the highest level is the ROOT level. Below this level are other tree levels with the major command groups; for example, **configuration** commands and **show** commands are levels below ROOT.

The CLI is organized so related commands with the same scope are at the same level or in the same context. Sublevels or subcontexts have related commands with a more refined scope.

[Figure 1](#) and [Figure 2](#) display the major contexts for router configuration.

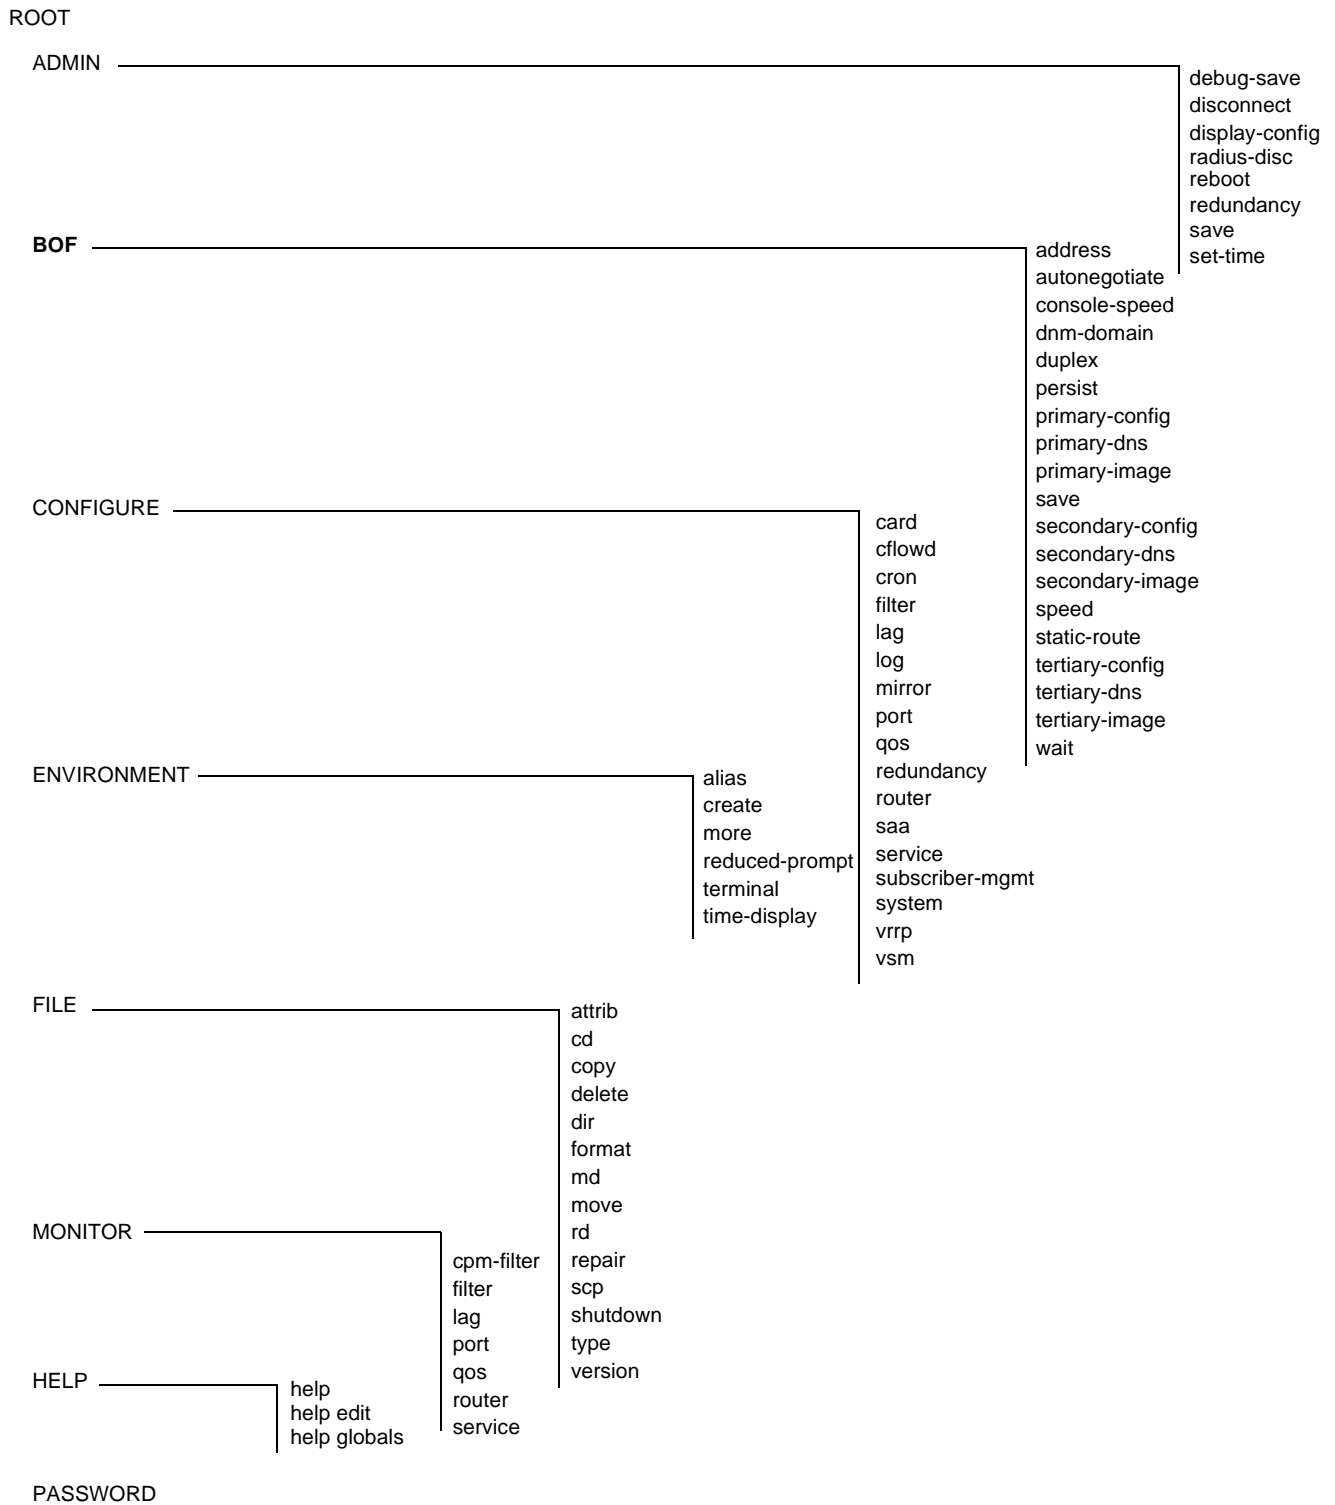


Figure 1: Root Commands

CLI Structure

ROOT

SHOW

CLEAR

DEBUG

TOOLS

dump
perform

atm
cisco-hdlc
frame-relay
lag
mirror-source
router
service
snmp
subscriber-mgmt
sync-if-timing
system
trace

card
cflowd
cpm-filter
filter
lag
log
mda
port
qos
radius
router
saa
screen
service
subscriber-mgmt
system
tacplus
trace
vrrp

alias
aps
bof
boot-messages
card
cflowd
chassis
cron
debug
egress-replication
filter
lag
log
mda
mirror
multilink-bundle
pools
port
port-tree
qos
redundancy
router
saa
service
snmp
subscriber-mgmt
system
time
trace
uptime
users
version
vrrp

Figure 2: Operational Root Commands

Navigating in the CLI

The following sections describe additional navigational and syntax information.

- [CLI Contexts on page 21](#)
- [Basic CLI Commands on page 23](#)
- [CLI Environment Commands on page 26](#)
- [CLI Monitor Commands on page 27](#)
- [Entering Numerical Ranges on page 38](#)

CLI Contexts

Use the CLI to access, configure, and manage Alcatel-Lucent's SR-Series routers. CLI commands are entered at the command line prompt. Access to specific CLI commands is controlled by the permissions set by your system administrator. Entering a CLI command makes navigation possible from one command context (or level) to another.

When you initially enter a CLI session, you are in the ROOT context. Navigate to another level by entering the name of successively lower contexts. For example, enter either the **configure** or **show** commands at the ROOT context to navigate to the **config** or **show** context, respectively. For example, at the command prompt, enter **config**. The active context displays in the command prompt.

```
A:ALA-12# config
A:ALA-12>config#
```

In a given CLI context, you can enter commands at that context level by simply entering the text. It is also possible to include a command in a lower context as long as the command is formatted in the proper command and parameter syntax.

The following example shows two methods to navigate to a service SDP ingress level:

Method 1:

```
A:ALA-12# configure service epipe 6 spoke-sdp 2:6 ingress
*A:ALA-12>config>service>epipe>spoke-sdp>ingress#
```

Method 2:

```
A:ALA-12>config# service
A:ALA-12>config>service# epipe 6
*A:ALA-12>config>service>epipe# spoke-sdp 2:6
*A:ALA-12>config>service>epipe>spoke-sdp# ingress
*A:ALA-12>config>service>epipe>spoke-sdp>ingress#
```

The CLI returns an error message when the syntax is incorrect.

```
*A:ALA-12>config# router  
Error: Bad command.
```

Basic CLI Commands

The console control commands are the commands that are used for navigating within the CLI and displaying information about the console session. Most of these commands are implemented as global commands. They can be entered at any level in the CLI hierarchy with the exception of the `password` command which must be entered at the ROOT level. The console control commands are listed in [Table 2](#).

Table 2: Console Control Commands

Command	Description	Page
<code><Ctrl-c></code>	Aborts the pending command.	
<code><Ctrl-z></code>	Terminates the pending command line and returns to the ROOT context.	
<code>back</code>	Navigates the user to the parent context.	70
<code>clear</code>	Clears statistics for a specified entity or clears and resets the entity.	70
<code>echo</code>	Echos the text that is typed in. Primary use is to display messages to the screen within an <code>exec</code> file.	71
<code>exec</code>	Executes the contents of a text file as if they were CLI commands entered at the console.	71
<code>exit</code>	Returns the user to the previous higher context.	71
<code>exit all</code>	Returns the user to the ROOT context.	72
<code>help</code>	Displays help in the CLI.	73
<code>?</code>		
<code>history</code>	Displays a list of the most recently entered commands.	74
<code>info</code>	Displays the running configuration for a configuration context.	75
<code>logout</code>	Terminates the CLI session.	77
<code>oam</code>	Provides OAM test suite options. See the OAM section of the 7710 SR OS OAM and Diagnostic Guide.	
<code>password</code>	Changes the user CLI login password. The password can only be changed at the ROOT level.	79
<code>ping</code>	Verifies the reachability of a remote host.	80
<code>pwc</code>	Displays the present or previous working context of the CLI session.	82

Table 2: Console Control Commands (Continued)

Command	Description	Page
sleep	Causes the console session to pause operation (sleep) for one second or for the specified number of seconds. Primary use is to introduce a pause within the execution of an <code>exec</code> file.	82
ssh	Opens a secure shell connection to a host.	83
telnet	Telnet to a host.	83
traceroute	Determines the route to a destination address.	84
tree	Displays a list of all commands at the current level and all sublevels.	85
write	Sends a console message to a specific user or to all users with active console sessions.	85

The list of all system global commands is displayed by entering `help globals` in the CLI. For example:

```
*A:ALA-12>config>service# help globals
back          - Go back a level in the command tree
echo          - Echo the text that is typed in
enable-admin  - Enable the user to become a system administrator
exec          - Execute a file - use -echo to show the commands and
               prompts on the screen
exit          - Exit to intermediate mode - use option all to exit to
               root prompt
help          - Display help
history       - Show command history
info         - Display configuration for the present node
logout       - Log off this system
mrinfo       - Request multicast router information
mstat        - Trace multicast path from a source to a receiver and
               display multicast packet rate and loss information
mtrace       - Trace multicast path from a source to a receiver
oam          + OAM Test Suite
ping         - Verify the reachability of a remote host
pwc          - Show the present working context
sleep        - Sleep for specified number of seconds
ssh          - SSH to a host
telnet       - Telnet to a host
traceroute   - Determine the route to a destination address
tree         - Display command tree structure from the context of
               execution
write        - Write text to another user
*A:ALA-12>config>service#
```


[Table 3](#) lists describes command syntax symbols.

Table 3: Command Syntax Symbols

Symbol	Description
	A vertical line indicates that one of the parameters within the brackets or braces is required. tcp-ack {true false}
[]	Brackets indicate optional parameters. redirects [number seconds]
< >	Angle brackets indicate that you must enter text based on the parameter inside the brackets. interface <interface-name>
{ }	Braces indicate that one of the parameters must be selected. default-action {drop forward}
[{ }]	Braces within square brackets indicates that you must choose one of the optional parameters. • sdp sdp-id [{gre mpls}]
Bold	Commands in bold indicate commands and keywords.
<i>Italic</i>	Commands in <i>italics</i> indicate command options.

CLI Environment Commands

The CLI **environment** commands are found in the `root>environment` context of the CLI tree and controls session preferences for a single CLI session. The CLI **environment** commands are listed in [Table 4](#).

Table 4: CLI Environment Commands

Command	Description	Page
<code>alias</code>	Enables the substitution of a command line by an alias.	86
<code>create</code>	Enables or disables the use of a create parameter check.	86
<code>more</code>	Configures whether CLI output should be displayed one screen at a time awaiting user input to continue.	86
<code>reduced-prompt</code>	Configures the maximum number of higher-level CLI context nodes to display by name in the CLI prompt for the current CLI session.	87
<code>saved-ind-prompt</code>	Saves the indicator in the prompt.	87
<code>terminal</code>	Configures the terminal screen length for the current CLI session.	88
<code>time-display</code>	Specifies whether time should be displayed in local time or UTC.	88

CLI Monitor Commands

Monitor commands display specified statistical information related to the monitor subject (such as filter, port, QoS, router, service, and VRRP) at a configurable interval until a count is reached. The CLI **monitor** commands are found in the `root>monitor` context of the CLI tree.

The **monitor** command output displays a snapshot of the current statistics. The output display refreshes with subsequent statistical information at each configured interval and is displayed as a delta to the previous display.

The `<Ctrl-C>` keystroke interrupts a monitoring process. Monitor command configurations cannot be saved. You must enter the command for each monitoring session. Note that if the maximum limits are configured, you can monitor the statistical information for a maximum of 60 * 999 sec ~ 1000 minutes.

The CLI monitor command contexts are listed in [Table 5](#).

Table 5: CLI Monitor Command Contexts

Command	Description	Page
<code>filter</code>	Enables IP and MAC filter monitoring at a configurable interval until that count is reached.	90
<code>lag</code>	Enables Link Aggregation Group (LAG) monitoring to display statistics for individual port members and the LAG.	94
<code>port</code>	Enables port traffic monitoring. The specified port(s) statistical information displays at the configured interval until the configured count is reached.	96
<code>qos</code>	Enables scheduler statistics monitoring per customer multi-service-site or on a per SAP basis.	99
<code>router</code>	Enables virtual router instance monitoring at a configurable interval until that count is reached.	103
<code>service</code>	Monitors commands for a particular service.	129

Getting Help in the CLI

The **help** system commands and the `?` key display different types of help in the CLI. [Table 6](#) lists the different help commands.

Table 6: Online Help Commands

Command	Description
<code>help ?</code>	List all commands in the current context.
<code>string ?</code>	List all commands available in the current context that start with <i>string</i> .
<code>command ?</code>	Displays the command's syntax and associated keywords.
<code>command keyword ?</code>	List the associated arguments for <i>keyword</i> in <i>command</i> .
<code>string<Tab></code>	Complete a partial command name (auto-completion) or list available commands that match <i>string</i> .

The **tree** and **tree detail** system commands are help commands useful when searching for a command in a lower-level context.

The following example displays a partial list of the **tree** and **tree detail** command output entered at the **config** level.

```
*A:ALA-12>config# tree
```

```
configure
+---card
| +---card-type
| +---mcm
| | +---mcm-type
| | +---shutdown
| +---mda
| | +---access
| | | +---egress
| | | | +---pool
| | | | | +---resv-cbs
| | | | | +---slope-policy
| | | +---ingress
| | | | +---pool
| | | | | +---resv-cbs
| | | | | +---slope-policy
| | +---mda-type
| +---network
| | +---egress
| | | +---pool
| | | | +---resv-cbs
| | | | +---slope-policy
| | | +---ingress
| | | | +---pool
| | | | | +---resv-cbs
| | | | | +---slope-policy
| | | +---queue-policy
| | +---shutdown
+---shutdown
+---cflowd
| +---active-timeout
| +---cache-size
| +---collector
| | +---aggregation
| | | +---as-matrix
| | | +---destination-prefix
| | | +---protocol-port
| | | +---raw
| | | +---source-destination-prefix
| | | +---source-prefix
| | +---autonomous-system-type
| | +---description
| | +---shutdown
+---cron
| +---action
| +---expire-time
| +---lifetime
| +---max-completed
| +---results
| +---script
| +---shutdown
+---schedule
| +---day-of-month
| +---description
| +---hour
| +---interval
| +---minute
```

```
*A:ALA-12>config# tree detail
```

```
configure
+---card <slot-number>
| no card <slot-number>]
| +---card-type <card-type>
| | no card-type
| +---mcm <mcm-slot>
| | no mcm <mcm-slot>
| | +---mcm-type <mcm-type>
| | | no mcm-type
| | +---no shutdown
| | | shutdown
| +---mda <mda-slot>
| | no mda <mda-slot>
| | +---access
| | | +---egress
| | | | +---pool [<name>]
| | | | | no pool [<name>]
| | | | | +---no resv-cbs
| | | | | resv-cbs <percent-or-sum>
| | | | | +---no slope-policy
| | | | | slope-policy <name>
| | | +---ingress
| | | | +---pool [<name>]
| | | | | no pool [<name>]
| | | | | +---no resv-cbs
| | | | | resv-cbs <percent-or-sum>
| | | | | +---no slope-policy
| | | | | slope-policy <name>
| | +---mda-type <mda-type>
| | | no mda-type
+---network
| | +---egress
| | | +---pool [<name>]
| | | | no pool [<name>]
| | | | +---no resv-cbs
| | | | resv-cbs <percent-or-sum>
| | | | +---no slope-policy
| | | | slope-policy <name>
| | | +---ingress
| | | | +---pool [<name>]
| | | | | no pool [<name>]
| | | | | +---no resv-cbs
| | | | | resv-cbs <percent-or-sum>
| | | | | +---no slope-policy
| | | | | slope-policy <name>
```

```
...
```

The CLI Command Prompt

By default, the CLI command prompt indicates the device being accessed and the current CLI context. For example, the prompt: **A:ALA-1>config>router>if#** indicates the active context, the user is on the device with hostname ALA-1 in the **configure>router>interface** context. In the prompt, the separator used between contexts is the “>” symbol.

At the end of the prompt, there is either a pound sign (“#”) or a dollar sign (“\$”). A “#” at the end of the prompt indicates the context is an existing context. A “\$” at the end of the prompt indicates the context has been newly created. New contexts are newly created for logical entities when the user first navigates into the context.

Since there can be a large number of sublevels in the CLI, the **environment** command **reduced-prompt** *no of nodes in prompt* allows the user to control the number of levels displayed in the prompt.

All special characters (#, \$, etc.) must be enclosed within double quotes, otherwise it is seen as a comment character and all characters on the command line following the # are ignored. For example:

```
*A:ALA-1>config>router# interface "primary#1"
```

When changes are made to the configuration file a “*” appears in the prompt string (*A:ALA-1) indicating that the changes have not been saved. When an admin save command is executed the “*” disappears. This behavior is controlled in the **saved-ind-prompt** command in the **environment** context.

Displaying Configuration Contexts

The `info` and `info detail` commands display configuration for the current level. The `info` command displays non-default configurations. The `info detail` command displays the entire configuration for the current level, including defaults. The following example shows the output that displays using the `info` command and the output that displays using the `info detail` command.

```
*A:ALA-1>config>router# interface system
*A:ALA-1>config>router>if# info
-----
          address 10.10.0.1/32
-----
*A:ALA-1>config>router>if#

*A:ALA-1>config>router>if# info detail
-----
          address 10.10.10.103/32 broadcast host-ones
          no description
          no arp-timeout
          no allow-directed-broadcasts
          tos-marking-state trusted
          no local-proxy-arp
          no proxy-arp
          icmp
             mask-reply
             redirects 100 10
             unreachable 100 10
             ttl-expired 100 10
          exit
          no mac
          no ntp-broadcast
          no cflowd
          no shutdown
-----
*A:ALA-1>config>router>if#
```

EXEC Files

The `exec` command allows you to execute a text file of CLI commands as if it were typed at a console device.

The `exec` command and the associated `exec` files can be used to conveniently execute a number of commands that are always executed together in the same order. For example, an `exec` command can be used by a user to define a set of commonly used standard command aliases.

The `echo` command can be used within an `exec` command file to display messages on screen while the file executes.

Entering CLI Commands

Command Completion

The CLI supports both command abbreviation and command completion. If the keystrokes entered are enough to match a valid command, the CLI displays the remainder of the command syntax when the <Tab> key or space bar is pressed. When typing a command, the <Tab> key or space bar invokes auto-completion. If the keystrokes entered are definite, auto-completion will complete the command. If the letters are not sufficient to identify a specific command, pressing the <Tab> key or space bar will display commands matching the letters entered. System commands are available in all CLI context levels.

Unordered Parameters

In a given context, the CLI accepts command parameters in any order as long as the command is formatted in the proper command keyword and parameter syntax. Command completion will still work as long as enough recognizable characters of the command are entered.

The following output shows different **static-route** command syntax and an example of the command usage.

```
*A:ALA-12>config>router# static-route ?
- [no] static-route {<ip-prefix/mask>|<ip-prefix> <netmask>} [preference <preference>]
  [metric <metric>] [tag <tag>] [enable|disable] next-hop <ip-address|ip-int-name>
- [no] static-route {<ip-prefix/mask>|<ip-prefix> <netmask>} [preference <preference>]
  [metric <metric>] [tag <tag>] [enable|disable] indirect <ip-address> [ldp
  [disallow-igp]]
- [no] static-route {<ip-prefix/mask>|<ip-prefix> <netmask>} [preference <preference>]
  [metric <metric>] [tag <tag>] [enable|disable] black-hole
*A:ALA-12>config>router# static-route preference 1 10.1.0.0/16 metric
```

Editing Keystrokes

When entering a command, special keystrokes allow for editing of the command. [Table 7](#) lists the command editing keystrokes.

Table 7: Command Editing Keystrokes

Editing Action	Keystrokes
Delete current character	<Ctrl-d>
Delete text up to cursor	<Ctrl-u>
Delete text after cursor	<Ctrl-k>
Move to beginning of line	<Ctrl-a>
Move to end of line	<Ctrl-e>
Get prior command from history	<Ctrl-p>
Get next command from history	<Ctrl-n>
Move cursor left	<Ctrl-b>
Move cursor right	<Ctrl-f>
Move back one word	<Esc>
Move forward one word	<Esc><f>
Convert rest of word to uppercase	<Esc><c>
Convert rest of word to lowercase	<Esc><l>
Delete remainder of word	<Esc><d>
Delete word up to cursor	<Ctrl-w>
Transpose current and previous character	<Ctrl-t>
Enter command and return to root prompt	<Ctrl-z>
Refresh input line	<Ctrl-l>

Absolute Paths

CLI commands can be executed in any context by specifying the full path from the CLI root. To execute an out-of-context command enter a forward slash “/” or backward slash “\” at the beginning of the command line. The forward slash “/” or backward slash “\” cannot be used with the **environment alias** command. The commands are interpreted as absolute path. Spaces between the slash and the first command will return an error. Commands that are already global (such as ping, telnet, exit, back, etc.) cannot be executed with a forward slash “/” or backward slash “\” at the beginning of the command line.

```
*A:ALA-12# configure router
*A:ALA-12>config>router# interface system address 1.2.3.4
*A:ALA-12>config>router# /admin save
*A:ALA-12>config>router# \clear router interface
*A:ALA-12>config>router#
```

The command may or may not change the current context depending on whether or not it is a leaf command. This is the same behavior the CLI performs when CLI commands are entered individually, for example:

```
*A:ALA-12# admin
*A:ALA-12>admin# save
OR
*A:ALA-12# admin save
*A:ALA-12#
```

Note that an absolute path command behaves the same as manually entering a series of command line instructions and parameters.

For example, beginning in an IES context service ID 4 (IES 4),

CLI Syntax: config>service>ies> /clear card 1

behaves the same as the following series of commands.

Example: config>service>ies>exit all
clear card 1
configure service ies 4 (returns you to your starting point)
config>service>ies

Entering CLI Commands

If the command takes you to a different context, the following occurs:

CLI Syntax: `config>service>ies>/configure service ies 5 create`

becomes

Example: `config>service>ies>exit all
configure service vpls 5 create
config>service>vpls>`

History

The CLI maintains a history of the most recently entered commands. The `history` command displays the most recently entered CLI commands.

```
*A:ALA-1# history
 1 environment terminal length 48
 2 environment no create
 3 show version
 4 configure port 1/1/1
 5 info
 6 \configure router isis
 7 \port 1/1/2
 8 con port 1/1/2
 9 \con port 1/1/2
10 \configure router bgp
11 info
12 \configure system login-control
13 info
14 history
15 show version
16 history
*A:ALA-1# !3
A:cses-E11# show version
TIMOS-B-0.0.I2838 both/i386 ALCATEL SR 7750 Copyright (c) 2000-2011 Alcatel-Lucent.
All rights reserved. All use subject to applicable license agreements.
Built on Mon Jan 10 18:33:16 PST 2011 by builder in /rel0.0/I2838/panos/main
A:cses-E11#
*A:ALU-7210# show version
TIMOS-B-0.0.I232 both/i386 ALCATEL SAS-E 7210 Copyright (c) 2000-2008 Alcatel-Lucent.
All rights reserved. All use subject to applicable license agreements.
Built on Sat Oct 11 18:15:40 IST 2008 by panosbld in /panosbld/ws/panos/main
*A:ALU-7210#
```

Entering Numerical Ranges

The 7710 SR OS CLI allows the use of a single numerical range as an argument in the command line. A range in a CLI command is limited to positive integers and is denoted with two numbers enclosed in square brackets with two periods (“..”) between the numbers:

$$[x..y]$$

where x and y are positive integers and $y-x$ is less than 1000.

For example, it is possible to shut down ports 1 through 10 in Slot 1 on MDA 1. A port is denoted with “*slot/mda/port*”, where *slot* is the slot number, *mda* is the MDA number and *port* is the port number. To shut down ports 1 through 10 on Slot 1 and MDA 1, the command is entered as follows:

```
configure port 1/1/[1..10] shutdown
```

<Ctrl-C> can be used to abort the execution of a range command.

Specifying a range in the CLI does have limitations. These limitations are summarized in [Table 8](#).

Table 8: CLI Range Use Limitations

Limitation	Description
Only a single range can be specified.	It is not possible to shut down ports 1 through 10 on MDA 1 and MDA 2, as the command would look like <pre>configure port 1/[1..2]/[1..10]</pre> and requires two ranges in the command, [1..2] for the MDA and [1..10] for the port number.
Ranges within quotation marks are interpreted literally.	In the CLI, enclosing a string in quotation marks (“string”) causes the string to be treated literally and as a single parameter. For example, several commands in the CLI allow the configuration of a descriptive string. If the string is more than one word and includes spaces, it must be enclosed in quotation marks. A range that is enclosed in quotes is also treated literally. For example, <pre>configure router interface "A[1..10]" no shutdown</pre> creates a single router interface with the name “A[1..10]”. However, a command such as: <pre>configure router interface A[1..10] no shutdown</pre> creates 10 interfaces with names A1, A2 .. A10.

Table 8: CLI Range Use Limitations (Continued)

Limitation	Description
The range cannot cause a change in contexts.	<p>Commands should be formed in such a way that there is no context change upon command completion. For example, <code>configure port 1/1/[1..10]</code> will attempt to change ten different contexts. When a range is specified in the CLI, the commands are executed in a loop. On the first loop execution, the command changes contexts, but the new context is no longer valid for the second iteration of the range loop. A “Bad Command” error is reported and the command aborts.</p>
Command completion may cease to work when entering a range.	<p>After entering a range in a CLI command, command and key completion, which normally occurs by pressing the <Tab> or spacebar, may cease to work. If the command line entered is correct and unambiguous, the command works properly; otherwise, an error is returned.</p>

Pipe/Match

The 7710 SR OS supports the pipe feature to search one or more files for a given character string or pattern.

Note: When using the pipe/match command the variables and attributes must be spelled correctly. The attributes following the command and must come before the expression/pattern. The following displays examples of the pipe/match command to complete different tasks:

- Task: Capture all the lines that include “echo” and redirect the output to a file on the compact flash:
admin display-config | match “echo” > cf3cf1:\echo_list.txt
- Task: Display all the lines that do not include “echo”:
admin display-config | match invert-match “echo”
- Task: Display the first match of “vpls” in the configuration file:
admin display-config | match max-count 1 “vpls”
- Task: Display everything in the configuration after finding the first instance of “interface”:
admin display-config | match post-lines 999999 interface

Command syntax:

match *pattern* **context** { **parents** | **children** | **all** } [**ignore-case**] [**max-count** *lines-count*] [**expression**]

match *pattern* [**ignore-case**] [**invert-match**] [**pre-lines** *pre-lines*] [**post-lines** *lines-count*] [**max-count** *lines-count*] [**expression**]

where:

pattern	string or regular expression
context	keyword: display context associated with the matching line
parents	keyword: display parent context information
children	keyword: display child context information
all	keyword: display both parent and child context information
ignore-case	keyword
max-count	keyword: display only a specific number of instances of matching lines
lines-count	1 – 2147483647
expression	keyword: pattern is interpreted as a regular expression
invert-match	keyword
pre-lines	keyword: display some lines prior to the matching line
pre-lines	0 – 100
post-lines	keyword: display some lines after the matching line
lines-count	1 – 2147483647

For example:

```
A:Dut-C# show log log-id 98 | match ignore-case "sdp bind"
"Status of SDP Bind 101:1002 in service 1001 (customer 1) changed to admin=up oper=up
flags="
"Processing of a SDP state change event is finished and the status of all affected SDP
Bindings on SDP 101 has been updated."
```

```
A:Dut-C# show log log-id 98 | match max-count 1 "service 1001"
"Status of service 1001 (customer 1) changed to administrative state: up, operational
state: up"
```

```
A:Dut-C# admin display-config | match post-lines 5 max-count 2 expression "OSPF.*Config"
echo "OSPFv2 Configuration"
```

```
#-----
    ospf
      timers
        spf-wait 1000 1000 1000
      exit
```

```
echo "OSPFv2 (Inst: 1) Configuration"
```

```
#-----
    ospf 1
      asbr
        router-id 1.0.0.1
        export "testall"
```

```
*A:Dut# admin display-config | match debug_mirror
profile "debug_mirror"
```

```
*A:Dut# admin display-config | match context parent debug_mirror
```

```
#-----
    system
      security
        profile "debug_mirror"
```

```
*A:Dut# admin display-config | match context all debug_mirror
```

```
#-----
    system
      security
        profile "debug_mirror"
        default-action deny-all
        entry 10
        exit
```

```
*A:Dut# show log event-control | match ignore-case pre-lines 10 SyncStatus
```

```
L 2016 tmnxLogOnlyEventThrottled      MA gen      0      0
MCPATH:
  2001 tmnxMcPathSrcGrpBlkHole        MI gen      0      0
  2002 tmnxMcPathSrcGrpBlkHoleClear   MI gen      0      0
  2003 tmnxMcPathAvailBwLimitReached  MI gen      0      0
  2004 tmnxMcPathAvailBwValWithinRange MI gen      0      0
MC_REDUNDANCY:
  2001 tmnxMcRedundancyPeerStateChanged WA gen      0      0
  2002 tmnxMcRedundancyMismatchDetected WA gen      0      0
```

```
2003 tmnxMcRedundancyMismatchResolved WA gen 0 0
2004 tmnxMcPeerSyncStatusChanged WA gen 0 0
```

Table 9 describes regular expression symbols and interpretation (similar to what is used for route policy regexp matching). **Table 10** describes special characters.

Table 9: Regular Expression Symbols

String	Description
.	Matches any single character.
[]	Matches a single character that is contained within the brackets. [abc] matches “a”, “b”, or “c”. [a-z] matches any lowercase letter. [A-Z] matches any uppercase letter. [0-9] matches any number.
[^]	Matches a single character that is not contained within the brackets. [^abc] matches any character other than “a”, “b”, or “c”. [^a-z] matches any single character that is not a lowercase letter.
^	Matches the start of the line (or any line, when applied in multiline mode)
\$	Matches the end of the line (or any line, when applied in multiline mode)
()	Define a “marked subexpression”. Every matched instance will be available to the next command as a variable.
*	A single character expression followed by “*” matches zero or more copies of the expression.
{m, n}	Matches least m and at most n repetitions of the term
{m}	Matches exactly m repetitions of the term
{m, }	Matches m or more repetitions of the term
?	The preceding item is optional and matched at most once.
+	The preceding item is matched one or more times.
-	Used between start and end of a range.
\	An escape character to indicate that the following character is a match criteria and not a grouping delimiter.
>	Redirect output

Table 10: Special Characters

Options	Similar to	Description
<code>[:upper:]</code>	<code>[A-Z]</code>	uppercase letters
<code>[:lower:]</code>	<code>[a-z]</code>	lowercase letters
<code>[:alpha:]</code>	<code>[A-Za-z]</code>	upper- and lowercase letters
<code>\w</code>	<code>[A-Za-z_]</code>	word characters
<code>[:alnum:]</code>	<code>[A-Za-z0-9]</code>	digits, upper- and lowercase letters
<code>[:digit:]</code>	<code>[0-9]</code>	digits
<code>\d</code>	<code>[0-9]</code>	digits
<code>[:xdigit:]</code>	<code>[0-9A-Fa-f]</code>	hexadecimal digits
<code>[:punct:]</code>	<code>[.,!?:...]</code>	punctuation
<code>[:blank:]</code>	<code>[\t]</code>	space and TAB
<code>[:space:]</code>	<code>[\t\n\r\f\v]</code>	blank characters
<code>\s</code>	<code>[\t\n\r\f\v]</code>	blank characters

Redirection

The 7710 SR OS supports redirection (“>”) which allows the operator to store the output of a CLI command as a local or remote file. Redirection of output can be used to automatically store results of commands in files (both local and remote).

```
'ping <customer_ip> > cf3cf1:/ping/result.txt'  
'ping <customer_ip> > ftp://ron@ftp.alcatel.com/ping/result.txt'
```

In some cases only part of the output might be applicable. The pipe/match and redirection commands can be combined:

```
ping 10.0.0.1 | match expression "time.\d+" > cf3cf1:/ping/time.txt
```

This records only the RTT portion (including the word “time”).

VI Editor

Note that “vi”ual editor (vi) is a file editor that can edit any ASCII file. This includes configuration, exec files, BOF and any other ASCII file on the system.

VT100 terminal mode is supported. However, if a different terminal mode is configured there will no noticeable negative effect.

When a configuration file is changed, a validation check is executed to see if the user is allowed to view or perform configuration changes. When a user is modifying the configuration file using the vi editor these checks do not occur. Because of this, the vi editor is only available to a user with administrator privileges. Should others require access to the vi editor, their profile must be modified allow the access. Access permission for the file directory where the file resides must be performed before a user can opens, read, or write a file processing command. If a user does not have permission to access the directory then the operation must be denied.

When opening a file, a resource check verifies that sufficient resources are available to process that file. If there are not enough resources, then the operation is denied and the operator is informed of that event.

Multiple sessions are allowed and are limited only by the memory resources available on the node.

Summary of vi Commands

The vi editor operates in two modes:

- Command mode — This mode causes actions to be taken on the file.
In the this mode, each character entered is a command that does something to the text file being edited; a character typed in the command mode may even cause the vi editor to enter the insert mode.
- Insert mode — Entered text is inserted into the file.
In the insert mode, every character typed is added to the text in the file. Hitting the Esc (Escape) key turns off the insert mode.

Using the vi Commands

Use the following commands to start and end `vi` edit sessions, move around in a file, enter new text, modify, move, and delete old text, as well as read from and write to files other files. Although there are numerous `vi` commands, only a few are usually sufficient to `vi` users. The following tables list `vi` commands.

- [Cutting and Pasting/Deleting Text in vi on page 46](#)
- [Inserting New Text on page 47](#)
- [Moving the Cursor Within the File on page 47](#)
- [Moving the Cursor Around the Screen on page 49](#)
- [Replacing Text on page 49](#)
- [Searching for Text or Characters on page 50](#)
- [Manipulating Character/Line Formatting on page 51](#)
- [Saving and Quitting on page 51](#)
- [Miscellaneous on page 51](#)

Table 11: Cutting and Pasting/Deleting Text in vi

vi Command	Description
"	Specify a buffer to be used any of the commands using buffers. Follow the " character with a letter or a number, which corresponds to a buffer.
d	Deletes text. "dd" deletes the current line. A count deletes that many lines. Whatever is deleted is placed into the buffer specified with the " command. If no buffer is specified, then the general buffer is used.
D	Delete to the end of the line from the current cursor position.
p	Paste the specified buffer after the current cursor position or line. If no buffer is specified (with the " command.) then 'p' uses the general buffer.
P	Paste the specified buffer before the current cursor position or line. If no buffer is specified (with the " command.) then P uses the general buffer.
x	Delete character under the cursor. A count tells how many characters to delete. The characters will be deleted after the cursor.
X	Delete the character before the cursor.
y	Yank text, putting the result into a buffer. yy yanks the current line. Entering a number yanks that many lines. The buffer can be specified with the " command. If no buffer is specified, then the general buffer is used.

Table 11: Cutting and Pasting/Deleting Text in vi (Continued)

vi Command	Description
Y	Yank the current line into the specified buffer. If no buffer is specified, then the general buffer is used.

Table 12: Inserting New Text

vi Command	Description
A	Append at the end of the current line.
I	Insert from the beginning of a line.
O	Enter insert mode in a new line above the current cursor position.
a	Enter insert mode, the characters typed in will be inserted after the current cursor position. A count inserts all the text that was inserted that many times.
i	Enter insert mode, the characters typed in will be inserted before the current cursor position. A count inserts all the text that was inserted that many times.
o	Enter insert mode in a new line below the current cursor position.

Table 13: Moving the Cursor Within the File

vi Command	Description
^B	Scroll backwards one page. A count scrolls that many pages.
^D	Scroll forwards half a window. A count scrolls that many lines.
^F	Scroll forwards one page. A count scrolls that many pages.
^H	Move the cursor one space to the left. A count moves that many spaces.
^J	Move the cursor down one line in the same column. A count moves that many lines down.
^M	Move to the first character on the next line.
^N	Move the cursor down one line in the same column. A count moves that many lines down.
^P	Move the cursor up one line in the same column. A count moves that many lines up.
^U	Scroll backwards half a window. A count scrolls that many lines.

Table 13: Moving the Cursor Within the File

vi Command	Description
\$	Move the cursor to the end of the current line. A count moves to the end of the following lines.
%	Move the cursor to the matching parenthesis or brace.
^	Move the cursor to the first non-whitespace character.
(Move the cursor to the beginning of a sentence.
)	Move the cursor to the beginning of the next sentence.
{	Move the cursor to the preceding paragraph.
}	Move the cursor to the next paragraph.
	Move the cursor to the column specified by the count.
+	Move the cursor to the first non-whitespace character in the next line.
-	Move the cursor to the first non-whitespace character in the previous line.
_	Move the cursor to the first non-whitespace character in the current line.
0	Move the cursor to the first column of the current line.
B	Move the cursor back one word, skipping over punctuation.
E	Move forward to the end of a word, skipping over punctuation.
G	Go to the line number specified as the count. If no count is given, then go to the end of the file.
H	Move the cursor to the first non-whitespace character on the top of the screen.
L	Move the cursor to the first non-whitespace character on the bottom of the screen.
M	Move the cursor to the first non-whitespace character on the middle of the screen.
W	Move forward to the beginning of a word, skipping over punctuation.
b	Move the cursor back one word. If the cursor is in the middle of a word, move the cursor to the first character of that word.
e	Move the cursor forward one word. If the cursor is in the middle of a word, move the cursor to the last character of that word.
h	Move the cursor to the left one character position.

Table 13: Moving the Cursor Within the File

vi Command	Description
j	Move the cursor down one line.
k	Move the cursor up one line.
l	Move the cursor to the right one character position.
w	Move the cursor forward one word. If the cursor is in the middle of a word, move the cursor to the first character of the next word.

Table 14: Moving the Cursor Around the Screen

vi Command	Description
^E	Scroll forwards one line. A count scrolls that many lines.
^Y	Scroll backwards one line. A count scrolls that many lines.
z	Redraw the screen with the following options. z<return> puts the current line on the top of the screen; z. puts the current line on the center of the screen; and z- puts the current line on the bottom of the screen. If you specify a count before the z command, it changes the current line to the line specified. For example, 16z. puts line 16 on the center of the screen.

Table 15: Replacing Text

vi Command	Description
C	Change to the end of the line from the current cursor position.
R	Replace characters on the screen with a set of characters entered, ending with the Escape key.
S	Change an entire line.
c	Change until cc changes the current line. A count changes that many lines.
r	Replace one character under the cursor. Specify a count to replace a number of characters.
s	Substitute one character under the cursor, and go into insert mode. Specify a count to substitute a number of characters. A dollar sign (\$) will be put at the last character to be substituted.

Table 16: Searching for Text or Characters

vi Command	Description
,	Repeat the last f, F, t or T command in the reverse direction.
/	Search the file downwards for the string specified after the /.
;	Repeat the last f, F, t or T command.
?	Search the file upwards for the string specified after the ?.
F	Search the current line backwards for the character specified after the 'F' command. If found, move the cursor to the position.
N	Repeat the last search given by / or ?, except in the reverse direction.
T	Search the current line backwards for the character specified after the T command, and move to the column after the if it's found.
f	Search the current line for the character specified after the f command. If found, move the cursor to the position.
n	Repeat last search given by / or ?.
t	Search the current line for the character specified after the t command, and move to the column before the character if it's found.

Table 17: Manipulating Character/Line Formatting

vi Command	Description
~	Switch the case of the character under the cursor.
<	Shift the lines up to where to the left by one shiftwidth. << shifts the current line to the left, and can be specified with a count.
>	Shift the lines up to where to the right by one shiftwidth. >> shifts the current line to the right, and can be specified with a count.
J	Join the current line with the next one. A count joins that many lines.

Table 18: Saving and Quitting

vi Command	Description
ZZ	Exit the editor, saving if any changes were made.

Table 19: Miscellaneous

vi Command	Description
^G	Show the current filename and the status.
^L	Clear and redraw the screen.
^R	Redraw the screen removing false lines.
^[Escape key. Cancels partially formed command.
^^	Go back to the last file edited.
!	Execute a shell. Not supported
&	Repeat the previous :s command.
.	Repeat the last command that modified the file.
:	Begin typing an EX editor command. The command is executed once the user types return.
@	Type the command stored in the specified buffer.
U	Restore the current line to the previous state before the cursor entered the line.
m	Mark the current position with the character specified after the 'm' command.
u	Undo the last change to the file. Typing 'u' again will re-do the change.

EX Commands

The `vi` editor is built upon another editor, called EX. The EX editor only edits by line. From the `vi` editor you use the `:` command to start entering an EX command. This list given here is not complete, but the commands given are the more commonly used. If more than one line is to be modified by certain commands (such as `:s` and `:w`) the range must be specified before the command. For example, to substitute lines 3 through 15, the command is `:3,15s/from/this/g`.

Table 20: EX commands

vi Command	Description
<code>:ab string strings</code>	Abbreviation. If a word is typed in <code>vi</code> corresponding to <code>string1</code> , the editor automatically inserts the corresponding words. For example, the abbreviation <code>:ab usa United States of America</code> would insert the words, <code>United States of America</code> whenever the word <code>usa</code> is typed in.
<code>:map keys new_seq</code>	Mapping. This lets you map a key or a sequence of keys to another key or a sequence of keys.
<code>:q</code>	Quit <code>vi</code> . If there have been changes made, the editor will issue a warning message.
<code>:q!</code>	Quit <code>vi</code> without saving changes.
<code>:s/pattern/ to_pattern/ options</code>	Substitute. This substitutes the specified pattern with the string in the <code>to_pattern</code> . Without options, it only substitutes the first occurrence of the pattern. If a 'g' is specified, then all occurrences are substituted. For example, the command <code>:1,\$s/Alcatel/Alcatel-Lucent/g</code> substitutes all occurrences of <code>Alcatel</code> to <code>Alcatel-Lucent</code> .
<code>:set [all]</code>	Sets some customizing options to <code>vi</code> and EX. The <code>:set all</code> command gives all the possible options.
<code>:una string</code>	Removes the abbreviation previously defined by <code>:ab</code> .
<code>:unm keys</code>	Removes the remove mapping defined by <code>:map</code> .
<code>:vi filename</code>	Starts editing a new file. If changes have not been saved, the editor will give you a warning.
<code>:w</code>	Write out the current file.
<code>:w filename</code>	Write the buffer to the filename specified.
<code>:w >> filename</code>	Append the contents of the buffer to the filename.
<code>:wq</code>	Write the buffer and quit.

Configuration Rollback

The Configuration Rollback feature provides the ability to “undo” configuration and reverts back to previous router configuration states while minimizing impacts to services.

This feature gives the operator better control and visibility over the router configurations and reduces operational risk while increasing flexibility and providing powerful recovery options.

Configuration Rollback is useful in cases where configuration changes are made but the operator later decides to not keep the changes (for example, experimentation or when problems are identified in the configuration during actual network operation).

The advantage of this feature are the following:

- Changes made to router configuration is performed with minimal impact on services being provided by the SR by not having to reboot the router.
- No impact in areas of configuration that did not change.

With this rollback feature, the operator can smoothly revert to previous configurations.

Configuration parameters that changed (or items that changed configuration have dependencies on) are first removed (revert to default), and the previous values are then restored (can be briefly service impacting in changed areas).

A history of changes is preserved (checkpoint ids) that allows rollback to different points, as well as examination of changes made as shown in [Figure 3](#).

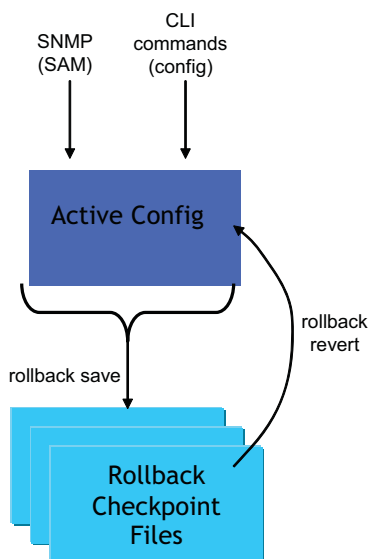


Figure 3: Rollback Operation

Feature Behavior

The following list describes detailed behavior and CLI usage of the rollback feature:

- The user can create a rollback checkpoint, and later, revert to this checkpoint with minimal impacts to services:

```
admin>rollback# save [comment <comment-string>]
comment-string: an 255 char comment associated with the checkpoint
```

- Rollback checkpoints include all current operationally active configuration:
 - Changes from direct CLI commands in the configuration branch.
 - SNMP sets
- Rollback checkpoints do not include bof configuration. The BOF file (and bof config) is not part of a rollback-save or rollback. A rollback does not change any of the bof configuration. The BOF contains basic information for the node and does not change frequently (mostly during initial commissioning of the node).
- A rollback save feature can be automatically executed (scheduled, for example, monthly) using the cron facility of SR-OS.
- The latest rollback checkpoint file uses a suffix of “.rb”. The next latest rollback checkpoint file has a suffix of “.rb.1”, the next oldest has a suffix of “.rb.2” etc:

```
file-url.rb <--- latest rollback file
file-url.rb.1
...
file-url.rb.9 <--- oldest rollback file
```

- When a **rollback save [no “-”]** is executed, the system shifts the file suffix of all the previous checkpoints by 1 (new id = old id + 1). If there are already as many checkpoint files as the maximum number supported then the last checkpoint file is deleted.
 - The maximum number of rollback checkpoints is configurable and defaults to 10 (“latest” and 1 through 9, where checkpoint file 9 is deleted during the next rollback-save).
 - The location and name of the rollback checkpoint files is configurable to be local (on compact flash) or remote. The *file-url* must not contain a suffix (just a path/directory + filename). The suffix for rollback checkpoint files is “.rb” and is automatically appended to rollback checkpoint files.
- ```
config>system>rollback# rollback-location <file-url>
```
- There is no default rollback-location. If one is not specified (or it is cleared using “no rollback-location”) and a rollback save is attempted, the rollback save will fail and return an error message.
  - The entire set of rollback checkpoint files can be copied from the active CPM CF to the inactive CPM CF. This synchronization is done via the following command:

```
admin>redundancy# rollback-sync
```

- The operator can enable automatic synchronization of rollback checkpoint files between the active CPM and inactive CPM. When this automatic synchronization is enabled, a rollback save will cause the new checkpoint file to be saved to both the active and standby. The suffixes of the old checkpoint files on both active and standby CPMs are incremented.

**Note:** The automatic sync only causes the ONE new checkpoint file to be copied to both CFs (the other 9 checkpoints are not automatically copied from active to standby but that can be done manually with `admin red rollback-sync`).


```
config>redundancy# [no] rollback-sync
```

- “**config red sync** {boot-env|config}” and “**admin red sync** {boot-env|config}” do not apply to rollback checkpoint files. These commands do not manually or automatically sync rollback checkpoint files. The dedicated `rollback-sync` commands must be used to sync rollback checkpoint files.
- Rollback files can be deleted using a dedicated rollback checkpoint deletion command.

```
admin>rollback# delete {latest-rb|<checkpoint-id>}
```

- Deleting a rollback checkpoint causes the suffixes to be adjusted (decremented) for all checkpoints older than the one that was deleted (to close the “hole” in the list of checkpoint files and create room to create another checkpoint)
- If “`config redundancy rollback-sync`” is enabled, a rollback delete will also delete the equivalent checkpoint on the standby CF and shuffle the suffixes on the standby CF.
- If an operator manually deletes a rollback checkpoint file (using `file delete`) then the suffixes of the checkpoint files are NOT shuffled, nor is the equivalent checkpoint file deleted from the standby CF. This manual deletion creates a “hole” in the checkpoint file list until enough new checkpoints have been created to roll the “hole” off the end of the list.
- As shown in [Figure 4](#), support for rolling back to a previous configuration (a saved rollback checkpoint) with minimal impact on services. The previous configuration will be loaded and take operational effect:

```
admin>rollback# revert [latest-rb|<checkpoint-id>]
```

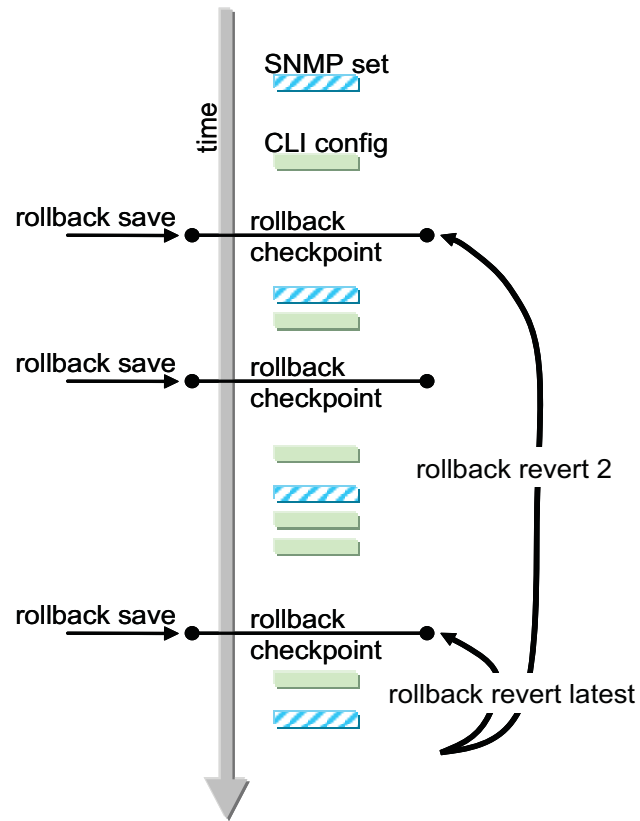

**Figure 4: Configuration Rollback**

- A rollback revert does not affect the currently stored rollback checkpoint files (no deletions or renumbering). This means that if an operator issues a “rollback revert 3” and then issues a “rollback-save”. The resulting rollback checkpoint files “file-url.rb” and “file-url.rb.4” will contain the same rollback state/configuration.
- The **boot-good-exec** or **bad-exec** are not automatically executed after a rollback.



- impacts to the running services are minimized during a rollback:
  - no impact in areas of configuration that did not change
  - configuration parameters that changed (or items that changed config have dependencies on) are first removed (revert to default) and the previous values are then restored (can be briefly service impacting in changed areas). Some examples are the following:
    - If the currently active config contains “configure port 5/1/1 dwdm tdc dispersion -1000” and the rollback checkpoint contains “configure port 5/1/1 dwdm tdc dispersion -1010”, then the operational dispersion will transition from -1000, to 0 and then back to -1010 for port 5/1/1 which will cause a traffic interruption.
    - Changing the neighbor of a MC-APS port will start with neighbor 1, then be configured as no neighbor, and then will be configured with neighbor 2. Moving through the ‘no neighbor’ intermediate state requires the working and protect circuits to be torn down and then rebuilt.
- A rollback will undo any SNMP sets or direct CLI config commands that occurred since the last checkpoint creation.
- During the period when an SR-OS node is processing a rollback revert, both CLI commands (from other users) and SNMP commands will continue to be processed. The only commands that are blocked during a rollback revert are other rollback commands including revert, save, and compare (only one rollback command can be executing at a time in one node).
- Commands are available to view and compare the various rollback checkpoints to current operating and candidate configurations.
- Rollback checkpoint files are not guaranteed to be in any particular format. They are not interchangeable with normal config files or exec scripts. A normal config file (from an admin save) cannot be renamed as a rollback checkpoint and then referenced for a rollback revert operation. Only rollback checkpoint files generated with rollback save can be used to rollback revert.
- If a hardware change is made after a rollback-save then:
  - a rollback can be executed as long as the hardware change was an addition of hardware to the node (for example, added a new IOM into a previously empty slot).
  - a rollback is not guaranteed to work if hardware was removed or changed (for example, IOM was removed, or MDA was swapped for a different MDA type).
- Rollback across a change to the following parameters is not supported:
  - chassis-mode
  - mixed-mode
  - the sr|ess capability of a card ('configure card capability sr|ess')

- Rollback is supported even after an admin reboot is performed (or changes the primary config in the bof is changed and an admin reboot is performed). Admin reboot does not “break the chain” for rollback.
- Lawful Intercept configuration under the **config>li** branch is not affected by a rollback or rescue. LI configuration is not saved in the rollback checkpoint or rescue file, and a rollback revert does not touch any config under the config>li branch.
- Any configuration or state change performed under the debug branch of CLI is not saved in the rollback checkpoint file nor impacted by a rollback.
- Rollbacks to a checkpoint created in a more recent release is not supported (for example, node running in 9.0r5 can not rollback to a checkpoint created in 9.0r7).
- The following list captures some side effects and specific behaviors of a Rollback revert. Some of these side effects are not related purely to configuration (that is, in the CLI config branch) and may have interactions with tools commands, RADIUS, etc.
  - SAA jobs that are running when a rollback revert is initiated, and need configuration changes due to the rollback, will be stopped. If the SAA job is a continuous type then it will be re-started as part of the rollback revert after the config changes have been applied (just as if the operator had typed “no shutdown” for the continuous SAA job). Non-continuous SAA jobs that were modified by the rollback would need to be manually restarted if they need to be run again.
  - If **max-nbr-mac-addr** is reduced as part of the revert and the number of mac addresses in the forwarding database is greater than the max-nbr-mac-addr, then the rollback is aborted (before any actions are taken) and an informative error message is provided. The operator must take actions to remove the mac addresses if they wish to proceed with the rollback.
  - If active subscribers and/or subscriber hosts and/or DHCP lease state are present in the system then some associated configuration changes may be blocked (just as those same changes would be blocked if an operator tried to make them via CLI – e.g. trying to delete an sla-profile being used by active subscriber hosts, or trying to change a nat-policy in a sub-profile). If certain configuration changes associated with the hosts or lease states are required as part of the rollback but those changes are blocked, then for each blocked configuration item a warning will be printed, that particular configuration item will not be changed and the rollback will continue.
  - If a **force-switchover** command (for example, tools perform service id 1 endpoint "x" force-switchover spoke-sdp-fec 1) has been applied to a spoke-sdp-fec of a dynamic multi-segment pseudo wire, and a rollback revert needs to change the admin state of the spoke-sdp-fec (for example, to modify spoke-sdp-fec parameters that may be

dependant on admin state), then the rollback revert will automatically remove the force-switchover and the node will revert to whatever is the best spoke-sdp in the redundant set.

- Configuration changes that require a **shutdown** command and then **no-shutdown** command to be done by an operator in order to take operational effect also need this manual shut/no-shut to be performed by the operator in order to take operational effect after a rollback if the rollback changes those configuration items. Some examples include:
  - changes to Autonomous System or Confederation value require a BGP shut/no-shut
  - changes to VPRN Max-routes requires a shut/no-shut on the VPRN service
  - changes to OSPF/ISIS export-limit require a shut/no-shut on OSPF/ISIS.
- Any uncommitted changes (that is, the **begin** command was entered, some changes made, but the **commit** command was never entered) in the following areas will be lost/cleared when a rollback revert is initiated:
  - configure>application-assurance>group policy
  - configure>router>policy-options
  - configure>system>sync-if-timing
- Some **card** and **mda** commands require a reboot, remove or rebuild of an entire card or MDA. When these commands need to be executed as part of a rollback, the impacted cards/mdas will be listed in a warning and the operator will be prompted with a single y/n prompt to decide whether to proceed or not. This prompting will not occur for a rollback initiated via SNMP, nor if the operator uses the ‘now’ keyword with the rollback revert command. Some examples of card and mda commands that may cause a prompt are:
  - configure>card>card-type
  - configure>card>named-pool-mode
  - configure>card>mda
  - configure>card>mda>mda-type
- Although the use of the Control-C key combination is not recommended during a rollback revert, it is supported (via CLI or SNMP). Interrupting a rollback revert may leave the router in a state that is not necessarily something between the old active config and the rollback checkpoint since the rollback processing may have been in the middle of tearing things down or rebuilding configurations. A strong warning is issued in this case to indicate that the operator must examine the config and potentially issue another rollback revert to return to a known (and coherent) configuration.
- An HA CPM switchover during a rollback revert will cause the rollback operation to abort. The newly active CPM will have an indeterminate configuration. When an HA switchover occurs during a rollback (or within a few seconds of a rollback completing), the operator is advised to repeat the rollback revert operation to the same checkpoint.

## MIB Requirements

The [Table 21](#) lists events and traps that are supported for 9.0r4 release:

**Table 21: Supported Events and Traps**

| Event/Traps                     | Description                     |
|---------------------------------|---------------------------------|
| tmnxSysRollbackStarted          | A rollback revert was initiated |
| tmnxSysRollbackStatusChange     | A rollback revert has finished  |
| tmnxSysRollbackSaveStatusChange | A rollback save has finished    |

The following operations are supported via SNMP:

- initiate a rollback save
- initiate a rollback revert <latest-b | *checkpoint-id*>
- configure the rollback save locations
- obtain rollback save status
- obtain rollback revert status
- configure rollback-sync and do an admin red rollback-sync
- read the list of rollback files (like in show system rollback)

Additional notes on interactions between the 7x50 and SAM:

- When the node is doing a rollback revert, SAM will see a tmnxSysRollbackStarted trap, then a rapid set of “config change” traps, and then finally, the tmnxSysRollbackStatusChange trap.
- During the period when an SR-OS node is processing a rollback revert, both CLI commands (from other users) and SNMP commands will continue to be processed.

## Rescue Configuration

A special rescue configuration checkpoint can be created that an operator can rollback revert to at any time. The rescue configuration has its own keyword (“rescue”) and does not use the same rolling suffix indices as the normal rollback checkpoints. This allows the operator to easily return to the rescue configuration state without having to consider a checkpoint index, and ensures that the rescue checkpoint is always available (doesn’t roll off the bottom of the list of checkpoints).

The operator should define a basic rescue configuration that is known to work and give correct management access to the node.

The location and filename of the rescue file are configurable. SR-OS appends an “.rc” suffix to the specified rescue filename.

## Operational Guidelines

The following points offer some operational guidance on the usage of rollback.

- Both “admin save” and “rollback save” should be done periodically:
- “admin save” to backup a complete config file that can be used during router reboot.
  - Used with a reboot as a last resort.
  - Do an admin save after any major h/w changes or major service changes.
  - should be done after any s/w upgrade.
- “rollback-save” to create a rollback checkpoint.
  - used for intermediate checkpoints that can be recovered with minimal impacts to services.
  - should be done each time that a moderate amount configuration changes have been made.
  - should be done after any h/w changes.
  - should be done after any s/w upgrade.
  - could also be scheduled with cron (for example, once every 1 or 2 weeks).
- A new rescue-save must be created when h/w is changed.
- Rollback-checkpoint files are not editable nor compatible/interchangeable with config files (generated with “admin save”).
- Don’t just keep doing rollback save, rollback save, rollback save over the course of weeks/months without also doing an occasional admin save. If you really get into a bad situation you may have to use one of your admin save configs as the primary config for an admin reboot.
- Software Upgrade: It is recommended to create a Rollback Checkpoint (admin rollback save), in addition to saving the configuration (admin save), after an upgrade has been performed and the system is operating as expected. This will ensure a good checkpoint fully compatible with the new release is available at a point shortly after the upgrade.
- An operator could create a set of rollback checkpoints to support busy/quiet days or weekend/weekday and use cron to shift between them.
- It may be a good idea to create a rollback checkpoint before a rollback revert is initiated (especially if there have been significant config changes since the last checkpoint was created). If the rollback is especially significant (a lot of major changes) it is also a good practice to do an “admin save” just in case a full reboot is required to recover from an issue.
- A rollback failure may occur in some limited cases where the node needs a long time to complete one of the resulting configuration changes. Some examples include X and Y. If a rollback (for example, rollback revert 5) fails during execution, it should be attempted

again. The second attempt will typically complete the remaining configuration changes required to fully revert to the desired checkpoint.

- When a new backup CPM is commissioned, the user should do an “admin redundancy rollback-sync” to copy the entire set of rollback files from the active CPM cf to the new standby CPM cf. If the operator wants the system to automatically copy new rollback checkpoints to both cfs whenever a new checkpoint is created, then the “config redundancy rollback-sync” should be configured.
- An HA CPM switchover during a rollback revert will cause the rollback operation to abort. The newly active CPM will have an indeterminate configuration. A log event is created in this case to warn the operator. When an HA switchover occurs during a rollback (or within a few seconds of a rollback completing), the operator is advised to repeat the rollback revert operation to the same checkpoint.
- A rollback checkpoint stores the rollback-location and the local/remote-max-checkpoint values, and as such a rollback revert operation can change those values. If an operator changes the local/remote-max-checkpoint values it is recommended to delete all the existing checkpoints (otherwise a subsequent rollback revert could change the max back to a previous value).
- If a warning prompt (y/n) is displayed when a rollback revert is initiated, it is highly suggested to respond ‘no’ to the warning prompt the first time, save a rollback checkpoint before attempting this rollback revert, and then executing the revert again and responding ‘yes’. If the rollback encounters problems then a revert to the saved checkpoint can be used to go back to the initial configuration state.





---

# Basic Command Reference

---

## Command Hierarchies

- [Basic CLI Commands](#)
- [Environment Commands](#)
- [Monitor Commands](#)

### Basic CLI Commands

- **back**
- **clear**
- **echo** [*text-to-echo*] [*extra-text-to-echo*] [*more-text*]
- **enable-admin**
- **exec** [-echo] [-syntax] *filename*
- **exit** [all]
- **help**
- **history**
- **info** [detail]
- **logout**
- **mrinfo** [*ip-address / dns-name*] [**router** *router-instance*]
- **mstat source** [*ip-address / dns-name*] [**group** *grp-ip-address*] [**destination** *dst-ip-address*] [**hop** *hop*] [**router** *router-instance*] [**wait-time** *wait-time*]
- **mtrace source** [*ip-address / dns-name*] [**group** *grp-ip-address*] [**destination** *dst-ip-address*] [**hop** *hop*] [**router** *router-instance*] [**wait-time** *wait-time*]
- **password**
- **ping** {*ip-address | dns-name*} [**rapid** | **detail**] [**ttl** *time-to-live*] [**tos** *type-of-service*] [**size** *bytes*] [**pattern** *pattern*] [**source** *ip-address*] [**interval** *seconds*] [{**next-hop** *ip-address*} | {**interface** *interface-name*} | **bypass-routing**] [**count** *requests*] [**do-not-fragment**] [**router** [*router-instance*]][**timeout** *time-out*]
- **pwc** [previous]
- **sleep** [seconds]
- **ssh** [*ip-addr | dns-name / username@ip-addr*] [-l *username*] [-v *SSH-version*] [**router** *router-instance / service-name* *service-name*]
- **telnet** [*ip-address | dns-name*] [*port*] [**router** *router-instance*]
- **traceroute** {*ip-address | dns-name*}[**ttl** *value*] [**wait** *milliseconds*] [**no-dns**] [**source** *ip-address*] [**tos** *type-of-service*]
- **tree** [detail]
- **write** {*user* | **broadcast**} *message-string*

## Monitor Commands

- monitor**
- **entry** *entry-id* [*interval seconds*] [*repeat repeat*] [*absolute | rate*]
  - **filter**
    - **ip** *ip-filter-id* **entry** *entry-id* [*interval seconds*] [*repeat repeat*] [*absolute | rate*]
    - **ipv6** *ipv6-filter-id* **entry** *entry-id* [*interval seconds*] [*repeat repeat*] [*absolute | rate*]
    - **mac** *mac-filter-id* **entry** *entry-id* [*interval seconds*] [*repeat repeat*] [*absolute | rate*]
  - **lag** *lag-id* [*lag-id...*(up to 5 max)] [*interval seconds*] [*repeat repeat*] [*absolute | rate*]
    - **ipv6** **entry** *entry-id* [*interval seconds*] [*repeat repeat*] [*absolute | rate*]
  - **port** *port-id* [*port-id...*(up to 5 max)] [*interval seconds*] [*repeat repeat*] [*absolute | rate*]
  - **port atm** [*interval seconds*] [*repeat repeat*] [*absolute|rate*]
  - **qos**
    - **arbiter-stats**
      - **sap** *sap-id* [*arbiter name | root*] [*ingress | egress*] [*interval seconds*] [*repeat repeat*] [*absolute | rate*]
      - **subscriber** *sub-ident-string* [*arbiter name | root*] [*ingress | egress*] [*interval seconds*] [*repeat repeat*] [*absolute | rate*]
    - **scheduler-stats**
      - **customer** *customer-id* **site** *customer-site-name* [*scheduler scheduler-name*] [*ingress | egress*] [*interval seconds*] [*repeat repeat*] [*absolute | rate*]
      - **sap** *sap-id* [*scheduler scheduler-name*] [*ingress | egress*] [*interval seconds*] [*repeat repeat*] [*absolute | rate*]
      - **subscriber** *sub-ident-string* [*scheduler scheduler-name*] [*ingress | egress*] [*interval seconds*] [*repeat repeat*] [*absolute | rate*]
  - **router** [*router-instance*]
    - **bgp**
      - **neighbor** *ip-address* [*ip-address...*(up to 5 max)] [*interval seconds*] [*repeat repeat*] [*absolute | rate*]
    - **isis**
      - **statistics** [*interval seconds*] [*repeat repeat*] [*absolute | rate*]
    - **ldp**
      - **session** *ldp-id* [*ldp-id...*(up to 5 max)] [*interval seconds*] [*repeat repeat*] [*absolute | rate*]
      - **statistics** [*interval seconds*] [*repeat repeat*] [*absolute | rate*]
    - **mpls**
      - **interface** *interface* [*interface...*(up to 5 max)] [*interval seconds*] [*repeat repeat*] [*absolute | rate*]
      - **lsp-egress-statistics** *lsp-name* [*interval seconds*] [*repeat repeat*] [*absolute | rate*]
      - **lsp-ingress-statistics** *ip-address* **lsp** *lsp-name* [*interval seconds*] [*repeat repeat*] [*absolute | rate*]
    - **ospf** [*ospf-instance*]
    - **ospf3**
      - **interface** *interface* [*interface...*(up to 5 max)] [*interval seconds*] [*repeat repeat*] [*absolute | rate*]
      - **neighbor** *ip-address* [*ip-address...*(up to 5 max)] [*interval seconds*] [*repeat repeat*] [*absolute | rate*]
      - **virtual-link** *nbr-rtr-id* **area** *area-id* [*interval seconds*] [*repeat repeat*] [*absolute | rate*]
      - **virtual-neighbor** *nbr-rtr-id* **area** *area-id* [*interval seconds*] [*repeat repeat*] [*absolute | rate*]
    - **pim**
      - **group** *grp-ip-address* [*source ip-address*] [*interval seconds*] [*repeat repeat*] [*absolute | rate*]

- **rip**
  - **neighbor** *neighbor* [*neighbor...*(up to 5 max)] [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]
- **rsvp**
  - **interface** *interface* [*interface...*(up to 5 max)] [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]
- **vrrp**
  - **instance** **interface** *interface-name* **vr-id** *virtual-router-id* [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]
- **service**
  - **id** *service-id*
    - **sap** *sap-id* [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]
    - **sdp** *sdp-id* [**far-end**] *ip-address* [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]
  - **subscriber** *sub-ident-string* **sap** *sap-id* **sla-profile** *sla-profile-name* [**base** | **ingress-queue-id** *ingress-queue-id* | **egress-queue-id** *egress-queue-id*] [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]

## Environment Commands

- <root>
- **environment**
  - **alias** *alias-name alias-command-name*
  - **no alias** *alias-name*
  - **[no] create**
  - **[no] more**
  - **reduced-prompt** [*no. of nodes in prompt*]
  - **no reduced-prompt**
  - **[no] saved-ind-prompt**
  - **terminal**
    - **length** *lines*
    - **width** *width*
  - **time-display** {**local** | **utc**}

---

## Basic CLI Commands

---

### Global Commands

#### enable-admin

**Syntax**    **enable-admin**

**Context**    <global>

**Description**    **NOTE:** See the description for the **admin-password** command. If the **admin-password** is configured in the **config>system>security>password** context, then any user can enter a special administrative mode by entering the **enable-admin** command.

**enable-admin** is in the default profile. By default, all users are given access to this command.

Once the **enable-admin** command is entered, the user is prompted for a password. If the password matches, the user is given unrestricted access to all the commands.

The minimum length of the password is determined by the **minimum-length** command. The complexity requirements for the password is determined by the **complexity** command.

The following displays a password configuration example:

```
A:ALA-1>config>system>security# info

...
 password
 aging 365
 minimum-length 8
 attempts 5 time 5 lockout 20
 admin-password "rUYUz9XM06I" hash
 exit
...

A:ALA-1>config>system>security#
```

## Global Commands

There are two ways to verify that a user is in the enable-admin mode:

- `show users` – Administrator can know which users are in this mode.
- Enter the `enable-admin` command again at the root prompt and an error message will be returned.

```
A:ALA-1# show users
=====
User Type From Login time Idle time
=====
admin Console -- 10AUG2006 13:55:24 0d 19:42:22
admin Telnet 10.20.30.93 09AUG2004 08:35:23 0d 00:00:00 A

Number of users : 2
'A' indicates user is in admin mode
=====
A:ALA-1#
A:ALA-1# enable-admin
MINOR: CLI Already in admin mode.
A:ALA-1#
```

## back

**Syntax** `back`

**Context** <GLOBAL>

**Description** This command moves the context back one level of the command hierarchy. For example, if the current level is the `config router ospf` context, the `back` command moves the cursor to the `config router` context level.

## clear

**Syntax** `clear`

**Context** <GLOBAL>

**Description** This command clears statistics for a specified entity or clears and resets the entity.

**Parameters** `card` — Reinitializes a I/O module in the specified slot.

`cflowd` — Clears cflowd.

`cron` — Clears CRON history.

`filter` — Clears IP, MAC, and log filter counters.

`lag` — Clears LAG-related entities.

`log` — Closes and reinitializes the log specified by log-id.

`mda` — Reinitializes the specified MDA in a particular slot.

`port` — Clears port statistics.

`qos` — Clears QoS statistics.

**radius** — Clears the RADIUS server state.

**router** — Clears router commands affecting the router instance in which they are entered.

**Values** arp, authentication, bgp, bfd, dhcp, dhcp6, forwarding-table, icmp-redirect-route, interface, isis, ldp, mpls, ospf, ospf3, pim, rip, router-advertisement, rsvp

**saa** — Clears the SAA test results.

**screen** — Clears the console or telnet screen.

**service** — Clears service ID and statistical entities.

**system** — Clears (re-enables) a previously failed reference.

**tacplus** — Clears the TACACS+ server state.

**trace** — Clears the trace log.

**vrrp** — Clears and resets the VRRP interface and statistical entities.

## echo

**Syntax** **echo** [*text-to-echo*] [*extra-text-to-echo*] [*more-text*]

**Context** <GLOBAL>

**Description** This command echoes arguments on the command line. The primary use of this command is to allow messages to be displayed to the screen in files executed with the **exec** command.

**Parameters** *text-to-echo* — Specifies a text string to be echoed up to 256 characters.

*extra-text-to-echo* — Specifies more text to be echoed up to 256 characters.

*more-text* — Specifies more text to be echoed up to 256 characters.

## exec

**Syntax** **exec** [-**echo**] [-**syntax**] {*filename* | <<[*eof\_string*]}

**Context** <GLOBAL>

**Description** This command executes the contents of a text file as if they were CLI commands entered at the console. Exec commands do not have **no** versions.

**Parameters** **-echo** — Echo the contents of the **exec** file to the session screen as it executes.

**Default** Echo disabled.

**-syntax** — Perform a syntax check of the file without executing the commands. Syntax checking will be able to find invalid commands and keywords, but it will not be able to validate erroneous user-supplied parameters.

**Default** Execute file commands.

*filename* — The text file with CLI commands to execute.

## Global Commands

<< — Stdin can be used as the source of commands for the exec command. When stdin is used as the exec command input, the command list is terminated with <Ctrl-C>, “EOF<Return>” or “*eof\_string*<Return>”.

If an error occurs entering an exec file sourced from stdin, all commands after the command returning the error will be silently ignored. The exec command will indicate the command error line number when the stdin input is terminated with an end-of-file input.

*eof\_string* — The ASCII printable string used to indicate the end of the exec file when stdin is used as the exec file source. <Ctrl-C> and “EOF” can always be used to terminate an exec file sourced from stdin.

**Default** <Ctrl-C>, EOF

### Related Commands

[boot-bad-exec command on page 343](#) — Use this command to configure a URL for a CLI script to exec following a failed configuration boot.

[boot-good-exec command on page 343](#) — Use this command to configure a URL for a CLI script to exec following a successful configuration boot.

## exit

**Syntax** `exit [all]`

**Context** <GLOBAL>

### Description

This command returns to the context from which the current level was entered. For example, if you navigated to the current level on a context by context basis, then the **exit** command only moves the cursor back one level.

```
A:ALA-1# configure
A:ALA-1>config# router
A:ALA-1>config>router# ospf
A:ALA-1>config>router>ospf# exit
A:ALA-1>config>router# exit
A:ALA-1>config# exit
```

If you navigated to the current level by entering a command string, then the **exit** command returns the cursor to the context in which the command was initially entered.

```
A:ALA-1# configure router ospf
A:ALA-1>config>router>ospf# exit
A:ALA-1#
```

The **exit all** command moves the cursor all the way back to the root level.

```
A:ALA-1# configure
A:ALA-1>config# router
A:ALA-1>config>router# ospf
A:ALA-1>config>router>ospf# exit all
A:ALA-1#
```

### Parameters

**all** — Exits back to the root CLI context.



## help

**Syntax**    **help**  
**help edit**  
**help global**  
**help special-characters**  
 <GLOBAL>

**Description**    This command provides a brief description of the help system. The following information displays:

Help may be requested at any point by hitting a question mark '?'.  
 In case of an executable node, the syntax for that node will be displayed with an explanation of all parameters.  
 In case of sub-commands, a brief description is provided.  
 Global Commands:  
     Help on global commands can be observed by issuing "help globals" at any time.  
 Editing Commands:  
     Help on editing commands can be observed by issuing "help edit" at any time.

**Parameters**    **help** — Displays a brief description of the help system.

**help edit** — Displays help on editing.

Available editing keystrokes:

```
Delete current character.....Ctrl-d
Delete text up to cursor.....Ctrl-u
Delete text after cursor.....Ctrl-k
Move to beginning of line.....Ctrl-a
Move to end of line.....Ctrl-e
Get prior command from history.....Ctrl-p
Get next command from history.....Ctrl-n
Move cursor left.....Ctrl-b
Move cursor right.....Ctrl-f
Move back one word.....Esc-b
Move forward one word.....Esc-f
Convert rest of word to uppercase.....Esc-c
Convert rest of word to lowercase.....Esc-l
Delete remainder of word.....Esc-d
Delete word up to cursor.....Ctrl-w
Transpose current and previous character....Ctrl-t
Enter command and return to root prompt.....Ctrl-z
Refresh input line.....Ctrl-l
```

**help global** — Displays help on global commands.

Available global commands:

```
back - Go back a level in the command tree
echo - Echo the text that is typed in
exec - Execute a file - use -echo to show the commands and
 prompts on the screen
exit - Exit to intermediate mode - use option all to exit to
 root prompt
help - Display help
history - Show command history
info - Display configuration for the present node
logout - Log off this system
oam + OAM Test Suite
ping - Verify the reachability of a remote host
pwc - Show the present working context
```

## Global Commands

```
sleep - Sleep for specified number of seconds
ssh - SSH to a host
telnet - Telnet to a host
traceroute - Determine the route to a destination address
tree - Display command tree structure from the context of
 execution
write - Write text to another user
```

**help special-characters** — Displays help on special characters.

Use the following CLI commands to display more information about commands and command syntax:

**?** — Lists all commands in the current context.

**string?** — Lists all commands available in the current context that start with the string.

**command ?** — Display command's syntax and associated keywords.

**string<Tab>** or **string<Space>** — Complete a partial command name (auto-completion) or list available commands that match the string.

## history

**Syntax** **history**

**Context** <GLOBAL>

**Description** This command lists the last 30 commands entered in this session.

Re-execute a command in the history with the **!**n**** command, where **n** is the line number associated with the command in the history output.

For example:

```
A:ALA-1# history
 68 info
 69 exit
 70 info
 71 filter
 72 exit all
 73 configure
 74 router
 75 info
 76 interface "test"
 77 exit
 78 reduced-prompt
 79 info
 80 interface "test"
 81 icmp unreachable exit all
 82 exit all
 83 reduced-prompt
 84 configure router
 85 interface
 86 info
 87 interface "test"
 88 info
 89 reduced-prompt
 90 exit all
 91 configure
 92 card 1
```

```

93 card-type
94 exit
95 router
96 exit
97 history
A:ALA-1# !91
A:ALA-1# configure
A:ALA-1>config#

```

## info

**Syntax** info [detail]

**Context** <GLOBAL>

**Description** This command displays the running configuration for the configuration context.

The output of this command is similar to the output of a **show config** command. This command, however, lists the configuration of the context where it is entered and all branches below that context level.

By default, the command only enters the configuration parameters that vary from the default values. The **detail** keyword causes all configuration parameters to be displayed.

For example,

```

A:ALA-48>config>router>mpls# info

admin-group "green" 15
admin-group "red" 25
admin-group "yellow" 20
interface "system"
exit
interface "to-104"
 admin-group "green"
 admin-group "red"
 admin-group "yellow"
 label-map 35
 swap 36 nexthop 10.10.10.91
 no shutdown
 exit
exit
path "secondary-path"
 hop 1 10.10.0.111 strict
 hop 2 10.10.0.222 strict
 hop 3 10.10.0.123 strict
 no shutdown
exit
path "to-NYC"
 hop 1 10.10.10.104 strict
 hop 2 10.10.0.210 strict
 no shutdown
exit
path "to-104"
 no shutdown
exit
lsp "to-104"
 to 10.10.10.104
 from 10.10.10.103
 rsvp-resv-style ff

```

## Global Commands

```

 cspf
...

A:ALA-48>config>router>mpls#
A:ALA-48>config>router>mpls# info detail

frr-object
no resignal-timer
admin-group "green" 15
admin-group "red" 25
admin-group "yellow" 20
interface "system"
 no admin-group
 no shutdown
exit
interface "to-104"
 admin-group "green"
 admin-group "red"
 admin-group "yellow"
 label-map 35
 swap 36 nexthop 10.10.10.91
 no shutdown
 exit
 no shutdown
exit
path "secondary-path"
 hop 1 10.10.0.111 strict
 hop 2 10.10.0.222 strict
 hop 3 10.10.0.123 strict
 no shutdown
exit
path "to-NYC"
 hop 1 10.10.10.104 strict
 hop 2 10.10.0.210 strict
 no shutdown
exit
path "to-104"
 no shutdown
exit
lsp "to-104"
to 10.10.10.104
from 10.10.10.103
rsvp-resv-style ff
adaptive
cspf
include "red"
exclude "green"
adspec
fast-reroute one-to-one
 no bandwidth
 no hop-limit
 node-protect
exit
hop-limit 10
retry-limit 0
retry-timer 30
secondary "secondary-path"
 no standby
 no hop-limit
 adaptive
 no include
```

```

 no exclude
 record
 record-label
 bandwidth 50000
 no shutdown
 exit
 primary "to-NYC"
 hop-limit 50
 adaptive
 no include
 no exclude
 record
 record-label
 no bandwidth
 no shutdown
 exit
 no shutdown
exit
...

A:ALA-48>config>router>mpls#

```

**Parameters** **detail** — Displays all configuration parameters including parameters at their default values.

## logout

**Syntax** **logout**

**Context** <GLOBAL>

**Description** This command logs out of the router session.

When the **logout** command is issued from the console, the login prompt is displayed, and any log IDs directed to the console are discarded. When the console session resumes (regardless of the user), the log output to the console resumes.

When a Telnet session is terminated from a **logout** command, all log IDs directed to the session are removed. When a user logs back in, the log IDs must be re-created.

## mrinfo

**Syntax** `mrinfo [ip-address | dns-name ] [router router-instance]`

**Context** <GLOBAL>

**Description** This command is used to print relevant multicast information from the target multicast router. Information displayed includes adjacency information, protocol, metrics, thresholds, and flags from the target multicast route

**Parameters** *ip-address* — Specify the ip-address of the multicast capable target router.  
*dns-name* — Specify the DNS name (if DNS name resolution is configured).

**Values** 63 characters maximum

**router** *router-instance* — Specify the router name or service ID.

**Values** *router-name:* Base, management  
*service-id:* 1 — 2147483647

**Default** Base

## mstat

**Syntax** `mstat source [ip-address | dns-name ] [group grp-ip-address] [destination dst-ip-address] [hop hop] [router router-instance] [wait-time wait-time]`

**Context** <GLOBAL>

**Description** This command traces a multicast path from a source to a receiver and displays multicast packet rate and loss information.

**Parameters** *source ip-address* — Specify the IP address of the multicast-capable source.  
*ip-address* — Specify the ip-address of the multicast capable target router.  
*dns-name* — Specify the DNS name (if DNS name resolution is configured).

**Values** 63 characters maximum

**group** *group-ip-address* — Specify the multicast address of the group to be displayed.

**destination** *dst-ip-address* — Specify the unicast destination address.

**hop count** — Specify the maximum number of hops that will be traced from the receiver back toward the source.

**Values** 1 — 255

**Default** 32 hops (infinity for the DVMRP routing protocol).

**router** *router-instance* — Specify the router name or service ID.

**Values** *router-name:* Base, management  
*service-id:* 1 — 2147483647

**Default** Base

**wait-time** *wait-time* — Specify the number of seconds to wait for the response.

**Values** 1 — 60

## mtrace

**Syntax** **mtrace source** [*ip-address* | *dns-name*] [**group** *grp-ip-address*] [**destination** *dst-ip-address*] [**hop** *hop*] [**router** *router-instance*] [**wait-time** *wait-time*]

**Context** <GLOBAL>

**Description** This command traces a multicast path from a source to a receiver.

**Parameters** *ip-address* — Specify the ip-address of the multicast capable target router.

*dns-name* — Specify the DNS name (if DNS name resolution is configured).

**Values** 63 characters maximum

**group** *group-ip-address* — Specify the multicast address or DNS name of the group that resolves to the multicast group address that will be used. If the group is not specified, address 224.2.0.1 (the Mbone audio) will be used. This will suffice if packet loss statistics for a particular multicast group are not needed.

**destination** *dst-p-address* — Specify either the IP address or the DNS name of the unicast destination. If this parameter is omitted the IP address of the system where the command is entered will be used. The receiver parameter can also be used to specify a local interface address as the destination address for sending the trace query. The response will also be returned to the address specified as the receiver.

**hop** *hop* — Specify the maximum number of hops that will be traced from the receiver back toward the source.

**Values** 1 — 255

**Default** 32 hops (infinity for the DVMRP routing protocol).

*router-instance* — Specify the router name or service ID.

**Values** *router-name:* Base, management  
*service-id:* 1 — 2147483647

**Default** Base

**wait-time** *wait-time* — Specify the number of seconds to wait for the response.

**Values** 1 — 60

## password

**Syntax** **password**

**Context** <ROOT>

**Description** This command changes a user CLI login password.

## Global Commands

When a user logs in after the administrator forces a **new-password-at-login**, or the password has expired (**aging**), then this command is automatically invoked.

When invoked, the user is prompted to enter the old password, the new password, and then the new password again to verify the correct input.

If a user fails to create a new password after the administrator forces a **new-password-at-login** or after the password has expired, the user is not allowed access to the CLI.

## ping

**Syntax** **ping** {*ip-address* | *ipv6-address* | *dns-name*} [**rapid** | **detail**] [**ttl** *time-to-live*] [**tos** *type-of-service*] [**size** *bytes*] [**pattern** *pattern*] [**source** *ip-address*] [**interval** *seconds*] [{**next-hop** *ip-address*} | {**interface** *interface-name*} | **bypass-routing**] [**count** *requests*] [**do-not-fragment**] [**router** [*router-instance*]] [**timeout** *timeout*]

**Context** <GLOBAL>

**Description** This command is the TCP/IP utility to verify IP reachability.

**Parameters** *ip-address* | *dns-name* — The remote host to ping. The IP address or the DNS name (if DNS name resolution is configured) can be specified.

*ipv6-address* — The IPv6 IP address.

**Values** x:x:x:x:x:x:x (eight 16-bit pieces)  
x:x:x:x:x:d.d.d.d  
x: 0 — FFFF H  
d: 0 — 255 D

**rapid** | **detail** — The **rapid** parameter specifies to send ping requests rapidly. The results are reported in a single message, not in individual messages for each ping request. By default, five ping requests are sent before the results are reported. To change the number of requests, include the **count** option.

The **detail** parameter includes in the output the interface on which the ping reply was received.

Example output:

```
A:ALA-1# ping 192.168.xx.xx4 detail
PING 192.168.xx.xx4: 56 data bytes
64 bytes from 192.168.xx.xx4 via fei0: icmp_seq=0 ttl=64 time=0.000 ms.
64 bytes from 192.168.xx.xx4 via fei0: icmp_seq=1 ttl=64 time=0.000 ms.
64 bytes from 192.168.xx.xx4 via fei0: icmp_seq=2 ttl=64 time=0.000 ms.
64 bytes from 192.168.xx.xx4 via fei0: icmp_seq=3 ttl=64 time=0.000 ms.
64 bytes from 192.168.xx.xx4 via fei0: icmp_seq=4 ttl=64 time=0.000 ms.

---- 192.168.xx.xx4 PING Statistics ----
5 packets transmitted, 5 packets received, 0.00% packet loss
round-trip min/avg/max/stddev = 0.000/0.000/0.000/0.000 ms
A:ALA-1#
```

**tll** *time-to-live* — The IP Time To Live (TTL) value to include in the ping request, expressed as a decimal integer.

**Values** 0 — 128



**tos** *type-of-service* — The type-of-service (TOS) bits in the IP header of the ping packets, expressed as a decimal integer.

**Values** 0 — 255

**size** *bytes* — The size in bytes of the ping request packets.

**Default** 56 bytes (actually 64 bytes because 8 bytes of ICMP header data are added to the packet)

**Values** 0 — 65507

**pattern** *pattern* — A 16-bit pattern string to include in the ping packet, expressed as a decimal integer.

**Values** 0 — 65535

**source** *ip-address* — The source IP address to use in the ping requests in dotted decimal notation.

**Default** The IP address of the egress IP interface.

**Values** 0.0.0.0 — 255.255.255.255

**interval** *seconds* — The interval in seconds between consecutive ping requests, expressed as a decimal integer.

**Default** 1

**Values** 1 — 10000

**next-hop** *ip-address* — This option disregards the routing table and will send this packet to the specified next hop address. This address must be on an adjacent router that is attached to a subnet that is common between this and the next-hop router.

**Default** Per the routing table.

**Values** A valid IP next hop IP address.

**interface** *interface-name* — Specify the interface name.

**bypass-routing** — Send the ping request to a host on a directly attached network bypassing the routing table. The host must be on a directly attached network or an error is returned.

**count** *requests* — The number of ping requests to send to the remote host, expressed as a decimal integer.

**Default** 5

**Values** 1 — 10000

**do-not-fragment** — Specifies that the request frame should not be fragmented. This option is particularly useful in combination with the size parameter for maximum MTU determination.

**router** *router-instance* — Specify the router name or service ID.

**Default** Base

**Values** *router-name:* Base, management  
*service-id:* 1 — 2147483647

**timeout** *timeout* — Specify the timeout in seconds.

**Default** 5

**Values** 1 — 10

## Global Commands

### pwc

**Syntax** **pwc** [**previous**]

**Context** <GLOBAL>

**Description** This command displays the present or previous working context of the CLI session. The **pwc** command provides a user who is in the process of dynamically configuring a chassis a way to display the current or previous working context of the CLI session. The **pwc** command displays a list of the CLI nodes that hierarchically define the current context of the CLI instance of the user.

For example,

```
A:ALA-1>config>router>bgp>group# pwc

Present Working Context :

<root>
 configure
 router Base
 bgp
 group test
 ospf
 area 1

A:ALA-1>config>router>bgp>group#
```

For example,

When the **previous** keyword is specified, the previous context displays. This is the context entered by the CLI parser upon execution of the **exit** command. The current context of the CLI is not affected by the **pwc** command.

For example,

```
A:ALA-1>config>router>bgp>group# pwc previous

Previous Working Context :

<root>
 configure
 router Base
 bgp
 ospf

A:ALA-1>config>router>bgp>group#
```

**Parameters** **previous** — Specifies to display the previous present working context.

### sleep

**Syntax** **sleep** [*seconds*]

**Context** <GLOBAL>

**Description** This command causes the console session to pause operation (sleep) for 1 second (default) or for the specified number of seconds.

**Parameters** *seconds* — The number of seconds for the console session to sleep, expressed as a decimal integer.

**Default** 1  
**Values** 1 — 100

## ssh

**Syntax** **ssh** [*ip-addr* | *dns-name* | *username @ip-addr*] [-**I** *username*] [-**v** *SSH-version*] [**router** *router-instance*] **service-name** *service-name*]

**Context** <GLOBAL>

**Description** This command initiates a client SSH session with the remote host and is independent from the administrative or operational state of the SSH server. However, to be the target of an SSH session, the SSH server must be operational.

Quitting SSH while in the process of authentication is accomplished by either executing a ctrl-c or "~." (tilde and dot) assuming the "~" is the default escape character for SSH session.

**Parameters** *ip-address* | *host-name* — The remote host to which to open an SSH session. The IP address or the DNS name (providing DNS name resolution is configured) can be specified.

**-I** *user* — The user name to use when opening the SSH session.

**router** *router-instance* — Specify the router name or service ID.

**Values** *router-name:* Base, management  
*service-id:* 1 — 2147483647

**Default** Base

## telnet

**Syntax** **telnet** [*ip-address* | *dns-name*] [*port*] [**router** *router-instance*]

**Context** <GLOBAL>

**Description** This command opens a Telnet session to a remote host. Telnet servers in 7710 SR networks limit a Telnet clients to three retries to login. The Telnet server disconnects the Telnet client session after three retries. The number of retry attempts for a Telnet client session is not user-configurable.

**Parameters** *ip-address* — The IP address or the DNS name (providing DNS name resolution is configured) can be specified.

**Values** *ipv4-address* a.b.c.d  
*ipv6-address* x:x:x:x:x:x[-interface]  
x:x:x:x:x.d.d.d[-interface]  
x: [0 — FFFF]H  
d: [0 — 255]D

**dns-name** — Specify the DNS name (if DNS name resolution is configured).

**Values** 128 characters maximum

*port* — The TCP port number to use to Telnet to the remote host, expressed as a decimal integer.

## Global Commands

**Default** 23

**Values** 1 — 65535

**router** *router-instance* — Specify the router name or service ID.

**Values** *router-name:* Base, management  
*service-id:* 1 — 2147483647

**Default** Base

## traceroute

**Syntax** **traceroute** {*ip-address* | *dns-name*} [**tll** *tll*] [**wait** *milliseconds*] [**no-dns**] [**source** *ip-address*] [**tos** *type-of-service*] [**router** *router-instance*]

**Context** <GLOBAL>

**Description** The TCP/IP traceroute utility determines the route to a destination address. Note that aborting a traceroute with the <Ctrl-C> command could require issuing a second <Ctrl-C> command before the prompt is returned.

```
A:ALA-1# traceroute 192.168.xx.xx4
traceroute to 192.168.xx.xx4, 30 hops max, 40 byte packets
 1 192.168.xx.xx4 0.000 ms 0.000 ms 0.000 ms
A:ALA-1#
```

**Parameters** *ip-address* | *dns-name* — The remote address to traceroute. The IP address or the DNS name (if DNS name resolution is configured) can be specified.

**Values** *ipv4-address* a.b.c.d

*ipv6-address* x:x:x:x:x:x[-interface]  
x:x:x:x:x:d.d.d.d[-interface]  
x: [0 — FFFF]H  
d: [0 — 255]D

*dns-name* 128 characters maximum

**tll** *tll* — The maximum Time-To-Live (TTL) value to include in the traceroute request, expressed as a decimal integer.

**Values** 1 — 255

**wait** *milliseconds* — The time in milliseconds to wait for a response to a probe, expressed as a decimal integer.

**Default** 5000

**Values** 1 — 60000

**no-dns** — When the **no-dns** keyword is specified, a DNS lookup for the specified host name will not be performed.

**Default** DNS lookups are performed

**source** *ip-address* — The source IP address to use as the source of the probe packets in dotted decimal notation. If the IP address is not one of the device's interfaces, an error is returned.

**tos** *type-of-service* — The type-of-service (TOS) bits in the IP header of the probe packets, expressed as a decimal integer.

**Values** 0 — 255

**router** *router-instance* — Specifies the router name or service ID.

**Values** *router-name:* Base, management  
*service-id:* 1 — 2147483647

**Default** Base

## tree

**Syntax** **tree** [**detail**]

**Context** <GLOBAL>

**Description** This command displays the command hierarchy structure from the present working context.

**Parameters** **detail** — Includes parameter information for each command displayed in the tree output.

## write

**Syntax** **write** {*user* | **broadcast**} *message-string*

**Context** <GLOBAL>

**Description** This command sends a console message to a specific user or to all users with active console sessions.

**Parameters** *user* — The name of a user with an active console session to which to send a console message.

**Values** Any valid CLI username

**broadcast** — Specifies that the *message-string* is to be sent to all users logged into the router.

*message-string* — The message string to send. Allowed values are any string up to 250 characters long composed of printable, 7-bit ASCII characters. If the string contains special characters (#, \$, spaces, etc.), the entire string must be enclosed within double quotes.

---

## CLI Environment Commands

### alias

**Syntax** **alias** *alias-name* *alias-command-line*  
**no alias** *alias-name*

**Context** environment

**Description** This command enables the substitution of a command line by an alias. Use the **alias** command to create alternative or easier to remember/understand names for an entity or command string. If the string contains special characters (#, \$, spaces, etc.), the entire string must be enclosed within double quotes. Only a single command can be present in the command string. The **alias** command can be entered in any context but must be created in the **root>environment** context.

For example, to create an alias named **soi** to display OSPF interfaces, enter:

```
alias soi "show router ospf interface"
```

**Parameters** *alias-name* — The alias name. Do not use a valid command string for the alias. If the alias specified is an actual command, this causes the command to be replaced by the alias.

*alias-command-line* — The command line to be associated.

### create

**Syntax** [**no**] **create**

**Context** environment

**Description** By default, the **create** command is required to create a new OS entity.  
The **no** form of the command disables requiring the **create** keyword.

**Default** **create** — The create keyword is required.

### more

**Syntax** [**no**] **more**

**Context** environment

**Description** This command enables per-screen CLI output, meaning that the output is displayed on a screen-by-screen basis. The terminal screen length can be modified with the **terminal** command.

The following prompt appears at the end of each screen of paginated output:

```
Press any key to continue (Q to quit)
```

The **no** form of the command displays the output all at once. If the output length is longer than one screen, the entire output will be displayed, which may scroll the screen.

**Default** **more** — CLI output pauses at the end of each screen waiting for the user input to continue.

## reduced-prompt

**Syntax** **reduced-prompt** [*number of nodes in prompt*]  
**no reduced-prompt**

**Context** environment

**Description** This command configures the maximum number of higher CLI context levels to display in the CLI prompt for the current CLI session. This command is useful when configuring features that are several node levels deep, causing the CLI prompt to become too long.

By default, the CLI prompt displays the system name and the complete context in the CLI.

The number of *nodes* specified indicates the number of higher-level contexts that can be displayed in the prompt. For example, if reduced prompt is set to 2, the two highest contexts from the present working context are displayed by name with the hidden (reduced) contexts compressed into an ellipsis (“...”).

```
A:ALA-1>environment# reduced-prompt 2
A:ALA-1>vonfig>router# interface to-103
A:ALA-1>...router>if#
```

Note that the setting is not saved in the configuration. It must be reset for each CLI session or stored in an **exec** script file.

The **no** form of the command reverts to the default.

**Default** **no reduced-prompt** — Displays all context nodes in the CLI prompt.

**Parameters** *number of nodes in prompt* — The maximum number of higher-level nodes displayed by name in the prompt, expressed as a decimal integer.

**Default** 2

**Values** 0 — 15

## saved-ind-prompt

**Syntax** [**no**] **saved-ind-prompt**

**Context** environment

**Description** This command enables saved indicator in the prompt. When changes are made to the configuration file a “\*” appears in the prompt string indicating that the changes have not been saved. When an admin save command is executed the “\*” disappears.

```
*A:ALA-48# admin save
Writing file to ftp://128.251.10.43/./sim48/sim48-config.cfg
Saving configuration Completed.
A:ALA-48#
```

## terminal

<b>Syntax</b>	<b>terminal</b> <b>no terminal</b>
<b>Context</b>	environment
<b>Description</b>	This command enables the context to configure the terminal screen length for the current CLI session.

## length

<b>Syntax</b>	<b>length</b> <i>lines</i>
<b>Context</b>	environment>terminal
<b>Description</b>	This command sets the number of lines on a screen.
<b>Default</b>	<b>24</b> — Terminal dimensions are set to 24 lines long by 80 characters wide.
<b>Parameters</b>	<i>lines</i> — The number of lines for the terminal screen length, expressed as a decimal integer. <b>Values</b> 1 — 512

## width

<b>Syntax</b>	<b>width</b> <i>width</i>
<b>Context</b>	environment>terminal
<b>Description</b>	This command determines display terminal width.
<b>Default</b>	<b>80</b> — Terminal dimensions are set to 24 lines long by 80 characters wide.
<b>Parameters</b>	<i>width</i> — Sets the width of the display terminal. <b>Values</b> 1 — 512

## time-display

<b>Syntax</b>	<b>time-display</b> { <b>local</b>   <b>utc</b> }
<b>Context</b>	environment
<b>Description</b>	This command displays time stamps in the CLI session based on local time or Coordinated Universal Time (UTC). The system keeps time internally in UTC and is capable of displaying the time in either UTC or local time based on the time zone configured.



This configuration command is only valid for times displayed in the current CLI session. This includes displays of event logs, traps and all other places where a time stamp is displayed.

In general all time stamps are shown in the time selected. This includes log entries destined for console/session, memory, or SNMP logs. Log files on compact flash are maintained and displayed in UTC format.

**Default** **time-display local** — Displays time stamps based on the local time.

---

## Monitor CLI Commands

### filter

**Syntax** `filter`

**Context** `monitor`

**Description** This command enables the context to configure criteria to monitor IP and MAC filter statistics.

### ip

**Syntax** `ip ip-filter-id entry entry-id [interval seconds] [repeat repeat] [absolute | rate]`

**Context** `monitor>filter`

**Description** This command enables IP filter monitoring. The statistical information for the specified IP filter entry displays at the configured interval until the configured count is reached. The first screen displays the current statistics related to the specified IP filter. The subsequent statistical information listed for each interval is displayed as a delta to the previous display. When the keyword **rate** is specified, the "rate per second" for each statistic is displayed instead of the delta. Monitor commands are similar to **show** commands but only statistical information displays. Monitor commands display the selected statistics according to the configured number of times at the interval specified.

**Parameters** *ip-filter-id* — Displays detailed information for the specified filter ID and its filter entries.

**Values** 1 — 65535

**entry entry-id** — Displays information on the specified filter entry ID for the specified filter ID only.

**Values** 1 — 65535

**interval seconds** — Configures the interval for each display in seconds.

**Default** 5 seconds

**Values** 3 — 60

**repeat repeat** — Configures how many times the command is repeated.

**Default** 10

**Values** 1 — 999

**absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.

**rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

**Sample Output**

```

A:ALA-1>monitor# filter ip 10 entry 1 interval 3 repeat 3 absolute
=====
Monitor statistics for IP filter 10 entry 1
=====
At time t = 0 sec (Base Statistics)

Ing. Matches: 0 Egr. Matches : 0

At time t = 3 sec (Mode: Absolute)

Ing. Matches: 0 Egr. Matches : 0

At time t = 6 sec (Mode: Absolute)

Ing. Matches: 0 Egr. Matches : 0

At time t = 9 sec (Mode: Absolute)

Ing. Matches: 0 Egr. Matches : 0
=====
A:ALA-1>monitor#

A:ALA-1>monitor# filter ip 10 entry 1 interval 3 repeat 3 rate
=====
Monitor statistics for IP filter 10 entry 1
=====
At time t = 0 sec (Base Statistics)

Ing. Matches: 0 Egr. Matches : 0

At time t = 3 sec (Mode: Rate)

Ing. Matches: 0 Egr. Matches : 0

At time t = 6 sec (Mode: Rate)

Ing. Matches: 0 Egr. Matches : 0

At time t = 9 sec (Mode: Rate)

Ing. Matches: 0 Egr. Matches : 0
=====
A:ALA-1>monitor#

```

**ipv6**

**Syntax** `ipv6 ipv6-filter-id entry entry-id [interval seconds] [repeat repeat] [absolute | rate]`

**Context** `monitor>filter`

**Description** This command enables IPv6 filter monitoring. The statistical information for the specified IPv6 filter entry displays at the configured interval until the configured count is reached.

The first screen displays the current statistics related to the specified IPv6 filter. The subsequent statistical information listed for each interval is displayed as a delta to the previous display.

## Monitor CLI Commands

When the keyword **rate** is specified, the "rate per second" for each statistic is displayed instead of the delta.

Monitor commands are similar to **show** commands but only statistical information displays. Monitor commands display the selected statistics according to the configured number of times at the interval specified.

### Parameters

*ipv6-filter-id* — Displays detailed information for the specified IPv6 filter ID and its filter entries.

**Values** 1 — 65535

*entry entry-id* — Displays information on the specified IPv6 filter entry ID for the specified filter ID only.

**Values** 1 — 65535

*interval seconds* — Configures the interval for each display in seconds.

**Default** 5 seconds

**Values** 3 — 60

*repeat repeat* — Configures how many times the command is repeated.

**Default** 10

**Values** 1 — 999

**absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.

**rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

### Sample Output

```
A:ALA-48# monitor filter ipv6 100 entry 10 interval 3 repeat 3 absolute
=====
Monitor statistics for IPv6 filter 100 entry 10

At time t = 0 sec (Base Statistics)

Ing. Matches : 0 Egr. Matches : 1

At time t = 3 sec (Mode: Absolute)

Ing. Matches : 0 Egr. Matches : 1

At time t = 6 sec (Mode: Absolute)

Ing. Matches : 0 Egr. Matches : 1

At time t = 9 sec (Mode: Absolute)

Ing. Matches : 0 Egr. Matches : 01
=====
A:ALA-48#
```

```
A:ALA-48# monitor filter ipv6 100 entry 10 interval 3 repeat 3 rate
=====
Monitor statistics for IPv6 filter 100 entry 10

```

```

At time t = 0 sec (Base Statistics)

Ing. Matches : 0 Egr. Matches : 1

At time t = 3 sec (Mode: Rate)

Ing. Matches : 0 Egr. Matches : 1

At time t = 6 sec (Mode: Rate)

Ing. Matches : 0 Egr. Matches : 1

At time t = 9 sec (Mode: Rate)

Ing. Matches : 0 Egr. Matches : 1
=====
A:ALA-48#

```

## mac

**Syntax** `mac mac-filter-id entry entry-id [interval seconds] [repeat repeat] [absolute | rate]`

**Context** monitor>filter

**Description** This command enables MAC filter monitoring. The statistical information for the specified MAC filter entry displays at the configured interval until the configured count is reached.

The first screen displays the current statistics related to the specified MAC filter. The subsequent statistical information listed for each interval is displayed as a delta to the previous display. When the keyword **rate** is specified, the "rate per second" for each statistic is displayed instead of the delta.

Monitor commands are similar to **show** commands but only statistical information displays. Monitor commands display the selected statistics according to the configured number of times at the interval specified.

**Parameters** *mac-filter-id* — The MAC filter policy ID.

**Values** 1 — 65535

**entry entry-id** — Displays information on the specified filter entry ID for the specified filter ID only.

**Values** 1 — 65535

**interval seconds** — Configures the interval for each display in seconds.

**Default** 5 seconds

**Values** 3 — 60

**repeat repeat** — Configures how many times the command is repeated.

**Default** 10

**Values** 1 — 999

**absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.

## Monitor CLI Commands

**rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

### Sample Output

```
A:ALA-1>monitor>filter# mac 50 entry 10 interval 3 repeat 3 absolute
=====
Monitor statistics for Mac filter 50 entry 10
=====
At time t = 0 sec (Base Statistics)

Ing. Matches: 0 Egr. Matches : 0

At time t = 3 sec (Mode: Absolute)

Ing. Matches: 0 Egr. Matches : 0

At time t = 6 sec (Mode: Absolute)

Ing. Matches: 0 Egr. Matches : 0

At time t = 9 sec (Mode: Absolute)

Ing. Matches: 0 Egr. Matches : 0
=====

A:ALA-1>monitor>filter# mac 50 entry 10 interval 3 repeat 3 rate
=====
Monitor statistics for Mac filter 50 entry 10
=====
At time t = 0 sec (Base Statistics)

Ing. Matches: 0 Egr. Matches : 0

At time t = 3 sec (Mode: Rate)

Ing. Matches: 0 Egr. Matches : 0

At time t = 6 sec (Mode: Rate)

Ing. Matches: 0 Egr. Matches : 0

At time t = 9 sec (Mode: Rate)

Ing. Matches: 0 Egr. Matches : 0
=====
A:ALA-1>monitor>filter#
```

## lag

**Syntax** **lag** *lag-id* [*lag-id...*(up to 5 max)] [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | *rate*]

**Context** monitor

**Description** This command monitors traffic statistics for Link Aggregation Group (LAG) ports. Statistical information for the specified LAG ID(s) displays at the configured interval until the configured count is reached.

The first screen displays the current statistics related to the specified LAG ID. The subsequent statistical information listed for each interval is displayed as a delta to the previous display. When the keyword **rate** is specified, the “rate per second” for each statistic is displayed instead of the delta.

Monitor commands are similar to **show** commands but only statistical information displays. Monitor commands display the selected statistics according to the configured number of times at the interval specified.

### Parameters

*lag-id* — The number of the LAG.

**Default** none — The LAG ID value must be specified.

**Values** 1 — 64

*interval seconds* — Configures the interval for each display in seconds.

**Default** 5 seconds

**Values** 3 — 60

*repeat repeat* — Configures how many times the command is repeated.

**Default** 10

**Values** 1 — 999

**absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.

**rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

### Sample Output

```
A:ALA-12# monitor lag 12
=====
Monitor statistics for LAG ID 12
=====
Port-id Input Input Output Output Input Output
 Bytes Packets Bytes Packets Errors Errors

At time t = 0 sec (Base Statistics)

1/1/1 2168900 26450 64 1 0 0
1/1/2 10677318 125610 2273750 26439 0 0
1/1/3 2168490 26445 0 0 0 0

Totals 15014708 178505 2273814 26440 0 0

At time t = 5 sec (Mode: Delta)

1/1/1 0 0 0 0 0 0
1/1/2 258 3 86 1 0 0
1/1/3 82 1 0 0 0 0

Totals 340 4 86 1 0 0
=====
A:ALA-12#
```

## ipv6

**Syntax** `ipv6 entry-id [interval seconds] [repeat repeat] [absolute | rate]`

**Context** monitor>management-access-filter

**Description** This command monitors statistics for the MAF IPv6 filter entry.

**Parameters** `entry entry-id` — Specifies an existing IP MAF entry ID.

**Values** 1 — 9999

`interval seconds` — Configures the interval for each display in seconds.

**Default** 10

**Values** 3 — 60

`repeat repeat` — Configures how many times the command is repeated.

**Default** 10

**Values** 1 — 999

**absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.

**rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

## port

**Syntax** `port port-id [port-id...(up to 5 max)] [interval seconds] [repeat repeat] [absolute | rate]`

**Context** monitor

**Description** This command enables port traffic monitoring. The specified port(s) statistical information displays at the configured interval until the configured count is reached.

The first screen displays the current statistics related to the specified port(s). The subsequent statistical information listed for each interval is displayed as a delta to the previous display. When the keyword **rate** is specified, the "rate per second" for each statistic is displayed instead of the delta.

Monitor commands are similar to **show** commands but only statistical information displays. Monitor commands display the selected statistics according to the configured number of times at the interval specified.

**Parameters** `port port-id` — Specify up to 5 port IDs.

**Syntax:** `port-id` slot/mda/port[.channel]  
`aps-id` aps-group-id[.channel]  
`aps` keyword  
`type` ima, ppp  
`group-id` 1 — 16  
`bundle ID` bundle-type-slot/mda.bundle-num  
`bundle` keyword  
`bundle-num` 1 — 128



**interval** *seconds* — Configures the interval for each display in seconds.

**Default** 5 seconds

**Values** 3 — 60

**repeat** *repeat* — Configures how many times the command is repeated.

**Default** 10

**Values** 1 — 999

**absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.

**rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

### Sample Output

```
A:ALA-12>monitor# port 1/1/4 interval 3 repeat 3 absolute
=====
Monitor statistics for Port 1/1/4
=====

```

	Input	Output
-----		
At time t = 0 sec (Base Statistics)		
-----		
Octets	0	0
Packets	39	175
Errors	0	0
-----		
At time t = 3 sec (Mode: Absolute)		
-----		
Octets	0	0
Packets	39	175
Errors	0	0
-----		
At time t = 6 sec (Mode: Absolute)		
-----		
Octets	0	0
Packets	39	175
Errors	0	0
-----		
At time t = 9 sec (Mode: Absolute)		
-----		
Octets	0	0
Packets	39	175
Errors	0	0
=====		

```
A:ALA-12>monitor#

A:ALA-12>monitor# port 1/1/4 interval 3 repeat 3 rate
=====
Monitor statistics for Port 1/1/4
=====

```

	Input	Output
-----		
At time t = 0 sec (Base Statistics)		

## Monitor CLI Commands

```

Octets 0 0
Packets 39 175
Errors 0 0

At time t = 3 sec (Mode: Rate)

Octets 0 0
Packets 0 0
Errors 0 0

At time t = 6 sec (Mode: Rate)

Octets 0 0
Packets 0 0
Errors 0 0

At time t = 9 sec (Mode: Rate)

Octets 0 0
Packets 0 0
Errors 0 0
=====
A:ALA-12>monitor#

```

## port

**Syntax**

```

port port-id atm [interval seconds] [repeat repeat] [absolute | rate]
port port-id atm aal-5 [interval seconds] [repeat repeat] [absolute | rate]
port port-id atm ilmi [interval seconds] [repeat repeat] [absolute | rate]
port port-id atm interface-connection [interval seconds] [repeat repeat] [absolute | rate]
port port-id atm pvc [interval seconds] [repeat repeat] [absolute | rate]
port port-id atm pvp [interval seconds] [repeat repeat] [absolute | rate]
port port-id atm pvt [interval seconds] [repeat repeat] [absolute | rate]

```

**Context** monitor

**Description** This command monitors ATM port traffic statistics.

**Parameters** *port-id* — Specify up to 5 port IDs.

**Syntax:**

<i>port-id</i>	slot/mda/port[.channel]
aps-id	aps-group-id[.channel]
	aps keyword
	group-id 1 — 64
bundle ID	bundle-type-slot/mda.bundle-num
	bundle keyword
	type ima, ppp
	bundle-num 1 — 128

**atm** — keyword specifying ATM information.

**interface-connection** — Monitors ATM interface statistics.

**interval seconds** — Configures the interval for each display in seconds.

**Default** 5 seconds

**Values** 3 — 60

**repeat** *repeat* — Configures how many times the command is repeated.

**Default** 10

**Values** 1 — 999

**absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.

**Default** Default mode delta

**rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

**Default** Default mode delta

**aal-5** — Displays ATM Adaptation Layer 5 (AAL5) information.

**ilmi** — Monitors ATM ILMI statistics.

**pvc** — Identifies the port by the PVC identifier (vpi/vci).

**pvp** — Identifies the port by the permanent virtual path.

**pvt** — Identifies the port by the permanent virtual tunnel.

**oam** — Identifies the port by the OAM test suite ID.

## qos

**Syntax** **qos**

**Context** monitor

**Description** This command enables the context to configure criteria to monitor QoS scheduler statistics for specific customers and SAPs.

## arbiter-stats

**Syntax** **arbiter-stats**

**Context** monitor>qos

**Description** This command enables the context to configure monitor commands for arbiter statistics.

## sap

**Syntax** **sap** *sap-id* [**arbiter name** | *root*] [**ingress** | **egress**] [**interval seconds**] [**repeat repeat**] [**absolute** | **rate**]

**Context** monitor>qos>arbiter-stats

**Description** This command monitors arbiter statistics for a SAP.

**Parameters** *sap-id* — Specify the physical port identifier portion of the SAP definition.

**arbiter name** — Specify the name of the policer control policy arbiter.

**Values** An existing *scheduler-name* in the form of a string up to 32 characters long composed of printable, 7-bit ASCII characters. If the string contains special characters (#, \$, spaces, etc.), the entire string must be enclosed within double quotes.

**root** — Specify the scheduler to which this queue would be feeding.

**ingress** — Displays *scheduler-name* statistics applied on the ingress SAP.

**egress** — Displays *scheduler-name* statistics applied on the egress SAP.

**interval seconds** — Configures the interval for each display in seconds.

**Default** 11 seconds

**Values** 11 — 60

**repeat repeat** — Configures how many times the command is repeated.

**Default** 10

**Values** 1 — 999

**absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.

**rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

## subscriber

**Syntax** **subscriber** *sub-ident-string* [**arbiter name** | *root*] [**ingress** | **egress**] [**interval seconds**] [**repeat repeat**] [**absolute** | **rate**]

**Context** monitor>qos>arbiter-stats

**Description** This command monitors arbiter statistics for a subscriber.

**Parameters** *sub-ident-string* — Specifies an existing subscriber a identification policy name.

**arbiter name** — Specify the name of the policer control policy arbiter.

**Values** An existing *scheduler-name* in the form of a string up to 32 characters long composed of printable, 7-bit ASCII characters. If the string contains special characters (#, \$, spaces, etc.), the entire string must be enclosed within double quotes.

**root** — Specify the scheduler to which this queue would be feeding.

**ingress** — Displays *scheduler-name* statistics applied on the ingress SAP.

**egress** — Displays *scheduler-name* statistics applied on the egress SAP.

**interval** *seconds* — Configures the interval for each display in seconds.

**Default** 11 seconds

**Values** 11 — 60

**repeat** *repeat* — Configures how many times the command is repeated.

**Default** 10

**Values** 1 — 999

**absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.

**rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

## customer

**Syntax** **customer** *customer-id* **site** *customer-site-name* [**scheduler** *scheduler-name*] [**ingress** | **egress**] [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]

**Context** monitor>qos>scheduler-stats

**Description** Use this command to monitor scheduler statistics per customer multi-service-site. The first screen displays the current statistics related to the specified customer ID and customer site name. The subsequent statistical information listed for each interval is displayed as a delta to the previous display. When the keyword **rate** is specified, the "rate per second" for each statistic is displayed instead of the delta. Monitor commands are similar to **show** commands but only statistical information displays. These commands display selected statistics per the configured number of times at the interval specified.

**Parameters** *customer-id* — Specifies the ID number to be associated with the customer, expressed as an integer.

**Values** 1 — 2147483647

**site** *customer-site-name* — Specify the customer site which is an anchor point for ingress and egress virtual scheduler hierarchy.

**scheduler** *scheduler-name* — Specify an existing *scheduler-name*. Scheduler names are configured in the **config>qos>scheduler-policy>tier level** context.

**Values** An existing *scheduler-name* is in the form of a string up to 32 characters long composed of printable, 7-bit ASCII characters. If the string contains special characters (#, \$, spaces, etc.), the entire string must be enclosed within double quotes.

**ingress** — Displays the customer's multi-service-site ingress scheduler policy.

**egress** — Displays the customer's multi-service-site egress scheduler policy.

**interval** *seconds* — Configures the interval for each display in seconds.

**Default** 11 seconds

**Values** 11 — 60

## Monitor CLI Commands

**repeat** *repeat* — Configures how many times the command is repeated.

**Default** 10

**Values** 1 — 999

**absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.

**rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

## sap

**Syntax** **sap** *sap-id* [**scheduler** *scheduler-name*] [**ingress** | **egress**] [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]

**Context** monitor>qos>scheduler-stats

**Description** Use this command to monitor scheduler statistics for a SAP at the configured interval until the configured count is reached.

The first screen displays the current statistics related to the specified SAP. The subsequent statistical information listed for each interval is displayed as a delta to the previous display.

When the keyword **rate** is specified, the "rate per second" for each statistic is displayed instead of the delta.

Monitor commands are similar to **show** commands but only statistical information displays. Monitor commands display the selected statistics according to the configured number of times at the interval specified.

**Parameters** *sap-id* — Specifies the physical port identifier portion of the SAP definition.

**scheduler** *scheduler-name* — Specify an existing *scheduler-name*. Scheduler names are configured in the **config>qos>scheduler-policy>tier level** context.

**Values** An existing *scheduler-name* in the form of a string up to 32 characters long composed of printable, 7-bit ASCII characters. If the string contains special characters (#, \$, spaces, etc.), the entire string must be enclosed within double quotes.

**ingress** — Displays *scheduler-name* statistics applied on the ingress SAP.

**egress** — Displays *scheduler-name* statistics applied on the egress SAP.

**interval** *seconds* — Configures the interval for each display in seconds.

**Default** 11 seconds

**Values** 11 — 60

**repeat** *repeat* — Configures how many times the command is repeated.

**Default** 10

**Values** 1 — 999

**absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.

**rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

## subscriber

**Syntax** **subscriber** *sub-ident-string* [**scheduler** *scheduler-name*] [**ingress** | **egress**] [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]

**Context** monitor>qos>scheduler-stats

**Description** This command monitors scheduler statistics for a subscriber.

**Parameters** *sub-ident-string* — Specifies an existing subscriber a identification policy name.

**scheduler** *scheduler-name* — Specify an existing QoS scheduler policy name. Scheduler names are configured in the `config>qos>scheduler-policy>tier level` context.

**Values** An existing *scheduler-name* in the form of a string up to 32 characters long composed of printable, 7-bit ASCII characters. If the string contains special characters (#, \$, spaces, etc.), the entire string must be enclosed within double quotes.

**ingress** — Displays *scheduler-name* statistics applied on the ingress SAP.

**egress** — Displays *scheduler-name* statistics applied on the egress SAP.

**interval** *seconds* — Configures the interval for each display in seconds.

**Default** 11 seconds

**Values** 11 — 60

**repeat** *repeat* — Configures how many times the command is repeated.

**Default** 10

**Values** 1 — 999

**absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.

**rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

## router

**Syntax** **router** *router-instance*

**Context** monitor

**Description** This command enables the context to configure criteria to monitor statistical information for BGP, LDP, MPLS, OSPF, RIP, and RSVP protocols.

**Parameters** *router-instance* — Specify the router name or service ID.

**Values** *router-name:* Base, management  
*service-id:* 1 — 2147483647

**Default** Base

## neighbor

**Syntax** **neighbor** *ip-address* [*ip-address...*(up to 5 max)] [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]

**Context** monitor>router>bgp

**Description** This command displays statistical BGP neighbor information at the configured interval until the configured count is reached.

The first screen displays the current statistics related to the specified neighbor(s). The subsequent statistical information listed for each interval is displayed as a delta to the previous display.

When the keyword **rate** is specified, the "rate per second" for each statistic is displayed instead of the delta.

Monitor commands are similar to **show** commands but only statistical information displays. Monitor commands display the selected statistics according to the configured number of times at the interval specified.

**Parameters** **neighbor** *ip-address* — Displays damping information for entries received from the BGP neighbor. Up to 5 IP addresses can be specified.

**interval** *seconds* — Configures the interval for each display in seconds.

**Default** 5 seconds

**Values** 3 — 60

**repeat** *repeat* — Configures how many times the command is repeated.

**Default** 10

**Values** 1 — 999

**absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.

**rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

### Sample Output

```
A:ALA-12>monitor>router>bgp# neighbor 180.0.0.10 interval 3 repeat 3 absolute
=====
Monitor statistics for BGP Neighbor 180.0.0.10
=====
At time t = 0 sec

Recd. Prefixes : 2 Sent Prefixes : 0
Recd. Paths : 0 Suppressed Paths : 0
Num of Flaps : 0
i/p Messages : 916 o/p Messages : 916
i/p Octets : 17510 o/p Octets : 17386
i/p Updates : 2 o/p Updates : 0

At time t = 3 sec
```



```

Recd. Prefixes : 0 Sent Prefixes : 0
Recd. Paths : 0 Suppressed Paths : 0
Num of Flaps : 0
i/p Messages : 0 o/p Messages : 0
i/p Octets : 0 o/p Octets : 0
i/p Updates : 0 o/p Updates : 0

At time t = 6 sec

Recd. Prefixes : 0 Sent Prefixes : 0
Recd. Paths : 0 Suppressed Paths : 0
Num of Flaps : 0
i/p Messages : 0 o/p Messages : 0
i/p Octets : 0 o/p Octets : 0
i/p Updates : 0 o/p Updates : 0

At time t = 9 sec

Recd. Prefixes : 0 Sent Prefixes : 0
Recd. Paths : 0 Suppressed Paths : 0
Num of Flaps : 0
i/p Messages : 0 o/p Messages : 0
i/p Octets : 6 o/p Octets : 0
i/p Updates : 0 o/p Updates : 0
=====
A:ALA-12>monitor>router>bgp#

```

## statistics

**Syntax** `statistics [interval seconds] [repeat repeat] [absolute | rate]`

**Context** `monitor>router>isis`

**Description** This command displays statistical IS-IS traffic information at the configured interval until the configured count is reached.

The first screen displays the current statistics related to the specified router statistics. The subsequent statistical information listed for each interval is displayed as a delta to the previous display. When the keyword **rate** is specified, the "rate per second" for each statistic is displayed instead of the delta.

Monitor commands are similar to **show** commands but only statistical information displays. Monitor commands display the selected statistics according to the configured number of times at the interval specified.

**Parameters** `interval seconds` — Configures the interval for each display in seconds.

**Default** 5 seconds

**Values** 3 — 60

`repeat repeat` — Configures how many times the command is repeated.

**Default** 10

**Values** 1 — 999

**absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.

## Monitor CLI Commands

**rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

### Sample Output

```
A:ALA-12>monitor>router>isis# statistics interval 3 repeat 2 absolute
=====
ISIS Statistics
=====
At time t = 0 sec (Base Statistics)

ISIS Instance : 1 SPF Runs : 2
Purge Initiated : 0 LSP Regens. : 11

CSPF Statistics

Requests : 0 Request Drops : 0
Paths Found : 0 Paths Not Found : 0

PDU Type Received Processed Dropped Sent Retransmitted

LSP 0 0 0 0 0
IIH 0 0 0 74 0
CSNP 0 0 0 0 0
PSNP 0 0 0 0 0
Unknown 0 0 0 0 0

At time t = 3 sec (Mode: Absolute)

ISIS Instance : 1 SPF Runs : 2
Purge Initiated : 0 LSP Regens. : 11

CSPF Statistics

Requests : 0 Request Drops : 0
Paths Found : 0 Paths Not Found : 0

PDU Type Received Processed Dropped Sent Retransmitted

LSP 0 0 0 0 0
IIH 0 0 0 74 0
CSNP 0 0 0 0 0
PSNP 0 0 0 0 0
Unknown 0 0 0 0 0

At time t = 6 sec (Mode: Absolute)

ISIS Instance : 1 SPF Runs : 2
Purge Initiated : 0 LSP Regens. : 11

CSPF Statistics

Requests : 0 Request Drops : 0
Paths Found : 0 Paths Not Found : 0

PDU Type Received Processed Dropped Sent Retransmitted

LSP 0 0 0 0 0
IIH 0 0 0 74 0
```

```

CSNP 0 0 0 0 0
PSNP 0 0 0 0 0
Unknown 0 0 0 0 0
=====

```

A:ALA-12>monitor>router>isis# **statistics interval 3 repeat 2 rate**

ISIS Statistics

At time t = 0 sec (Base Statistics)

```

ISIS Instance : 1 SPF Runs : 2
Purge Initiated : 0 LSP Regens. : 11

```

CSPF Statistics

```

Requests : 0 Request Drops : 0
Paths Found : 0 Paths Not Found : 0

```

```

PDU Type Received Processed Dropped Sent Retransmitted

LSP 0 0 0 0 0
IIH 0 0 0 76 0
CSNP 0 0 0 0 0
PSNP 0 0 0 0 0
Unknown 0 0 0 0 0

```

At time t = 3 sec (Mode: Rate)

```

ISIS Instance : 1 SPF Runs : 0
Purge Initiated : 0 LSP Regens. : 0

```

CSPF Statistics

```

Requests : 0 Request Drops : 0
Paths Found : 0 Paths Not Found : 0

```

```

PDU Type Received Processed Dropped Sent Retransmitted

LSP 0 0 0 0 0
IIH 0 0 0 0 0
CSNP 0 0 0 0 0
PSNP 0 0 0 0 0
Unknown 0 0 0 0 0

```

At time t = 6 sec (Mode: Rate)

```

ISIS Instance : 1 SPF Runs : 0
Purge Initiated : 0 LSP Regens. : 0

```

CSPF Statistics

```

Requests : 0 Request Drops : 0
Paths Found : 0 Paths Not Found : 0

```

```

PDU Type Received Processed Dropped Sent Retransmitted

LSP 0 0 0 0 0
IIH 0 0 0 1 0
CSNP 0 0 0 0 0

```

## Monitor CLI Commands

```
PSNP 0 0 0 0 0
Unknown 0 0 0 0 0
=====
A:ALA-12>monitor>router>isis#
```

### session

**Syntax** `session ldp-id [ldp-id...(up to 5 max)] [interval seconds] [repeat repeat] [absolute | rate]`

**Context** monitor>router>ldp

**Description** This command displays statistical information for LDP sessions at the configured interval until the configured count is reached.

The first screen displays the current statistics related to the specified LDP session(s). The subsequent statistical information listed for each interval is displayed as a delta to the previous display.

When the keyword **rate** is specified, the "rate per second" for each statistic is displayed instead of the delta.

Monitor commands are similar to **show** commands but only statistical information displays. Monitor commands display the selected statistics according to the configured number of times at the interval specified.

**Parameters** *ldp-id* — Specify the IP address of the LDP session to display.

**Values** *ip-address[:label-space]*  
*ip-address* — a.b.c.d  
*label-space* — [0..65535]

**interval seconds** — Configures the interval for each display in seconds.

**Default** 5 seconds

**Values** 3 — 60

**repeat repeat** — Configures how many times the command is repeated.

**Default** 10

**Values** 1 — 999

**absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.

**rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

### Sample Output

```
A:ALA-103>monitor>router>ldp# session 10.10.10.104 interval 3 repeat 3 absolute
=====
Monitor statistics for LDP Session 10.10.10.104
=====
 Sent Received

At time t = 0 sec (Base Statistics)

FECs 1 2
```

```

Hello 5288 5289
Keepalive 8225 8225
Init 1 1
Label Mapping 1 4
Label Request 0 0
Label Release 0 0
Label Withdraw 0 0
Label Abort 0 0
Notification 0 0
Address 1 1
Address Withdraw 0 0

```

-----  
At time t = 3 sec (Mode: Absolute)  
-----

```

FECs 1 2
Hello 5288 5289
Keepalive 8226 8226
Init 1 1
Label Mapping 1 4
Label Request 0 0
Label Release 0 0
Label Withdraw 0 0
Label Abort 0 0
Notification 0 0
Address 1 1
Address Withdraw 0 0

```

-----  
At time t = 6 sec (Mode: Absolute)  
-----

```

FECs 1 2
Hello 5288 5290
Keepalive 8226 8226
Init 1 1
Label Mapping 1 4
Label Request 0 0
Label Release 0 0
Label Withdraw 0 0
Label Abort 0 0
Notification 0 0
Address 1 1
Address Withdraw 0 0

```

-----  
At time t = 9 sec (Mode: Absolute)  
-----

```

FECs 1 2
Hello 5288 5290
Keepalive 8226 8226
Init 1 1
Label Mapping 1 4
Label Request 0 0
Label Release 0 0
Label Withdraw 0 0
Label Abort 0 0
Notification 0 0
Address 1 1
Address Withdraw 0 0

```

=====

```

A:ALA-12>monitor>router>ldp#

```

```

A:ALA-12>monitor>router>ldp# session 10.10.10.104 interval 3 repeat 3 rate

```

## Monitor CLI Commands

```

=====
Monitor statistics for LDP Session 10.10.10.104
=====

```

	Sent	Received
-----		
At time t = 0 sec (Base Statistics)		
-----		
FECs	1	2
Hello	5289	5290
Keepalive	8227	8227
Init	1	1
Label Mapping	1	4
Label Request	0	0
Label Release	0	0
Label Withdraw	0	0
Label Abort	0	0
Notification	0	0
Address	1	1
Address Withdraw	0	0
-----		
At time t = 3 sec (Mode: Rate)		
-----		
FECs	0	0
Hello	0	0
Keepalive	0	0
Init	0	0
Label Mapping	0	0
Label Request	0	0
Label Release	0	0
Label Withdraw	0	0
Label Abort	0	0
Notification	0	0
Address	0	0
Address Withdraw	0	0
-----		
At time t = 6 sec (Mode: Rate)		
-----		
FECs	0	0
Hello	0	0
Keepalive	0	0
Init	0	0
Label Mapping	0	0
Label Request	0	0
Label Release	0	0
Label Withdraw	0	0
Label Abort	0	0
Notification	0	0
Address	0	0
Address Withdraw	0	0
-----		
At time t = 9 sec (Mode: Rate)		
-----		
FECs	0	0
Hello	0	0
Keepalive	0	0
Init	0	0
Label Mapping	0	0
Label Request	0	0
Label Release	0	0
Label Withdraw	0	0
Label Abort	0	0

```

Notification 0 0
Address 0 0
Address Withdraw 0 0
=====
A:ALA-12>monitor>router>ldp#

```

## statistics

**Syntax** **statistics** [*interval seconds*] [*repeat repeat*] [*absolute | rate*]

**Context** monitor>router>ldp

**Description** Monitor statistics for LDP instance at the configured interval until the configured count is reached. The first screen displays the current statistics related to the LDP statistics. The subsequent statistical information listed for each interval is displayed as a delta to the previous display. When the keyword **rate** is specified, the "rate per second" for each statistic is displayed instead of the delta.

Monitor commands are similar to **show** commands but only statistical information displays. Monitor commands display the selected statistics according to the configured number of times at the interval specified.

**Parameters** **interval** *seconds* — Configures the interval for each display in seconds.

**Default** 5 seconds

**Values** 3 — 60

**repeat** *repeat* — Configures how many times the command is repeated.

**Default** 10

**Values** 1 — 999

**absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.

**rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

## Sample Output

```

A:ALA-12>monitor>router>ldp# statistics interval 3 repeat 3 absolute
=====
Monitor statistics for LDP instance
=====
At time t = 0 sec (Base Statistics)

Addr FECs Sent : 0 Addr FECs Recv : 0
Serv FECs Sent : 1 Serv FECs Recv : 2

At time t = 3 sec (Mode: Absolute)

Addr FECs Sent : 0 Addr FECs Recv : 0
Serv FECs Sent : 1 Serv FECs Recv : 2

At time t = 6 sec (Mode: Absolute)

```

## Monitor CLI Commands

```
Addr FECs Sent : 0 Addr FECs Recv : 0
Serv FECs Sent : 1 Serv FECs Recv : 2

At time t = 9 sec (Mode: Absolute)

Addr FECs Sent : 0 Addr FECs Recv : 0
Serv FECs Sent : 1 Serv FECs Recv : 2
=====
A:ALA-12>monitor>router>ldp#

A:ALA-12>monitor>router>ldp# statistics interval 3 repeat 3 rate
=====
Monitor statistics for LDP instance
=====
At time t = 0 sec (Base Statistics)

Addr FECs Sent : 0 Addr FECs Recv : 0
Serv FECs Sent : 1 Serv FECs Recv : 2

At time t = 3 sec (Mode: Rate)

Addr FECs Sent : 0 Addr FECs Recv : 0
Serv FECs Sent : 0 Serv FECs Recv : 0

At time t = 6 sec (Mode: Rate)

Addr FECs Sent : 0 Addr FECs Recv : 0
Serv FECs Sent : 0 Serv FECs Recv : 0

At time t = 9 sec (Mode: Rate)

Addr FECs Sent : 0 Addr FECs Recv : 0
Serv FECs Sent : 0 Serv FECs Recv : 0
=====
A:ALA-12>monitor>router>ldp#
```

## interface

**Syntax** `interface interface [interface...(up to 5 max)] [interval seconds] [repeat repeat] [absolute | rate]`

**Context** monitor>router>mpls

**Description** This command displays statistics for MPLS interfaces at the configured interval until the configured count is reached.

The first screen displays the current statistics related to the MPLS interface(s). The subsequent statistical information listed for each interval is displayed as a delta to the previous display. When the keyword **rate** is specified, the "rate per second" for each statistic is displayed instead of the delta.

Monitor commands are similar to **show** commands but only statistical information displays. Monitor commands display the selected statistics according to the configured number of times at the interval specified.

**Parameters** *interface* — Specify the interface's IP address (*ip-address*) or interface name (*ip-int-name*). Up to 5 interfaces can be specified. If the string contains special characters (#, \$, spaces, etc.), the entire string must be enclosed within double quotes.



**interval** *seconds* — Configures the interval for each display in seconds.

**Default** 11 seconds

**Values** 11 — 60

**repeat** *repeat* — Configures how many times the command is repeated.

**Default** 10

**Values** 1 — 999

**absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.

**rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

### Sample Output

```
A:ALA-12>monitor>router>mpls# interface system interval 3 repeat 3 absolute
=====
Monitor statistics for MPLS Interface "system"
=====
At time t = 0 sec (Base Statistics)

Transmitted : Pkts - 0 Octets - 0
Received : Pkts - 0 Octets - 0

At time t = 3 sec (Mode: Absolute)

Transmitted : Pkts - 0 Octets - 0
Received : Pkts - 0 Octets - 0

At time t = 6 sec (Mode: Absolute)

Transmitted : Pkts - 0 Octets - 0
Received : Pkts - 0 Octets - 0

At time t = 9 sec (Mode: Absolute)

Transmitted : Pkts - 0 Octets - 0
Received : Pkts - 0 Octets - 0
=====
A:ALA-12>monitor>router>mpls#
```

```
A:ALA-12>monitor>router>mpls# interface system interval 3 repeat 3 rate
=====
Monitor statistics for MPLS Interface "system"
=====

Transmitted : Pkts - 0 Octets - 0
Received : Pkts - 0 Octets - 0

At time t = 3 sec (Mode: Rate)

Transmitted : Pkts - 0 Octets - 0
Received : Pkts - 0 Octets - 0

```

## Monitor CLI Commands

```
At time t = 6 sec (Mode: Rate)

Transmitted : Pkts - 0 Octets - 0
Received : Pkts - 0 Octets - 0

At time t = 9 sec (Mode: Rate)

Transmitted : Pkts - 0 Octets - 0
Received : Pkts - 0 Octets - 0
=====
A:ALA-12>monitor>router>mpls#
```

## lsp-egress-statistics

**Syntax** `lsp-egress-stats lsp-name [interval seconds] [repeat repeat] [absolute | rate]`

**Context** monitor>router>mpls

**Description** This command displays egress statistics for LSP interfaces at the configured interval until the configured count is reached.

**Default** no lsp-egress-statistics

**Parameters** `repeat repeat` — Specifies how many times the command is repeated.

**Values** 10

**Values** 1 — 999

`interval seconds` — Specifies the interval for each display, in seconds.

**Values** 10

**Values** 3 — 60

**absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.

**rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

### Sample

```
B:Dut-C-cpm2# monitor router mpls lsp-egress-stats sample repeat 3 interval 10 absolute
=====
Monitor egress statistics for MPLS LSP "sample"

At time t = 0 sec (Base Statistics)

LSP Name : sample

Collect Stats : Enabled Accting Plcy. : 5
Adm State : Up PSB Match : True
FC BE
InProf Pkts : 0 OutProf Pkts : 551
InProf Octets : 0 OutProf Octets: 560918
FC L2
InProf Pkts : 0 OutProf Pkts : 551
```

```

InProf Octets : 0 OutProf Octets: 560918
FC AF
InProf Pkts : 551 OutProf Pkts : 0
InProf Octets : 560918 OutProf Octets : 0
FC L1
InProf Pkts : 551 OutProf Pkts : 0
InProf Octets : 560918 OutProf Octets : 0
FC H2
InProf Pkts : 0 OutProf Pkts : 551
InProf Octets : 0 OutProf Octets : 560918
FC EF
InProf Pkts : 0 OutProf Pkts : 551
InProf Octets : 0 OutProf Octets : 560918
FC H1
InProf Pkts : 0 OutProf Pkts : 551
InProf Octets : 0 OutProf Octets : 560918
FC NC
InProf Pkts : 551 OutProf Pkts : 0
InProf Octets : 560918 OutProf Octets : 0

```

```

At time t = 10 sec (Mode: Absolute)

```

```
LSP Name : sample

```

```

Collect Stats : Enabled Accting Plcy. : 5
Adm State : Up PSB Match : True
FC BE
InProf Pkts : 0 OutProf Pkts : 580
InProf Octets : 0 OutProf Octets : 590440
FC L2
InProf Pkts : 0 OutProf Pkts : 580
InProf Octets : 0 OutProf Octets : 590440
FC AF
InProf Pkts : 580 OutProf Pkts : 0
InProf Octets : 590440 OutProf Octets : 0
FC L1
InProf Pkts : 580 OutProf Pkts : 0
InProf Octets : 590440 OutProf Octets : 0
FC H2
InProf Pkts : 0 OutProf Pkts : 580
InProf Octets : 0 OutProf Octets : 590440
FC EF
InProf Pkts : 0 OutProf Pkts : 580
InProf Octets : 0 OutProf Octets : 590440
FC H1
InProf Pkts : 0 OutProf Pkts : 580
InProf Octets : 0 OutProf Octets : 590440
FC NC
InProf Pkts : 580 OutProf Pkts : 0
InProf Octets : 590440 OutProf Octets : 0

```

```

At time t = 20 sec (Mode: Absolute)

```

```
LSP Name : sample

```

```

Collect Stats : Enabled Accting Plcy. : 5
Adm State : Up PSB Match : True
FC BE
InProf Pkts : 0 OutProf Pkts : 609
InProf Octets : 0 OutProf Octets : 619962
FC L2

```

## Monitor CLI Commands

```
InProf Pkts : 0
InProf Octets : 0
FC AF
InProf Pkts : 609
InProf Octets : 619962
FC L1
InProf Pkts : 609
InProf Octets : 619962
FC H2
InProf Pkts : 0
InProf Octets : 0
FC EF
InProf Pkts : 0
InProf Octets : 0
FC H1
InProf Pkts : 0
InProf Octets : 0
FC NC
InProf Pkts : 609
InProf Octets : 619962
OutProf Pkts : 609
OutProf Octets: 619962
OutProf Pkts : 0
OutProf Octets: 0
OutProf Pkts : 0
OutProf Octets: 0
OutProf Pkts : 609
OutProf Octets: 619962
OutProf Pkts : 609
OutProf Octets: 619962
OutProf Pkts : 609
OutProf Octets: 619962
OutProf Pkts : 0
OutProf Octets: 0
```

-----  
At time t = 30 sec (Mode: Absolute)

-----  
LSP Name : sample  
-----

```
Collect Stats : Enabled
Adm State : Up
FC BE
InProf Pkts : 0
InProf Octets : 0
FC L2
InProf Pkts : 0
InProf Octets : 0
FC AF
InProf Pkts : 638
InProf Octets : 649484
FC L1
InProf Pkts : 638
InProf Octets : 649484
FC H2
InProf Pkts : 0
InProf Octets : 0
FC EF
InProf Pkts : 0
InProf Octets : 0
FC H1
InProf Pkts : 0
InProf Octets : 0
FC NC
InProf Pkts : 638
InProf Octets : 649484
Accting Plcy. : 5
PSB Match : True
OutProf Pkts : 638
OutProf Octets: 649484
OutProf Pkts : 638
OutProf Octets: 649484
OutProf Pkts : 0
OutProf Octets: 0
OutProf Pkts : 638
OutProf Octets: 649484
OutProf Pkts : 638
OutProf Octets: 649484
OutProf Pkts : 638
OutProf Octets: 649484
OutProf Pkts : 0
OutProf Octets: 0
```

=====  
B:Dut-C-cpm2#

## lsp-ingress-statistics

**Syntax** `lsp-ingress-stats lsp lsp-name sender sender-address [interval seconds] [repeat repeat] [absolute | rate]`

**Context** monitor>router>mpls

**Description** This command displays ingress statistics for LSP interfaces at the configured interval until the configured count is reached.

**Parameters** `repeat repeat` — Specifies how many times the command is repeated.

**Values** 10

**Values** 1 — 999

`interval seconds` — Specifies the interval for each display, in seconds.

**Values** 10

**Values** 3 — 60

**absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.

**rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

### Sample Output

```
B:Dut-C-cpm2# monitor router mpls lsp-ingress-stats lsp sample 1.1.1.1 repeat 3 interval 10
absolute
=====
Monitor ingress statistics for MPLS LSP "sample"

At time t = 0 sec (Base Statistics)

LSP Name : sample
Sender : 1.1.1.1

Collect Stats : Enabled Accting Plcy. : None
Adm State : Up PSB Match : True
FC BE
InProf Pkts : 539 OutProf Pkts : 0
InProf Octets : 548702 OutProf Octets: 0
FC L2
InProf Pkts : 0 OutProf Pkts : 539
InProf Octets : 0 OutProf Octets: 548702
FC AF
InProf Pkts : 0 OutProf Pkts : 0
InProf Octets : 0 OutProf Octets: 0
FC L1
InProf Pkts : 1078 OutProf Pkts : 0
InProf Octets : 1097404 OutProf Octets: 0
FC H2
InProf Pkts : 0 OutProf Pkts : 539
InProf Octets : 0 OutProf Octets: 548702
FC EF
InProf Pkts : 539 OutProf Pkts : 0
```

## Monitor CLI Commands

```
InProf Octets : 548702 OutProf Octets: 0
FC H1
InProf Pkts : 539 OutProf Pkts : 0
InProf Octets : 548702 OutProf Octets: 0
FC NC
InProf Pkts : 0 OutProf Pkts : 539
InProf Octets : 0 OutProf Octets: 548702
```

-----  
At time t = 10 sec (Mode: Absolute)  
-----

```
LSP Name : sample
Sender : 1.1.1.1
```

```

Collect Stats : Enabled Accting Plcy. : None
Adm State : Up PSB Match : True
FC BE
InProf Pkts : 568 OutProf Pkts : 0
InProf Octets : 578224 OutProf Octets: 0
FC L2
InProf Pkts : 0 OutProf Pkts : 568
InProf Octets : 0 OutProf Octets: 578224
FC AF
InProf Pkts : 0 OutProf Pkts : 0
InProf Octets : 0 OutProf Octets: 0
FC L1
InProf Pkts : 1136 OutProf Pkts : 0
InProf Octets : 1156448 OutProf Octets: 0
FC H2
InProf Pkts : 0 OutProf Pkts : 568
InProf Octets : 0 OutProf Octets: 578224
FC EF
InProf Pkts : 568 OutProf Pkts : 0
InProf Octets : 578224 OutProf Octets: 0
FC H1
InProf Pkts : 568 OutProf Pkts : 0
InProf Octets : 578224 OutProf Octets: 0
FC NC
InProf Pkts : 0 OutProf Pkts : 568
InProf Octets : 0 OutProf Octets: 578224
```

-----  
At time t = 20 sec (Mode: Absolute)  
-----

```
LSP Name : sample
Sender : 1.1.1.1
```

```

Collect Stats : Enabled Accting Plcy. : None
Adm State : Up PSB Match : True
FC BE
InProf Pkts : 597 OutProf Pkts : 0
InProf Octets : 607746 OutProf Octets: 0
FC L2
InProf Pkts : 0 OutProf Pkts : 597
InProf Octets : 0 OutProf Octets: 607746
FC AF
InProf Pkts : 0 OutProf Pkts : 0
InProf Octets : 0 OutProf Octets: 0
FC L1
InProf Pkts : 1194 OutProf Pkts : 0
InProf Octets : 1215492 OutProf Octets: 0
FC H2
InProf Pkts : 0 OutProf Pkts : 597
```

```

InProf Octets : 0 OutProf Octets: 607746
FC EF
InProf Pkts : 597 OutProf Pkts : 0
InProf Octets : 607746 OutProf Octets : 0
FC H1
InProf Pkts : 597 OutProf Pkts : 0
InProf Octets : 607746 OutProf Octets : 0
FC NC
InProf Pkts : 0 OutProf Pkts : 597
InProf Octets : 0 OutProf Octets : 607746

```

```

At time t = 30 sec (Mode: Absolute)

```

```

LSP Name : sample
Sender : 1.1.1.1

```

```

Collect Stats : Enabled Accting Plcy. : None
Adm State : Up PSB Match : True
FC BE
InProf Pkts : 627 OutProf Pkts : 0
InProf Octets : 638286 OutProf Octets: 0
FC L2
InProf Pkts : 0 OutProf Pkts : 627
InProf Octets : 0 OutProf Octets: 638286
FC AF
InProf Pkts : 0 OutProf Pkts : 0
InProf Octets : 0 OutProf Octets: 0
FC L1
InProf Pkts : 1254 OutProf Pkts : 0
InProf Octets : 1276572 OutProf Octets: 0
FC H2
InProf Pkts : 0 OutProf Pkts : 627
InProf Octets : 0 OutProf Octets: 638286
FC EF
InProf Pkts : 627 OutProf Pkts : 0
InProf Octets : 638286 OutProf Octets: 0
FC H1
InProf Pkts : 627 OutProf Pkts : 0
InProf Octets : 638286 OutProf Octets: 0
FC NC
InProf Pkts : 0 OutProf Pkts : 627
InProf Octets : 0 OutProf Octets: 638286

```

```
B:Dut-C-cpm2#
```

## ospf

**Syntax** `ospf [ospf-instance]`

**Context** `monitor>router>ospf`

**Description** This command enables the context to configure monitor commands for the OSPF instance.

**Parameters** `ospf-instance` — Specifies the OSPF instance.

**Values** 1 — 31

## ospf3

**Syntax** **ospf3**

**Context** monitor>router

**Description** This command enables the context to configure monitor commands for the OSPF3 instance.

## interface

**Syntax** **interface** *interface* [*interface...*(up to 5 max)] [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]

**Context** monitor>router>ospf  
monitor>router>ospf3

**Description** This command displays statistics for OSPF interfaces at the configured interval until the configured count is reached.

The first screen displays the current statistics related to the OSPF interface(s). The subsequent statistical information listed for each interval is displayed as a delta to the previous display.

When the keyword **rate** is specified, the “rate per second” for each statistic is displayed instead of the delta.

Monitor commands are similar to **show** commands but only statistical information displays. Monitor commands display the selected statistics according to the configured number of times at the interval specified.

**Parameters** *interface* — Specify the interface's IP address (*ip-address*) or interface name (*ip-int-name*). Up to 5 interfaces can be specified. If the string contains special characters (#, \$, spaces, etc.), the entire string must be enclosed within double quotes.

**interval** *seconds* — Configures the interval for each display in seconds.

**Default** 5 seconds

**Values** 3 — 60

**repeat** *repeat* — Configures how many times the command is repeated.

**Default** 10

**Values** 1 — 999

**absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.

**rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

### Sample Output

```
A:ALA-12>monitor>router>ospf# interface to-104 interval 3 repeat 3 absolute
=====
Monitor statistics for OSPF Interface "to-104"
=====
At time t = 0 sec (Base Statistics)

```



```

Tot Rx Packets : 8379
Rx Hellos : 8225
Rx DBDs : 6
Rx LSRs : 2
Rx LSUs : 55
Rx LS Acks : 91
Retransmits : 2
Bad Networks : 0
Bad Areas : 0
Bad Auth Types : 0
Bad Neighbors : 0
Bad Lengths : 0
Bad Dead Int. : 0
Bad Versions : 0

Tot Tx Packets : 8528
Tx Hellos : 8368
Tx DBDs : 12
Tx LSRs : 1
Tx LSUs : 95
Tx LS Acks : 52
Discards : 0
Bad Virt Links : 0
Bad Dest Adrs : 0
Auth Failures : 0
Bad Pkt Types : 0
Bad Hello Int. : 0
Bad Options : 0

```

-----  
At time t = 3 sec (Mode: Absolute)

```

Tot Rx Packets : 8379
Rx Hellos : 8225
Rx DBDs : 6
Rx LSRs : 2
Rx LSUs : 55
Rx LS Acks : 91
Retransmits : 2
Bad Networks : 0
Bad Areas : 0
Bad Auth Types : 0
Bad Neighbors : 0
Bad Lengths : 0
Bad Dead Int. : 0
Bad Versions : 0

Tot Tx Packets : 8528
Tx Hellos : 8368
Tx DBDs : 12
Tx LSRs : 1
Tx LSUs : 95
Tx LS Acks : 52
Discards : 0
Bad Virt Links : 0
Bad Dest Adrs : 0
Auth Failures : 0
Bad Pkt Types : 0
Bad Hello Int. : 0
Bad Options : 0

```

-----  
At time t = 6 sec (Mode: Absolute)

```

Tot Rx Packets : 8380
Rx Hellos : 8226
Rx DBDs : 6
Rx LSRs : 2
Rx LSUs : 55
Rx LS Acks : 91
Retransmits : 2
Bad Networks : 0
Bad Areas : 0
Bad Auth Types : 0
Bad Neighbors : 0
Bad Lengths : 0
Bad Dead Int. : 0
Bad Versions : 0

Tot Tx Packets : 8529
Tx Hellos : 8369
Tx DBDs : 12
Tx LSRs : 1
Tx LSUs : 95
Tx LS Acks : 52
Discards : 0
Bad Virt Links : 0
Bad Dest Adrs : 0
Auth Failures : 0
Bad Pkt Types : 0
Bad Hello Int. : 0
Bad Options : 0

```

-----  
At time t = 9 sec (Mode: Absolute)

```

Tot Rx Packets : 8380
Rx Hellos : 8226
Rx DBDs : 6
Rx LSRs : 2
Rx LSUs : 55
Rx LS Acks : 91
Retransmits : 2
Bad Networks : 0
Bad Areas : 0
Bad Auth Types : 0

Tot Tx Packets : 8529
Tx Hellos : 8369
Tx DBDs : 12
Tx LSRs : 1
Tx LSUs : 95
Tx LS Acks : 52
Discards : 0
Bad Virt Links : 0
Bad Dest Adrs : 0
Auth Failures : 0

```

## Monitor CLI Commands

```
Bad Neighbors : 0
Bad Lengths : 0
Bad Dead Int. : 0
Bad Versions : 0
Bad Pkt Types : 0
Bad Hello Int. : 0
Bad Options : 0
```

```
=====
A:ALA-12>monitor>router>ospf#
```

```
A:ALA-12>monitor>router>ospf# interface to-104 interval 3 repeat 3 rate
```

```
=====
Monitor statistics for OSPF Interface "to-104"
=====
```

```
At time t = 0 sec (Base Statistics)
```

```

Tot Rx Packets : 8381
Rx Hellos : 8227
Rx DBDs : 6
Rx LSRs : 2
Rx LSUs : 55
Rx LS Acks : 91
Retransmits : 2
Bad Networks : 0
Bad Areas : 0
Bad Auth Types : 0
Bad Neighbors : 0
Bad Lengths : 0
Bad Dead Int. : 0
Bad Versions : 0
Tot Tx Packets : 8530
Tx Hellos : 8370
Tx DBDs : 12
Tx LSRs : 1
Tx LSUs : 95
Tx LS Acks : 52
Discards : 0
Bad Virt Links : 0
Bad Dest Addrs : 0
Auth Failures : 0
Bad Pkt Types : 0
Bad Hello Int. : 0
Bad Options : 0
```

```

At time t = 3 sec (Mode: Rate)
```

```

Tot Rx Packets : 0
Rx Hellos : 0
Rx DBDs : 0
Rx LSRs : 0
Rx LSUs : 0
Rx LS Acks : 0
Retransmits : 0
Bad Networks : 0
Bad Areas : 0
Bad Auth Types : 0
Bad Neighbors : 0
Bad Lengths : 0
Bad Dead Int. : 0
Bad Versions : 0
Tot Tx Packets : 0
Tx Hellos : 0
Tx DBDs : 0
Tx LSRs : 0
Tx LSUs : 0
Tx LS Acks : 0
Discards : 0
Bad Virt Links : 0
Bad Dest Addrs : 0
Auth Failures : 0
Bad Pkt Types : 0
Bad Hello Int. : 0
Bad Options : 0
```

```

At time t = 6 sec (Mode: Rate)
```

```

Tot Rx Packets : 0
Rx Hellos : 0
Rx DBDs : 0
Rx LSRs : 0
Rx LSUs : 0
Rx LS Acks : 0
Retransmits : 0
Bad Networks : 0
Bad Areas : 0
Bad Auth Types : 0
Bad Neighbors : 0
Bad Lengths : 0
Bad Dead Int. : 0
Tot Tx Packets : 0
Tx Hellos : 0
Tx DBDs : 0
Tx LSRs : 0
Tx LSUs : 0
Tx LS Acks : 0
Discards : 0
Bad Virt Links : 0
Bad Dest Addrs : 0
Auth Failures : 0
Bad Pkt Types : 0
Bad Hello Int. : 0
Bad Options : 0
```

```

Bad Versions : 0

At time t = 9 sec (Mode: Rate)

Tot Rx Packets : 0 Tot Tx Packets : 0
Rx Hellos : 0 Tx Hellos : 0
Rx DBDs : 0 Tx DBDs : 0
Rx LSRs : 0 Tx LSRs : 0
Rx LSUs : 0 Tx LSUs : 0
Rx LS Acks : 0 Tx LS Acks : 0
Retransmits : 0 Discards : 0
Bad Networks : 0 Bad Virt Links : 0
Bad Areas : 0 Bad Dest Adrs : 0
Bad Auth Types : 0 Auth Failures : 0
Bad Neighbors : 0 Bad Pkt Types : 0
Bad Lengths : 0 Bad Hello Int. : 0
Bad Dead Int. : 0 Bad Options : 0
Bad Versions : 0
=====
A:ALA-12>monitor>router>ospf#

```

## neighbor

**Syntax** **neighbor** *ip-address* [*ip-address...*(up to 5 max)] [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]

**Context** monitor>router>ospf

**Description** This command displays statistical OSPF or OSPF3 neighbor information at the configured interval until the configured count is reached.

The first screen displays the current statistics related to the specified OSPF neighbor(s). The subsequent statistical information listed for each interval is displayed as a delta to the previous display.

When the keyword **rate** is specified, the "rate per second" for each statistic is displayed instead of the delta.

Monitor commands are similar to **show** commands but only statistical information displays. Monitor commands display the selected statistics according to the configured number of times at the interval specified.

**Parameters** **neighbor** *ip-address* — The IP address to display information for entries received from the specified OSPF neighbor. Up to 5 IP addresses can be specified.

**interval** *seconds* — Configures the interval for each display in seconds.

**Default** 5 seconds

**Values** 3 — 60

**repeat** *repeat* — Configures how many times the command is repeated.

**Default** 10

**Values** 1 — 999

**absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.

**rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

**Sample Output**

```
A:ALA-12>monitor>router# ospf neighbor 10.0.0.104 interval 3 repeat 3 absolute
=====
Monitor statistics for OSPF Neighbor 10.0.0.104
=====
At time t = 0 sec (Base Statistics)

Bad Nbr States : 0 LSA Inst fails : 0
Bad Seq Nums : 0 Bad MTUs : 0
Bad Packets : 0 LSA not in LSDB : 0
Option Mismatches: 0 Nbr Duplicates : 0

At time t = 3 sec (Mode: Absolute)

Bad Nbr States : 0 LSA Inst fails : 0
Bad Seq Nums : 0 Bad MTUs : 0
Bad Packets : 0 LSA not in LSDB : 0
Option Mismatches: 0 Nbr Duplicates : 0

At time t = 6 sec (Mode: Absolute)

Bad Nbr States : 0 LSA Inst fails : 0
Bad Seq Nums : 0 Bad MTUs : 0
Bad Packets : 0 LSA not in LSDB : 0
Option Mismatches: 0 Nbr Duplicates : 0

At time t = 9 sec (Mode: Absolute)

Bad Nbr States : 0 LSA Inst fails : 0
Bad Seq Nums : 0 Bad MTUs : 0
Bad Packets : 0 LSA not in LSDB : 0
Option Mismatches: 0 Nbr Duplicates : 0
=====
A:ALA-12>monitor>router#
```

```
A:ALA-12>monitor>router# ospf neighbor 10.0.0.104 interval 3 repeat 3 absolute
=====
Monitor statistics for OSPF Neighbor 10.0.0.104
=====
At time t = 0 sec (Base Statistics)

Bad Nbr States : 0 LSA Inst fails : 0
Bad Seq Nums : 0 Bad MTUs : 0
Bad Packets : 0 LSA not in LSDB : 0
Option Mismatches: 0 Nbr Duplicates : 0

At time t = 3 sec (Mode: Rate)

Bad Nbr States : 0 LSA Inst fails : 0
Bad Seq Nums : 0 Bad MTUs : 0
Bad Packets : 0 LSA not in LSDB : 0
Option Mismatches: 0 Nbr Duplicates : 0

```

```

At time t = 6 sec (Mode: Rate)

Bad Nbr States : 0 LSA Inst fails : 0
Bad Seq Nums : 0 Bad MTUs : 0
Bad Packets : 0 LSA not in LSDB : 0
Option Mismatches: 0 Nbr Duplicates : 0

At time t = 9 sec (Mode: Rate)

Bad Nbr States : 0 LSA Inst fails : 0
Bad Seq Nums : 0 Bad MTUs : 0
Bad Packets : 0 LSA not in LSDB : 0
Option Mismatches: 0 Nbr Duplicates : 0
=====
A:ALA-12>monitor>router#

```

## neighbor

**Syntax** **neighbor** [*router-id*] [*interface-name*] [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]

**Context** monitor>router>ospf3

**Description** This command displays statistical OSPF or OSPF3 neighbor information at the configured interval until the configured count is reached.

The first screen displays the current statistics related to the specified OSPF neighbor(s). The subsequent statistical information listed for each interval is displayed as a delta to the previous display.

When the keyword **rate** is specified, the "rate per second" for each statistic is displayed instead of the delta.

Monitor commands are similar to **show** commands but only statistical information displays. Monitor commands display the selected statistics according to the configured number of times at the interval specified.

**Parameters** **neighbor** *ip-address* — The IP address to display information for entries received from the specified OSPF neighbor. Up to 5 IP addresses can be specified.

**interval** *seconds* — Configures the interval for each display in seconds.

**Default** 5 seconds

**Values** 3 — 60

**repeat** *repeat* — Configures how many times the command is repeated.

**Default** 10

**Values** 1 — 999

**absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.

**rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

*router-id* — The router ID for an existing IP interface.

## virtual-link

<b>Syntax</b>	<b>virtual-link</b> <i>nbr-rtr-id</i> <b>area</b> <i>area-id</i> [ <b>interval</b> <i>seconds</i> ] [ <b>repeat</b> <i>repeat</i> ] [ <b>absolute</b>   <b>rate</b> ]
<b>Context</b>	monitor>router>ospf monitor>router>ospf3
<b>Description</b>	<p>This command displays statistical OSPF virtual link information at the configured interval until the configured count is reached.</p> <p>The first screen displays the current statistics related to the specified neighbor(s). The subsequent statistical information listed for each interval is displayed as a delta to the previous display.</p> <p>When the keyword <b>rate</b> is specified, the "rate per second" for each statistic is displayed instead of the delta.</p> <p>Monitor commands are similar to <b>show</b> commands but only statistical information displays. Monitor commands display the selected statistics according to the configured number of times at the interval specified.</p>
<b>Parameters</b>	<p><i>nbr-rtr-id</i> — The IP address to uniquely identify a neighboring router in the autonomous system.</p> <p><b>area</b> <i>area-id</i> — The OSPF area ID, expressed in dotted decimal notation or as a 32-bit decimal integer.</p> <p><b>interval</b> <i>seconds</i> — Configures the interval for each display in seconds.</p> <p><b>Default</b> 5 seconds</p> <p><b>Values</b> 3 — 60</p> <p><b>repeat</b> <i>repeat</i> — Configures how many times the command is repeated.</p> <p><b>Default</b> 10</p> <p><b>Values</b> 1 — 999</p> <p><b>absolute</b> — When the <b>absolute</b> keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.</p> <p><b>rate</b> — When the <b>rate</b> keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.</p>

## virtual-neighbor

<b>Syntax</b>	<b>virtual-neighbor</b> <i>nbr-rtr-id</i> <b>area</b> <i>area-id</i> [ <b>interval</b> <i>seconds</i> ] [ <b>repeat</b> <i>repeat</i> ] [ <b>absolute</b>   <b>rate</b> ]
<b>Context</b>	monitor>router>ospf monitor>router>ospf3
<b>Description</b>	<p>This command displays statistical OSPF virtual neighbor information at the configured interval until the configured count is reached.</p> <p>The first screen displays the current statistics related to the specified OSPF virtual neighbor router. The subsequent statistical information listed for each interval is displayed as a delta to the previous display.</p> <p>When the keyword <b>rate</b> is specified, the "rate per second" for each statistic is displayed instead of the delta.</p>

Monitor commands are similar to **show** commands but only statistical information displays. Monitor commands display the selected statistics according to the configured number of times at the interval specified.

- Parameters**
- nbr-rtr-id* — The IP address to uniquely identify a neighboring router in the autonomous system.
  - area** *area-id* — The OSPF area ID, expressed in dotted decimal notation or as a 32-bit decimal integer.
  - interval** *seconds* — Configures the interval for each display in seconds.
    - Default** 5 seconds
    - Values** 3 — 60
  - repeat** *repeat* — Configures how many times the command is repeated.
    - Default** 10
    - Values** 1 — 999
  - absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.
  - rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

## group

- Syntax** **group** *grp-ip-address* [**source** *ip-address*] [**interval** *interval*] [**repeat** *repeat*] [**absolute** | **rate**]
- Context** monitor>router>pim
- Description** This command monitors statistics for a PIM source group.
- Parameters**
  - grp-ip-address* — The IP address of an multicast group that identifies a set of recipients that are interested in a particular data stream.
  - source** *ip-address* — The source IP address to use in the ping requests in dotted decimal notation.
    - Default** The IP address of the egress IP interface.
    - Values** 0.0.0.0 — 255.255.255.255
  - interval** *interval* — Configures the interval for each display in seconds.
    - Default** 10 seconds
    - Values** 10|20|30|40|50|60
  - repeat** *repeat* — Configures how many times the command is repeated.
    - Default** 10
    - Values** 1 — 999
  - absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.
  - rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

## neighbor

**Syntax** **neighbor** *neighbor* [*neighbor...*(up to 5 max)] [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]

**Context** monitor>router>rip

**Description** This command displays statistical RIP neighbor information at the configured interval until the configured count is reached.

The first screen displays the current statistics related to the specified RIP neighbor(s). The subsequent statistical information listed for each interval is displayed as a delta to the previous display. When the keyword **rate** is specified, the "rate per second" for each statistic is displayed instead of the delta.

Monitor commands are similar to **show** commands but only statistical information displays. Monitor commands display the selected statistics according to the configured number of times at the interval specified.

**Parameters** **neighbor** *ip-address* — The IP address to display information for entries received from the specified RIP neighbor. Up to 5 IP addresses can be displayed.

**interval** *seconds* — Configures the interval for each display in seconds.

**Default** 5 seconds

**Values** 3 — 60

**repeat** *repeat* — Configures how many times the command is repeated.

**Default** 10

**Values** 1 — 999

**absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.

**rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

## interface

**Syntax** **interface** *interface* [*interface...*(up to 5 max)][**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]

**Context** monitor>router>rsvp

**Description** This command displays statistics for RSVP interfaces at the configured interval until the configured count is reached.

The first screen displays the current statistics related to the RSVP interface(s). The subsequent statistical information listed for each interval is displayed as a delta to the previous display. When the keyword **rate** is specified, the "rate per second" for each statistic is displayed instead of the delta.

Monitor commands are similar to **show** commands but only statistical information displays. Monitor commands display the selected statistics according to the configured number of times at the interval specified.



- Parameters** *interface* — Specify the interface's IP address (*ip-address*) or interface name (*ip-int-name*). Up to 5 interfaces can be specified. If the string contains special characters (#, \$, spaces, etc.), the entire string must be enclosed within double quotes.
- interval** *seconds* — Configures the interval for each display in seconds.
- Default** 5 seconds
- Values** 3 — 60
- repeat** *repeat* — Configures how many times the command is repeated.
- Default** 10
- Values** 1 — 999
- absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.
- rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

## service

- Syntax** **service**
- Context** monitor
- Description** This command enables the context to configure criteria to monitor specific service SAP criteria.

## id

- Syntax** **id** *service-id*
- Context** monitor>service
- Description** This command displays statistics for a specific service, specified by the *service-id*, at the configured interval until the configured count is reached.
- The first screen displays the current statistics related to the *service-id*. The subsequent statistical information listed for each interval is displayed as a delta to the previous display. When the keyword **rate** is specified, the "rate per second" for each statistic is displayed instead of the delta.
- Monitor commands are similar to **show** commands but only statistical information displays. Monitor commands display the selected statistics according to the configured number of times at the interval specified.
- Parameters** *service-id* — The unique service identification number which identifies the service in the service domain.

## sap

**Syntax** `sap sap-id [interval seconds] [repeat repeat] [absolute | rate]`

**Context** `monitor>service>id service-id`

**Description** This command monitors statistics for a SAP associated with this service.

This command displays statistics for a specific SAP, identified by the *port-id* and encapsulation value, at the configured interval until the configured count is reached.

The first screen displays the current statistics related to the SAP. The subsequent statistical information listed for each interval is displayed as a delta to the previous display. When the keyword **rate** is specified, the “rate per second” for each statistic is displayed instead of the delta.

Monitor commands are similar to **show** commands but only statistical information displays. Monitor commands display the selected statistics according to the configured number of times at the interval specified.

**Parameters** *sap-id* — Specifies the physical port identifier portion of the SAP definition.

<b>Values</b>	<i>sap-id</i> :	null [port-id   bundle-id   bpgrp-id   lag-id   aps-id] dot1q [port-id   bundle-id   bpgrp-id   lag-id   aps-id]:qtag1 qinq [port-id   bundle-id   bpgrp-id   lag-id]:qtag1.qtag2 atm [port-id   aps-id   bundle-id   bpgrp-id][:vpi/vci   vpi   vpi1.vpi2] frame [port-id   bundle-id]:dlci cisco-hdlc slot/mda/port.channel  port-id slot/mda/port[.channel] aps-id aps-group-id[.channel] aps keyword group-id 1 — 16 bundle-type-slot/mda.bundle-num bundle keyword type ima, fr, ppp bundle-num 1 — 128  lag-id lag-id lag keyword id 1 — 64  qtag1 0 — 4094 qtag2 *, 0 — 4094 vpi NNI 0 — 4095 UNI 0 — 255  vci 1, 2, 5 — 65535 dlci 16 — 1022
---------------	-----------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

*port-id* — Specifies the physical port ID in the *slot/mda/port* format.

If the card in the slot has Media Dependent Adapters (MDAs) installed, the *port-id* must be in the slot\_number/MDA\_number/port\_number format. For example 1/2/3 specifies port 3 on MDA 2 in slot 1.

The *port-id* must reference a valid port type. When the *port-id* parameter represents SONET/SDH and TDM channels, the port ID must include the channel ID. A period “.” separates the physical port from the *channel-id*. The port must be configured as an access port.

If the SONET/SDH port is configured as clear-channel then only the port is specified.

*bundle-id* — Specifies the multilink bundle to be associated with this IP interface. The **bundle** keyword must be entered at the beginning of the parameter.

The command syntax must be configured as follows:

```
bundle-id: bundle-type-slot-id/mda-slot.bundle-num
bundle-id value range: 1 — 128
```

For example:

```
*A:ALA-12>config# port bundle-ppp-1/1.1
*A:ALA-12>config>port# multilink-bundle
```

*qtag1, qtag2* — Specifies the encapsulation value used to identify the SAP on the port or sub-port. If this parameter is not specifically defined, the default value is 0.

```
Values qtag1: 0 — 4094
 qtag2: * | 0 — 4094
```

The values depends on the encapsulation type configured for the interface. The following table describes the allowed values for the port and encapsulation types.

Port Type	Encap-Type	Allowed Values	Comments
Ethernet	Null	0	The SAP is identified by the port.
Ethernet	Dot1q	0 — 4094	The SAP is identified by the 802.1Q tag on the port. Note that a 0 qtag1 value also accepts untagged packets on the dot1q port.
Ethernet	QinQ	qtag1: 0 — 4094 qtag2: 0 — 4094	The SAP is identified by two 802.1Q tags on the port. Note that a 0 qtag1 value also accepts untagged packets on the dot1q port.
SONET/SDH	IPCP	-	The SAP is identified by the channel. No BCP is deployed and all traffic is IP.
SONET/SDH	BCP-Null	0	The SAP is identified with a single service on the channel. Tags are assumed to be part of the customer packet and not a service delimiter.
SONET/SDH	BCP-Dot1q	0 — 4094	The SAP is identified by the 802.1Q tag on the channel.

**interval** *seconds* — Configures the interval for each display in seconds.

**Default** 11 seconds

**Values** 11 — 60

**repeat** *repeat* — Configures how many times the command is repeated.

**Default** 10

**Values** 1 — 999

**absolute** — When the **absolute** keyword is specified, the absolute rate-per-second value for each statistic is displayed.

## Monitor CLI Commands

**rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

### Sample Output

```
*A:cses-A13# monitor service id 88 sap 1/1/2:0
=====
Monitor statistics for Service 88 SAP 1/1/2:0
=====

At time t = 0 sec (Base Statistics)

Sap Statistics

Last Cleared Time : N/A
 Packets Octets
Forwarding Engine Stats
Dropped : 0 0
Off. HiPrio : 0 0
Off. LowPrio : 0 0
Off. Uncolor : 0 0

Queueing Stats(Ingress QoS Policy 1)
Dro. HiPrio : 0 0
Dro. LowPrio : 0 0
For. InProf : 0 0
For. OutProf : 0 0

Queueing Stats(Egress QoS Policy 1)
Dro. InProf : 0 0
Dro. OutProf : 0 0
For. InProf : 0 0
For. OutProf : 0 0

Sap per Queue Stats

 Packets Octets
Ingress Queue 1 (Unicast) (Priority)
Off. HiPrio : 0 0
Off. LoPrio : 0 0
Dro. HiPrio : 0 0
Dro. LoPrio : 0 0
For. InProf : 0 0
For. OutProf : 0 0
```

## sdp

**Syntax** **sdp** {*sdp-id* | **far-end** *ip-address*} [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]

**Context** monitor>service>id *service-id*

**Description** This command monitors statistics for a SDP binding associated with this service.

**Parameters** *sdp-id* — Specify the SDP identifier.

**Values** 1 — 17407

**far-end** *ip-address* — The system address of the far-end 7710 SR for the SDP in dotted decimal notation.

**interval** *seconds* — Configures the interval for each display in seconds.

**Default** 11 seconds

**Values** 11 — 60

**repeat** *repeat* — Configures how many times the command is repeated.

**Default** 10

**Values** 1 — 999

**absolute** — When the **absolute** keyword is specified, the absolute rate-per-second value for each statistic is displayed.

**rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

### Sample Output

```
A:ALA-12# monitor service id 100 sdp 10 repeat 3
=====
Monitor statistics for Service 100 SDP binding 10
=====
At time t = 0 sec (Base Statistics)

I. Fwd. Pkts. : 0 I. Dro. Pkts. : 0
E. Fwd. Pkts. : 0 E. Fwd. Octets : 0

At time t = 11 sec (Mode: Delta)

I. Fwd. Pkts. : 0 I. Dro. Pkts. : 0
E. Fwd. Pkts. : 0 E. Fwd. Octets : 0

At time t = 22 sec (Mode: Delta)

I. Fwd. Pkts. : 0 I. Dro. Pkts. : 0
E. Fwd. Pkts. : 0 E. Fwd. Octets : 0

At time t = 33 sec (Mode: Delta)

I. Fwd. Pkts. : 0 I. Dro. Pkts. : 0
E. Fwd. Pkts. : 0 E. Fwd. Octets : 0
=====
A:ALA-12#
```

## Monitor CLI Commands

### vrrp

**Syntax** vrrp

**Context** monitor>router

**Description** This command enables the context to configure criteria to monitor VRRP statistical information for a VRRP enabled on a specific interface.

### instance

**Syntax** instance interface *interface-name* vr-id *virtual-router-id* [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]

**Context** monitor>router>vrrp

**Description** Monitor statistics for a VRRP instance.

**Parameters** *interface-name* — The name of the existing IP interface on which VRRP is configured.  
*vr-id* *virtual-router-id* — The virtual router ID for the existing IP interface, expressed as a decimal integer.  
**interval** *seconds* — Configures the interval for each display in seconds.  
**Default** 5 seconds  
**Values** 3 — 60  
**repeat** *repeat* — Configures how many times the command is repeated.  
**Default** 10  
**Values** 1 — 999  
**absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.  
**rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

### subscriber

**Syntax** subscriber *sub-ident-string* sap *sap-id* sla-profile *sla-profile-name* [**base** | **ingress-queue-id** *ingress-queue-id* | **egress-queue-id** *egress-queue-id*] [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]

**Context** monitor>service

**Description** This command monitors statistics for a subscriber.

**Parameters** *sub-ident-string* — Specifies an existing subscriber identification profile to monitor.  
*sap* *sap-id* — Specifies the physical port identifier portion of the SAP definition.  
**Values** dlcI 16 — 1022

**sla-profile** *sla-profile-name* — Specifies an existing SLA profile.

**interval** *seconds* — Configures the interval for each display in seconds

**Default** 11

**Values** 11 — 60

**repeat** *repeat* — Configures how many times the command is repeated.

**Default** 10

**Values** 1 — 999

**absolute** — When the **absolute** keyword is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.

**Default** mode delta

**rate** — When the **rate** keyword is specified, the rate-per-second for each statistic is displayed instead of the delta.

**base** — Monitor base statistics.

**ingress-queue-id** *ingress-queue-id* — Monitors statistics for this queue.

**Values** 1 — 32

**egress-queue-id** *egress-queue-id* — Monitors statistics for this queue.

**Values** 1 — 8

### Sample Output

```
A:Dut-A# monitor service subscriber alcatel_100 sap 1/2/1:101 sla-profile sla_default
=====
Monitor statistics for Subscriber alcatel_100
=====
At time t = 0 sec (Base Statistics)

SLA Profile Instance statistics

 Packets Octets
Off. HiPrio : 0 0
Off. LowPrio : 94531 30704535
Off. Uncolor : 0 0

Queueing Stats (Ingress QoS Policy 1000)
Dro. HiPrio : 0 0
Dro. LowPrio : 7332 2510859
For. InProf : 0 0
For. OutProf : 87067 28152288

Queueing Stats (Egress QoS Policy 1000)
Dro. InProf : 880 127660
Dro. OutProf : 0 0
For. InProf : 90862 12995616
For. OutProf : 0 0

SLA Profile Instance per Queue statistics

 Packets Octets
```

## Monitor CLI Commands

```
Ingress Queue 1 (Unicast) (Priority)
Off. HiPrio : 0 0
Off. LowPrio : 0 0
Off. Uncolor : 0 0
Dro. HiPrio : 0 0
Dro. LowPrio : 0 0
For. InProf : 0 0
For. OutProf : 0 0

Ingress Queue 2 (Unicast) (Priority)
Off. HiPrio : 0 0
Off. LowPrio : 94531 30704535
Off. Uncolor : 0 0
Dro. HiPrio : 0 0
Dro. LowPrio : 7332 2510859
For. InProf : 0 0
For. OutProf : 87067 28152288

Ingress Queue 3 (Unicast) (Priority)
Off. HiPrio : 0 0
Off. LowPrio : 0 0
Off. Uncolor : 0 0
Dro. HiPrio : 0 0
Dro. LowPrio : 0 0
For. InProf : 0 0
For. OutProf : 0 0

Ingress Queue 11 (Multipoint) (Priority)
Off. HiPrio : 0 0
Off. LowPrio : 0 0
Off. Uncolor : 0 0
Dro. HiPrio : 0 0
Dro. LowPrio : 0 0
For. InProf : 0 0
For. OutProf : 0 0

Egress Queue 1
Dro. InProf : 880 127660
Dro. OutProf : 0 0
For. InProf : 90862 12995616
For. OutProf : 0 0

Egress Queue 2
Dro. InProf : 0 0
Dro. OutProf : 0 0
For. InProf : 0 0
For. OutProf : 0 0

Egress Queue 3
Dro. InProf : 0 0
Dro. OutProf : 0 0
For. InProf : 0 0
For. OutProf : 0 0
```

=====  
A:Dut-A#

```
A:Dut-A# monitor service subscriber alcatel_100 sap 1/2/1:101 sla-profile sla_default base
rate
```

=====  
Monitor statistics for Subscriber alcatel\_100



```
=====
At time t = 0 sec (Base Statistics)
```

```

SLA Profile Instance statistics
```

```

 Packets Octets
Off. HiPrio : 0 0
Off. LowPrio : 109099 35427060
Off. Uncolor : 0 0
Queueing Stats (Ingress QoS Policy 1000)
Dro. HiPrio : 0 0
Dro. LowPrio : 8449 2894798
For. InProf : 0 0
For. OutProf : 100523 32489663
Queueing Stats (Egress QoS Policy 1000)
Dro. InProf : 880 127660
Dro. OutProf : 0 0
For. InProf : 105578 15104553
For. OutProf : 0 0

```

```
At time t = 11 sec (Mode: Rate)
```

```

SLA Profile Instance statistics
```

```

 Packets Octets % Port
 Util.
Off. HiPrio : 0 0 0.00
Off. LowPrio : 1469 477795 0.38
Off. Uncolor : 0 0 0.00
Queueing Stats (Ingress QoS Policy 1000)
Dro. HiPrio : 0 0 0.00
Dro. LowPrio : 119 40691 0.03
For. InProf : 0 0 0.00
For. OutProf : 1349 437350 0.34
Queueing Stats (Egress QoS Policy 1000)
Dro. InProf : 0 0 0.00
Dro. OutProf : 0 0 0.00
For. InProf : 1469 209129 0.16
For. OutProf : 0 0 0.00

```

```
A:Dut-A#
```

```
A:Dut-A# monitor service subscriber alcatel_100 sap 1/2/1:101 sla-profile sla_default
ingress-queue-id 1
```

```

Monitor statistics for Subscriber alcatel_100

```

```
At time t = 0 sec (Base Statistics)
```

```

 Packets Octets
Ingress Queue 1 (Unicast) (Priority)
Off. HiPrio : 0 0
Off. LowPrio : 0 0
Off. Uncolor : 0 0
Dro. HiPrio : 0 0
Dro. LowPrio : 0 0
For. InProf : 0 0
For. OutProf : 0 0

```

```
A:Dut-A#
```

## Monitor CLI Commands

```
A:Dut-A# monitor service subscriber alcatel_100 sap 1/2/1:101 sla-profile sla_default
egress-queue-id 1
=====
Monitor statistics for Subscriber alcatel_100

At time t = 0 sec (Base Statistics)

```

	Packets	Octets
Egress Queue 1		
Dro. InProf	: 880	127660
Dro. OutProf	: 0	0
For. InProf	: 164366	23506178
For. OutProf	: 0	0

```
=====
A:Dut-A#
```

---

## Show Commands

### alias

**Syntax** `alias`

**Context** `<root>`

**Description** This command displays a list of existing aliases.

**Output** **Show Alias Fields** — The following table describes alias output fields.

**Table 22: Show Alias Output Fields**

Label	Description
Alias-Name	Displays the name of the alias.
Alias-command-name	The command and parameter syntax that define the alias.
Number of aliases	The total number of aliases configured on the router.

### Sample Output

```
A:ALA-103>config>system# show alias
=====
Alias-Name Alias-command-name
=====
sri show router interface
sse show service service-using epipe
ssvpls show service service-using vpls
ssvprn show service service-using vprn
ssi show service service-using ies

Number of aliases : 5
=====
A:ALA-103>config>system#
```

Show Commands

# File System Management

---

## In This Chapter

This chapter provides information about file system management.

Topics in this chapter include:

- [The File System on page 142](#)
  - [Compact Flash Devices on page 142](#)
  - [URLs on page 143](#)
  - [Wildcards on page 145](#)
- [File Management Tasks on page 147](#)
  - [Modifying File Attributes on page 147](#)
  - [Creating Directories on page 148](#)
  - [Copying Files on page 149](#)
  - [Moving Files on page 150](#)
  - [Removing Files and Deleting Directories on page 150](#)
  - [Displaying Directory and File Information on page 151](#)

## The File System

The 7710 SR OS file system is used to store files used and generated by the system, for example, image files, configuration files, logging files and accounting files.

The file commands allow you to copy, create, move, and delete files and directories, navigate to a different directory, display file or directory contents and the image version.

---

## Compact Flash Devices

The file system is based on a DOS file system. In the 7710 SR-Series, each control processor can have up to three compact flash devices numbered one through three. The names for these devices are:

- cf1:
- cf2:
- cf3:

The above device names are *relative* device names as they refer to the devices local to the control processor with the current console session. As in the DOS file system, the colon (":") at the end of the name indicates it is a device.

The compact flash devices on the 7710 SR-Series routers are removable and have an administrative state (shutdown/no shutdown).

**NOTE:** To prevent corrupting open files in the file system, you should only remove a compact flash that is administratively shutdown. 7710 SR OS gracefully closes any open files on the device, so it can be safely removed.

## URLs

The arguments for the 7710 SR OS file commands are modeled after standard universal resource locator (URL). A URL refers to a file (a *file-url*) or a directory (a *directory-url*).

7710 SR OS supports operations on both the local file system and on remote files. For the purposes of categorizing the applicability of commands to local and remote file operations, URLs are divided into three types of URLs: local, ftp and tftp. The syntax for each of the URL types are listed in [Table 23](#).

**Table 23: URL Types and Syntax**

URL Type	Syntax	Notes
<i>local-url</i>	<code>[cflash-id:\]path</code>	<i>cflash-id</i> is the compact flash device name. Values: cf1:, cf2:, cf3:
<i>ftp-url</i>	<code>ftp://[username[:password]@]host/path</code>	An absolute ftp path from the root of the remote file system. <i>username</i> is the ftp user name <i>password</i> is the ftp user password <i>host</i> is the remote host <i>path</i> is the path to the directory or file
	<code>ftp://[username[:password]@]host./path</code>	A relative ftp path from the user's home directory. Note the period and slash ("./") in this syntax compared to the absolute path.
<i>tftp-url</i>	<code>tftp://host[/path]/filename</code>	tftp is only supported for operations on file-urls.

Note that if the host portion of the URL is an IPv6 address, then the address should be enclosed in square brackets. For example:

```
ftp://user:passw@[3ffe::97]/./testfile.txt
```

```
tftp://[1111:2222:3333:4444:5555:6666:7777:8888]/./testfile.txt
```

The system accepts either forward slash (“/”) or backslash (“\”) characters to delimit directory and/or filenames in URLs. Similarly, the 7710 SR OS SCP client application can use either slash or backslash characters, but not all SCP clients treat backslash characters as equivalent to slash characters. In particular, UNIX systems will often times interpret the backslash character as an “escape” character. This can cause problems when using an external SCP client application to send files to the SCP server. If the external system treats the backslash like an escape character, the backslash delimiter will get stripped by the parser and will not be transmitted to the SCP server.

For example, a destination directory specified as “cf1:\dir1\file1” will be transmitted to the SCP server as “cf1:dir1file1” where the backslash escape characters are stripped by the SCP client

## The File System

system before transmission. On systems where the client treats the backslash like an “escape” character, a double backslash “\\” or the forward slash “/” can typically be used to properly delimit directories and the filename.



## Wildcards

7710 SR OS supports the standard DOS wildcard characters. The asterisk (\*) can represent zero or more characters in a string of characters, and the question mark (?) can represent any one character.

```

Example: A:ALA-1>file cf3:\ # copy test*.cfg siliconvalley
 cf1:\testfile.cfg
 1 file(s) copied.
 A:ALA-1>file cf3:\ # cd siliconvalley
 A:ALA-1>file cf3:\siliconvalley\ # dir
 Volume in drive cf1 on slot A has no label.
 Directory of cf3:\siliconvalley\
 05/10/2006 11:32p <DIR> .
 05/10/2006 11:14p <DIR> ..
 05/10/2006 11:32p 7597 testfile.cfg
 1 File(s) 7597 bytes.
 2 Dir(s) 1082368 bytes free.
 A:ALA-1>file cf3:\siliconvalley\ #

```

As in a DOS file system, the wildcard characters can only be used in some of the file commands.

Another example of wildcard usage:

```

A:21# show router mpls lsp 1-63-8*
=====
MPLS LSPs (Originating)
=====
LSP Name To Fastfail
Adm Opr To Fastfail
Config

1-63-8-cc 213.224.245.8 No
Up Dwn
1-63-8-cw 213.224.245.8 No
Up Dwn

LSPs : 2
=====
A:21#

```

All the commands can operate on the local file system. [Table 24](#) indicates which commands also support remote file operations.

**Table 24: File Command Local and Remote File System Support**

<b>Command</b>	<b>local-url</b>	<b>ftp-url</b>	<b>tftp-url</b>
attrib	X		
cd	X	X	
copy	X	X	X
delete	X	X	
dir	X	X	
md		X	
move	X	X	
rd		X	
repair			
scp	source only		
type	X	X	X
version	X	X	X
shutdown			

## File Management Tasks

The following sections are basic system tasks that can be performed.

Note that when a file system operation is performed with the copy, delete, move, rd, or scp commands that can potentially delete or overwrite a file system entry, a prompt appears to confirm the action. The **force** keyword performs the copy, delete, move, rd, and scp actions without displaying the confirmation prompt.

- [Modifying File Attributes on page 147](#)
  - [Creating Directories on page 148](#)
  - [Copying Files on page 149](#)
  - [Moving Files on page 150](#)
  - [Removing Files and Deleting Directories on page 150](#)
  - [Displaying Directory and File Information on page 151](#)
  - [Repairing the File System on page 153](#)
- 

## Modifying File Attributes

The system administrator can change the read-only attribute in the local file. Enter the `attrib` command with no options to display the contents of the directory and the file attributes. Use the CLI syntax displayed below to modify file attributes:

**CLI Syntax:** `file> attrib [+r | -r] file-url`

The following displays an example of the command syntax:

**Example:** `# file`  
`file cf3:\ # attrib`  
`file cf3:\ # attrib +r BOF.SAV`  
`file cf3:\ # attrib`

The following displays the file configuration:

```
A:ALA-1>file cf3:\ # attrib
cf3:\bootlog.txt
cf3:\bof.cfg
cf3:\boot.ldr
cf3:\bootlog_prev.txt
cf3:\BOF.SAV
A:ALA-1>file cf3:\ # attrib +r BOF.SAV
A:ALA-1>file cf3:\ # attrib
cf3:\bootlog.txt
cf3:\bof.cfg
cf3:\boot.ldr
cf3:\bootlog_prev.txt
R cf3:\BOF.SAV
```

---

## Creating Directories

Use the `md` command to create a new directory in the local file system, one level at a time.

Enter the `cd` command to navigate to different directories.

Use the CLI syntax displayed below to modify file attributes:

**CLI Syntax:** `file>`  
`md file-url`

The following displays an example of the command syntax:

**Example:** `file cf1:\ # md test1`  
`file cf1:\ # cd test1`  
`file cf1:\test1\ # md test2`  
`file cf1:\test1\ # cd test2`  
`file cf1:\test1\test2\ # md test3`  
`file cf1:\test1\test2\ # cd test3`  
`file cf1:\test1\test2\test3 #`

## Copying Files

Use the **copy** command to upload or download an image file, configuration file, or other file types to or from a flash card or a TFTP server.

The **scp** command copies files between hosts on a network. It uses SSH for data transfer, and uses the same authentication and provides the same security as SSH.

The source file for the **scp** command must be local. The file must reside on the 7710 SR router. The destination file has to be of the format: `user@host:file-name`. The destination does not need to be local.

Use the CLI syntax displayed below to copy files:

```
CLI Syntax: file>
 copy source-file-url dest-file-url [force]
 scp local-file-url destination-file-url [router router name | ser-
 vice-id] [force]
```

The following displays an example of the copy command syntax:

```
Example: A:ALA-1>file cf1:\ # copy 104.cfg cf1:\test1\test2\test3\test.cfg
A:ALA-1>file cf1:\ # scp file1 admin@192.168.x.x:cf1:\file1
A:ALA-1>file cf1:\ # scp file2 user2@192.168.x.x:/user2/file2
A:ALA-1>file cf1:\ # scp cf2:/file3 admin@192.168.x.x:cf1:\file3
```

## Moving Files

Use the `move` command to move a file or directory from one location to another.

Use the CLI syntax displayed below to move files:

```
CLI Syntax: file>
 move old-file-url new-file-url [force]
```

The following displays an example of the command syntax:

```
Example: A:ALA-1>file cf1:\test1\test2\test3\ # move test.cfg cf1:\test1
 cf1:\test1\test2\test3\test.cfg
A:ALA-1>file cf1:\test1\test2\test3\ # cd ..
A:ALA-1>file cf1:\test1\test2\ # cd ..
A:ALA-1>file cf1:\test1\ # dir

Directory of cf1:\test1\
05/04/2006 07:58a <DIR> .
05/04/2006 07:06a <DIR> ..
05/04/2006 07:06a <DIR> test2
05/04/2006 07:58a 25278 test.cfg
1 File(s) 25278 bytes.
3 Dir(s) 1056256 bytes free.
A:ALA-1>file cf1:\test1\ #
```

## Removing Files and Deleting Directories

Use the `delete` and `rd` commands to delete files and remove directories. Directories must be empty in order to delete them. When file or directories are deleted they cannot be recovered.

Use the CLI syntax displayed below to delete files and remove directories:

```
CLI Syntax: file>
 delete file-url [force]
 rd file-url [force]
```

The following displays an example of the command syntax:

```
A:ALA-1>file cf1:\test1\ # delete test.cfg
A:ALA-1>file cf1:\test1\ # delete abc.cfg
A:ALA-1>file cf1:\test1\test2\ # cd test3
A:ALA-1>file cf1:\test1\test2\test3\ # cd ..
A:ALA-1>file cf1:\test1\test2\ # rd test3
A:ALA-1>file cf1:\test1\test2\ # cd ..
A:ALA-1>file cf1:\test1\ # rd test2
A:ALA-1>file cf1:\test1\ # cd ..
A:ALA-1>file cf1:\ # rd test1
A:ALA-1>file cf1:\ #
```

## Displaying Directory and File Information

Use the **dir** command to display a list of files on a file system.

The **type** command displays the contents of a file.

The **version** command displays the version of a both.tim file.

Use the CLI syntax displayed below to display directory and file information:

```
CLI Syntax: file>
 dir [file-url]
 type file-url
 version file-url
```

The following displays an example of the command syntax:

```
A:sim3# file
A:sim3>file cf1:\ # dir

Volume in drive cf1 on slot A has no label.

Volume in drive cf1 on slot A is formatted as FAT32.

Directory of cf1:\

01/14/2007 11:23a 408274 BOOTROM.SYS
07/10/2006 12:19p 195 NVRAM.DAT
09/30/2006 05:42p 1003 sshV1SvrkeyFile
09/30/2006 05:42p 0 sshV1ClientHostFile
10/06/2006 05:17p 196 NVRAM.DAT.7710
10/06/2006 04:11p 135 NVRAM.DAT.7x50
07/10/2006 11:36a <DIR> ssh
10/19/2006 01:11p 521 bof.cfg.1
07/10/2006 11:35a 773 bof.cfg
 8 File(s) 411097 bytes.
 1 Dir(s) 1043456 bytes free.

A:sim3>file cf1:\ # type bof.cfg
TiMOS-B-0.0.current both/i386 ALCATEL SR 7710 Copyright (c) 2000-2006 Alcatel.
All rights reserved. All use subject to applicable license agreements.
Built on Mon Jul 10 11:56:15 PST 2006 by builder in /rel0.0/current/panos/main

Generated MON JUL 10 11:35:54 2006 UTC

primary-image ftp://172.22.x.x/./sim3/i386-both.tim
primary-config ftp://172.22.x.x/./sim3/sim3-config.cfg
address 192.168.x.x/20 active
secondary-dns 128.251.x.x
dns-domain dns.domain.com
static-route 128.251.x.x/x next-hop 192.168.x.x
static-route 172.22.x.x/x next-hop 192.168.x.x
autonegotiate
```

## File Management Tasks

```
duplex full
speed 100
wait 3
persist off
console-speed 115200
```

```
A:sim3>file cf1:\ #
```



## Repairing the File System

Use the repair command to check a compact flash device for errors and repair any errors found.

Use the CLI syntax displayed below to check and repair a compact flash device:

**CLI Syntax:** `file`  
`repair [cflash-id]`

The following displays an example of the command syntax:

```
A:ALA-1>file cf3:\ # repair
Checking drive cf3: on slot A for errors...
Drive cf31: on slot A is OK.
```



---

# File Command Reference

---

## Command Hierarchy

### Configuration Commands

**file**

- **attrib** [+r | -r] *file-url*
- **attrib**
- **cd** [*file-url*]
- **copy** *source-file-url dest-file-url* [**force**]
- **delete** *file-url* [**force**]
- **dir** [*file-url*] [**sort-order** {**d** | **n** | **s**}] [**reverse**]
- **format** **cflash** *cflash-id* [**reliable**]
- **http-download** *http-url to local-url* **router** {**base** | **management**} [**force**]
- **md** *file-url*
- **move** *old-file-url new-file-url* [**force**]
- **rd** *file-url* **rf**
- **rd** *file-url* [**force**]
- **repair** [*cflash-id*]
- **scp** *local-file-url destination-file-url* [**router** *router-instance*] [**force**]
- [**no**] **shutdown** [**active**] [**standby**]
- [**no**] **shutdown** *cflash-id*
- **type** *file-url*
- **version** *file-url* [**check**]
- **vi** *local-url*



---

# Configuration Commands

---

## File System Commands

### shutdown

**Syntax** [no] shutdown [active] [standby]  
[no] shutdown [cflash-id]

**Context** file

**Description** This command shuts down (unmounts) the specified CFM(s).  
Use the **no shutdown [active] [standby]** command to enable one or both CFM.  
Use the **no shutdown [cflash-id]** command to enable a compact flash (cf1:, cf2:, or cf3:) on the CCM card. The **no shutdown** command can be issued for a specific slot when no compact flash is present. When a flash card is installed in the slot, the card will be activated upon detection.  
In redundant systems, use the **no shutdown** command on cf3: on both active and inactive CFMs in order to facilitate synchronization. See the [synchronize](#) command on [page 410](#).

**NOTE:** The **shutdown** command must be issued prior to removing a flash card. If no parameters are specified, then the drive referred to by the current working directory will be shut down.

**LED Status Indicators** — The following states are possible for the compact flash:

Operational:

If a compact flash is present in a drive and operational (**no shutdown**), the respective LED is lit green. The LED flickers when the compact flash is accessed.

**NOTE:** *Do not remove* the compact flash during a read/write operation.

State: admin = up, operational = up, equipped

Flash defective:

If a compact flash is defective, the respective LED blinks amber to reflect the error condition and a trap is raised.

State: admin = up/down, operational = faulty, equipped = no

Flash drive shut down:

When the compact flash drive is shut down and a compact flash present, the LED is lit amber. In this state, the compact flash can be ejected.

State: admin = down, operational = down, equipped = yes

No compact flash present, drive shut down:

If no compact flash is present and the drive is shut down the LED is unlit.

State: admin = down, operational = down, equipped = no

## File System Commands

No compact flash present, drive enabled:

If no compact flash is present and the drive is not shut down the LED is unlit.

State: admin = up, operational = down, equipped = no

Ejecting a compact flash:

The compact flash drive should be shut down before ejecting a compact flash card. The LED should turn to solid (not blinking) amber. This is the only mode to safely remove the flash card.

If a compact flash drive is not shut down before a compact flash is ejected, the LED blinks amber for approximately 5 seconds before shutting off.

State: admin = down, operational = down, equipped = yes

The **shutdown** or **no shutdown** state is not saved in the configuration file. Following a reboot all compact flash drives are in their default state.

**Default** **no shutdown** — compact flash device administratively enabled

**Parameters** *cflash-id* — Enter the compact flash slot ID to be shut down or enabled. When a specific *cflash-id* is specified, then that drive is shutdown. If no *cflash-id* is specified, the drive referred to by the current working directory is assumed. If a slot number is not specified, then the active CFM is assumed.

**Default** The current compact flash device

**Values** cf1:, cf1-A:, cf1-B:, cf2:, cf2-A:, cf2-B:, cf3:, cf3-A:, cf3-B:

**active** — If **active** is selected, then all drives on the active CFM are shutdown or enabled.

**standby** — If **standby** is selected, then all drives on the standby CFM are shutdown or enabled.

**Note:** When both **active** and **standby** keywords are specified, then all drives on both CFM are shutdown.

## File Commands

### attrib

**Syntax** **attrib** [+r | -r] *file-url*  
**attrib**

**Context** file

**Description** This command sets or clears/resets the read-only attribute for a file in the local file system. To list all files and their current attributes enter **attrib** or **attrib x** where **x** is either the filename or a wildcard (\*).

When an **attrib** command is entered to list a specific file or all files in a directory, the file's attributes are displayed with or without an "R" preceding the filename. The "R" implies that the +r is set and that the file is read-only. Files without the "R" designation implies that the -r is set and that the file is read-write-all. For example:

```
ALA-1>file cf3:\ # attrib
cf3:\bootlog.txt
cf3:\bof.cfg
cf3:\boot.ldr
cf3:\sr1.cfg
cf3:\test
cf3:\bootlog_prev.txt
R cf3:\BOF.SAV
```

**Parameters** *file-url* — The URL for the local file.

**Values** *local-url* | *remote-url*: 255 chars max  
*local-url*: [cflash-id/][file-path]  
*remote-url* [ftp://login:pswd@remote-locn/][file-path]  
cf1:,cf1-A:,cf1-B:,cf2:,cf2-A:,cf2-B:,cf3:,cf3-A:,cf3-B:

+r — Sets the read-only attribute on the specified file.

-r — Clears/resets the read-only attribute on the specified file.

### cd

**Syntax** **cd** [*file-url*]

**Context** file

**Description** This command displays or changes the current working directory in the local file system.

**Parameters** *file-url* — Syntax: [local-url | remote-url (255 chars max)  
local-url - [cflash-id/][file-path]  
remote-url - [{ftp://|tftp://}login:pswd@remote-locn/][file-path]  
cf1:,cf1-A:,cf1-B:,cf2:,cf2-A:,cf2-B:,cf3:,cf3-A:,cf3-B:

<none> — Displays the current working directory.

## File Commands

`..` — Signifies the parent directory. This can be used in place of an actual directory name in a *directory-url*.  
*directory-url* — The destination directory.

### copy

**Syntax** `copy source-file-url dest-file-url [force]`

**Context** file

**Description** This command copies a file or all files in a directory from a source URL to a destination URL. At least one of the specified URLs should be a local URL. The optional wildcard (\*) can be used to copy multiple files that share a common (partial) prefix and/or (partial) suffix.  
When a file is copied to a destination with the same file name, the original file is overwritten by the new file specified in the operation. The following prompt appears if the destination file already exists:

“Overwrite destination file (y/n)?”

For example:

To copy a file named **srcfile** in a directory called *test* on *cf2* in slot B to a file called **destfile** in a directory called *production* on *cf1* in slot A, the syntax is:

```
srl>file cf2:\ # copy cf2-B/test/srcfile cf1-A/production/destfile
```

To FTP a file named **121201.cfg** in directory *mydir* stored on *cf1* in slot A to a network FTP server with IP address 131.12.31.79 in a directory called *backup* with a destination file name of **121201.cfg**, the FTP syntax is:

```
copy cf1-A/mydir/121201.cfg 131.12.31.79/backup/121201.cfg
```

**Parameters** *source-file-url* — The location of the source file or directory to be copied.

*dest-file-url* — The destination of the copied file or directory.

**force** — Forces an immediate copy of the specified file(s).

**file copy force** executes the command without displaying a user prompt message.

### delete

**Syntax** `delete file-url [force]`

**Context** file

**Description** This command deletes the specified file.

The optional wildcard “\*” can be used to delete multiple files that share a common (partial) prefix and/or (partial) suffix. When the wildcard is entered, the following prompt displays for each file that matches the wildcard:

“Delete file <filename> (y/n)?”



*file-url* — The file name to delete.

**Values**     *local-url* | *remote-url*:     255 chars max  
*local-url*:                     [*cflash-id*/][*file-path*]  
*remote-url*                    [ftp://*login:pswd@remote-locn*][*file-path*]  
cf1:,cf1-A:,cf1-B:,cf2:,cf2-A:,cf2-B:,cf3:,cf3-A:,cf3-B:

**force** — Forces an immediate deletion of the specified file(s).

**file delete \* force** deletes all the wildcard matching files without displaying a user prompt message.

## dir

**Syntax**     **dir** [*file-url*] [**sort-order** { **d** | **n** | **s**}] [**reverse**]

**Context**     file

**Description**     This command displays a list of files and subdirectories in a directory.

**Parameters**     *file-url* — The path or directory name.

Use the *file-url* with the optional wildcard (\*) to reduce the number of files to list.

**Default**     Lists all files in the present working directory

**sort-order** { **d** | **n** | **s** — Specifies the sort order.

**Values**     d — date  
n — name  
s — size

**reverse** — Specifies to reverse the sort order.

### Sample Output

```
A:cses-E12>file cf3:\ # dir
- dir [<file-url>] [sort-order { d | n | s}] [reverse]

<file-url> : <local-url>|<remote-url>
local-url - [<cflash-id>/][<file-path>]
 200 chars max, including cflash-id
 directory length 99 chars max each
remote-url - [ftp://<login>:<pswd>@<remote-locn>/
]<file-path>]
 255 chars max
 directory length 99 chars max each
remote-locn - [<hostname> | <ipv4-address> |
 "["<ipv6-address>"]"]
ipv4-address - a.b.c.d
ipv6-address - x:x:x:x:x:x:x[-interface]
 x:x:x:x:x:d.d.d.d[-interface]
 x - [0..FFFF]H
 d - [0..255]D
 interface - 32 chars max, for link
 local addresses
```

## File Commands

```
 cflash-id - cf1:|cf1-A:|cf1-B:|cf2:|cf2-A:|
 cf2-B:|cf3:|cf3-A:|cf3-B:
< d | n | s> : Sort order: d - date, n - name, s - size
<reverse> : keyword - reverse order
A:cses-E12>file cf3:\ # dir
```

## file

**Syntax** file

**Context** root

**Description** The context to enter and perform file system operations. When entering the **file** context, the prompt changes to reflect the present working directory. Navigating the file system with the **cd ..** command results in a changed prompt.

The **exit all** command leaves the file system/file operation context and returns to the <ROOT> CLI context. The state of the present working directory is maintained for the CLI session. Entering the **file** command returns the cursor to the working directory where the **exit** command was issued.

## format

**Syntax** format cflash *cflash-id* [**reliable**]

**Context** root>file

**Description** This command formats the compact flash. The compact flash must be shutdown before starting the format.

**Parameters** *cflash-id* — The compact flash type.

**Values** cf1:, cf1-A:,cf1-B:,cf2:,cf2-A:,cf2-B:,cf3:,cf3-A:,cf3-B:

**reliable** — Enables the reliance file system and disables the default DOS file system. This option is valid only on compact flashes 1 and 2.

## http-download

**Syntax** http-download *http-url to local-url router* {**base** | **management**} [**force**]

**Context** file

**Description** This command downloads a file from a web server to local CF card via HTTP protocol. Note that this command is supports both IPv4 and IPv6 and does not support HTTPS.

**Default** none

**Parameters** *local-url* — Specifies the local CF card path and filename to save.

**Values** [cflash-id/] file-path  
 cflash-id - cf1:cf2:cf3:

*http-url* — Specifies an HTTP URL that could include username and password. It is the HTTP URL to download file from, in the format of http://username:password@remote-url. The username and password are used when HTTP server require basic or digest access authentication.

**Values** *http-url:* http://login:pswd@remote-locn/file-path  
 255 chars max  
 directory length 99 chars max each  
*remote-locn* [ hostname | ipv4-address |ipv6-address ]  
 ipv4-address - a.b.c.d  
 ipv6-address - x:x:x:x:x:x:x:x[-interface]  
 x:x:x:x:x:d.d.d.d[-interface]  
 x - [0..FFFF]H  
 d - [0..255]D  
 interface - 32 chars max, for link local addresses

**router** — Specifies the router instance that is applicable for the HTTP download.

**force** — When the **force** parameter is specified, the existing local file will be overwritten without confirmation; otherwise system will promote for confirmation if a local file with the same path/name already exists.

## md

**Syntax** **md** *file-url*

**Context** file

**Description** This command creates a new directory in a file system.

Directories can only be created one level at a time.

**Parameters** *file-url* — The directory name to be created.

**Values** *local-url | remote-url:* 255 chars max  
*local-url:* [cflash-id/][file-path]  
*remote-url* [ftp://login:pswd@remote-locn/][file-path]  
 cf1:, cf1-A:,cf1-B:,cf2:,cf2-A:,cf2-B:,cf3:,cf3-A:,cf3-B:

## move

**Syntax** **move** *old-file-url new-file-url [force]*

**Context** file

**Description** This command moves a local file, system file, or a directory. If the target already exists, the command fails and an error message displays.

## File Commands

The following prompt appears if the destination file already exists:

“Overwrite destination file (y/n)?”

### Parameters

*old-file-url* — The file or directory to be moved.

**Values**     *local-url* | *remote-url*:     255 chars max  
*local-url*:                     [*cflash-id*]/[*file-path*]  
*remote-url*                    [ftp://*login:pswd@remote-locn*]/[*file-path*]  
cf1:, cf1-A:,cf1-B:,cf2:,cf2-A:,cf2-B:,cf3:,cf3-A:,cf3-B:

*new-file-url* — The new destination to place the *old-file-url*.

**Values**     *local-url* | *remote-url*:     255 chars max  
*local-url*:                     [*cflash-id*]/[*file-path*]  
*remote-url*                    [ftp://*login:pswd@remote-locn*]/[*file-path*]  
cf1:, cf1-A:,cf1-B:,cf2:,cf2-A:,cf2-B:,cf3:,cf3-A:,cf3-B:

**force** — Forces an immediate move of the specified file(s).

**file move force** executes the command without displaying a user prompt message.

## rd

**Syntax**     **rd** *file-url* **rf**  
              **rd** *file-url* [**force**]

**Context**     file

**Description**     The **rd** command is used to delete a directory.

If a directory has files and no sub-directories, the **force** option must be used to force delete the directory and files it contains.

If a directory has sub-directories, then the **force** option will fail and the **rf** parameter should be used instead to force delete that directory including the sub-directories.

Example:

```
A:nE1>file cf1:\ # rd alcateltest
Are you sure (y/n)? y
Deleting directory cf1:\alcateltest .MINOR: CLI Cannot delete cf1:\alcateltest.
A:nE1>file cf1:\ # rd alcateltest force
Deleting directory cf1:\alcateltest .MINOR: CLI Cannot delete cf1:\alcateltest.
A:nE1>file cf1:\ # rd hussein rf
Deleting all subdirectories and files in specified directory. y/n ?y
Deleting directory cf1:\hussein\hussein1 ..OK
Deleting directory cf1:\alcateltest .OK
```

### Parameters

*file-url* — The directory to be removed.

**Values**     *local-url* | *remote-url*:     255 chars max  
*local-url*:                     [*cflash-id*]/[*file-path*]  
*remote-url*                    [ftp://*login:pswd@remote-locn*]/[*file-path*]  
cf1:, cf1-A:,cf1-B:,cf2:,cf2-A:,cf2-B:,cf3:,cf3-A:,cf3-B:

**rf** — The parameter forces a recursive delete.

**force** — Forces an immediate deletion of the specified directory.

For example, **rd file-url force** executes the command without displaying a user prompt message.

## repair

**Syntax** **repair** [*cflash-id*]

**Context** file

**Description** This command checks a compact flash device for errors and repairs any errors found.

**Parameters** *cflash-id* — Specify the compact flash slot ID to be shut down or enabled. When a specific *cflash-id* is specified, then that drive is shutdown. If no *cflash-id* is specified, the drive referred to by the current working directory is assumed. If a slot number is not specified, then the active SF/CPMCFM is assumed.

**Default** The current compact flash device

**Values** cf1:, cf1-A:, cf1-B:, cf2:, cf2-A:, cf2-B:, cf3:, cf3-A:, cf3-B:

## scp

**Syntax** **scp** *local-file-url destination-file-url* [**router** *router-instance*] [**force**]

**Context** file

**Description** This command copies a local file to a remote host file system. It uses `ssh` for data transfer, and uses the same authentication and provides the same security as `ssh`. The following prompt appears:

“Are you sure (y/n)?” The destination must specify a user and a host.

**Parameters** *local-file-url* — The local source file or directory.

**Values** [*cflash-id*]/[*file-path*]: Up to 256 characters.

*destination-file-url* — The destination file.

**Values** user@hostname:destination-file

*user* — The SSH user.

*host* — The remote host IP address of DNS name.

*file-path* — The destination path.

*router-instance* — Specify the router name or service ID.

**Values** *router-name:* Base , management  
*service-id:* 1 — 2147483647

**Default** Base

**force** — Forces an immediate copy of the specified file.

## File Commands

**file scp local-file-url destination-file-url [router] force** executes the command without displaying a user prompt message.

### type

<b>Syntax</b>	<b>type</b> <i>file-url</i>
<b>Context</b>	file
<b>Description</b>	Displays the contents of a text file.
<b>Parameters</b>	<i>file-url</i> — The file contents to display.  <b>Values</b> file-url <local-url> <remote-url> local-url [ <i>&lt;cflash-id&gt;</i> ]/[ <i>&lt;file-path&gt;</i> ] 200 chars max, including cflash-id directory length 99 chars max each remote-url [{ ftp://tftp:// }<login>:<pswd>@<remote-locn>]/[ <i>&lt;file-path&gt;</i> ] 255 chars max directory length 99 chars max each remote-locn [ <hostname>   <ipv4-address>  <ipv6-address> ] ipv4-address a.b.c.d ipv6-address x:x:x:x:x:x:x[-interface] x:x:x:x:x:d.d.d.d[-interface] x - [0..FFFF]H d - [0..255]D interface - 32 chars max, for link local addresses cflash-id cf1:, cf1-A:, cf1-B:

### version

<b>Syntax</b>	<b>version</b> <i>file-url</i> [ <b>check</b> ]
<b>Context</b>	file
<b>Description</b>	This command displays the version of a TiMOS both.tim file.
<b>Parameters</b>	<i>file-url</i> — The file name of the target file.  <b>Values</b> local-url   remote-url: 255 characters maximum local-url: [ <i>cflash-id</i> ]/[ <i>file-path</i> ] remote-url: [{ ftp://tftp:// } <i>login:pswd@remote-locn</i> ]/[ <i>file-path</i> ] cflash-id: cf1:, cf1-A:, cf1-B:  <b>check</b> — Validates the .tim file.

**Sample Output**

```
A:Redundancy>file cf3:\ # version ftp://ttest:tigris@xxx.xxx.xxx.xx/usr/global/images/
6.1/R4/cpm.tim
TiMOS-C-6.1.R4 for 7710
Thu Oct 30 14:21:09 PDT 2008 by builder in /rel6.1/b1/R4/panos/main
A:Redundancy>file cf3:\ # version check ftp://test:tigris@xxx.xxx.xxx.xx/usr/global/
images/6.1/R4/cpm.tim
TiMOS-C-6.1.R4 for 7710
Thu Oct 30 14:21:09 PDT 2008 by builder in /rel6.1/b1/R4/panos/main
Validation successful
A:Redundancy>file cf3:\ #
```

**vi**

**Syntax** `vi local-url`

**Context** file

**Description** Edit files using the vi editor. Refer to [VI Editor on page 45](#).

**Parameters** *local-url* — Specifies the local source file or directory.

**Values** `[cflash-id>/]file-path`  
cflash-id: cf1:, cf2:, cf3:





# Boot Options

---

## In This Chapter

This chapter provides information about configuring boot option parameters.

Topics in this chapter include:

- [System Initialization on page 170](#)
  - [Configuration and Image Loading on page 174](#)
    - [Persistence on page 176](#)
- [Initial System Startup Process Flow on page 178](#)
- [Configuration Notes on page 179](#)

## System Initialization

The primary copy of SR OS software is located on a compact flash card. The removable media is shipped with each 7710 SR-Series router and contains a copy of the OS image.



### Notes:

- The CCM modules contain three slots for removable compact flash cards. The drives on a 7710 SR-c4 are named Compact Flash Slot #1 (*cf1*), Compact Flash Slot #2 (*cf2*), and Compact Flash Slot #3 (*cf3*). Configurations and executable images can be stored on flash cards or an FTP file location.
- The flash card containing the bootstrap and boot option files *must* be installed in Compact Flash Slot #3 (*cf3*) on the CCM.
- You must have a console connection.

Starting a 7710 SR-Series router begins with hardware initialization (a reset or power cycle). By default, the system searches Compact Flash Slot #3 (*cf3*) for the `boot.ldr` file (also known as the bootstrap file). The `boot.ldr` file is the image that reads and executes the system initialization commands configured in the boot option file (BOF). The default value to initially search for the `boot.ldr` file on *cf3* cannot be modified.

The following is an example of console display output when the `boot.ldr` file cannot be located on *cf3*.

```
...
(memory test messages)
(serial number information)
Searching for boot.ldr on local drives:
No disk in cf3
No disk in cf3
No disk in cf3
Error - file boot.ldr not found on any drive
Please insert CF containing boot.ldr. Rebooting in 5 seconds.
(5 second wait)
Rebooting...
(memory test messages)
(user presses '2')
Skipping CF power on diagnostics, boot from CF2
(serial number information)
Searching for boot.ldr on local drives:
Searching cf2 for boot.ldr...

(normal boot continues)
```

When the bootstrap image is loaded, the BOF is read to obtain the location of the image and configuration files. The BOF must be located on the same compact flash drive as the `boot.ldr` file.

Figure 5 displays the system initialization sequence.

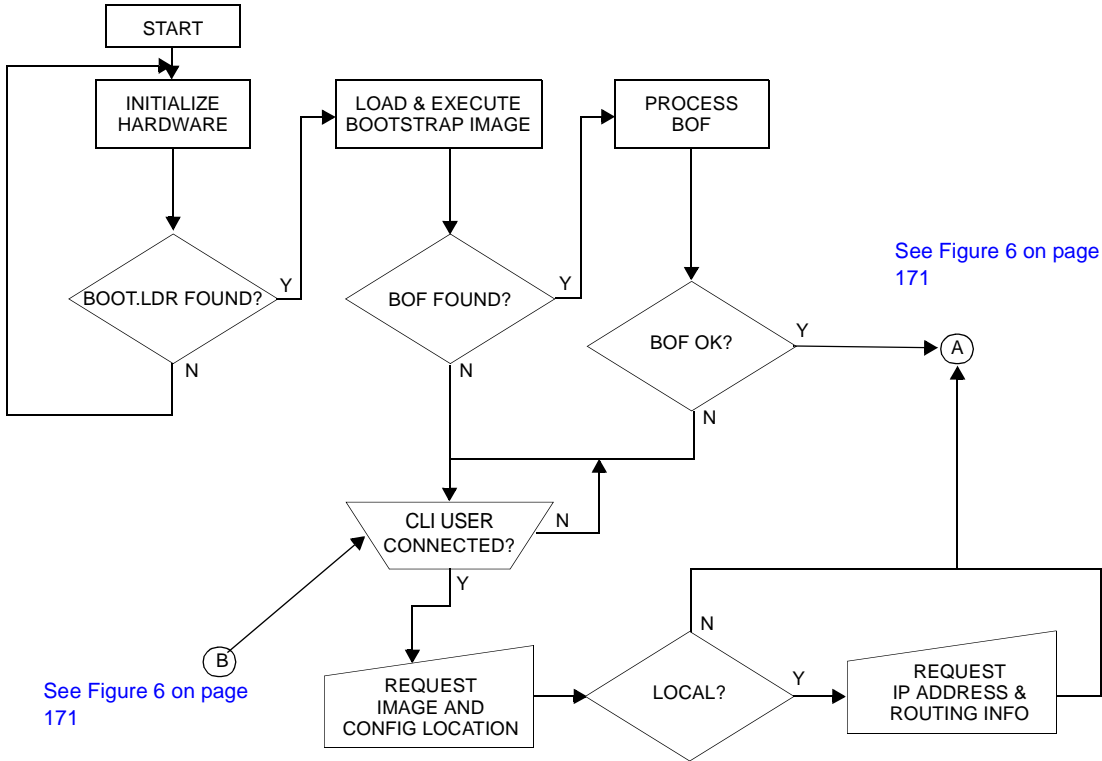


Figure 5: System Initialization - Part 1

Figure 6 displays the compact flash directory structure and file names .

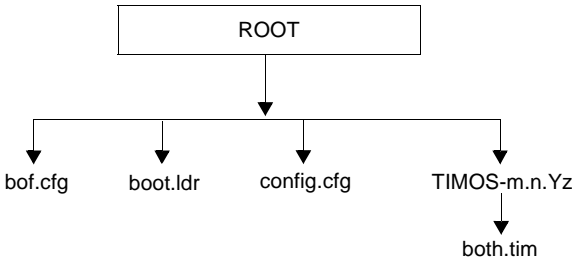


Figure 6: Files on the Compact Flash

## System Initialization

Files on the compact flash are:

- bof.cfg — Boot option file
  - boot.ldr — Bootstrap image
  - config.cfg — Default configuration file
  - TIMOS-m.n.Yz:
    - m — Major release number
    - n — Minor release number
    - Y: A — Alpha release
      - B — Beta release
      - M — Maintenance release
      - R — Released software
    - z — Version number
- both.tim — CPM and IOM image file



## Configuration and Image Loading

When the system executes the `boot.ldr` file, the initialization parameters from the BOF are processed. Three locations can be configured for the system to search for the files that contains the runtime image. The locations can be local or remote. The first location searched is the primary image location. If not found, the secondary image location is searched, and lastly, the tertiary image location is searched.

If the BOF cannot be found or loaded, then the system enters a console message dialog session prompting the user to enter alternate file locations and file names.

When the runtime image is successfully loaded, control is passed from the bootstrap loader to the image. The runtime image attempts to locate the configuration file as configured in the BOF. Like the runtime image, three locations can be configured for the system to search for the configuration file. The locations can be local or remote. The first location searched is the primary configuration location. If not found, the secondary configuration location is searched, and lastly, the tertiary configuration location is searched. The configuration file include chassis, CFM, MDA/CMA, and port configurations, as well as system, routing, and service configurations.

Figure 7 displays the boot sequence.

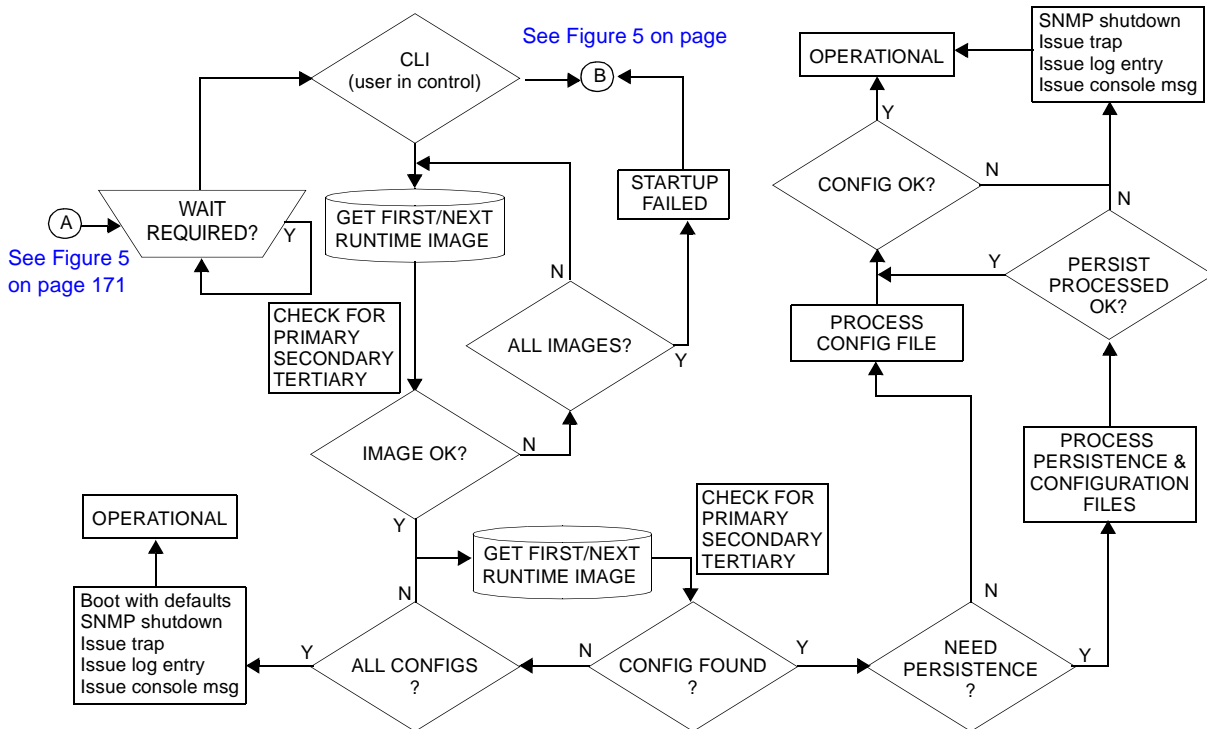


Figure 7: System Initialization - Part 2

The following displays an example of BOF output.

```
A:7710-3# show bof
```

```
=====
BOF (Memory)
=====
```

```
primary-image ftp://172.22.x.x/. /3/
primary-config ftp://172.22.x.x/. /3/3-config.cfg
address 192.168.x.x/20 active
primary-dns 192.168.x.x
secondary-dns 128.251.x.x
dns-domain dns.domain.com
static-route 128.251.x.x/23 next-hop 192.168.x.x
static-route 172.22.x.x/22 next-hop 192.168.x.x
autonegotiate
duplex full
speed 100
wait 3
persist off
console-speed 115200
=====
```

```
A:7710-3#
```

### Persistence

Optionally, the BOF `persist` parameter can specify whether the system should preserve system indexes when a **save** command is executed. During a subsequent boot, the index file is read along with the configuration file. As a result, a number of system indexes are preserved between reboots, including the interface index, LSP IDs, path IDs, etc. If persistence is not required and the configuration file is successfully processed, then the system becomes operational. If `persist` is required, then a matching `x.ndx` file must be located and successfully processed before the system can become operational. Matching files (configuration and index files) must have the same filename prefix such as `test123.cfg` and `test123.ndx` and are created at the same time when a **save** command is executed. Note that the persistence option must be enabled to deploy the Network Management System (NMS). The default is off.

Traps, logs, and console messages are generated if problems occur and SNMP shuts down for all SNMP gets and sets, however, traps are issued.



## Lawful Intercept

Lawful Intercept (LI) describes a process to intercept telecommunications by which law enforcement authorities can un-obtrusively monitor voice and data communications to combat crime and terrorism with higher security standards of lawful intercept capabilities in accordance with local law and after following due process and receiving proper authorization from competent authorities. The interception capabilities are sought by various telecommunications providers.

As lawful interception is subject to national regulation, requirements vary from one country to another. Alcatel-Lucent's implementation satisfies most national standard's requirements. LI is configurable for all service types.

## Initial System Startup Process Flow

Figure 8 displays the process start your system. Note that this example assumes that the boot loader and BOF image and configuration files are successfully located.

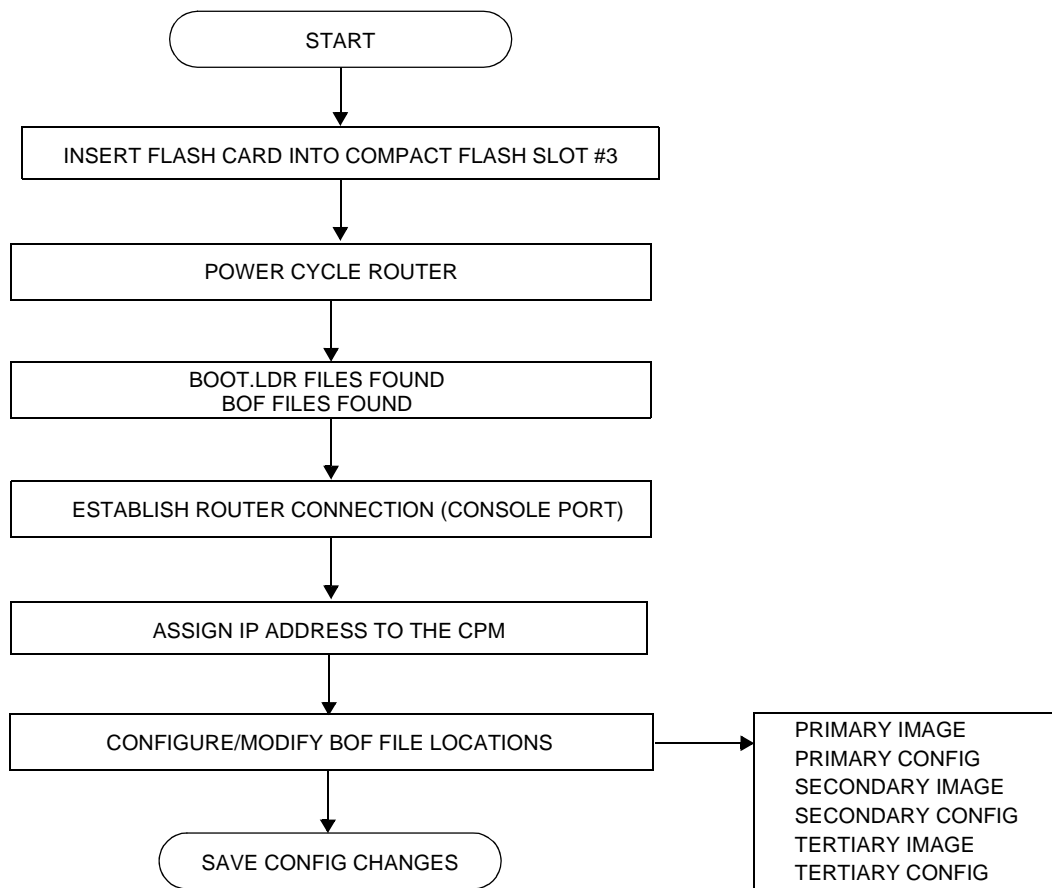


Figure 8: System Startup Flow

## Configuration Notes

This section describes BOF configuration caveats.

- For router initialization, the compact flash card must be installed in the Compact Flash #3 slot.
- The loading sequence is based on the order in which it is placed in the configuration file. It is loaded as it is read in at boot time.

For example, for services, if a VPRN service, *service-id 272*, is created first and then an Apipe service, *service-id 2*, created next, the VPRN 272 will be loaded first because it was created first.



## Configuring Boot File Options with CLI

This section provides information to configure BOF parameters with CLI.

Topics in this section include:

- [Configuring Boot File Options with CLI on page 181](#)
- [BOF Configuration Overview on page 182](#)
- [Basic BOF Configuration on page 183](#)
- [Common Configuration Tasks on page 184](#)
- [Configuring BOF Parameters on page 189](#)
- [Service Management Tasks on page 190](#)
  - [Viewing the Current Configuration on page 190](#)
  - [Modifying and Saving a Configuration on page 192](#)
  - [Saving a Configuration to a Different Filename on page 194](#)
  - [Rebooting on page 194](#)

## BOF Configuration Overview

Alcatel-Lucent 7710 SR-Series routers do not contain a boot EEPROM. The boot loader code is loaded from the boot.ldr file. The BOF file performs the following tasks:

1. Sets up the CCM Ethernet port (speed, duplex, auto).
2. Assigns the IP address for the CCM Ethernet port.
3. Creates static routes for the CCM Ethernet port.
4. Sets the console port speed.
5. Configures the Domain Name System (DNS) name and DNS servers.
6. Configures the primary, secondary, tertiary configuration source.
7. Configures the primary, secondary, and tertiary image source.
8. Configures operational parameters.

## Basic BOF Configuration

The parameters which specify location of the image filename that the router will try to boot from and the configuration file are in the BOF.

The most basic BOF configuration should have the following:

- Primary address
- Primary image location
- Primary configuration location

Following is a sample of a basic BOF configuration.

```
A:SR-45# show bof
=====
BOF (Memory)
=====
primary-image cf3:/4.0.R20
primary-config cf3:/ospf_default.cfg
address 138.120.189.53/24 active
static-route 138.120.0.0/16 next-hop 138.120.189.1
static-route 172.0.0.0/8 next-hop 138.120.189.1
autonegotiate
duplex full
speed 100
wait 3
persist on
console-speed 115200
=====
A:SR-45#
```

## Common Configuration Tasks

The following sections are basic system tasks that must be performed.

- [Searching for the BOF on page 185](#)
  - [Accessing the CLI on page 187](#)
    - [Console Connection on page 187](#)
- [Configuring BOF Parameters on page 189](#)

For details about hardware installation and initial router connections, refer to the specific 7710 SR hardware installation guide.



## Searching for the BOF

The BOF should be on the same drive as the boot loader file. If the system cannot load or cannot find the BOF, then the system checks whether the boot sequence was manually interrupted. The system prompts for a different image and configuration location.

The following example displays an example of the output when the boot sequence is interrupted.

```

...

Hit a key within 3 seconds to change boot parms...

You must supply some required Boot Options. At any prompt, you can type:
 "restart" - restart the query mode.
 "reboot" - reboot.
 "exit" - boot with with existing values.

Press ENTER to begin, or 'flash' to enter firmware update...

Software Location

 You must enter the URL of the TiMOS software.
 The location can be on a Compact Flash device,
 or on the network.

 Here are some examples
 cf3:/timos1.0R1
 ftp://user:passwd@192.168.xx.xxx/./timos1.0R1
 tftp://192.168.xx.xxx/./timos1.0R1

The existing Image URL is 'ftp://vxworks:vxw0rks@192.168.xx.xxx/./rel/0.0/xx'
Press ENTER to keep it.
Software Image URL:
Using: 'ftp://vxworks:vxw0rks@192.168.xx.xxx/./rel/0.0/xx'

Configuration File Location

 You must enter the location of configuration
 file to be used by TiMOS. The file can be on
 a Compact Flash device, or on the network.

 Here are some examples
 cf1:/config.cfg
 ftp://user:passwd@192.168.xx.xxx/./config.cfg
 tftp://192.168.xx.xxx/./config.cfg

The existing Config URL is 'cf3:/config.cfg'
Press ENTER to keep it, or the word 'none' for no Config URL.
Config File URL:
Using: 'cf3:/config.cfg'

Network Configuration

 You specified a network location for either the
 software or the configuration file. You need to

```

## Common Configuration Tasks

assign an IP address for this system.

The IP address should be entered in standard dotted decimal form with a network length.

example: 192.168.xx.xxx/24

### Displays onno n- Redundant Models I

The existing IP address is 192.168.xx.xxx/20. Press ENTER to keep it.

Enter IP Address:

Using: 192.168.xx.xxx/20

### Display on Redundant models

The existing **Active** IP address is 192.168.xx.xxx/20. Press ENTER to keep it.

Enter Active IP Address:

Using: 192.168.xx.xxx/20

The existing **Standby** IP address is 192.168.xx.xxx/20. Press ENTER to keep it.

Enter Standby IP Address (Type 0 if none desired):

Using: 192.168.xx.xxx/20

Would you like to add a static route? (yes/no) y

#### Static Routes

-----

You specified network locations which require static routes to reach. You will be asked to enter static routes until all the locations become reachable.

Static routes should be entered in the following format:

prefix/mask next-hop ip-address

example: 192.168.xx.xxx/16 next-hop 192.168.xx.xxx

Enter route: 1.x.x.0/24 next-hop 192.168.xx.xxx

OK

Would you like to add another static route? (yes/no) n

#### New Settings

-----

primary-image	ftp://vxworks:vxw0rks@192.168.xx.xx/./rel/0.0/xx
primary-config	cf3:/config.cfg
address	192.168.xx.xx/20 active
primary-dns	192.168.xx.xx
dns-domain	xxx.xxx.com
static-route	1.x.x.0/24 next-hop 192.168.xx.xxx
autonegotiate	
duplex	full
speed	100
wait	3
persist	off

Do you want to overwrite cf3:/bof.cfg with the new settings? (yes/no): y

Successfully saved the new settings in cf3:/bof.cfg

## Accessing the CLI

To access the CLI to configure the software for the first time, follow these steps:

- When the CFM is installed and power to the chassis is turned on, the 7710 SR software automatically begins the boot sequence.
  - When the boot loader and BOF image and configuration files are successfully located, establish a router connection (console session).
- 

## Console Connection

To establish a console connection, you will need the following:

- An ASCII terminal or a PC running terminal emulation software set to the parameters shown in the table below.
- A standard serial cable with a male DB9.

**Table 25: Console Configuration Parameter Values**

<b>Parameter</b>	<b>Value</b>
Baud Rate	115,200
Data Bits	8
Parity	None
Stop Bits	1
Flow Control	None

## Common Configuration Tasks

To establish a console connection:

- Step 1** Connect the terminal to the Console port on the front panel using the serial cable.
- Step 2** Power on the terminal.
- Step 3** Establish the connection by pressing the <Enter> key a few times on your terminal keyboard.
- Step 4** At the router prompt, enter the login and password.  
The default login is admin.  
The default password is admin.

## Configuring BOF Parameters

The following output displays a BOF configuration:

```
A:7710-3# show bof
=====
BOF (Memory)
=====
primary-image ftp://172.22.x.x/. /3/
primary-config ftp://172.22.x.x/. /3/3-config.cfg
address 192.168.x.x/20 active
primary-dns 192.168.x.x
secondary-dns 128.251.x.x
dns-domain dns.domain.com
static-route 128.251.x.x/23 next-hop 192.168.xx.xx
static-route 172.22.x.x/22 next-hop 192.168.xx.xx
autonegotiate
duplex full
speed 100
wait 3
persist off
console-speed 115200
=====
A:7710-3#
```

## Service Management Tasks

This section discusses the following service management tasks:

- [System Administration Commands on page 190](#)
    - [Viewing the Current Configuration on page 190](#)
    - [Modifying and Saving a Configuration on page 192](#)
    - [Deleting BOF Parameters on page 193](#)
    - [Saving a Configuration to a Different Filename on page 194](#)
- 

## System Administration Commands

Use the following administrative commands to perform management tasks.

**CLI Syntax:** A:ALA-1# admin  
display-config  
reboot [active|standby] [now]  
save [file-url] [detail] [index]

---

## Viewing the Current Configuration

Use one of the following CLI commands to display the current configuration. The *detail* option displays all default values. The *index* option displays only the persistent indices. The *info* command displays context-level information.

**CLI Syntax:** admin# display-config [detail|index]  
info *detail*

The following displays an example of a configuration file:

```
A:7710-3# admin display-config
TiMOS-B-5.0.R3 both/hops ALCATEL SR 7710 Copyright (c) 2000-2007 Alcatel-Lucent.
All rights reserved. All use subject to applicable license agreements.
Built on Thu Apr 19 19:19:11 PST 2007 by builder in /rel5.0/b1/R3/panos/main

Generated FRI APR 20 15:05:46 2007 UTC

exit all
configure
#-----
echo "System Configuration"
#-----
system
 name "7710-3"
```

```
contact "Fred Information Technology"
location "Bldg.1-floor 2-Room 201"
clli-code "abcdefg1234"
coordinates "N 45 58 23, W 34 56 12"
ccm 1
exit
snmp
exit
login-control
 idle-timeout 1440
 motd text "7710-3"
exit
time
 sntp
 shutdown
 exit
 zone UTC
exit
thresholds
 rmon
 exit
exit
exit...
...
#-----
echo "Redundancy Configuration"
#-----
 redundancy
 synchronize boot-env
 exit
...exit all

Finished FRI Nov 21 15:06:16 2008 UTC
A:7710#
```

## Modifying and Saving a Configuration

If you modify a configuration file, the changes remain in effect only during the current power cycle unless a `save` command is executed. Changes are lost if the system is powered down or the router is rebooted without saving.

- Specify the file URL location to save the running configuration. If a destination is not specified, the files are saved to the location where the files were found for that boot sequence. The same configuration can be saved with different file names to the same location or to different locations.
- The **detail** option adds the default parameters to the saved configuration.
- The **index** option forces a save of the index file.
- Changing the active and standby addresses without reboot standby CPM may cause a boot-env sync to fail.

The following command saves a configuration:

**CLI Syntax:** `bof# save [cflash-id]`

**Example:**

```
A:ALA-1# bof
A:ALA-1>bof# save cf3:
A:ALA-1>bof#
```

The following command saves the system configuration:

**CLI Syntax:** `admin# save [file-url] [detail] [index]`

**Example:**

```
A:ALA-1# admin save cf3:\test123.cfg
Saving config.# Saved to cf3:\test123.cfg
... complete
A:ALA-1#
```

**NOTE:** If the `persist` option is enabled and the `admin save file-url` command is executed with an FTP path used as the `file-url` parameter, two FTP sessions simultaneously open to the FTP server. The FTP server must be configured to allow multiple sessions from the same login, otherwise, the configuration and index files will not be saved correctly.



## Deleting BOF Parameters

You can delete specific BOF parameters. The **no** form of these commands removes the parameter from configuration. The changes remain in effect only during the current power cycle unless a **save** command is executed. Changes are lost if the system is powered down or the router is rebooted without saving.

Deleting a BOF address entry is not allowed from a Telnet session.

Use the following CLI syntax to save and remove BOF configuration parameters:

**CLI Syntax:** `bof# save [cflash-id]`

**Example:**

```
A:ALA-1# bof
A:ALA-1>bof# save cf3:
A:ALA-1>bof#
```

**CLI Syntax:** `bof#`

```
no address ip-address/mask [active | standby]
no autonegotiate
no console-speed
no dns-domain
no li-local-save
no li-separate
no primary-config
no primary-dns
no primary-image
no secondary-config
no secondary-dns
no secondary-image
no static-route ip-address/mask next-hop ip-address
no tertiary-config
no tertiary-dns
no tertiary-image
```

## Saving a Configuration to a Different Filename

Save the current configuration with a unique filename to have additional backup copies and to edit parameters with a text editor. You can save your current configuration to an ASCII file.

Use either of the following CLI syntax to save a configuration to a different location:

**CLI Syntax:** bof# save [*cflash-id*]

**Example:**  
A:ALA-1# bof  
A:ALA-1>bof# save cf3:  
A:ALA-1>bof#

or

**CLI Syntax:** admin# save [*file-url*] [detail] [index]

**Example:**  
A:ALA-1>admin# save cf3:\testABC.cfg  
Saving config.# Saved to cf3:\testABC.cfg  
... complete  
A:ALA-1#

---

## Rebooting

When an **admin>reboot** command is issued, routers with redundant CFM are rebooted as well as the IOMs. Changes are lost unless the configuration is saved. Use the **admin>save file-url** command to save the current configuration. If no command line options are specified, the user is prompted to confirm the reboot operation.

Use the following CLI syntax to reboot:

**CLI Syntax:** admin# reboot [active|standby] [now]

**Example:**  
A:ALA-1>admin# reboot  
A:DutA>admin# reboot  
  
Are you sure you want to reboot (y/n)? y  
  
Resetting...OK  
  
Alcatel 7xxx Boot ROM. Copyright 2000-2007 Alcatel-Lucent.  
  
All rights reserved. All use is subject to applicable  
license agreements.  
....

---

# BOF Command Reference

---

## Command Hierarchies

### Configuration Commands

- bof**
- [no] **address** *ip-prefix/ip-prefix-length* [**active** | **standby**]
  - [no] **autonegotiate**
  - **console-speed** *baud-rate*
  - **no console-speed**
  - **dns-domain** *dns-name*
  - **no dns-domain**
  - **duplex** {**full** | **half**}
  - [no] **li-local-save**
  - [no] **li-separate**
  - **persist** {**on** | **off**}
  - **primary-config** *file-url*
  - **no primary-config**
  - **primary-dns** *ip-address*
  - **no primary-dns**
  - **primary-image** *file-url*
  - **no primary-image**
  - **save** [*cflash-id* ]
  - **secondary-config** *file-url*
  - **no secondary-config**
  - [no] **secondary-dns** *ip-address*
  - **secondary-image** *file-url*
  - **no secondary-image**
  - **speed** *speed*
  - [no] **static-route** *ip-prefix/ip-prefix-length* **next-hop** *ip-address*
  - **tertiary-config** *file-url*
  - **no tertiary-config**
  - [no] **tertiary-dns** *ip-address*
  - **tertiary-image** *file-url*
  - **no tertiary-image**
  - **wait** *seconds*

## Show Commands

- show**
- **bof** [*cf**flash-id* | *booted*]
- **boot-messages**

---

## Configuration Commands

---

### File Management Commands

#### bof

**Syntax**    **bof**

**Context**    <ROOT>

**Description**    This command creates or edits the boot option file (BOF) for the specified local storage device. A BOF file specifies where the system searches for runtime images, configuration files, and other operational parameters during system initialization. BOF parameters can be modified. Changes can be saved to a specified compact flash. The BOF must be located in the root directory of either an internal or external compact flash local to the system and have the mandatory filename of *bof.cfg*. When modifications are made to in-memory parameters that are currently in use or operating, the changes are effective immediately. For example, if the IP address of the management port is changed, the change takes place immediately. Only one entry of the BOF configuration command statement can be saved once the statement has been found to be syntactically correct. When opening an existing BOF that is not the BOF used in the most recent boot, a message is issued notifying the user that the parameters will not affect the operation of the node. No default boot option file exists. The router boots with the factory default boot sequence and options.

**Default**    **none**

#### save

**Syntax**    **save** [*cf*flash-*id*]

**Context**    bof

**Description**    This command uses the boot option parameters currently in memory and writes them from the boot option file to the specified compact flash. The BOF must be located in the root directory of the internal or external compact flash drives local to the system and have the mandatory filename of *bof.cfg*. If a location is not specified, the BOF is saved to the default compact flash drive (cf3:) associated with the active CFM (typically the CFM in slot A, but the CFM in slot B could also be acting as the active CFM). The slot name is not case-sensitive. You can use upper or lowercase “A” or “B”.  
Command usage:

## File Management Commands

- **bof save** — Saves the BOF to the default drive (cf3:) associated with the active CFM (either in slot A or B).
- **bof save cf3:** — Saves the BOF to cf3: associated with the active CFM (either in slot A or B).

To save the BOF to a compact flash drive associated with the standby CFM (for example, the redundant (standby) CFM is installed in slot B), specify -A or -B option.

Command usage:

- **bof save cf3-A:** — Saves the BOF to cf3: associated with the CFM in in slot A whether it is active or standby.
- **bof save cf3-B:** — Saves the BOF to cf3: associated with the CFM in in slot B whether it is active or standby.

The slot name is not case-sensitive. You can use upper or lowercase “A” or “B”.

The **bof save** and **show bof** commands allow you to save to or read from the compact flash of the standby CFM. Use the **show card** command to determine the active and standby CFM (A or B).

### Default

Saves must be explicitly executed. The BOF is saved to cf3: if a location is not specified.

### Parameters

*flash-id* — The compact flash ID where the *bof.cfg* is to be saved.

**Values** cf1:, cf1-A:, cf1-B:, cf2:, cf2-A:, cf2-B:, cf3:, cf3-A:, cf3-B:

**Default** cf3:

---

## BOF Processing Control

### wait

**Syntax**    `wait seconds`

**Context**    bof

**Description**    This command configures a pause, in seconds, at the start of the boot process which allows system initialization to be interrupted at the console.

When system initialization is interrupted the operator is allowed to manually override the parameters defined in the boot option file (BOF).

Only one **wait** command can be defined in the BOF.

**Default**    3

**Parameters**    *seconds* — The time to pause at the start of the boot process, in seconds.

**Values**    1 — 10

## Console Port Configuration

### console-speed

**Syntax**    **console-speed** *baud-rate*  
              **no console-speed**

**Context**    bof

**Description**    This command configures the console port baud rate.  
                    When this command is issued while editing the BOF file used for the most recent boot, both the BOF file and the active configuration are changed immediately.  
                    The **no** form of the command reverts to the default value.

**Default**        **115200** — console configured for 115,200 bps operation

**Parameters**    *baud-rate* — The console port baud rate, expressed as a decimal integer.

**Values**        9600, 19200, 38400, 57600, 115200



---

## Image and Configuration Management

### persist

**Syntax** `persist {on | off}`

**Context** bof

**Description** This command specifies whether the system will preserve system indexes when a **save** command is executed. During a subsequent boot, the index file is read along with the configuration file. As a result, a number of system indexes are preserved between reboots, including the interface index, LSP IDs, path IDs, etc. This reduces resynchronizations of the Network Management System (NMS) with the affected network element.

In the event that **persist** is **on** and the reboot with the appropriate index file fails, SNMP is operationally shut down to prevent the management system from accessing and possibly synchronizing with a partially booted or incomplete network element. To enable SNMP access, enter the **config>system>snmp>no shutdown** command.

If **persist** is enabled and the **admin save <url>** command is executed with an FTP path used as the **<url>** parameter, two FTP sessions simultaneously open to the FTP server. The FTP server must be configured to allow multiple sessions from the same login, otherwise, the configuration and index files will not be saved correctly.

Notes:

- Persistency files (.ndx) are saved on the same disk as the configuration files and the image files.
- When an operator sets the location for the persistency file, the system will check to ensure that the disk has enough free space. If this there is not enough free space, the persistency will not become active and a trap will be generated. Then, it is up to the operator to free adequate disk space. In the meantime, the system will perform a space availability check every 30 seconds. As soon as the space is available the persistency will become active on the next (30 second) check.

**Default** off

**Parameters** *on* — Create when saving the configuration.  
*off* — Disables the system index saves between reboots.

## primary-config

<b>Syntax</b>	<b>primary-config</b> <i>file-url</i> <b>no primary-config</b>								
<b>Context</b>	bof								
<b>Description</b>	<p>This command specifies the name and location of the primary configuration file.</p> <p>The system attempts to use the configuration specified in <b>primary-config</b>. If the specified file cannot be located, the system automatically attempts to obtain the configuration from the location specified in <b>secondary-config</b> and then the <b>tertiary-config</b>.</p> <p>Note that if an error in the configuration file is encountered, the boot process aborts.</p> <p>The <b>no</b> form of the command removes the <b>primary-config</b> configuration.</p>								
<b>Default</b>	none								
<b>Parameters</b>	<i>file-url</i> — The primary configuration file location, expressed as a file URL.								
<b>Values</b>	<table><tr><td>file-url</td><td>[<i>local-url</i>   <i>remote-url</i>] (up to 180 characters)</td></tr><tr><td>local-url</td><td>[<i>cflash-id</i>/][<i>file-path</i>]</td></tr><tr><td>remote-url</td><td>[{ftp:// tftp://} <i>login:pswd@remote-locn</i>/][<i>file-path</i>]</td></tr><tr><td>cflash-id</td><td>cf1:, cf1-A:, cf1-B:, cf2:, cf2-A:, cf2-B:, cf3:, cf3-A:, cf3-B:</td></tr></table>	file-url	[ <i>local-url</i>   <i>remote-url</i> ] (up to 180 characters)	local-url	[ <i>cflash-id</i> /][ <i>file-path</i> ]	remote-url	[{ftp:// tftp://} <i>login:pswd@remote-locn</i> /][ <i>file-path</i> ]	cflash-id	cf1:, cf1-A:, cf1-B:, cf2:, cf2-A:, cf2-B:, cf3:, cf3-A:, cf3-B:
file-url	[ <i>local-url</i>   <i>remote-url</i> ] (up to 180 characters)								
local-url	[ <i>cflash-id</i> /][ <i>file-path</i> ]								
remote-url	[{ftp:// tftp://} <i>login:pswd@remote-locn</i> /][ <i>file-path</i> ]								
cflash-id	cf1:, cf1-A:, cf1-B:, cf2:, cf2-A:, cf2-B:, cf3:, cf3-A:, cf3-B:								

## primary-image

<b>Syntax</b>	<b>primary-image</b> <i>file-url</i> <b>no primary image</b>								
<b>Context</b>	bof								
<b>Description</b>	<p>This command specifies the primary directory location for runtime image file loading.</p> <p>The system attempts to load all runtime image files configured in the <b>primary-image</b> first. If this fails, the system attempts to load the runtime images from the location configured in the <b>secondary-image</b>. If the secondary image load fails, the tertiary image specified in <b>tertiary-image</b> is used.</p> <p>The <b>no</b> form of the command removes the <b>primary-image</b> configuration.</p>								
<b>Default</b>	none								
<b>Parameters</b>	<i>file-url</i> — The <i>location-url</i> can be either local (this CFM) or a remote FTP server.								
<b>Values</b>	<table><tr><td>file-url</td><td>[<i>local-url</i>   <i>remote-url</i>] (up to 180 characters)</td></tr><tr><td>local-url</td><td>[<i>cflash-id</i>/][<i>file-path</i>]</td></tr><tr><td>remote-url</td><td>[{ftp:// tftp://} <i>login:pswd@remote-locn</i>/][<i>file-path</i>]</td></tr><tr><td>cflash-id</td><td>cf1:, cf1-A:, cf1-B:, cf2:, cf2-A:, cf2-B:, cf3:, cf3-A:, cf3-B:</td></tr></table>	file-url	[ <i>local-url</i>   <i>remote-url</i> ] (up to 180 characters)	local-url	[ <i>cflash-id</i> /][ <i>file-path</i> ]	remote-url	[{ftp:// tftp://} <i>login:pswd@remote-locn</i> /][ <i>file-path</i> ]	cflash-id	cf1:, cf1-A:, cf1-B:, cf2:, cf2-A:, cf2-B:, cf3:, cf3-A:, cf3-B:
file-url	[ <i>local-url</i>   <i>remote-url</i> ] (up to 180 characters)								
local-url	[ <i>cflash-id</i> /][ <i>file-path</i> ]								
remote-url	[{ftp:// tftp://} <i>login:pswd@remote-locn</i> /][ <i>file-path</i> ]								
cflash-id	cf1:, cf1-A:, cf1-B:, cf2:, cf2-A:, cf2-B:, cf3:, cf3-A:, cf3-B:								

## secondary-config

<b>Syntax</b>	<b>secondary-config</b> <i>file-url</i> <b>no secondary-config</b>								
<b>Context</b>	bof								
<b>Description</b>	<p>This command specifies the name and location of the secondary configuration file.</p> <p>The system attempts to use the configuration as specified in <b>secondary-config</b> if the primary config cannot be located. If the <b>secondary-config</b> file cannot be located, the system attempts to obtain the configuration from the location specified in the <b>tertiary-config</b>.</p> <p>Note that if an error in the configuration file is encountered, the boot process aborts.</p> <p>The <b>no</b> form of the command removes the <b>secondary-config</b> configuration.</p>								
<b>Default</b>	none								
<b>Parameters</b>	<i>file-url</i> — The secondary configuration file location, expressed as a file URL.								
<b>Values</b>	<table> <tr> <td>file-url</td> <td>[<i>local-url</i>   <i>remote-url</i>] (up to 180 characters)</td> </tr> <tr> <td>local-url</td> <td>[<i>cflash-id</i>/][<i>file-path</i>]</td> </tr> <tr> <td>remote-url</td> <td>[{ftp:// tftp://} <i>login:pswd@remote-locn</i>/][<i>file-path</i>]</td> </tr> <tr> <td>cflash-id</td> <td>cf1:, cf1-A:, cf1-B:, cf2:, cf2-A:, cf2-B:, cf3:, cf3-A:, cf3-B:</td> </tr> </table>	file-url	[ <i>local-url</i>   <i>remote-url</i> ] (up to 180 characters)	local-url	[ <i>cflash-id</i> /][ <i>file-path</i> ]	remote-url	[{ftp:// tftp://} <i>login:pswd@remote-locn</i> /][ <i>file-path</i> ]	cflash-id	cf1:, cf1-A:, cf1-B:, cf2:, cf2-A:, cf2-B:, cf3:, cf3-A:, cf3-B:
file-url	[ <i>local-url</i>   <i>remote-url</i> ] (up to 180 characters)								
local-url	[ <i>cflash-id</i> /][ <i>file-path</i> ]								
remote-url	[{ftp:// tftp://} <i>login:pswd@remote-locn</i> /][ <i>file-path</i> ]								
cflash-id	cf1:, cf1-A:, cf1-B:, cf2:, cf2-A:, cf2-B:, cf3:, cf3-A:, cf3-B:								

## secondary-image

<b>Syntax</b>	<b>secondary-image</b> <i>file-url</i> <b>no secondary-image</b>								
<b>Context</b>	bof								
<b>Description</b>	<p>This command specifies the secondary directory location for runtime image file loading.</p> <p>The system attempts to load all runtime image files configured in the <b>primary-image</b> first. If this fails, the system attempts to load the runtime images from the location configured in the <b>secondary-image</b>. If the secondary image load fails, the tertiary image specified in <b>tertiary-image</b> is used.</p> <p>The <b>no</b> form of the command removes the <b>secondary-image</b> configuration.</p>								
<b>Default</b>	none								
<b>Parameters</b>	<i>file-url</i> — The <i>file-url</i> can be either local (this CFM) or a remote FTP server.								
<b>Values</b>	<table> <tr> <td>file-url</td> <td>[<i>local-url</i>   <i>remote-url</i>] (up to 180 characters)</td> </tr> <tr> <td>local-url</td> <td>[<i>cflash-id</i>/][<i>file-path</i>]</td> </tr> <tr> <td>remote-url</td> <td>[{ftp:// tftp://} <i>login:pswd@remote-locn</i>/][<i>file-path</i>]</td> </tr> <tr> <td>cflash-id</td> <td>cf1:, cf1-A:, cf1-B:, cf2:, cf2-A:, cf2-B:, cf3:, cf3-A:, cf3-B:</td> </tr> </table>	file-url	[ <i>local-url</i>   <i>remote-url</i> ] (up to 180 characters)	local-url	[ <i>cflash-id</i> /][ <i>file-path</i> ]	remote-url	[{ftp:// tftp://} <i>login:pswd@remote-locn</i> /][ <i>file-path</i> ]	cflash-id	cf1:, cf1-A:, cf1-B:, cf2:, cf2-A:, cf2-B:, cf3:, cf3-A:, cf3-B:
file-url	[ <i>local-url</i>   <i>remote-url</i> ] (up to 180 characters)								
local-url	[ <i>cflash-id</i> /][ <i>file-path</i> ]								
remote-url	[{ftp:// tftp://} <i>login:pswd@remote-locn</i> /][ <i>file-path</i> ]								
cflash-id	cf1:, cf1-A:, cf1-B:, cf2:, cf2-A:, cf2-B:, cf3:, cf3-A:, cf3-B:								

## tertiary-config

<b>Syntax</b>	<b>tertiary-config</b> <i>file-url</i> <b>no tertiary-config</b>									
<b>Context</b>	bof									
<b>Description</b>	<p>This command specifies the name and location of the tertiary configuration file.</p> <p>The system attempts to use the configuration specified in <b>tertiary-config</b> if both the primary and secondary config files cannot be located. If this file cannot be located, the system boots with the factory default configuration.</p> <p>Note that if an error in the configuration file is encountered, the boot process aborts.</p> <p>The <b>no</b> form of the command removes the <b>tertiary-config</b> configuration.</p>									
<b>Default</b>	<b>none</b>									
<b>Parameters</b>	<p><i>file-url</i> — The tertiary configuration file location, expressed as a file URL.</p> <table border="0" style="margin-left: 20px;"> <tr> <td style="vertical-align: top;"><b>Values</b></td> <td>local-url</td> <td>[<i>cflash-id</i>/][<i>file-path</i>]</td> </tr> <tr> <td></td> <td>cflash-id</td> <td>cf1:, cf1-A:, cf1-B:, cf2:, cf2-A:, cf2-B:, cf3:, cf3-A:, cf3-B:</td> </tr> <tr> <td></td> <td>remote-url</td> <td>[{ftp:// tftp://} <i>login:pswd@remote-locn</i>/][<i>file-path</i>]</td> </tr> </table>	<b>Values</b>	local-url	[ <i>cflash-id</i> /][ <i>file-path</i> ]		cflash-id	cf1:, cf1-A:, cf1-B:, cf2:, cf2-A:, cf2-B:, cf3:, cf3-A:, cf3-B:		remote-url	[{ftp:// tftp://} <i>login:pswd@remote-locn</i> /][ <i>file-path</i> ]
<b>Values</b>	local-url	[ <i>cflash-id</i> /][ <i>file-path</i> ]								
	cflash-id	cf1:, cf1-A:, cf1-B:, cf2:, cf2-A:, cf2-B:, cf3:, cf3-A:, cf3-B:								
	remote-url	[{ftp:// tftp://} <i>login:pswd@remote-locn</i> /][ <i>file-path</i> ]								

## tertiary-image

<b>Syntax</b>	<b>tertiary-image</b> <i>file-url</i> <b>no tertiary-image</b>												
<b>Context</b>	bof												
<b>Description</b>	<p>This command specifies the tertiary directory location for runtime image file loading.</p> <p>The system attempts to load all runtime image files configured in the <b>primary-image</b> first. If this fails, the system attempts to load the runtime images from the location configured in the <b>secondary-image</b>. If the secondary image load fails, the tertiary image specified in <b>tertiary-image</b> is used.</p> <p>All runtime image files (cpm.tim &amp; iom.tim) must be located in the same directory.</p> <p>The <b>no</b> form of the command removes the <b>tertiary-image</b> configuration.</p>												
<b>Default</b>	<b>none</b>												
<b>Parameters</b>	<p><i>file-url</i> — The location-url can be either local (this CFM) or a remote FTP server.</p> <table border="0" style="margin-left: 20px;"> <tr> <td style="vertical-align: top;"><b>Values</b></td> <td>file-url</td> <td>[<i>local-url</i>   <i>remote-url</i>] (up to 180 characters)</td> </tr> <tr> <td></td> <td>local-url</td> <td>[<i>cflash-id</i>/][<i>file-path</i>]</td> </tr> <tr> <td></td> <td>remote-url</td> <td>[{ftp:// tftp://} <i>login:pswd@remote-locn</i>/][<i>file-path</i>]</td> </tr> <tr> <td></td> <td>cflash-id</td> <td>cf1:, cf1-A:, cf1-B:, cf2:, cf2-A:, cf2-B:, cf3:, cf3-A:, cf3-B:</td> </tr> </table>	<b>Values</b>	file-url	[ <i>local-url</i>   <i>remote-url</i> ] (up to 180 characters)		local-url	[ <i>cflash-id</i> /][ <i>file-path</i> ]		remote-url	[{ftp:// tftp://} <i>login:pswd@remote-locn</i> /][ <i>file-path</i> ]		cflash-id	cf1:, cf1-A:, cf1-B:, cf2:, cf2-A:, cf2-B:, cf3:, cf3-A:, cf3-B:
<b>Values</b>	file-url	[ <i>local-url</i>   <i>remote-url</i> ] (up to 180 characters)											
	local-url	[ <i>cflash-id</i> /][ <i>file-path</i> ]											
	remote-url	[{ftp:// tftp://} <i>login:pswd@remote-locn</i> /][ <i>file-path</i> ]											
	cflash-id	cf1:, cf1-A:, cf1-B:, cf2:, cf2-A:, cf2-B:, cf3:, cf3-A:, cf3-B:											

## Management Ethernet Configuration

### address

**Syntax** [no] address *ip-prefix/ip-prefix-length* [active | standby]

**Context** bof

**Description** This command assigns an IP address to the management Ethernet port on the active CCM in the running configuration and the Boot Option File (BOF) or the standby CPM for systems using redundant CPMs. Deleting a BOF address entry is not allowed from a Telnet session.

Note that changing the active and standby addresses without reboot standby CPM may cause a boot-env sync to fail.

An IPv4 address in the BOF is required when configuring an IPv6 address in this same BOF for use on the management port.

The **no** form of the command deletes the IP address from the CPM Ethernet port.

**Default** no address — There are no IP addresses assigned to Ethernet ports.

**Parameters** *ip-prefix/ip-prefix-length* — The destination address of the aggregate route in dotted decimal notation.

<b>Values</b>	ipv4-prefix	a.b.c.d (host bits must be 0)
	ipv4-prefix-length	0 — 32
	ipv6-prefix	x:x:x:x:x:x:x (eight 16-bit pieces)
		x:x:x:x:x:d.d.d.d
		x: [0 — FFFF]H
		d: [0 — 255]D
	ipv6-prefix-length	0 — 128

**active | standby** — Specifies which CCM Ethernet address is being configured: the active CCM Ethernet or the standby CCM Ethernet.

**Default** active

### autonegotiate

**Syntax** [no] autonegotiate [limited]

**Context** bof

**Description** This command enables speed and duplex autonegotiation on the management Ethernet port in the running configuration and the Boot Option File (BOF).

When autonegotiation is enabled, the link attempts to automatically negotiate the link speed and duplex parameters. If autonegotiation is enabled, then the configured duplex and speed parameters are ignored.

The **no** form of the command disables the autonegotiate feature on this port.

**autonegotiate** — Autonegotiation is enabled on the management Ethernet port.

## File Management Commands

**Parameters** **limited** — Specifies ethernet ports to be configurable to use link autonegotiation but with only a single speed/duplex combination advertised. This allows a specific speed/duplex to be guaranteed without having to turn off autonegotiation, which is not allowed for 1000BASE-T.

### duplex

**Syntax** **duplex {full | half}**

**Context** bof

**Description** This command configures the duplex mode of the CCM management Ethernet port when autonegotiation is disabled in the running configuration and the Boot Option File (BOF).

This configuration command allows for the configuration of the duplex mode of the CCM Ethernet interface. If the port is configured to autonegotiate this parameter will be ignored.

**Default** **duplex full** — Full duplex operation.

**Parameters** **full** — Sets the link to full duplex mode.

**half** — Sets the link to half duplex mode.

### li-local-save

**Syntax** **[no] li-local-save**

**Context** bof

**Description** This command enables the lawful intercept (LI) configuration to be saved locally.

### li-separate

**Syntax** **[no] li-separate**

**Context** bof

**Description** This command enables separate access to lawful intercept (LI) information.

### speed

**Syntax** **speed *speed***

**Context** bof

**Description** This command configures the speed for the CCM management Ethernet port when autonegotiation is disabled in the running configuration and the Boot Option File (BOF).

If the port is configured to autonegotiate this parameter is ignored.

**Default** **speed 100** — 100 M/bps operation.

**Parameters** **10** — Sets the link to 10 M/bps speed.

**100** — Sets the link to 100 M/bps speed.

## static-route

**Syntax** **[no] static-route** *ip-prefix/ip-prefix-length next-hop ip-address*

**Context** bof

**Description** This command creates a static route entry for the CCM management Ethernet port in the running configuration and the Boot Option File (BOF).

This command allows manual configuration of static routing table entries. These static routes are only used by traffic generated by the CCM Ethernet port. To reduce configuration, manual address aggregation should be applied where possible.

A static default (0.0.0.0/0 or ::/0) route cannot be configured on the CCM Ethernet port. A maximum of 10 static routes can be configured on the CCM port.

The **no** form of the command deletes the static route.

**Default** No default routes are configured.

**Parameters** *ip-prefix/ip-prefix-length* — The destination address of the static route in dotted decimal notation.

<b>Values</b>	ip-prefix/ip-prefix-length: ipv4-prefix	a.b.c.d (host bits must be 0)
	ipv4-prefix-le	0 — 32
	ipv6-prefix	x:x:x:x:x:x:x (eight 16-bit pieces) x:x:x:x:x:d.d.d.d x: [0..FFFF]H d: [0..255]D
	ipv6-prefix-le	0 — 128
ip-address:	ipv4-address	a.b.c.d
	ipv6-address	x:x:x:x:x:x:x (eight 16-bit pieces) x:x:x:x:x:d.d.d.d x: [0..FFFF]H d: [0..255]D

*mask* — The subnet mask, expressed as an integer or in dotted decimal notation.

**Values** 1 — 32 (mask length), 128.0.0.0 — 255.255.255.255 (dotted decimal)

**next-hop** *ip-address* — The next hop IP address used to reach the destination.

---

## DNS Configuration Commands

### dns-domain

<b>Syntax</b>	<b>dns-domain</b> <i>dns-name</i> <b>no dns-domain</b>
<b>Context</b>	bof
<b>Description</b>	This command configures the domain name used when performing DNS address resolution. This is a required parameter if DNS address resolution is required. Only a single domain name can be configured. If multiple domain statements are configured, the last one encountered is used.  The <b>no</b> form of the command removes the domain name from the configuration.
<b>Default</b>	<b>no dns-domain</b> — No DNS domain name is configured.
<b>Parameters</b>	<i>dns-name</i> — Specifies the DNS domain name up to 32 characters in length.

### primary-dns

<b>Syntax</b>	<b>primary-dns</b> <i>ip-address</i> <b>no primary-dns</b>
<b>Context</b>	bof
<b>Description</b>	This command configures the primary DNS server used for DNS name resolution. DNS name resolution can be used when executing ping, traceroute, and service-ping, and also when defining file URLs. DNS name resolution is not supported when DNS names are embedded in configuration files.  The <b>no</b> form of the command removes the primary DNS server from the configuration.
<b>Default</b>	<b>no primary-dns</b> — No primary DNS server is configured.
<b>Parameters</b>	<i>ip-address</i> — The IP or IPv6 address of the primary DNS server.
<b>Values</b>	ipv4-address - a.b.c.d ipv6-address:    x:x:x:x:x:x[-interface] x:x:x:x:x:d.d.d.d[-interface] x: [0..FFFF]H d: [0..255]D interface - 32 chars max, for link local addresses



## secondary-dns

**[no] secondary-dns** *ip-address*

**Context** bof

**Description** This command configures the secondary DNS server for DNS name resolution. The secondary DNS server is used only if the primary DNS server does not respond.

DNS name resolution can be used when executing ping, traceroute, and service-ping, and also when defining file URLs. DNS name resolution is not supported when DNS names are embedded in configuration files.

The **no** form of the command removes the secondary DNS server from the configuration.

**Default** **no secondary-dns** — No secondary DNS server is configured.

**Parameters** *ip-address* — The IP or IPv6 address of the secondary DNS server.

**Values**

- ipv4-address - a.b.c.d
- ipv6-address: x:x:x:x:x:x:x[-interface]
- x:x:x:x:x:d.d.d.d[-interface]
- x: [0..FFFF]H
- d: [0..255]D
- interface - 32 chars max, for link local addresses

## tertiary-dns

**Syntax** **[no] tertiary-dns** *ip-address*

**Context** bof

**Description** This command configures the tertiary DNS server for DNS name resolution. The tertiary DNS server is used only if the primary DNS server and the secondary DNS server do not respond.

DNS name resolution can be used when executing ping, traceroute, and service-ping, and also when defining file URLs. DNS name resolution is not supported when DNS names are embedded in configuration files.

The **no** form of the command removes the tertiary DNS server from the configuration.

**Default** **no tertiary-dns** — No tertiary DNS server is configured.

**Parameters** *ip-address* — The IP or IPv6 address of the tertiary DNS server.

**Values**

- ipv4-address - a.b.c.d
- ipv6-address: x:x:x:x:x:x:x[-interface]
- x:x:x:x:x:d.d.d.d[-interface]
- x: [0..FFFF]H
- d: [0..255]D
- interface - 32 chars max, for link local addresses



---

## Show Commands

### bof

**Syntax** `bof [cflash-id | booted]`

**Context** show

**Description** This command displays the Boot Option File (BOF) executed on last system boot or on the specified device. If no device is specified, the BOF used in the last system boot displays. If the BOF has been modified since the system boot, a message displays.

**Parameters** *cflash-id*. The cflash directory name. The slot name is not case-sensitive. Use upper or lowercase “A” or “B” for the slot name.

**Values** cf1:, cf1-A:, cf1-B:, cf2:, cf2-A:, cf2-B:, cf3:, cf3-A:, cf3-B:

*booted* — Displays the boot option file used to boot the system.

**Output** **Show BOF Fields** — The following table describes BOF output fields.

**Table 26: Show BOF Output Fields**

Label	Description
primary-image	The primary location of the directory that contains the runtime images of the CFM card.
primary-config	The primary location of the file that contains the configuration.
primary-dns	The primary DNS server for resolution of host names to IP addresses.
secondary-image	The secondary location of the directory that contains the runtime images of the CFM card.
secondary-config	The secondary location of the file that contains the configuration.
secondary-dns	The secondary DNS server for resolution of host names to IP addresses.
tertiary-image	The tertiary location of the directory that contains the runtime images of the CFM card.
tertiary-config	The tertiary location of the file that contains the configuration.
address	The IP address and mask associated with the CCM Ethernet port or the secondary CCM port.
tertiary-dns	The tertiary DNS server for resolution of host names to IP addresses.
persist	on — Persistent indexes between system reboots is enabled. off — Persistent indexes between system reboots is disabled.

**Table 26: Show BOF Output Fields (Continued)**

Label	Description
wait	The time configured for the boot to pause while waiting for console input.
autonegotiate	No autonegotiate – Autonegotiate not enabled. autonegotiate – Autonegotiate is enabled.
duplex	half – Specifies that the system uses half duplex. full – Specifies that the system uses full duplex.
speed	The speed of the CCM Ethernet interface.
console speed	The console port baud rate.
dns domain	The domain name used when performing DNS address resolution.
uplinkA-address	Displays the Uplink-A IP address.
uplinkA-port	Displays the primary port to be used for auto-boot.
uplinkA-route	Displays the static route associated with Uplink-A.
uplinkA-vlan	Displays the VLAN ID to be used on Uplink-A.
uplinkB-address	Displays the Uplink-B IP address.
uplinkB-port	Displays the secondary port to be used for auto-boot.
uplinkB-route	Displays the static route associated with Uplink-B.
uplinkB-vlan	Displays the VLAN ID to be used on Uplink-B.
uplink-mode	This parameter displays the uplink mode of the device.
no-service-ports	Displays the ports on which service traffic is not processed.
use-expansion-card-type	Displays the expansion card type.

**Sample Output**

```
A:ALA-1# show bof cf3:
=====
BOF on cf3:
=====
autonegotiate
 primary-image ftp://test:test@192.168.xx.xx/./both.tim
 primary-config ftp://test:test@192.168.xx.xx/./lxx.cfg
 secondary-image cf1:/i650/
 secondary-config cf1:/config.cfg
 address 192.168.xx.xxx/20 active
 address 192.168.xx.xxx/20 standby
 primary-dns 192.168.xx.xxx
```

```

dns-domain test.test.com
autonegotiate
duplex full
speed 100
wait 2
persist off
console-speed 115200
=====
A:ALA-1#
A:ALA-1# show bof booted
=====
System booted with BOF
=====
primary-image ftp://test:test@192.168.xx.xx/./both.tim
primary-config ftp://test:test@192.168.xx.xx/./103.cfg
secondary-image cf1:/i650/
secondary-config cf1:/config.cfg
address 192.168.xx.xxx/20 active
address 192.168.xx.xxx/20 standby
primary-dns 192.168.xx.xxx
dns-domain test.test.com
autonegotiate
duplex full
speed 100
wait 2
persist off
console-speed 115200
=====
A:ALA-1#

```

## Show Commands

### boot-messages

**Syntax** boot-messages

**Context** show

**Description** This command displays boot messages generated during the last system boot.

**Output** **Show Boot Messages Fields** — The following output shows boot message output fields.

#### Sample Output

```
A:ALU-1# show boot-messages
=====
cf3:/bootlog.txt
=====
Boot log started on CPU#0
 Build: X-5.0.R3 on Mon Dec 4 18:09:38 PST 2006 by builder
 CPUTL FPGA version: 29
Boot rom version is v27
Booted from Control PROM 1
>>>Testing mainboard FPGA chain...
>>>Testing SDRAM from 0x02200000 to 0x80000000
>>>Testing Compact Flash 1... OK (SILICONSYSTEMS INC 256MB)
>>>Testing Compact Flash 2... OK (SILICONSYSTEMS INC 256MB)
>>>Testing Compact Flash 3... OK (SILICONSYSTEMS INC 256MB)
CFMCTL FPGA version is 0x29
CCM FPGA version is 0x99
Board Serial Number is 'UNIT 1509'
No platforms record found in BP 1 EEPROM
Chassis type 6 (sr-c12) found in BP 1 EEPROM
Chassis Serial Number is 'hosta-dutD'
Searching for boot.ldr on local drives:
Searching cf3 for boot.ldr...

Total Memory: 2016MB Chassis Type: sr-c12 Card Type: canada_r1
TiMOS-L-5.0.S1 boot/hops ALCATEL SR 7710 Copyright (c) 2000-2007 Alcatel-Lucent.
All rights reserved. All use subject to applicable license agreements.
Built on Sat Jan 6 13:11:07 PST 2007 by builder in /rel5.0/current/S1/panos/main

TiMOS BOOT LOADER
Time from clock is TUE MAR 20 13:12:27 2007 UTC
Switching serial output to sync mode... done

Looking for cf3:/bof.cfg ... OK, reading

Contents of Boot Options File on cf3:
 primary-image ftp://*:*@hosta/./images/both.tim
 primary-config ftp://*:*@hosta/./images/ALU-1.cfg
 address 192.168.1.10/23 active
 address 192.168.1.20/23 standby
 primary-dns 192.168.2.1
 secondary-dns 192.168.2.4
 tertiary-dns 192.168.2.9
 dns-domain domain.com
 static-route 192/168.0.0/16 next-hop 192.168.1.1
```

```

autonegotiate
duplex full
speed 100
persist off
console-speed 115200

```

Hit a key within 1 second to change boot parms...

```


Primary image location: ftp://*:*@hosta./images/both.tim
Initializing management port tme0 using IP addr 192.168.1.10.
Loading image ftp://*:*@hosta./images/both.tim
Version B-5.0.B1-8, Mon Mar 19 18:14:32 PST 2007 by builder in /rel5.0/b1/B1-8/panos/main
text:(26492558-->61512608) + data:(1605100-->13861376)
Executing TiMOS image at 0x2800000

```

```

Total Memory: 2016MB Chassis Type: sr-c12 Card Type: canada_r1
TiMOS-B-5.0.B1-8 both/hops ALCATEL SR 7710 Copyright (c) 2000-2007 Alcatel-Lucent.
All rights reserved. All use subject to applicable license agreements.
Built on Mon Mar 19 18:14:32 PST 2007 by builder in /rel5.0/b1/B1-8/panos/main

```

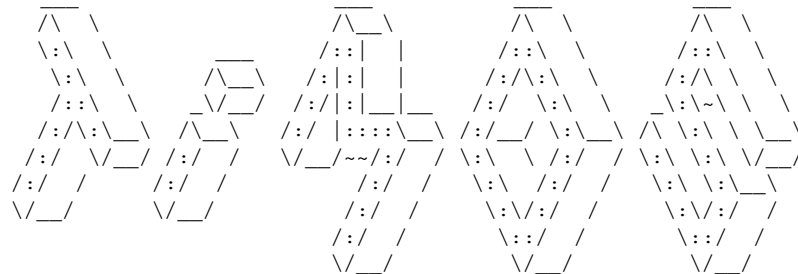

Time from clock is TUE MAR 20 13:12:46 2007 UTC

```

Attempting to exec primary configuration file:
'ftp://*:*@hosta./images/ALU-1.cfg' ...
System Configuration
Log Configuration
Router (Network Side) Configuration
Service Configuration
Router (Service Side) Configuration
Card Configuration
Executed 79 lines in 0.1 seconds from file ftp://*:*@hosta./images/ALU-1.cfg

```

```

Attempting to exec successful configuration extension file:
'ftp://*:*@192.168.1.70./images/env.cfg' ...
Executed 19 lines in 0.1 seconds from file ftp://*:*@192.168.1.70./images/env.cfg
TiMOS-B-5.0.B1-8 both/hops ALCATEL SR 7710 Copyright (c) 2000-2007 Alcatel-Lucent.
All rights reserved. All use subject to applicable license agreements.
Built on Mon Mar 19 18:14:32 PST 2007 by builder in /rel5.0/b1/B1-25/panos/main

```

```

ALU
Login: =====
cf3:/bootlog_prev.txt
=====
Boot log started on CPU#0

```

## Show Commands

```
Build: X-0.0.I1338 on Mon Dec 4 18:09:38 PST 2006 by builder
CPUCTL FPGA version: 29
Boot rom version is v27
Booted from Control PROM 1
>>>Testing mainboard FPGA chain...
>>>Validating SDRAM from 0x7ff00000 to 0x80000000
>>>Testing SDRAM from 0x02200000 to 0x7ff00000
>>>Testing Compact Flash 1... OK (SILICONSYSTEMS INC 256MB)
>>>Testing Compact Flash 2... OK (SILICONSYSTEMS INC 256MB)
>>>Testing Compact Flash 3... OK (SILICONSYSTEMS INC 256MB)
CFMCTL FPGA version is 0x29
CCM FPGA version is 0x99
Board Serial Number is 'UNIT 1509'
No platforms record found in BP 1 EEPROM
Chassis type 6 (sr-c12) found in BP 1 EEPROM
Chassis Serial Number is 'hosta-dutD'
Searching for boot.ldr on local drives:
Searching cf3 for boot.ldr...

Total Memory: 2016MB Chassis Type: sr-c12 Card Type: canada_r1
TiMOS-L-5.0.S1 boot/hops ALCATEL SR 7710 Copyright (c) 2000-2007 Alcatel-Lucent.
All rights reserved. All use subject to applicable license agreements.
Built on Sat Jan 6 13:11:07 PST 2007 by builder in /rel5.0/current/S1/panos/main

TiMOS BOOT LOADER
Time from clock is TUE MAR 20 06:21:28 2007 UTC
Switching serial output to sync mode... done

Looking for cf3:/bof.cfg ... OK, reading

Contents of Boot Options File on cf3:
primary-image ftp://*:*@hosta/./images/both.tim
primary-config ftp://*:*@hosta/./images/ALU-1.cfg
address 192.168.1.10/23 active
address 192.168.1.20/23 standby
primary-dns 192.168.2.1
secondary-dns 192.168.2.4
tertiary-dns 192.168.2.9
dns-domain domain.com
static-route 192.168.0.0/16 next-hop 192.168.1.1
autonegotiate
duplex full
speed 100
persist off
console-speed 115200


Hit a key within 1 second to change boot parms...

Primary image location: ftp://*:*@hosta/./images/both.tim
Initializing management port tme0 using IP addr 192.168.1.10.
Loading image ftp://*:*@hosta/./images/both.tim
Version B-5.0.B1-8, Mon Mar 19 18:14:32 PST 2007 by builder in /rel5.0/b1/B1-8/panos/main
text:(26492558-->61512608) + data:(1605100-->13861376)
Executing TiMOS image at 0x2800000

Total Memory: 2016MB Chassis Type: sr-c12 Card Type: canada_r1
TiMOS-B-5.0.B1-8 both/hops ALCATEL SR 7710 Copyright (c) 2000-2007 Alcatel-Lucent.
All rights reserved. All use subject to applicable license agreements.
```



Built on Mon Mar 19 18:14:32 PST 2007 by builder in /rel5.0/b1/B1-8/panos/main

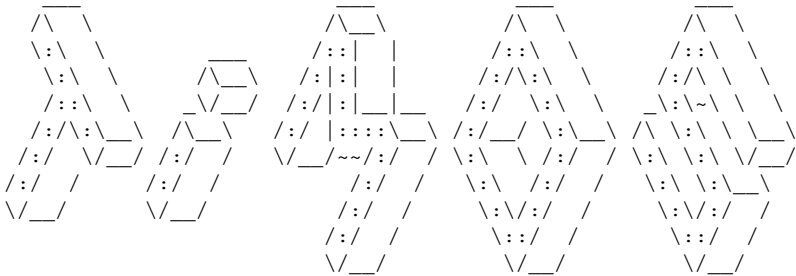

Time from clock is TUE MAR 20 06:21:47 2007 UTC  
A:ALU-1#

Show Commands

# System Management

---

## In This Chapter

This chapter provides information about configuring basic system management parameters.

Topics in this chapter include:

- [System Management Parameters on page 221](#)
  - [System Information on page 221](#)
    - [System Name on page 221](#)
    - [System Contact on page 221](#)
    - [System Location on page 222](#)
    - [System Coordinates on page 222](#)
    - [Naming Objects on page 222](#)
    - [Naming Objects on page 222](#)
  - [System Time on page 224](#)
    - [Time Zones on page 224](#)
    - [Network Time Protocol \(NTP\) on page 226](#)
    - [SNTP Time Synchronization on page 227](#)
    - [CRON on page 228](#)
- [High Availability on page 229](#)
  - [HA Features on page 229](#)
    - [HA Features on page 229](#)
      - [Redundancy on page 230](#)
      - [Nonstop Forwarding on page 233](#)
      - [Nonstop Routing \(NSR\) on page 234](#)
      - [CPM Switchover on page 235](#)
      - [Synchronization on page 236](#)

- Synchronization and Redundancy on page 237
  - Synchronous Ethernet on page 247
  - Boot-Env Option on page 259
  - Config Option on page 259
  - Active and Standby Designations on page 238
  - When the Active CFM Goes Offline on page 239
  - Persistence on page 240
- Network Synchronization on page 241
  - Synchronous Ethernet on page 247
  - Synchronous Ethernet on page 247
  - Clock Source Quality Level Definitions on page 248
  - DS1 Signals on page 245
  - E1 Signals on page 245
- System-Wide ATM Parameters on page 251
- Link Layer Discovery Protocol (LLDP) on page 252
- Administrative Tasks on page 255
  - Saving Configurations on page 256
  - Specifying Post-Boot Configuration Files on page 257
  - Network Timing on page 258
  - Power Supplies on page 258

## System Management Parameters

System management commands allow you to configure basic system management functions such as the system name, the router's location and coordinates, and CLI code as well as time zones, Network Time Protocol (NTP), Simple Network Time Protocol (SNTP) properties, CRON and synchronization properties.

It is possible to query the DNS server for IPv6 addresses. By default the DNS names are queried for A-records only (address-preference is IPv4-only). If the address-preference is set to IPv6 first, the DNS server will be queried for AAAA-records first, and if there is no successful reply, then A-records.

---

## System Information

System information components include:

- [System Name on page 221](#)
  - [System Contact on page 221](#)
  - [System Location on page 222](#)
  - [System Coordinates on page 222](#)
  - [Naming Objects on page 222](#)
- 

## System Name

The system name is the MIB II (RFC 1907, *Management Information Base for Version 2 of the Simple Network Management Protocol (SNMPv2)*) sysName object. By convention, this text string is the node's fully-qualified domain name. The system name can be any ASCII printable text string of up to 32 characters.

---

## System Contact

The system contact is the MIB II sysContact object. By convention, this text string is a textual identification of the contact person for this managed node, together with information on how to contact this person. The system contact can be any ASCII printable text string of up to 80 characters.

## System Location

The system location is the MIB II sysLocation object which is a text string conventionally used to describe the node's physical location, for example, "Bldg MV-11, 1st Floor, Room 101". The system location can be any ASCII printable text string of up to 80 characters.

---

## System Coordinates

The system coordinates is the Alcatel-Lucent Chassis MIB tmnxChassisCoordinates object. This text string indicates the Global Positioning System (GPS) coordinates of the location of the chassis.

Two-dimensional GPS positioning offers latitude and longitude information as a four dimensional vector:

*<direction, hours, minutes, seconds>*

where *direction* is one of the four basic values: N, S, W, E, *hours* ranges from 0 to 180 (for latitude) and 0 to 90 for longitude, and minutes and seconds range from 0 to 60.

<W, 122, 56, 89> is an example of longitude and <N, 85, 66, 43> is an example of latitude.

System coordinates can be expressed in different notations, examples include:

- N 45 58 23, W 34 56 12
- N37 37' 00 latitude, W122 22' 00 longitude
- N36\*39.246' W121\*40.121

The system coordinates can be any ASCII printable text string up to 80 characters.

---

## Naming Objects

It is discouraged to configure named objects with a name that starts with "\_tmnx\_" and with "\_" in general.

## Common Language Location Identifier

A Common Language Location Identifier (CLLI) code string for the device is an 11-character standardized geographic identifier that uniquely identifies the geographic location of places and certain functional categories of equipment unique to the telecommunications industry. The CLLI code is stored in the Alcatel-Lucent Chassis MIB `tmnxChassisCLLIcode` object.

The CLLI code can be any ASCII printable text string of up to 11 characters.

## System Time

7710 SR routers are equipped with a real-time system clock for time keeping purposes. When set, the system clock always operates on Coordinated Universal Time (UTC), but the 7710 SR OS software has options for local time translation as well as system clock synchronization.

System time parameters include:

- [Time Zones on page 224](#)
- [Network Time Protocol \(NTP\) on page 226](#)
- [SNTP Time Synchronization on page 227](#)
- [CRON on page 228](#)

---

## Time Zones

Setting a time zone in 7710 SR OS allows for times to be displayed in the local time rather than in UTC. The 7710 SR OS has both user-defined and system defined time zones.

A user-defined time zone has a user assigned name of up to four printable ASCII characters in length and unique from the system-defined time zones. For user-defined time zones, the offset from UTC is configured as well as any summer time adjustment for the time zone.

The 7710 SR OS system-defined time zones are listed in [Table 27](#) which includes both time zones with and without summer time correction.

**Table 27: System-defined Time Zones**

Acronym	Time Zone Name	UTC Offset
Europe:		
GMT	Greenwich Mean Time	UTC
BST	British Summer Time	UTC +1
IST	Irish Summer Time	UTC +1*
WET	Western Europe Time	UTC
WEST	Western Europe Summer Time	UTC +1
CET	Central Europe Time	UTC +1
CEST	Central Europe Summer Time	UTC +2
EET	Eastern Europe Time	UTC +2
EEST	Eastern Europe Summer Time	UTC +3



**Table 27: System-defined Time Zones (Continued)**

<b>Acronym</b>	<b>Time Zone Name</b>	<b>UTC Offset</b>
MSK	Moscow Time	UTC +3
MSD	Moscow Summer Time	UTC +4
<b>US and Canada</b>		
AST	Atlantic Standard Time	UTC -4
ADT	Atlantic Daylight Time	UTC -3
EST	Eastern Standard Time	UTC -5
EDT	Eastern Daylight Saving Time	UTC -4
ET	Eastern Time	Either as EST or EDT, depending on place and time of year
CST	Central Standard Time	UTC -6
CDT	Central Daylight Saving Time	UTC -5
CT	Central Time	Either as CST or CDT, depending on place and time of year
MST	Mountain Standard Time	UTC -7
MDT	Mountain Daylight Saving Time	UTC -6
MT	Mountain Time	Either as MST or MDT, depending on place and time of year
PST	Pacific Standard Time	UTC -8
PDT	Pacific Daylight Saving Time	UTC -7
PT	Pacific Time	Either as PST or PDT, depending on place and time of year
HST	Hawaiian Standard Time	UTC -10
AKST	Alaska Standard Time	UTC -9
AKDT	Alaska Standard Daylight Saving Time	UTC -8
<b>Australia</b>		
AWST	Western Standard Time (e.g., Perth)	UTC +8
ACST	Central Standard Time (e.g., Darwin)	UTC +9.5
AEST	Eastern Standard/Summer Time (e.g., Canberra)	UTC +10

## Network Time Protocol (NTP)

NTP is the Network Time Protocol defined in RFC 1305, *Network Time Protocol (Version 3) Specification, Implementation and Analysis*. It allows for the participating network nodes to keep time more accurately and more importantly they can maintain time in a more synchronized fashion between all participating network nodes.

NTP uses stratum levels to define the number of hops from a reference clock. The reference clock is considered to be a stratum-0 device that is assumed to be accurate with little or no delay. Stratum-0 servers cannot be used in a network. However, they can be directly connected to devices that operate as stratum-1 servers. A stratum-1 server is an NTP server with a directly-connected device that provides Coordinated Universal Time (UTC), such as a GPS or atomic clock. The 7710 SR device cannot act as stratum-1 servers but can act as stratum-2 devices as a network connection to an NTP server is required.

The higher stratum levels are separated from the stratum-1 server over a network path, thus, a stratum-2 server receives its time over a network link from a stratum-1 server. A stratum-3 server receives its time over a network link from a stratum-2 server.

The following NTP elements are supported:

- Server mode — In this mode, the node advertises the ability to act as a clock source for other network elements. In this mode, the node will, by default, transmit NTP packets in NTP version 4 mode.
- Authentication keys — Increased security support in carrier and other network has been implemented. Both DES and MD5 authentication are supported as well as multiple keys.
- Operation in symmetric active mode — This capability requires that NTP be synchronized with a specific node that is considered more trustworthy or accurate than other nodes carrying NTP in the system. This mode requires that a specific peer is set.
- Broadcast or multicast modes — When operating in these modes, the node will receive or send using either a multicast (default 224.0.1.1) or a broadcast address. Multicast is supported on the MGMT port.
- Alert when NTP server is not available — When none of the configured servers are reachable on the node, the system reverts to manual timekeeping and issues a critical alarm. When a server becomes available, a trap is issued indicating that standard operation has resumed.
- NTP and SNTP — If both NTP and SNTP are enabled on the node, then SNTP transitions to an operationally down state. If NTP is removed from the configuration or shut down, then SNTP resumes an operationally up state.
- Gradual clock adjustment — As several applications (such as Service Assurance Agent (SAA)) can use the clock, and if determined that a major (128 ms or more) adjustment needs to be performed, the adjustment is performed by programmatically stepping the clock. If a minor (less than 128 ms) adjustment must be performed, then the adjustment is

performed by either speeding up or slowing down the clock.

- In order to facilitate proper operation once the standby CFM takes over from the active CFM it is required that the time on the secondary CFM is synchronized with the clock of the active CFM.
  - In order to avoid the generation of too many events/trap the NTP module will rate limit the generation of events/traps to three per second. At that point a single trap will be generated that indicates that event/trap squashing is taking place.
- 

## SNTP Time Synchronization

For synchronizing the system clock with outside time sources, the 7710 SR OS includes a Simple Network Time Protocol (SNTP) client. As defined in RFC 2030, SNTP Version 4 is an adaptation of the Network Time Protocol (NTP). SNTP typically provides time accuracy within 100 milliseconds of the time source. SNTP can only receive the time from NTP servers; it cannot be used to provide time services to other systems. SNTP is a compact, client-only version of NTP. SNTP does not authenticate traffic.

SNTP can be configured in both unicast client modes (point-to-point) and broadcast client modes (point-to-multipoint). SNTP should be used only at the extremities of the synchronization subnet. SNTP clients should operate only at the highest stratum (leaves) of the subnet and in configurations where no NTP or SNTP client is dependent on another SNTP client for synchronization. SNTP time servers should operate only at the root (stratum 1) of the subnet and then only in configurations where no other source of synchronization other than a reliable radio clock is available.

In the 7710 SR OS, the SNTP client can be configured for either broadcast or unicast client mode.

## CRON

The CRON feature supports the Service Assurance Agent (SAA) functions as well as the ability to schedule turning on and off policies to meet “Time of Day” requirements. CRON functionality includes the ability to specify the commands that need to be run, when they will be scheduled, including one-time only functionality (oneshot), interval and calendar functions, as well as where to store the output of the results. In addition, CRON can specify the relationship between input, output and schedule. Scheduled reboots, peer turn ups, service assurance agent tests and more can all be scheduled with Cron, as well as OAM events, such as connectivity checks, or troubleshooting runs.

CRON features are saved to the configuration file on both primary and backup control modules. If a control module switchover occurs, CRON events are restored when the new configuration is loaded. If a control module switchover occurs during the execution of a cron script, the failover behavior will be determined by the contents of the script.

CRON features run serially with at least 255 separate schedules and scripts. Each instance can support a schedule where the event is executed any number of times.

The following CRON elements are supported:

- **Action** — Parameters for a script including the maximum amount of time to keep the results from a script run, the maximum amount of time a script may run, the maximum number of script runs to store and the location to store the results.
- **Schedule** — The schedule function configures the type of schedule to run, including one-time only (oneshot), periodic or calendar-based runs. All runs are determined by month, day of month or weekday, hour, minute and interval (seconds).
- **Script** — The script command opens a new nodal context which contains information on a script.
- **Time Range** — ACLs and QoS policy configurations may be enhanced to support time based matching. CRON configuration includes time matching with the 'schedule' sub-command. Schedules are based on events; time-range defines an end-time used as a match criteria.
- **Time of Day** — Time of Day (TOD) suites are useful when configuring many types of time-based policies or when a large number of subscribers or SAPs require the same type of TOD changes. The TOD suite may be configured while using specific ingress or egress ACLs or QoS policies, and is an enhancement of the ingress and egress CLI trees.

## High Availability

This section discusses the high availability (HA) routing options and features available to service providers that help diminish vulnerability at the network or service provider edge and alleviate the effect of a lengthy outage on IP networks.

High availability is an important feature in service provider routing systems. High availability is gaining momentum due to the unprecedented growth of IP services and applications in service provider networks driven by the demand from the enterprise and residential communities. Downtime can be very costly, and, in addition to lost revenue, customer information and business-critical communications can be lost. High availability is the combination of continuous uptime over long periods (Mean Time Between Failures (MTBF)) and the speed at which failover or recovery occurs (Mean Time To Repair (MTTR)).

The popularity of high availability routing is evident at the network or service provider edge where thousands of connections are hosted and rerouting options around a failed piece of equipment can often be limiting. Or, a single access link exists to a customer because of additional costs for redundant links. As service providers converge business-critical services such as real-time voice (VoIP), video, and VPN applications over their IP networks, high availability becomes much more stringent compared to the requirements for best-effort data. Network and service availability become critical aspects when offering advanced IP services which dictates that IP routers that are used to construct the foundations of these networks be resilient to component and software outages.

For high availability configuration information, refer to [Synchronization and Redundancy on page 237](#).

---

## HA Features

As more and more critical commercial applications move onto the IP/MPLS networks, providing high availability services becomes increasingly important. This section describes high availability features for routers. Most of these features only apply to routers with two Control Forwarding Modules (CFMs), currently the model.

- [Redundancy on page 230](#)
  - [Software Redundancy on page 230](#)
  - [Configuration Redundancy on page 231](#)
  - [Component Redundancy on page 231](#)
  - [Service Redundancy on page 232](#)
  - [Accounting Configuration Redundancy on page 232](#)
- [Nonstop Forwarding on page 233](#)

- [Nonstop Routing \(NSR\) on page 234](#)
  - [CPM Switchover on page 235](#)
  - [Synchronization on page 236](#)
    - [Configuration and boot-env Synchronization on page 236](#)
    - [State Database Synchronization on page 236](#)
- 

## Redundancy

The redundancy features enable the duplication of data elements and software functionality to maintain service continuation in case of outages or component failure.

---

### Software Redundancy

Software outages are challenging even when baseline hardware redundancy is in place. There should be a balance to provide high availability routing otherwise router problems typically propagate not only throughout the service provider network, but also externally to other connected networks possibly belonging to other service providers. This could affect customers on a broad scale. Presently, there are several software availability features that contribute to the percentage of time that a router is available to process and forward traffic.

To fully appreciate high availability you should realize that all routing protocols specify minimum time intervals in which the peer device must receive an acknowledgement before it disconnects the session.

- OSPF default session timeout is approximately 40 seconds. The timeout intervals are configurable.
- BGP default session timeout is approximately 120 seconds. The timeout intervals are configurable.

Therefore, router software has to recover faster than the specified time interval to maintain up time.

## Configuration Redundancy

Features configured on the active device CFM are saved on the standby CFM as well. When the active device CFM fails, these features are brought up on the standby device CFM that takes over the mastership.

Even with modern modular and stable software, the failure of route processor hardware or software can cause the router to reboot or cause other service impacting events. In the best circumstances, failure leads to the initialization of a redundant route processor, which hosts the standby software configuration, to become the active processor. The following options are available.

- Warm standby — The router image and configuration is already loaded on the standby route processor. However, the standby could still take a few minutes to become effective since it must first re-initialize connections by bringing up Layer 2 connections and Layer 3 routing protocols and then rebuild routing tables.
  - Hot standby — The router image, configuration, and network state is already loaded on the standby and it receives continual updates from the active route processor and the swapon is immediate. However, hot standby affects conventional router performance as more frequent synchronization increases consumption of system resources. Newer generation service routers, like the 7750 SR-Series7450 ESS-Series7710 SR-Series7750 SR MG routers, address this issue because they already have extra processing built into the system.
- 

## Component Redundancy

7710 SR-Series component redundancy is critical to reduce MTTR for the system and primarily consists of the following router features:

- Dual route processor modules — For a highly available architecture, redundant route processors (RPs) or Control Forwarding Modules (CFMs) are essential. The route processor calculates the most efficient route to an Internet destination and communicates the best path information to peer routers. Rapid information synchronization between the primary and secondary route processor is crucial to minimize recovery time.
- Redundant line cards — Failover to the backup within a minimum time interval, preferably with no loss of traffic.
- Redundant power supply — A power module can be removed without impact on traffic.
- Redundant fan — Failure of a fan module without impacting traffic.
- Hot swap — Components in a live system can be replaced or become active without taking the system down or affecting traffic flow to/from other modules.

## High Availability

Router hardware architecture plays a key role in the availability of the system. The principle router architecture styles are centralized and distributed. In these architectures, both active and standby route processors, I/O modules (IOMs) (also called line cards), fans, and power supplies maintain a low MTTR for the routing system.

However, in a centralized architecture, packet processing and forwarding is performed in a central shared route processor and the individual IOMs (line cards) are relatively simple. The cards rely solely on the route processor for routing and forwarding intelligence and, should the centralized route processor fail, there is greater impact to the system overall, as all routing and packet forwarding will stop.

In a distributed system, the packet forwarding functionality is situated on each IOM. Distributing the forwarding engines off the central route processor and positioning one on each IOM lowers the impact of route processor failure as the line cards can continue to forward traffic during an outage.

The distributed system is better suited to enable the convergence of business critical services such as real-time voice (VoIP), Video, and VPN applications over IP networks with superior performance and scalability. The centralized architecture can be prone to performance bottleneck issues and limits service offerings through poor scalability which may lead to customer and service SLA violations.

---

## Service Redundancy

All service-related statistics are kept during a switchover. Services, SDPs, and SAPs will remain up with a minimum loss of forwarded traffic during a CFM switchover.

---

## Accounting Configuration Redundancy

When there is a switchover and the standby CFM becomes active, the accounting servers will be checked and if they are administratively up and capable of coming online (media present, etc.), the standby will be brought online and new accounting files will be created at that point. Users must manually copy the accounting records from the failed CFM.



## Nonstop Forwarding

In a control plane failure or a forced switchover event, the router continues to forward packets using the existing stale forwarding information. Nonstop forwarding requires clean control plane and data plane separation. Usually the forwarding information is distributed to the IOMs.

Nonstop forwarding is used to notify peer routers to continue forwarding and receiving packets, even if the route processor (control plane) is not working or is in a switch-over state. Nonstop forwarding requires clean control plane and data plane separation and usually the forwarding information is distributed to the line cards. This method of availability has both advantages and disadvantages. Nonstop forwarding continues to forward packets using the existing stale forwarding information during a failure. This may cause routing loops and black holes, and also requires that surrounding routers adhere to separate extension standards for each protocol. Every router vendor must support protocol extensions for interoperability.

## Nonstop Routing (NSR)

With NSR on the 7710 SR-Series routers devices, routing neighbors are unaware of a routing process fault. If a fault occurs, a reliable and deterministic activity switch to the inactive control complex occurs such that routing topology and reachability are not affected, even in the presence of routing updates. NSR achieves high availability through parallelization by maintaining up to date routing state information, at all times, on the standby route processor. This capability is achieved independently of protocols or protocol extensions, providing a more robust solution than graceful restart protocols between network routers.

The NSR implementation on the 7710 SR-Series routers supports all routing protocols. NSR makes it possible to keep the existing sessions (BGP, LDP, OSPF, etc.) during a CFM switchover, including support for MPLS signaling protocols. Peers will not see any change.

Protocol extensions are not required. There are no interoperability issues and there is no need to define protocol extensions for every protocol. Unlike nonstop forwarding and graceful restart, the forwarding information in NSR is always up to date, which eliminates possible blackholes or forwarding loops. This is also called the Alcatel-Lucent Carrier Environment Internet System (ACEIS). NSR is a relatively new high availability technique. However, it is regarded the most promising to ensure IP packets continue to forward once a route processor fails and allows for in-service software upgrades.

Traditionally, addressing high availability issues have been patched through non-stop forwarding solutions. With the implementation of NSR, these limitations are overcome by delivering an intelligent hitless failover solution. This enables a carrier-class foundation for transparent networks, required to support business IP services backed by stringent SLAs. This level of high availability poses a major issue for conventional routers whose architectural design limits or prevents them from implementing NSR.

The following NSR entities remain intact after a switchover:

- BGP sessions — BGP peers should not see any change after the switchover. NSR supports all the address families, including IPv4 unicast, VPN-IPv4 unicast, and IPv6 and supports BGP sessions on network ports as well as on the access ports (i.e., VPRN).
- OSPF adjacencies — OSPF neighbors do not see any change after the switchover.
- IS-IS adjacencies — IS-IS neighbors do not see any change after the switchover.
- RIP session — RIP neighbors do not see any change after the switchover.
- Frame Relay data-link connection identifiers.
- ATM VPs/VCs.
- PPP and MLPPP sessions.

## CPM Switchover

During a switchover, system control and routing protocol execution are transferred from the active to the standby CFM.

An automatic switchover may occur under the following conditions:

- A fault condition that causes the active CFM to crash or reboot.
- The active CFM is declared down (not responding).
- Online removal of the active CFM.

A manual switchover can occur under the following conditions:

- To force a switchover from an active CFM to a standby, use the `admin redundancy force-switchover` command. You can configure a batch file that executes after failover by using the **config system switchover-exec** and **admin redundancy force-switchover now** CLI commands.

Note that with the 7710 SR-c4 the **admin rebootactive [now]** CLI command does not cause a switchover but a reboot of the entire system.

## Synchronization

Synchronization between the CFMs includes the following:

- [Configuration and boot-env Synchronization on page 236](#)
  - [State Database Synchronization on page 236](#)
- 

### Configuration and boot-env Synchronization

Configuration and boot-env synchronization are supported in **admin>redundancy> synchronize and config>redundancy>synchronize** contexts.

---

### State Database Synchronization

If a new standby CFM is inserted into the system, it synchronizes with the active CFM upon a successful boot process.

If the standby CFM is rebooted, it synchronizes with the active CFM upon a successful boot process.

When configuration or state changes occur, an incremental synchronization is conducted from the active CFM to the standby CFM.

If the synchronization fails, the standby does not reboot automatically. The **show redundancy synchronization** command displays synchronization output information.

If the active and standby are not synchronized for some reason, users can manually synchronize the standby CFM by rebooting the standby by issuing the **admin reboot standby** command on the active or the standby CFM.

## Synchronization and Redundancy

7710 SR-Series routers supporting redundancy (such as the `7710-SR-7000` model) use a 1:1 redundancy scheme. Redundancy methods facilitate system synchronization between the active and standby Control Forwarding Modules (CFMs) so they maintain identical operational parameters to prevent inconsistencies in the event of a CFM failure.

When automatic system synchronization is enabled for an entity, any save or delete file operations configured on the primary, secondary or tertiary choices on the active CFM file system are mirrored in the standby CFM file system.

Although software configurations and images can be copied or downloaded from remote locations, synchronization can only occur locally between compact flash drives (cf1:, cf2:, and cf3:).

Synchronization can occur either:

- **Automatically** — Automatic synchronization is disabled by default. To enable automatic synchronization, the `config>redundancy>synchronization` command must be specified with either the `boot-env` parameter or the `config` parameter.

When the `boot-env` parameter is specified, the BOF, `boot.ldr`, `config`, and image files are automatically synchronized. When the `config` parameter is specified, only the `config` files are automatically synchronized.

Automatic synchronization also occurs whenever the BOF is modified and when an `admin>save` command is entered with no filename specified.

- **Manually** — To execute synchronization manually, the `admin>redundancy>synchronization` command must be entered with the `boot-env` parameter or the `config` parameter.

When the `boot-env` parameter is specified, the BOF, `boot.ldr`, `config`, and image files are synchronized. When the `config` parameter is specified, only the `config` files are synchronized.

The following shows the output displayed during a manual synchronization of configuration files.

```
A:ALA-12>admin>redundancy# synchronize config
Syncing configuration.....

Syncing configuration.....Completed.
A:ALA-12#
```

## Active and Standby Designations

Typically, the first CFM installed in a redundant 7710 SR-Series chassis assumes the role as active, regardless of being inserted in Slot A or B. The next CFM installed in the same chassis then assumes the role as the standby CFM. If two CFM are inserted simultaneously (or almost simultaneously) and are booting at the same time, then preference is given to the CFM installed in Slot A.

If only one CFM is installed in a redundant router device, then it becomes the active CFM regardless of the slot it is installed in.

To visually determine the active and standby designations, the MS/CTL LED on the faceplate is lit green (steady) to indicate the active designation. The MS/CTL LED on the second CFM faceplate is flashing green to indicate the standby designation.

The following output shows that the CFM installed in Slot A is acting as the active CFM and the CFM installed in Slot B is acting as the standby.

```
ALA-12# show card
=====
Card Summary
=====
Slot Provisioned Equipped Admin Operational
 Card-type Card-type State State

1 iom-12g iom-12g up up
A cfm-12g cfm-12g up up/standby
B cfm-12g cfm-12g up up/active
=====
ALA-12#
```

## When the Active CFM Goes Offline

When an active CFM goes offline (due to reboot, removal, or failure), the standby CFM takes control without rebooting or initializing itself. It is assumed that the CFMs are synchronized, therefore, there is no delay in operability. When the CFM that went offline boots and then comes back online, it becomes the standby CFM.

## Persistence

The persistence feature allows information learned through DHCP snooping across reboots to be kept. This information can include data such as the IP address, MAC binding information, lease-length information, and ingress sap information (required for VPLS snooping to identify the ingress interface). This information is referred to as the DHCP lease-state information.

When a DHCP message is snooped, there are steps that make the data persistent in a system with dual CFMs. In systems with only one CFM, only Step 1 applies. In systems with dual CFMs, all steps apply.

1. When a DHCP ACK is received from a DHCP server, the entry information is written to the active CFM Compact Flash. If writing was successful, the ACK is forwarded to the DHCP client. If persistency fails completely (bad cflash), a trap is generated indicating that persistency can no longer be guaranteed. If the complete persistency system fails the DHCP ACKs are still forwarded to the DHCP clients. Only during small persistency interruptions or in overload conditions of the Compact Flash, DHCP ACKs may get dropped and not forwarded to the DHCP clients.
2. DHCP message information is sent to the standby CFM and also there the DHCP information is logged on the Compact Flash. If persistency fails on the standby also, a trap is generated.




## Network Synchronization

This section describes network synchronization capabilities available on SR and ESS product platforms. These capabilities involve multiple approaches to network timing; namely SDH/SONET, Synchronous Ethernet, and Adaptive clocking. These features address barriers to entry by:

- Providing synchronization quality required by the mobile space; such as radio operations and circuit emulation services (CES) transport.
- Augmenting and potentially replacing the existing (SONET/SDH) timing infrastructure and delivering high quality network timing for time sensitive applications in the wireline space.

Network synchronization is commonly distributed in a hierarchical master-slave topology at the physical layer as shown in [Figure 9](#).

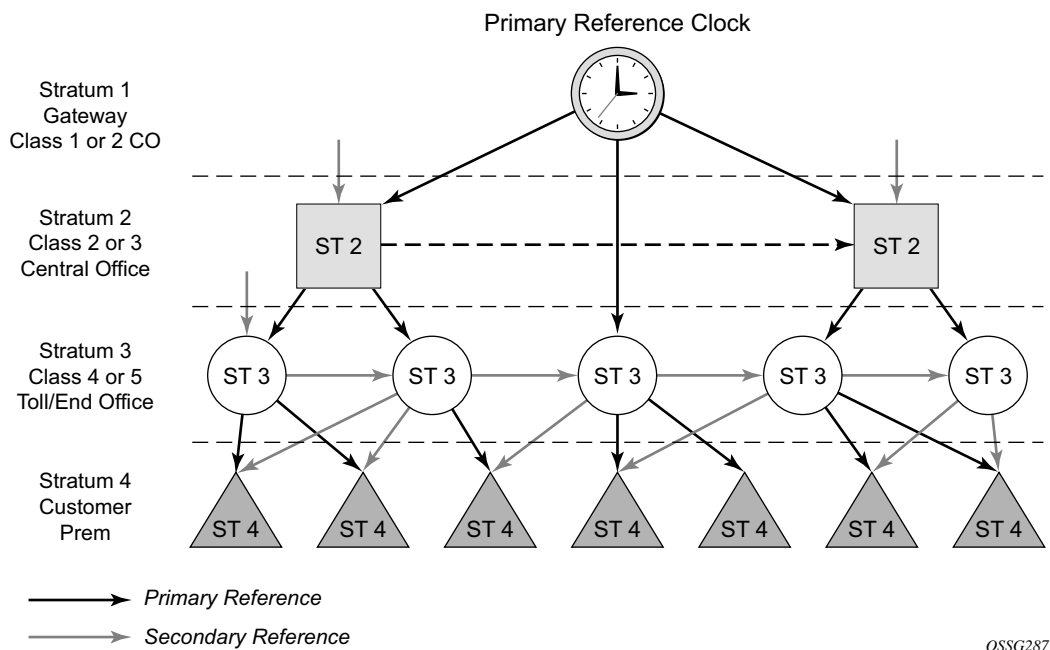

**Figure 9: Conventional Network Timing Architecture (North American Nomenclature)**

The architecture shown in [Figure 9](#) provides the following benefits:

- Limits the need for high quality clocks at each network element and only requires that they reliably replicate input to remain traceable to its reference.
- Uses reliable physical media to provide transport of the timing signal; it doesn't consume any bandwidth and requires limited additional processing.

The synchronization network is designed so a clock always receives timing from a clock of equal or higher stratum or quality level. This ensures that if an upstream clock has a fault condition (for example, loses its reference and enters a holdover or free-run state) and begins to drift in frequency, the downstream clock will be able to follow it. For greater reliability and robustness, most offices and nodes have at least two synchronization references that can be selected in priority order (such as primary and secondary).

Further levels of resiliency can be provided by designing a capability in the node clock that will operate within prescribed network performance specifications without any reference for a specified timeframe. A clock operating in this mode is said to hold the last known state over (or holdover) until the reference lock is once again achieved. Each level in the timing hierarchy is associated with minimum levels of network performance.


Each synchronization capable port can be independently configured to transmit data using the node reference timing or loop timing. In addition, some TDM channels can use adaptive timing.

Transmission of a reference clock through a chain of Ethernet equipment requires that all equipment supports Synchronous Ethernet. A single piece of equipment that is not capable of performing Synchronous Ethernet breaks the chain. Ethernet frames will still get through but downstream devices should not use the recovered line timing as it will not be traceable to an acceptable stratum source.

## Central Synchronization Sub-System

The timing subsystem for the SR/ESS platforms has a central clock located on the CPM (motherboard). The timing subsystem performs many of the duties of the network element clock as defined by Telcordia (GR-1244-CORE) and ITU-T G.781.

The system can select from up to four timing inputs to train the local oscillator. The priority order of these references must be specified. This is a simple ordered list of inputs: {bits, ref1, ref2, ptp}. The CPM clock output shall have the ability to drive the clocking for all line cards in the system. The routers support selection of the node reference using Quality Level (QL) indications. See [Figure 10](#) for a description of synchronization reference selection.

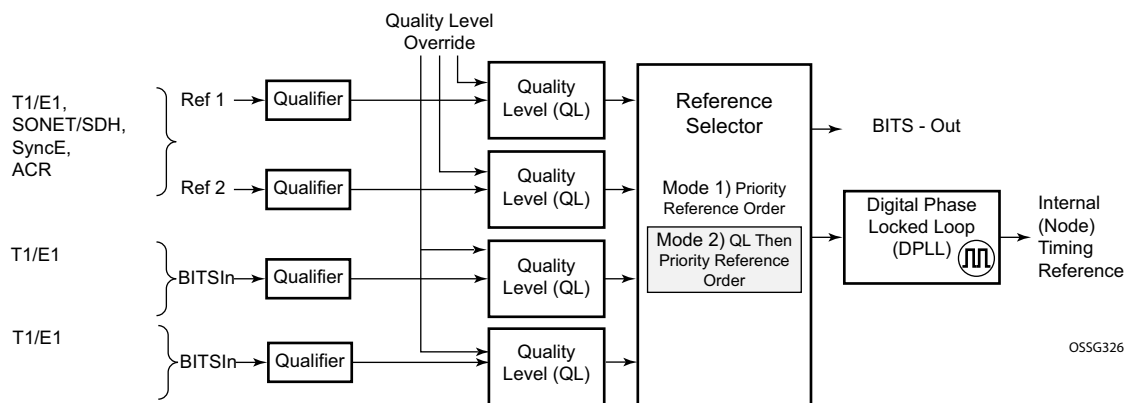

**Figure 10: Synchronization Reference Selection**

The recovered clock will be able to derive its timing from any of the following:

- OC3/STM1, OC12/STM4, OC48/STM16, OC192/STM64 ports
- T1/E1 CES channel (adaptive clocking)
- Synchronous Ethernet ports
- T1/E1 port
- BITS port on a Channelized OC3/STM1 CES CMA (7710 SR-c4, 7710 SR-c12, and the 7750 SR-c12)

When QL selection mode is disabled, then the reversion setting controls when the central clock can re-select a previously failed reference.

The [Table 28](#) shows the selection followed for two reference in both revertive and non-revertive modes:

**Table 28: Revertive, non-Revertive Timing Reference Switching Operation**

Status of Reference A	Status of Reference B	Active Reference Non-revertive Case	Active Reference Revertive Case
OK	OK	A	A
Failed	OK	B	B
OK	OK	B	A
OK	Failed	A	A
OK	OK	A	A
Failed	Failed	holdover	holdover
OK	Failed	A	A
Failed	Failed	holdover	holdover
Failed	OK	B	B
Failed	Failed	holdover	holdover
OK	OK	A or B	A

## Synchronization Status Messages (SSM)

SSM provides a mechanism to allow the synchronization distribution network to both determine the quality level of the clock sourcing a given synchronisation trail and to allow a network element to select the best of multiple input synchronization trails. Synchronization Status messages have been defined for various transport protocols including SONET/SDH, T1/E1, and Synchronous Ethernet, for interaction with office clocks, such as BITS or SSUs and embedded network element clocks.

SSM allows equipment to autonomously provision and reconfigure (by reference switching) their synchronization references, while helping to avoid the creation of timing loops. These messages are particularly useful to allow synchronization reconfigurations when timing is distributed in both directions around a ring.

---

### DS1 Signals

DS1 signals can carry an indication of the quality level of the source generating the timing information using the SSM transported within the 1544 Kbit/s signal's Extended Super Frame (ESF) Data Link (DL) as specified in Recommendation G.704. No such provision is extended to SF formatted DS1 signals.

The format of the data link messages in ESF frame format is "0xxx xxx0 1111 1111", transmitted rightmost bit first. The six bits denoted "xxx xxx" contain the actual message; some of these messages are reserved for synchronization messaging. It takes 32 frames (such as 4 ms) to transmit all 16 bits of a complete DL.

---

### E1 Signals

E1 signals can carry an indication of the quality level of the source generating the timing information using the SSM as specified in Recommendation G.704.

One of the Sa4 to Sa8 bits, (the actual Sa bit is for operator selection), is allocated for Synchronization Status Messages. To prevent ambiguities in pattern recognition, it is necessary to align the first bit (San1) with frame 1 of a G.704 E1 multiframe.

The numbering of the San (n = 4, 5, 6, 7, 8) bits. A San bit is organized as a 4-bit nibble San1 to San4. San1 is the most significant bit; San4 is the least significant bit.

The message set in San1 to San4 is a copy of the set defined in SDH bits 5 to 8 of byte S1.

## **SONET/SDH Signals**

The SSM of SDH and SONET interfaces is carried in the S1 byte of the frame overhead. Each frame contains the four bit value of the QL.

---

## **DS3/E3**

These signals are not required to be synchronous. However, it is acceptable for their clocking to be generated from a synchronization source. The SR/ESS shall permit E3/DS3 physical ports to be specified as a central clock input reference.

DS3/E3 signals do not support an SSM channel. QL-override should be used for these ports if ql-selection is enabled

## Synchronous Ethernet

Traditionally, Ethernet-based networks employ the physical layer transmitter clock to be derived from an inexpensive  $\pm 100$ ppm crystal oscillator and the receiver locks onto it. There is no need for long term frequency stability because the data is packetized and can be buffered. For the same reason there is no need for consistency between the frequencies of different links. However, you can derive the physical layer transmitter clock from a high quality frequency reference by replacing the crystal with a frequency source traceable to a primary reference clock. This would not effect the operation of any of the Ethernet layers, for which this change would be transparent. The receiver at the far end of the link would lock onto the physical layer clock of the received signal, and thus itself gain access to a highly accurate and stable frequency reference. Then, in a manner analogous to conventional hierarchical master-slave network synchronization, this receiver could lock the transmission clock of its other ports to this frequency reference and a fully time synchronous network could be established.

The advantage of using Synchronous Ethernet, compared with methods that rely on sending timing information in packets over an unlocked physical layer, is that it is not influenced by impairments introduced by the higher levels of the networking technology (packet loss, packet delay variation). Hence, the frequency accuracy and stability may be expected to exceed those of networks with unsynchronized physical layers.

Synchronous Ethernet allows operators to gracefully integrate existing systems and future deployments into conventional industry-standard synchronization hierarchy. The concept behind synchronous Ethernet is analogous to SONET/SDH system timing capabilities. It allows the operator to select any (optical) Ethernet port as a candidate timing reference. The recovered timing from this port will then be used to time the system (for example, the CPM will lock to this provisioned reference selection). The operator then could ensure that any of system output would be locked to a stable traceable frequency source.

The SSM of Synchronous Ethernet uses an Ethernet OAM PDU that uses the slow protocol subtype. For a complete description of the format and processing see ITU-T G.8264

## Clock Source Quality Level Definitions

The following clock source quality levels have been identified for the purpose of tracking network timing flow. These levels make up all of the defined network deployment options given in Recommendation G.803 and G.781. The Option I network is a network developed on the original European SDH model; whereas, the Option II network is a network developed on the North American SONET model. See [Table 29](#) and [Table 30](#) for descriptions of the synchronization message coding and source priorities.

In addition to the QL values received over SSM of an interface, the standards also define additional codes for internal use. These include the following:

- QL INVx is generated internally by the system if and when an unallocated SSM value is received, where x represents the binary value of this SSM. Within the SR/ESS all these independent values are assigned as the singled value of QL-INVALID.
- QL FAILED is generated internally by the system if and when the terminated network synchronization distribution trail is in the signal fail state.

Within the SR/ESS, there is also an internal quality level of QL-UNKNOWN. This is used to differentiate from a received QL-STU code but is equivalent for the purposes of QL selection.

**Table 29: Synchronization Message Coding and Source Priorities (Value Received on a Port)**

SSM value received on port				
SDH interface SyncE interface in SDH mode	SONET Interface SyncE interface in SONET mode	E1 interface	T1 interface (ESF)	Internal Relative Quality Level
0010 (prc)	0001 (prs)	0010 (prc)	00000100 11111111 (prs)	1. Best quality
	0000 (stu)		00001000 11111111 (stu)	2.
	0111 (st2)		00001100 11111111 (ST2)	3.
0100 (ssua)	0100 (tnc)	0100 (ssua)	01111000 11111111 (TNC)	4.
	1101 (st3e)		01111100 11111111 (ST3E)	5.
1000 (ssub)		1000 (ssub)		6.
	1010 (st3/eec2)		00010000 11111111 (ST3)	7.



**Table 29: Synchronization Message Coding and Source Priorities (Value Received on a Port)**

1011 (sec/eec1)		1011 (sec)		8. Lowest quality qualified in QL-enabled mode
	1100 (smc)		00100010 11111111 (smc)	9.
			00101000 11111111 (st4)	10.
	1110 (pno)		01000000 11111111 (pno)	11.
1111 (dnu)	1111 (dus)	1111 (dnu)	00110000 11111111 (dus)	12.
Any other	Any other	Any other	N/A	13. QL_INVALID 14. QL-FAILED 15. QL-UNC

**Table 30: Synchronization Message Coding and Source Priorities (Transmitted by Interface of Type)****SSM values to be transmitted by interface of type**

Internal Relative Quality Level	SDH interface SyncE interface in SDH mode	SONET Interface SyncE interface in SONET mode	E1 interface	T1 interface (ESF)
1. Best quality	0010 (prc)	0001 (PRS)	0010 (prc)	00000100 11111111 (PRS)
2.	0100 (ssua)	0000 (stu)	0100 (ssua)	00001000 11111111 (stu)
3.	0100 (ssua)	0111 (st2)	0100 (ssua)	00001100 11111111 (st2)
4.	0100 (ssua)	0100 (tnc)	0100 (ssua)	01111000 11111111 (tnc)
5.	1000 (ssub)	1101 (st3e)	1000 (ssub)	01111100 11111111 (st3e)
6.	1000 (ssub)	1010 (st3/eec2)	1000 (ssub)	00010000 11111111 (st3)
7.	1011 (sec/eec1)	1010 (st3/eec2)	1011 (sec)	00010000 11111111 (st3)
8. Lowest quality qualified in QL-enabled mode	1011 (sec/ eec1)	1100 (smc)	1011 (sec)	00100010 11111111 (smc)

**Table 30: Synchronization Message Coding and Source Priorities (Transmitted by Interface of Type)**

9.	1111 (dnu)	1100 (smc)	1111 (dnu)	00100010 11111111 (smc)
10.	1111 (dnu)	1111 (dus)	1111 dnu	00101000 11111111 (st4)
11.	1111 (dnu)	1110 (pno)	1111 (dnu)	01000000 11111111 (pno)
12.	1111 (dnu)	1111 (dus)	1111 (dnu)	00110000 11111111 (dus)
13. QL_INVALID	1111 (dnu)	1111 (dus)	1111 (dnu)	00110000 11111111 (dus)
14. QL-FAILED	1111 (dnu)	1111 (dus)	1111 (dnu)	00110000 11111111 (dus)
15. QL-UNC	1011 (sec/eec1)	1010 (st3/eec2)	1011 (sec)	00010000 11111111 (st3)

Note: When the internal Quality level is in the range of 9 through 14, the output codes shown in [Table 30](#), will only appear if QL selection is disabled. If ql-selection is enabled, then all of these internal states are changed to internal state 15 (Holdover) and the ssm value generated will reflect the holdover quality of the internal clock.

## System-Wide ATM Parameters

The atm-ping OAM loopback feature can be enabled on an ATM SAP for a period of time configured through the interval and the send-count parameters. When the ATM SAP terminates on IES or VPRN services, a failure of the loopback state machine does not bring down the Layer 3 interface. Only receiving AIS/RDI OAM cells or entering the AIS/RDI state brings down the Layer 3 interface.

The atm-ping OAM loopback feature can be also be enabled on a continuous basis on an ATM SAP terminating on IES or VPRN services. When the loopback state machine fails, the Layer 3 interface is brought down.

The ATM OAM loopback parameters must be first enabled and configured in the **config>system>atm>oam** context and then enabled in the IES or VPRN service interface SAP **atm oam** context.

Refer to the IES and VPRN sections of the *7710 SR OS Services Guide* for further information.

## Link Layer Discovery Protocol (LLDP)

The IEEE 802.1ab Link Layer Discovery Protocol (LLDP) is a uni-directional protocol that uses the MAC layer to transmit specific information related to the capabilities and status of the local device. Separately from the transmit direction, the LLDP agent can also receive the same kind of information for a remote device which is stored in the related MIB(s).

LLDP itself does not contain a mechanism for soliciting specific information from other LLDP agents, nor does it provide a specific means of confirming the receipt of information. LLDP allows the transmitter and the receiver to be separately enabled, making it possible to configure an implementation so the local LLDP agent can either transmit only or receive only, or can transmit and receive LLDP information.

The information fields in each LLDP frame are contained in a LLDP Data Unit (LLDPDU) as a sequence of variable length information elements, that each include type, length, and value fields (known as TLVs), where:

- Type identifies what kind of information is being sent.
- Length indicates the length of the information string in octets.
- Value is the actual information that needs to be sent (for example, a binary bit map or an alphanumeric string that can contain one or more fields).

Each LLDPDU contains four mandatory TLVs and can contain optional TLVs as selected by network management:

- Chassis ID TLV
- Port ID TLV
- Time To Live TLV
- Zero or more optional TLVs, as allowed by the maximum size of the LLDPDU
- End Of LLDPDU TLV

The chassis ID and the port ID values are concatenated to form a logical identifier that is used by the recipient to identify the sending LLDP agent/port. Both the chassis ID and port ID values can be defined in a number of convenient forms. Once selected however, the chassis ID/port ID value combination remains the same as long as the particular port remains operable.


A non-zero value in the TTL field of the time-to-live TLV tells the receiving LLDP agent how long all information pertaining to this LLDPDU's identifier will be valid so that all the associated information can later be automatically discarded by the receiving LLDP agent if the sender fails to update it in a timely manner. A zero value indicates that any information pertaining to this LLDPDU's identifier is to be discarded immediately.

Note that a TTL value of zero can be used, for example, to signal that the sending port has initiated a port shutdown procedure.

The end of a LLDPDU TLV marks the end of the LLDPDU.


The IEEE 802.1ab standard defines a protocol that:

- Advertises connectivity and management information about the local station to adjacent stations on the same IEEE 802 LAN.
- Receives network management information from adjacent stations on the same IEEE 802 LAN.
- Operates with all IEEE 802 access protocols and network media.
- Establishes a network management information schema and object definitions that are suitable for storing connection information about adjacent stations.
- Provides compatibility with a number of MIBs as depicted in [Figure 11](#).

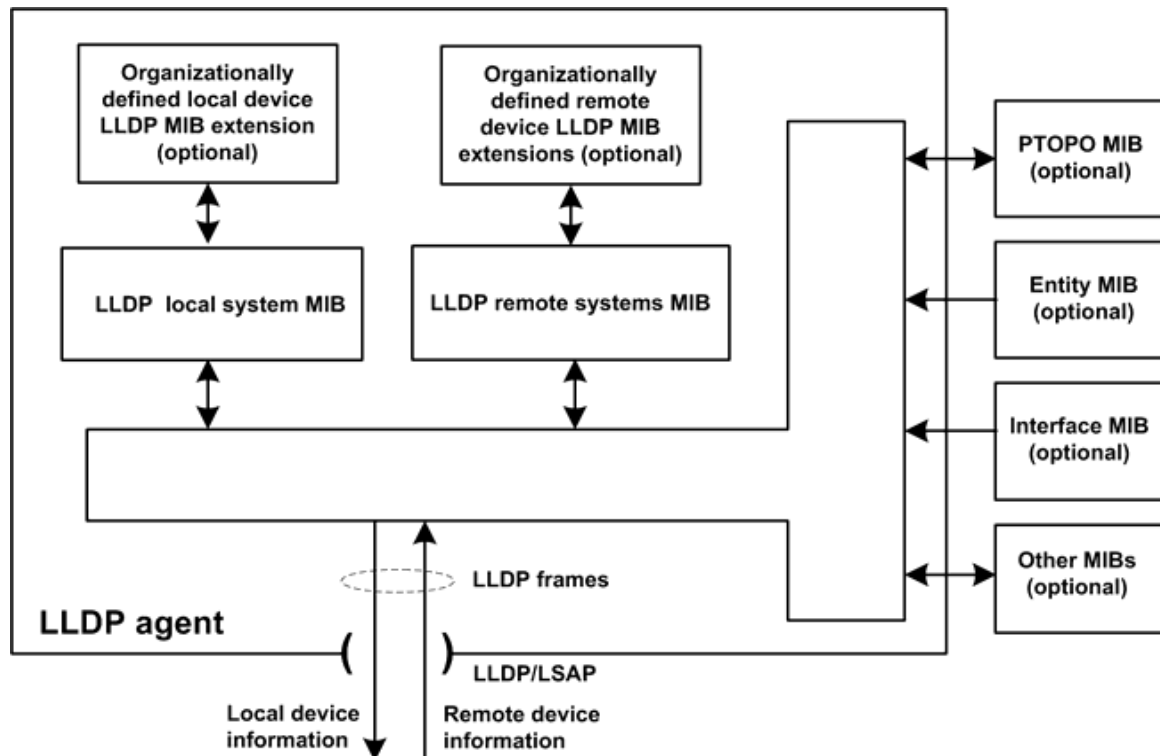

**Figure 11: LLDP Internal Architecture for a Network Node**

Network operators must be able to discover the topology information in order to detect and address network problems and inconsistencies in the configuration. Moreover, standard-based tools can address the complex network scenarios where multiple devices from different vendors are interconnected using Ethernet interfaces.

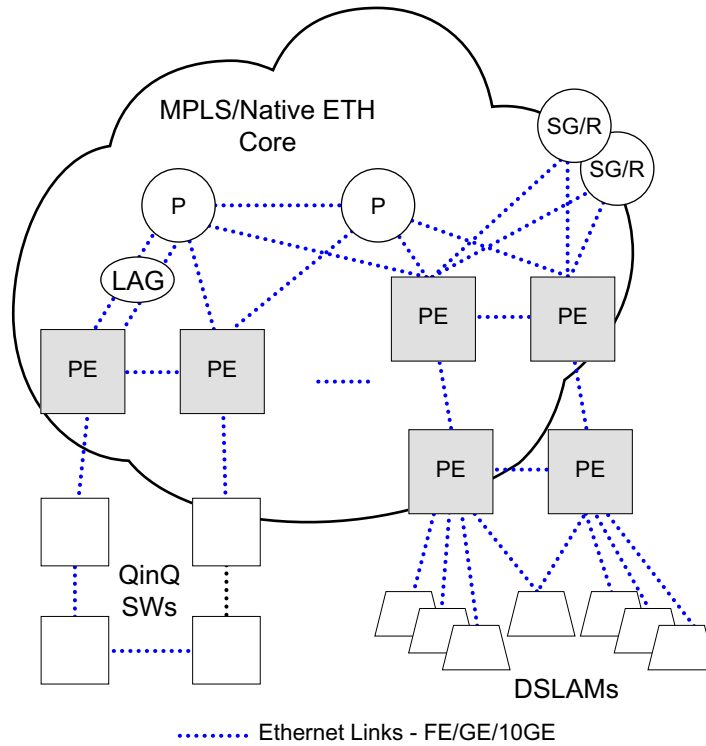

**Figure 12: Customer Use Example For LLDP**

The example displayed in [Figure 12](#) depicts a MPLS network that uses Ethernet interfaces in the core or as an access/handoff interfaces to connect to different kind of Ethernet enabled devices such as service gateway/routers, QinQ switches, DSLAMs or customer equipment.

IEEE 802.1ab LLDP running on each Ethernet interfaces in between all the above network elements may be used to discover the topology information.

## Administrative Tasks

This section contains information to perform administrative tasks.

- [Saving Configurations on page 256](#)
  - [Specifying Post-Boot Configuration Files on page 257](#)
  - [Network Timing on page 258](#)
  - [Power Supplies on page 258](#)
-

## Saving Configurations

Whenever configuration changes are made, the modified configuration must be saved so they will not be lost when the system is rebooted.

Configuration files are saved by executing explicit command syntax which includes the file URL location to save the configuration file as well as options to save both default and non-default configuration parameters. Boot option file (BOF) parameters specify where the system should search for configuration and image files as well as other operational parameters during system initialization.

For more information about boot option files, refer to the *Boot Option Files* section of this manual.



## Specifying Post-Boot Configuration Files

Two post-boot configuration extension files are supported and are triggered when either a successful or failed boot configuration file is processed. The **boot-bad-exec** and **boot-good-exec** commands specify URLs for the CLI scripts to be run following the completion of the boot-up configuration. A URL must be specified or no action is taken.

For example, after a configuration file is successfully loaded, the specified URL can contain a nearly identical configuration file with certain commands enabled or disabled, or particular parameters specified and according to the script which loads that file.

## Network Timing

In Time Domain Multiplexed (TDM)-based networks (for example, SONET or SDH circuit-switched networks), the concept of network timing is used to prevent over-run or under-run issues where circuits are groomed (rebundled) and switched. Hardware exists in each node that takes a common clock derived from an internal oscillator, a specific receive interface and provides it to each synchronous interface in the system. Usually, each synchronous interface is allowed to choose between using the chassis-provided clock or the clocking recovered from the received signal on the interface. The clocking is used to drive the transmit side of the interface. The appropriate configuration at each node which defines how interface clocking is handled must be considered when designing a network that has a centralized timing source so each interface is operating in a synchronous manner.

The effect of timing on a network is dependent on the nature of the type of traffic carried on the network. With bit-wise synchronous traffic (traditional circuit-based voice or video), non-synchronous transmissions cause a loss of information in the streams affecting performance. With packet-based traffic, the applications expect and handle jitter and latency inherent to packet-based networks. When a packet-based network is used to carry voice or video traffic, the applications use data compression and elasticity buffering to compensate for jitter and latency. The network itself relies on appropriate Quality of Service (QoS) definitions and network provisioning to further minimize the jitter and latency the application may experience.

---

## Power Supplies

7710 SR OS supports a **power-supply** command to configure the type and number of power supplies present in the chassis. The operational status of a power source is always displayed by the LEDs on the Control Forwarding Module (CFM) front panel, but the power supply information must be explicitly configured in order for a power supply alarm to be generated if a power source becomes operationally disabled.

## Automatic Synchronization

Use the CLI syntax displayed below to configure synchronization components relating to active-to-standby CFM switchover. In redundant systems, synchronization ensures that the active and standby CFMs have identical operational parameters, including the active configuration, CFM, and IOM images in the event of a failure or reset of the active CFM.

The **force-switchover** command forces a switchover to the standby CFM card.

To enable automatic synchronization, either the **boot-env** parameter or the **config** parameter must be specified. The synchronization occurs when the **admin save** or **bof save** commands are executed.

When the **boot-env** parameter of the **synchronize** command is specified, the bof.cfg, primary/secondary/tertiary configuration files (.cfg and .ndx), li, and ssh files are automatically synchronized. When the **config** parameter is specified, only the configuration files are automatically synchronized.

Synchronization also occurs whenever the BOF is modified and when an **admin>save** command is entered with no filename specified.

---

### Boot-Env Option

The **boot-env** option enables a synchronization of all the files used in system initialization.

When configuring the system to perform this synchronization, the following occurs:

1. The BOF used during system initialization is copied to the same compact flash on the standby CFM (in redundant systems).  
**Note:** The synchronization parameters on the standby CFM are preserved.
  2. The primary, secondary, and tertiary images, (provided they are locally stored on the active CFM) are copied to the same compact flash on the standby CFM.
  3. The primary, secondary, and tertiary configuration files, (provided they are locally stored on the active CFM) are copied to the same compact flash on the standby CFM.
- 

### Config Option

The **config** option synchronizes configuration files by copying the files specified in the active CFM BOF file to the same compact flash on the standby CFM.

## Manual Synchronization

The **admin redundancy synchronize** command performs manual CFM synchronizations. The **boot-env** parameter synchronizes the BOF, image, and configuration files in redundant systems. The **config** parameter synchronizes only the configuration files in redundant systems.

---

## Forcing a Switchover

The **force-switchover now** command forces an immediate switchover to the standby CFM card.

If the active and standby are not synchronized for some reason, users can manually synchronize the standby CFM by rebooting the standby by issuing the **admin reboot standby** command on the active or the standby CFM.

# System Configuration Process Overview

Figure 13 displays the process to provision basic system parameters.

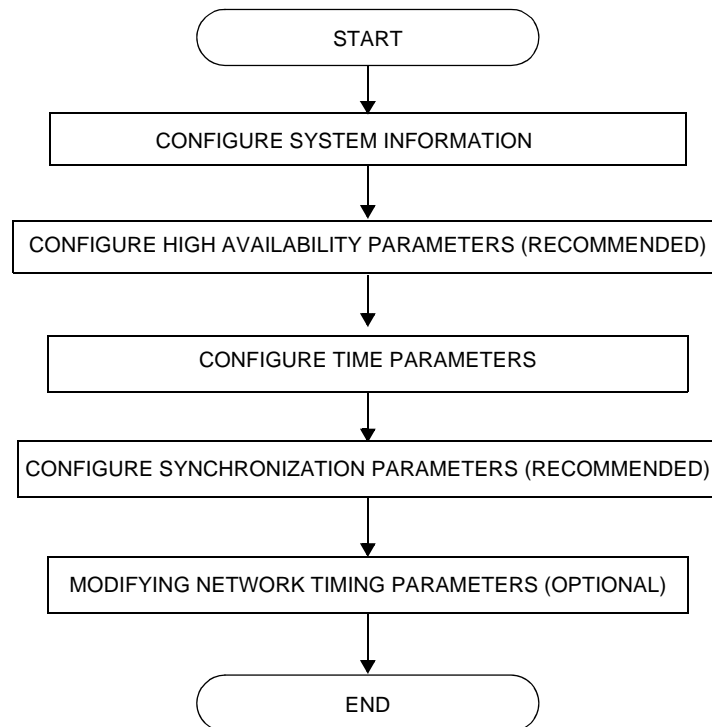


Figure 13: System Configuration and Implementation Flow

## Configuration Notes

This section describes system configuration caveats.

---

### General

- The 7710 SR-Series router must be properly initialized and the boot loader and BOF files successfully executed in order to access the CLI.

# Configuring System Management with CLI

This section provides information about configuring system management features with CLI.

Topics in this chapter include:

- [Basic System Configuration on page 266](#)
- [Common Configuration Tasks on page 267](#)
- [System Information on page 268](#)
  - [System Information Parameters](#)
    - [Name on page 269](#)
    - [Contact on page 269](#)
    - [Location on page 270](#)
    - [CLLI Code on page 270](#)
    - [Coordinates on page 271](#)
  - [System Time Elements on page 272](#)
    - [Zone on page 272](#)
    - [Summer Time Conditions on page 274](#)
    - [NTP on page 275](#)
    - [SNTP on page 281](#)
    - [CRON on page 283](#)
  - [Configuring Synchronization and Redundancy on page 296](#)
    - [Configuring Synchronization on page 296](#)
    - [Configuring Manual Synchronization on page 297](#)
    - [Forcing a Switchover on page 297](#)
    - [Configuring Synchronization Options on page 298](#)
    - [Configuring Multi-Chassis Redundancy on page 299](#)
- [Configuring Power Supply Parameters on page 301](#)
- [System Administration Parameters on page 305](#)
  - [Disconnect on page 305](#)
  - [Set-time on page 306](#)
  - [Display-config on page 306](#)
  - [Tech-support on page 308](#)
  - [Save on page 308](#)
  - [Reboot on page 309](#)
  - [Post-Boot Configuration Extension Files on page 310](#)

- [System Timing on page 313](#)
  - [Edit Mode on page 314](#)
  - [Using the Revert Command on page 315](#)
  - [Other Editing Commands on page 316](#)
  - [Forcing a Specific Reference on page 317](#)
- [Configuring System Monitoring Thresholds on page 318](#)
- [Configuring LLDP on page 321](#)



# System Management

---

## Saving Configurations

Whenever configuration changes are made, the modified configuration must be saved so the changes will not be lost when the system is rebooted. The system uses the configuration and image files, as well as other operational parameters necessary for system initialization, according to the locations specified in the boot option file (BOF) parameters. For more information about boot option files, refer to the *Boot Option Files* section of this manual.

Configuration files are saved by executing *implicit* or *explicit* command syntax.

- An *explicit* save writes the configuration to the location specified in the `save` command syntax (the *file-url* option).
- An *implicit* save writes the configuration to the file specified in the primary configuration location.

If the *file-url* option is not specified in the `save` command syntax, the system attempts to save the current configuration to the current BOF primary configuration source. If the primary configuration source (path and/or filename) changed since the last boot, the new configuration source is used.

The `save` command includes an option to save both default and non-default configuration parameters (the *detail* option).

The *index* option specifies that the system preserves system indexes when a `save` command is executed, regardless of the persistent status in the BOF file. During a subsequent boot, the index file is read along with the configuration file. As a result, a number of system indexes are preserved between reboots, including the interface index, LSP IDs, path IDs, etc. This reduces resynchronizations of the Network Management System (NMS) with the affected network element.

If the save attempt fails at the destination, an error occurs and is logged. The system does not try to save the file to the secondary or tertiary configuration sources unless the path and filename are explicitly named with the `save` command.

## Basic System Configuration

This section provides information to configure system parameters and provides configuration examples of common configuration tasks. The minimal system parameters that should be configured are:

- [System Information Parameters on page 269](#)
- [System Time Elements on page 272](#)

---

The following example displays a basic system configuration:

```
A:ALA-12>config>system# info
#-----
echo "System Configuration "
#-----
 name "ALA-12"
 coordinates "Unknown"
 snmp
 exit
 security
 snmp
 community "private" rwa version both
 exit
 exit
 time
 ntp
 server 192.168.15.221
 no shutdown
 exit
 snmp
 shutdown
 exit
 zone GMT
 exit
#-----
A:ALA-12>config>system#
```

## Common Configuration Tasks

This section provides a brief overview of the tasks that must be performed to configure system parameters and provides the CLI commands.

- [System Information on page 268](#)
  - [Name on page 269](#)
  - [Contact on page 269](#)
  - [Location on page 270](#)
  - [CLLI Code on page 270](#)
  - [Coordinates on page 271](#)
- [System Time Elements on page 272](#)
  - [Zone on page 272](#)
  - [Summer Time Conditions on page 274](#)
  - [NTP on page 275](#)
  - [SNTP on page 281](#)
  - [CRON on page 283](#)
    - [Time Range on page 286](#)
    - [Time of Day on page 290](#)
- [Synchronization and Redundancy on page 237](#)
  - [Automatic Synchronization on page 259](#)
  - [Manual Synchronization on page 260](#)
- [System Administration Parameters on page 305](#)
  - [Disconnect on page 305](#)
  - [Set-time on page 306](#)
  - [Display-config on page 306](#)
  - [Reboot on page 309](#)
  - [Save on page 308](#)
- [System Timing on page 313](#)

## System Information

This section covers the basic system information parameters to configure the physical location of the SR-Series, contact information, location information such as the place the router is located such as an address, floor, room number, etc., global positioning system (GPS) coordinates, and system name.

Use the CLI syntax displayed below to configure the following system components:

- [System Information Parameters on page 269](#)
- [System Time Elements on page 272](#)

General system parameters include:

- [Name on page 269](#)
- [Contact on page 269](#)
- [Location on page 270](#)
- [CLLI Code on page 270](#)
- [Coordinates on page 271](#)

## System Information Parameters

---

### Name

Use the `system` command to configure a name for the device. The name is used in the prompt string. Only one system name can be configured, if multiple system names are configured the last one encountered overwrites the previous entry. Use the following CLI syntax to configure the system name:

**CLI Syntax:** `config>system`  
`name system-name`

**Example:** `alcatel>config>system# name ALA-12`

The following example displays the system name:

```
sysName@domain>config>system# info
#-----
echo "System Configuration "
#-----
 name "ALA-12"
. . .
 exit
#-----
sysName@domain>config>system#
```

---

### Contact

Use the `contact` command to specify the name of a system administrator, IT staff member, or other administrative entity.

**CLI Syntax:** `config>system`  
`contact contact-name`

**Example:** `config>system# contact "Fred Information Technology"`

### Location

Use the `location` command to specify the system location of the device. For example, enter the city, building address, floor, room number, etc., where the router is located.

Use the following CLI syntax to configure the location:

**CLI Syntax:** `config>system`  
`location location`

**Example:** `config>system# location "Bldg.1-floor 2-Room 201"`

---

### CLLI Code

The Common Language Location Code (CLLI code) is an 11-character standardized geographic identifier that is used to uniquely identify the geographic location of a 7710 SR router.

Use the following CLI command syntax to define the CLLI code:

**CLI Syntax:** `config>system`  
`clli-code clli-code`

**Example:** `config>system# clli-code abcdefg1234`

## Coordinates

Use the optional `coordinates` command to specify the GPS location of the device. If the string contains special characters (`#`, `$`, spaces, etc.), the entire string must be enclosed within double quotes.

Use the following CLI syntax to configure the location:

**CLI Syntax:** `config>system`  
`coordinates coordinates`

**Example:** `config>system# coordinates "N 45 58 23, W 34 56 12"`

The following example displays the configuration output of the general system commands:

```
sysName@domain>config>system# info
#-----
echo "System Configuration "
#-----
 name "ALA-12"
 contact "Fred Information Technology"
 location "Bldg.1-floor 2-Room 201"
 clli-code "abcdefg1234"
 coordinates "N 45 58 23, W 34 56 12"

. . .
 exit

A:ALA-12>config>system#
```

## System Time Elements

The system clock maintains time according to Coordinated Universal Time (UTC). Configure information time zone and summer time (daylight savings time) parameters to correctly display time according to the local time zone.

Time elements include:

- [Zone on page 272](#)
  - [Summer Time Conditions on page 274](#)
  - [NTP on page 275](#)
  - [SNTP on page 281](#)
  - [CRON on page 283](#)
    - [Time Range on page 286](#)
    - [Time of Day on page 290](#)
- 

## Zone

The `zone` command sets the time zone and/or time zone offset for the router. The router supports system-defined and user-defined time zones. The system-defined time zones are listed in [Table 31](#).

**CLI Syntax:** `config>system>time`  
`zone std-zone-name | non-std-zone-name [hh [:mm]]`

**Example:** `config>system>time#`  
`config>system>time# zone GMT`

The following example displays the zone output:

```
A:ALA-12>config>system>time# info

ntp
 server 192.168.15.221
 no shutdown
exit
sntp
 shutdown
exit
zone UTC

A:ALA-12>config>system>time#
```



**Table 31: System-defined Time Zones**

<b>Acronym</b>	<b>Time Zone Name</b>	<b>UTC Offset</b>
Europe:		
GMT	Greenwich Mean Time	UTC
WET	Western Europe Time	UTC
WEST	Western Europe Summer Time	UTC +1 hour
CET	Central Europe Time	UTC +1 hour
CEST	Central Europe Summer Time	UTC +2 hours
EET	Eastern Europe Time	UTC +2 hours
EEST	Eastern Europe Summer Time	UTC +3 hours
MSK	Moscow Time	UTC +3 hours
MSD	Moscow Summer Time	UTC +4 hours
US and Canada:		
AST	Atlantic Standard Time	UTC -4 hours
ADT	Atlantic Daylight Time	UTC -3 hours
EST	Eastern Standard Time	UTC -5 hours
EDT	Eastern Daylight Saving Time	UTC -4 hours
CST	Central Standard Time	UTC -6 hours
CDT	Central Daylight Saving Time	UTC -5 hours
MST	Mountain Standard Time	UTC -7 hours
MDT	Mountain Daylight Saving Time	UTC -6 hours
PST	Pacific Standard Time	UTC -8 hours
PDT	Pacific Daylight Saving Time	UTC -7 hours
HST	Hawaiian Standard Time	UTC -10 hours
AKST	Alaska Standard Time	UTC -9 hours
AKDT	Alaska Standard Daylight Saving Time	UTC -8 hours
Australia and New Zealand:		
AWST	Western Standard Time (e.g., Perth)	UTC +8 hours
ACST	Central Standard Time (e.g., Darwin)	UTC +9.5 hours
AEST	Eastern Standard/Summer Time (e.g., Canberra)	UTC +10 hours
NZT	New Zealand Standard Time	UTC +12 hours
NZDT	New Zealand Daylight Saving Time	UTC +13 hours

## Summer Time Conditions

The **config>system>time>dst-zone** context configures the start and end dates and offset for summer time or daylight savings time to override system defaults or for user defined time zones.

When configured, the time will be adjusted by adding the configured offset when summer time starts and subtracting the configured offset when summer time ends.

**CLI Syntax:**

```
config>system>time
 dst-zone zone-name
 end {end-week} {end-day} {end-month} [hours-minutes]
 offset offset
 start {start-week} {start-day} {start-month} [hours-minutes]
```

**Example:**

```
config>system# time
config>system>time# dst-zone pt
config>system>time>dst-zone# start second sunday april 02:00
end first sunday october 02:00
config>system>time>dst-zone# offset 0
```

If the time zone configured is listed in [Table 31](#), then the starting and ending parameters and offset do not need to be configured with this command unless there is a need to override the system defaults. The command will return an error if the start and ending dates and times are not available either in [Table 31](#) or entered as optional parameters in this command.

The following example displays the configured parameters.

```
A:ALA-48>config>system>time>dst-zone# info

 start second sunday april 02:00
 end first sunday october 02:00
 offset 0

A:ALA-48>config>system>time>dst-zone# offset 0
```

## NTP

Network Time Protocol (NTP) is defined in RFC 1305, *Network Time Protocol (Version 3) Specification, Implementation and Analysis*. It allows for participating network nodes to keep time more accurately and maintain time in a synchronized manner between all participating network nodes.

NTP time elements include:

- [Authentication-check on page 275](#)
  - [Authentication-key on page 276](#)
  - [Broadcast on page 276](#)
  - [Broadcastclient on page 277](#)
  - [Multicast on page 278](#)
  - [Multicastclient on page 278](#)
  - [NTP-Server on page 279](#)
  - [Peer on page 279](#)
  - [Server on page 280](#)
- 

### Authentication-check

The authentication-check command provides for the option to skip the rejection of NTP PDUs that do not match the authentication key or authentication type requirements. The default behavior when authentication is configured is to reject all NTP protocol PDUs that have a mismatch in either the authentication key-id, type, or key.

When authentication-check is configured, NTP PDUs are authenticated on receipt. However, mismatches cause a counter to be increased, one counter for key-id, one for type, and one for key value mismatches.

**CLI Syntax:** `config>system>time>ntp  
authentication-check`

**Example:** `config>system>time>ntp#  
config>system>time>ntp# authentication-check  
config>system>time>ntp# no shutdown`

### Authentication-key

This command configures an authentication key-id, key type, and key used to authenticate NTP PDUs sent to and received from other network elements participating in the NTP protocol. For authentication to work, the authentication key-id, authentication type and authentication key value must match.

**CLI Syntax:** `config>system>time>ntp  
                  authentication-key key-id {key key} [hash | hash2] type  
                  {des|message-digest}`

**Example:** `config>system>time>ntp#  
config>system>time>ntp# authentication-key 1 key A type des  
config>system>time>ntp# no shutdown`

The following example shows NTP disabled with the `authentication-key` parameter enabled.

```
A:sim1>config>system>time>ntp# info

 shutdown
 authentication-key 1 key "OAwgNulbzgI" hash2 type des

A:sim1>config>system>time>ntp#
```

---

### Broadcast

The broadcast command is used to transmit broadcast packets on a given subnet.

**CLI Syntax:** `config>system>time>ntp  
                  broadcast [router router-name] {interface  
                            ip-int-name> [key-id key-id] [version version]  
                            [t1t1]`

**Example:** `config>system>time>ntp#  
config>system>time>ntp# broadcast interface int11 version 4  
                            ttl 127  
config>system>time>ntp# no shutdown`

The following example in the `system>time` context shows NTP enabled with the broadcast command configured.

```
A:sim1>config>system>time# info detail

 ntp
 no shutdown
 authentication-check
 ntp-server
 broadcast interface int11 version 4 ttl 127
 exit
```



### Multicast

When configuring NTP the node can be configured to transmit or receive multicast packets on the CCM MGMT port. Broadcast & Multicast messages can easily be spoofed, therefore, authentication is strongly recommended. Multicast is used to configure the transmission of NTP multicast messages. The no construct of this command removes the transmission of multicast address from the configuration.

When transmitting multicast NTP messages the default address of 224.0.1.1 is used.

**CLI Syntax:** config>system>time>ntp  
                  multicast [version version] [key-id key-id]

**Example:** config>system>time>ntp#  
            config>system>time>ntp# multicast  
            config>system>time>ntp# no shutdown

The following example shows NTP enabled with the multicast command configured.

```
A:ALA-12>config>system>time# info

server 192.168.15.221
multicast
no shutdown

A:ALA-12>config>system>time#
```

---

### Multicastclient

This command is used to configure an address to receive multicast NTP messages on the CCM MGMT port. The no construct of this command removes the multicast client. If multicastclient is not configured, all NTP multicast traffic will be ignored.

**CLI Syntax:** config>system>time>ntp  
                  multicastclient [authenticate]

**Example:** config>system>time>ntp#  
            config>system>time>ntp# multicastclient authenticate  
            config>system>time>ntp# no shutdown

The following example shows NTP enabled with the multicastclient command configured.

```
A:ALA-12>config>system>time# info

server 192.168.15.221
multicastclient
no shutdown

A:ALA-12>config>system>time##
```

## NTP-Server

This command configures the node to assume the role of an NTP server. Unless the server command is used this node will function as an NTP client only and will not distribute the time to downstream network elements. If an authentication key-id is specified in this command, the NTP server requires client packets to be authenticated.

**CLI Syntax:** `config>system>time>ntp`  
`ntp-server [transmit key-id]`

**Example:** `config>system>time>ntp#`  
`config>system>time>ntp# ntp-server transmit 1`  
`config>system>time>ntp# no shutdown`

The following example shows NTP enabled with the `ntp-server` command configured.

```
A:sim1>config>system>time>ntp# info

no shutdown
ntp-server

A:sim1>config>system>time>ntp#
```

---

## Peer

Configuration of an NTP peer configures symmetric active mode for the configured peer. Although any system can be configured to peer with any other NTP node, it is recommended to configure authentication and to configure known time servers as their peers. Use the **no** form of the command to remove the configured peer.

**CLI Syntax:** `config>system>time>ntp`  
`peer ip-address [version version] [key-id key-id]`  
`[prefer]`

**Example:** `config>system>time>ntp#`  
`config>system>time>ntp# peer 192.168.1.1 key-id 1`  
`config>system>time>ntp# no shutdown`

The following example shows NTP enabled with the `peer` command configured.

```
A:sim1>config>system>time>ntp# info

no shutdown
peer 192.168.1.1 key-id 1

A:sim1>config>system>time>ntp#
```

### Server

The `Server` command is used when the node should operate in client mode with the NTP server specified in the address field. Use the **no** form of this command to remove the server with the specified address from the configuration.

Up to five NTP servers can be configured.

**CLI Syntax:** `config>system>time>ntp`  
`server ip-address [key-id key-id] [version version]`  
`[prefer]`

**Example:** `config>system>time>ntp#`  
`config>system>time>ntp# server 192.168.1.1 key-id 1`  
`config>system>time>ntp# no shutdown`

The following example shows NTP enabled with the `server` command configured.

```
A:sim1>config>system>time>ntp# info

no shutdown
server 192.168.1.1 key 1

A:sim1>config>system>time>ntp#
```



## SNTP

SNTP is a compact, client-only version of the NTP. SNTP can only receive the time from SNTP/NTP servers; it cannot be used to provide time services to other systems. SNTP can be configured in either broadcast or unicast client mode.

SNTP time elements include:

- [Broadcast-client on page 281](#)
- [Server-address on page 282](#)

---

**CLI Syntax:**

```
config>system
 time
 sntp
 broadcast-client
 server-address ip-address [version version-number]
 [normal|preferred] [interval seconds]
 no shutdown
```

---

### Broadcast-client

The **broadcast-client** command enables listening at the global device level to SNTP broadcast messages on interfaces with broadcast client enabled.

**CLI Syntax:**

```
config>system>time>sntp
 broadcast-client
```

**Example:**

```
config>system>time>sntp#
config>system>time>sntp# broadcast-client
config>system>time>sntp# no shutdown
```

The following example shows SNTP enabled with the **broadcast-client** command enabled.

```
A:ALA-12>config>system>time# info

 sntp
 broadcast-client
 no shutdown
 exit
 dst-zone PT
 start second sunday april 02:00
 end first sunday october 02:00
 offset 0
 exit
 zone GMT

A:ALA-12>config>system>time#
```

## Server-address

The **server-address** command configures an SNTP server for SNTP unicast client mode.

**CLI Syntax:** `config>system>time>sntp#`  
`config>system>time>sntp# server-address ip-address version version-`  
`number] [normal|preferred] [interval seconds]`

**Example:** `config>system>time>sntp#`  
`config>system>time# server-address 10.10.0.94 version`  
`1 preferred interval 100`

The following example shows SNTP enabled with the **server-address** command configured.

```
A:ALA-12>config>system>time# info

 sntp
 server-address 10.10.0.94 version 1 preferred interval 100
 no shutdown
 exit
 dst-zone PT start-date 2006/04/04 12:00 end-date 2006/10/25 12:00
 zone GMT

A:ALA-12>config>system>time#
```

## CRON

The CRON command supports the Service Assurance Agent (SAA) functions as well as the ability to schedule turning on and off policies to meet “Time of Day” requirements. CRON functionality includes the ability to specify the commands that need to be run, when they will be scheduled, including one-time only functionality (oneshot), interval and calendar functions, as well as where to store the output of the results. In addition, CRON can specify the relationship between input, output and schedule. Scheduled reboots, peer turn ups, service assurance agent tests and more can all be scheduled with Cron, as well as OAM events, such as connectivity checks, or troubleshooting runs.

CRON elements include:

- [Action](#)
- [Schedule](#)
- [Script](#)
- [Time Range](#)
- [Time of Day](#)

## Action

Parameters for a script including the maximum amount of time to keep the results from a script run, the maximum amount of time a script may run, the maximum number of script runs to store and the location to store the results.

**CLI Syntax:** `config>cron`

```

 action action-name [owner action-owner]
 expire-time {seconds|forever}
 lifetime {seconds|forever}
 max-completed unsigned
 results file-url
 script script-name [owner script-owner]
 shutdown

```

**Example:**

```

config>cron# action test
config>cron>action# results ftp://172.22.184.249/./sim1/test-
results
config>cron>action# no shut

```

The following example shows a script named “test” receiving an action to store its results in a file called “test-results”:

```

A:sim1>config>cron# info

 script "test"

```

## Common Configuration Tasks

```
 location "ftp://172.22.184.249/./sim1/test.cfg"
 no shutdown
 exit
 action "test"
 results "ftp://172.22.184.249/./sim1/test-results"
 no shutdown
 exit

A:sim1>config>cron# script
```

---

## Schedule

The schedule function configures the type of schedule to run, including one-time only (oneshot), periodic or calendar-based runs. All runs are determined by month, day of month or weekday, hour, minute and interval (seconds). If end-time and interval are both configured, whichever condition is reached first is applied.

**CLI Syntax:** config>cron

```
 schedule schedule-name [owner schedule-owner]
 action action-name [owner owner-name]
 count number
 day-of-month {day-number [..day-number] |all}
 description description-string
 end-time [date/day-name] time
 hour {hour-number [..hour-number] | all}
 interval seconds
 minute {minute-number [..minute-number] |all}
 month {month-number [..month-number] |month-name
 [..month-name] |all}
 no shutdown
 type {periodic|calendar|oneshot}
 weekday {weekday-number [..weekday-number] |day-name
 [..day-name] |all}
 shutdown
```

**Example:**

```
config>cron# schedule test2
config>cron>sched# day-of-month 17
config>cron>sched# end-time 2007/07/17 12:00
config>cron>sched# minute 0 15 30 45
config>cron>sched# weekday friday
config>cron>sched# shut
```

The following example schedules a script named “test2” to run every 15 minutes on the 17th of each month and every Friday until noon on July 17, 2007:

```
*A:SR-3>config>cron# info

 schedule "test2"
 shutdown
 day-of-month 17
 minute 0 15 30 45
```

```

 weekday friday
 end-time 2007/07/17 12:00
 exit

*A:SR-3>config>cron#

```

---

## Script

The script command opens a new nodal context which contains information on a script.

**CLI Syntax:** config>cron

```

 script script-name [owner script-owner]
 description description-string
 location file-url
 shutdown

```

**Example:** config>cron# script test  
config>cron>script#

The following example names a script “test”:

```

A:sim1>config>cron# info

 script "test"
 location "ftp://172.22.184.249/./sim1/test.cfg"
 no shutdown
 exit

A:sim1>config>cron#

```

### Time Range

7710 SR ACLs and QoS policy configurations may be enhanced to support time based matching. CRON configuration includes time matching with the 'schedule' sub-command. Schedules are based on events; time-range defines an end-time and will be used as a match criteria.

Time range elements include:

- [Create on page 286](#)
  - [Absolute on page 286](#)
  - [Daily on page 287](#)
  - [Weekdays on page 288](#)
  - [Weekend on page 288](#)
  - [Weekly on page 289](#)
- 

### Create

Use this command to enable the time-range context.

The following example creates a time-range called test1.

**CLI Syntax:** `config>cron>  
                  time-range name create`

**Example:** `config>cron# time-range test1 create  
config>cron>time-range$`

---

### Absolute

The absolute command configures a start and end time that will not repeat.

**CLI Syntax:** `config>cron>time-range$  
                  absolute absolute-time end absolute-time`

**Example:** `config>cron>time-range$ absolute start 2006/05/05,11:00 end  
2006/05/06,11:01  
config>cron>time-range$`

The following example shows an absolute time range beginning on May 5, 2006 at 11:00 and ending May 6, 2006 at 11:01:

```
A:sim1>config>cron>time-range# show cron time-range detail
=====
Cron time-range details
=====
Name : test1
Triggers : 0
Status : Inactive
Absolute : start 2006/05/05,11:00 end 2006/05/06,11:01
=====
A:sim1>config>cron>time-range#
```

---

## Daily

The daily command configures the start and end of a periodic schedule for every day of the week (Sunday through Saturday).

**CLI Syntax:** config>cron>time-range\$  
                   daily start *time-of-day* end *time-of-day*

**Example:** config>cron>time-range\$ daily start 11:00 end 12:00  
 config>cron>time-range\$

The following example shows a daily time range beginning at 11:00 and ending at 12:00.

```
A:sim1>config>cron>time-range# show cron time-range detail
=====
Cron time-range details
=====
Name : 1
Triggers : 0
Status : Inactive
Periodic : daily Start 11:00 End 12:00
=====
A:sim1>config>cron>time-range#
```

## Weekdays

The weekdays command configures the start and end of a periodic schedule for weekdays (Monday through Friday).

**CLI Syntax:** config>cron>time-range\$  
                  weekdays start *time-of-day* end *time-of-day*

**Example:** config>cron>time-range\$ weekdays start 11:00 end 12:00  
                  config>cron>time-range\$

The following command shows a time range beginning at 11:00 and ending at 12:00. This schedule runs all weekdays during this time period.

```
A:siml>config>cron>time-range# show cron time-range detail
=====
Cron time-range details
=====
Name : 1
Triggers : 0
Status : Inactive
Periodic : weekdays Start 11:00 End 12:00
=====
A:siml>config>cron>time-range#
```

---

## Weekend

The weekend command configures the start and end of a periodic schedule for weekends (Saturday and Sunday). The resolution must be at least one minute apart, for example, start at 11:00 and end at 11:01. A start time and end time of 11:00 is invalid.

**CLI Syntax:** config>cron>time-range\$  
                  weekend start *time-of-day* end *time-of-day*

**Example:** config>cron>time-range\$ weekend start 11:00 end 12:00  
                  config>cron>time-range\$

The following command shows a weekend time range beginning at 11:00am and ending at 12:00pm, both Saturday and Sunday.

To specify 11:00am to 12:00pm on Saturday or Sunday only, use the [Absolute](#) parameter for one day, or the [Weekly](#) parameter for every Saturday or Sunday accordingly. In addition, see the [Schedule](#) parameter to schedule oneshot or periodic events in the config>cron> context.

```
A:siml>config>cron>time-range# show cron time-range detail
=====
Cron time-range details
=====
Name : 1
Triggers : 0
```



```
Status : Inactive
Periodic : weekend Start 11:00 End 12:00
```

---

## Weekly

The weekly command configures the start and end of a periodic schedule for the same day every week, for example, every Friday. The start and end dates must be the same. The resolution must be at least one minute apart, for example, start at 11:00 and end at 11:01. A start time and end time of 11:00 is invalid.

**CLI Syntax:** `config>cron>time-range$`  
                   `weekly start time-in-week end time-in-week`

**Example:** `config>cron>time-range$ start fri,01:01 end fri,01:02`  
`config>cron>time-range$`

The following command shows a weekly time range beginning on Friday at 1:01am ending Friday at 1:02am.

```
A:sim1>config>cron>time-range$ info

 weekly start fri,01:01 end fri,01:02

A:sim1>config>cron>time-range$
```

### Time of Day

Time of Day (TOD) suites are useful when configuring many types of time-based policies or when a large number of subscribers or SAPs require the same type of TOD changes. The TOD suite may be configured while using specific ingress or egress ACLs or QoS policies, and is an enhancement of the ingress and egress CLI trees.

---

### SAPs

- If a TOD Suite is assigned to a SAP, statistics collection are not collected for that SAP and scheduler overrides cannot be collected on the SAP. If the SAP has an egress aggregate rate limit configured, an egress scheduler policy assignment cannot be applied.
  - When an item is configured both on SAP level and in the TOD suite assigned to the SAP, the TOD-suite defined value takes precedence. If a SAP belongs to an IES Interface, TOD Suites are allowed only with generic interfaces (no subscriber, group, redundant, etc.).
  - A policy or filter assignment configured directly on a SAP has a lower priority than any assignment in a TOD Suite. Hence, it is possible that a new direct configuration has no immediate effect. If the configuration is made by CLI, a warning is given.
- 

### Multiservice Site

When applying a TOD Suite to a multi-service-site, only the scheduler policy assignment is active. If the multi-service-site has an egress aggregate rate limit configured, any egress scheduler policy assignment cannot be applied. While a TOD Suite is assigned to a multi-service-site, it is not possible to configure a scheduler to override it.

## ANCP (Access Node Control Protocol)

Static ANCP string mapping and TOD suites must be configured on separate SAPs or multiservice sites.

Time of day elements include:

- [Egress on page 291](#)
  - [Ingress on page 294](#)
- 

## Egress

This command is an enhancement for specific egress policies including filter lists, schedulers and QoS. Use this command to create time-range based associations of previously created filter lists, QoS and scheduler policies. Multiple policies may be included and each must be assigned a different priority; in case time-ranges overlap, the priority will be used to determine the prevailing policy. Only a single reference to a policy may be included without a time-range.

---

## Egress Aggregate Rate Limit

Having an egress aggregate rate limit is incompatible with having a scheduler policy. If a SAP or multi-service-site has a configured egress aggregate rate limit, and the TOD suite assigns a scheduler policy to it, that assignment cannot be applied: the configured aggregate rate limit takes precedence over the TOD suite's scheduler policy assignment.

---

## Egress Multicast Group

SAPs may not have a TOD suite while belonging to an egress multicast group (EMG). Since all SAPs that belong to the same EMG must have the same egress filter, it is imperative to ensure that the TOD Suite does not modify the egress filter assignment.

## Filters

In a TOD suite, filters that have entries with time-ranges may not be selected. Similarly, filter entries with a time-range may not be created while a TOD suite refers to that filter. QoS policies and filters referred to by a TOD suite must have scope “template” (default).

The following syntax is used to configure TOD-suite egress parameters.

```
CLI Syntax: config
 cron
 tod-suite tod-suite-name create
 egress
 filter ip ip-filter-id [time-range time-range-name]
 [priority priority]
 filter ipv6 ipv6-filter-id[time-range
 time-range-name] [priority priority]
 filter mac mac-filter-id[time-range time-range-
 name] [priority priority]
 qos policy-id [time-range time-range-name] [priori-
 ty priority]
 scheduler-policy scheduler-policy-name [time-range
 time-range-name]
```

```
Example: config>cron>tod-suite$ egress filter ip 100
config>cron>tod-suite$
```

The following command shows an egress IP filter association with filter ID 100.

```
sim1>config>filter# ip-filter 100 create
A:sim1>config>filter>ip-filter$ entry 10 create
A:sim1>config>filter>ip-filter>entry$
A:sim1>config>cron>tod-suite# egress filter ip 100
A:sim1>config>cron>tod-suite# info detail

 no description
 egress
 filter ip 100
 exit

A:sim1>config>cron>tod-suite#
```

```
Example:config>cron>tod-suite$ egress qos 101
config>cron>tod-suite$
```

The following command shows an association with egress QoS-SAP policy 101.

```
A:sim1>config>qos# sap-egress 101 create
...
A:sim1>config>cron>tod-suite# egress qos 101
A:sim1>config>cron>tod-suite# info detail

 no description
 egress
 qos 101
 exit

A:sim1>config>cron>tod-suite#
```

**Example:** config>cron>tod-suite\$ egress scheduler-policy test1  
config>cron>tod-suite\$

The following command shows an association with an egress scheduler-policy called test1.

```
A:sim1>config# qos scheduler-policy test1 create
A:sim1>config>qos>scheduler-policy#
...
A:sim1# configure cron tod-suite test1 create
A:sim1>config>cron>tod-suite# egress scheduler-policy test1
A:sim1>config>cron>tod-suite# info detail

 no description
 egress
 scheduler-policy test1
 exit

A:sim1>config>cron>tod-suite$
```

## Ingress

This command is an enhancement for specific ingress policies including filter lists, schedulers and QoS policies. Use this command to create time-range based associations of previously created filter lists QoS and scheduler policies. Multiple policies may be included and each must be assigned a different priority; in case time-ranges overlap, the priority will be used to determine the prevailing policy. Only a single reference to a policy may be included without a time-range. To configure a daily time-range across midnight, use a combination of two entries. An entry that starts at hour zero will take over from an entry that ends at hour 24.

**CLI Syntax:**

```
config>system
 cron
 tod-suite tod-suite-name create
 ingress
 filter ip ip-filter-id [time-range time-range-name]
 [priority priority]
 filter ipv6 ipv6-filter-id[time-range
 time-range-name] [priority priority]
 filter mac mac-filter-id[time-range time-range-
 name] [priority priority]
 qos policy-id [time-range time-range-name] [priori-
 ty priority]
 scheduler-policy scheduler-policy-name [time-range
 time-range-name]
```

**Example:**

```
config>cron>tod-suite$ ingress filter ip 100
config>cron>tod-suite$
```

The following command shows an ingress IP filter association with filter ID 100.

```
sim1>config>filter# ip-filter 100 create
A:sim1>config>filter>ip-filter$ entry 10 create
A:sim1>config>filter>ip-filter>entry$
...
A:sim1>config>cron>tod-suite# ingress filter ip 100
A:sim1>config>cron>tod-suite# info detail

 no description
 ingress
 filter ip 100
 exit

A:sim1>config>cron>tod-suite#
```

**Example:**

```
config>cron>tod-suite$ ingress qos 101
config>cron>tod-suite$
```

The following command shows an association with ingress QoS-SAP policy 101.

```
A:sim1>config>qos# sap-egress 101 create
...
A:sim1>config>cron>tod-suite# ingress qos 101
A:sim1>config>cron>tod-suite# info detail

 no description
 ingress
 qos 101
 exit

A:sim1>config>cron>tod-suite#
```

**Example:** config>cron>tod-suite\$ ingress scheduler-policy test1  
config>cron>tod-suite\$

The following command shows an association with an ingress scheduler-policy named test1.

```
A:sim1>config# qos scheduler-policy test1 create
A:sim1>config>qos>scheduler-policy#
...
A:sim1# configure cron tod-suite test1 create
A:sim1>config>cron>tod-suite#ingress scheduler-policy test1
A:sim1>config>cron>tod-suite# info detail

 no description
 ingress
 scheduler-policy test1
 exit

A:sim1>config>cron>tod-suite#
```

## Configuring Synchronization and Redundancy

- [Configuring Persistence on page 296](#)
  - [Configuring Synchronization on page 296](#)
  - [Configuring Manual Synchronization on page 297](#)
  - [Forcing a Switchover on page 297](#)
  - [Configuring Synchronization Options on page 298](#)
  - [Configuring Multi-Chassis Redundancy on page 299](#)
- 

### Configuring Persistence

The following example displays subscriber management system persistence command usage:

```
Example: config>system# persistence
 config>system>persistence# subscriber-mgmt
 config>system>persistence>sub-mgmt# description "cf3:SubMgmt-
Test"
 config>system>persistence>sub-mgmt# location cf3:
 config>system>persistence>sub-mgmt# exit

A:ALA-12>config>system>persistence# info

subscriber-mgmt
 description "cf3:SubMgmt-Test"
 location cf1:
 exit

A:ALA-12>config>system>persistence#
```

---

### Configuring Synchronization

The **switchover-exec** command specifies the location and name of the CLI script file executed following a redundancy switchover from the previously active CFM card.

```
CLI Syntax: admin>redundancy
 synchronize {boot-env|config}
```

```
CLI Syntax: config>system
 switchover-exec file-url
```



## Configuring Manual Synchronization

Note that automatic synchronization can be configured in the **config>system> synchronization** context.

**CLI Syntax:** admin  
 redundancy  
 synchronize {boot-env|config}

**Example:** admin>redundancy# synchronize config

The following shows the output which displays during a manual synchronization:

```
A:ALA-12>admin# synchronize config
Syncing configuration.....
Syncing configuration.....Completed.
A:ALA-12#
```

---

## Forcing a Switchover

The **force-switchover now** command forces an immediate switchover to the standby CFM card.

**CLI Syntax:** admin>redundancy  
 force-switchover [now]

**Example:** admin>redundancy# force-switchover now

```
A:ALA-12# admin redundancy force-switchover now
A:ALA-12#
Resetting...
?
```

If the active and standby are not synchronized for some reason, users can manually synchronize the standby CFM by rebooting the standby by issuing the **admin reboot standby** command on the active or the standby CFM.

## Configuring Synchronization Options

Network operators can specify the type of synchronization operation to perform between the primary and secondary CPMs after a change has been made to the configuration files or the boot environment information contained in the boot options file (BOF).

Use the following CLI to configure the boot-env option:

**CLI Syntax:** config>system  
                  synchronize {boot-env|config}

**Example:** config>system# synchronize boot-env

The following displays the configuration:

```
A:ALA-12>config>system# synchronize boot-env
A:ALA-12>config>system# show system synchronization
=====
Synchronization Information
=====
Synchronize Mode : Boot Environment
Synchronize Status : No synchronization
Last Config Sync Time : 2006/06/27 06:19:47
Last Boot Env Sync Time : 2006/06/27 06:19:47
=====
A:ALA-12>config>system#
```

Use the following CLI to configure the config option:

**CLI Syntax:** config>system  
                  synchronize {boot-env|config}

**Example:** config>system# synchronize config

The following example displays the configuration.

```
A:ALA-12>config>system# synchronize config
A:ALA-12>config>system# show system synchronization
=====
Synchronization Information
=====
Synchronize Mode : Configuration
Synchronize Status : No synchronization
Last Config Sync Time : 2006/06/27 09:17:15
Last Boot Env Sync Time : 2006/06/24 07:16:37
=====
A:ALA-12>config>system#
```

## Configuring Multi-Chassis Redundancy

Note: When configuring associated LAG ID parameters, the LAG must be in access mode and LACP must be enabled.

Use the CLI syntax displayed below to configure multi-chassis redundancy features.

```
CLI Syntax: admin>redundancy
 multi-chassis
 peer ip-address
 authentication-key [authentication-key | hash-key]
 [hash | hash2]
 description description-string
 mc-lag
 hold-on-neighbor-failure duration
 keep-alive-interval interval
 lag lag-id lacp-key admin-key system-id system-id [remote-
 lag lag-id] system-priority system-priority
 no shutdown
 no shutdown
 source-address ip-address
 sync
 igmp
 igmp-snooping
 port [port-id | lag-id] [sync-tag]
 range encap-range sync-tag
 no shutdown
 srrp
 sub-mgmt
```

```
Example: admin>redundancy#
 config>redundancy# multi-chassis
 config>redundancy>multi-chassis# peer 10.10.10.2 create
 config>redundancy>multi-chassis>peer# description "Mc-Lag peer
10.10.10.2"
 config>redundancy>multi-chassis>peer# mc-lag
 config>redundancy>mc>peer>mc-lag# lag 1 lacp-key 32666 system-
id 00:00:00:33:33:33 system-priority 32888
 config>redundancy>mc>peer>mc-lag# no shutdown
 config>redundancy>mc>peer>mc-lag# exit
 config>redundancy>multi-chassis>peer# no shutdown
 config>redundancy>multi-chassis>peer# exit
 config>redundancy>multi-chassis# exit
 config>redundancy#
```

The following displays the configuration:

```
A:ALA-48>config>redundancy# info

```

## Common Configuration Tasks

```
multi-chassis
 peer 10.10.10.2 create
 description "Mc-Lag peer 10.10.10.2"
 mc-lag
 no shutdown
 exit
 no shutdown
exit
exit

A:ALA-48>config>redundancy#
```

## Configuring Power Supply Parameters

By default, 7710 SR-Series routers are configured as DC-input devices. Traps and alarms are automatically sent if DC power supplies are installed in the power supply slots. In order to generate traps and alarms when AC power supplies are installed in 7710 SR-Series models (except the 7710 SR-c4) the **power-supply** command must be modified.

Configuring an existing power supply to none prior to powering off the unit will prevent an alarm from being generated.

There are three power supply positions on the 7710 SR-c4.

See the 7710 SR-Series Installation Guides for instructions to install power supplies.

Use the CLI syntax displayed below to modify power supply parameters.

**CLI Syntax:** `config>system  
power-supply {1|2|3} {dc|ac {single|multiple}|none}`

**Example:** `config>system# power-supply 1 dc  
config>system# power-supply 2 dc`

The following example displays the **power-supply** command configuration:

```
A:ALA-12>config>system# info

..
 name "ALA-12"
 contact "Fred Information Technology"
 location "Bldg.1-floor 2-Room 201"
 clli-code "abcdefg1234"
 coordinates "N 45 58 23, W 34 56 12"
 power-supply 1 dc
 power-supply 2 dc
 name "ALA-12"
 ccm 1
 exit
 sync-if-timing
 begin
 ref1
 shutdown
 exit
 ref2
 shutdown
 exit
 commit
 exit
 snmp
 exit
 login-control
 idle-timeout 1440
 exit
 atm
```

## Common Configuration Tasks

```
exit
time
 sntp
 shutdown
 exit
 zone UTC
exit
thresholds
 rmon
 exit
exit
#-----
echo "System Security Configuration"
#-----
 security
 telnet-server
 ssh
 preserve-key
 exit
 no per-peer-queuing
 exit

A:ALA-12>config>system#
```



## Configuring Backup Copies

The `config-backup` command allows you to specify the maximum number of backup versions of configuration and index files kept in the primary location.

For example, assume the **config-backup** *count* is set to **5** and the configuration file is called *xyz.cfg*. When a **save** command is executed, the file *xyz.cfg* is saved with a .1 extension. Each subsequent **config-backup** command increments the numeric extension until the maximum count is reached. The oldest file (**5**) is deleted as more recent files are saved.

```
xyz.cfg
xyz.cfg.1
xyz.cfg.2
xyz.cfg.3
xyz.cfg.4
xyz.cfg.5
xyz.ndx
```

Each persistent index file is updated at the same time as the associated configuration file. When the index file is updated, then the save is performed to *xyz.cfg* and the index file is created as *xyz.ndx*. Synchronization between the active and standby CFM is performed for all configurations and their associated persistent index files.

**CLI Syntax:** `config>system`  
`config-backup count`

**Example:** `config>system#`  
`config>system# config-backup 7`

The following example shows the `config-backup` configuration.

```
A:ALA-12>config>system>time# info
#-----
echo "System Configuration"
#-----
 name "ALA-12"
 contact "Fred Information Technology"
 location "Bldg.1-floor 2-Room 201"
 clli-code "abcdefg1234"
 coordinates "N 45 58 23, W 34 56 12"
 config-backup 7
...
#-----
A:ALA-12>config>system>time#
```



# System Administration Parameters

Use the CLI syntax displayed below to configure various system administration parameters.

Administrative parameters include:

- [Disconnect on page 305](#)
  - [Set-time on page 306](#)
  - [Display-config on page 306](#)
  - [Save on page 308](#)
  - [Reboot on page 309](#)
  - [Post-Boot Configuration Extension Files on page 310](#)
- 

## Disconnect

The **disconnect** command immediately disconnects a user from a console, Telnet, FTP, or SSH session.

**Note:** Configuration modifications are saved to the primary image file.

**CLI Syntax:** admin  
disconnect [address *ip-address* |username *user-name* |  
{console|telnet|ftp|ssh}]

**Example:** admin# disconnect

The following example displays the disconnect command results.

```
ALA-1>admin# disconnect
ALA-1>admin# Logged out by the administrator
Connection to host lost.

C:\>
```

## Set-time

Use the **set-time** command to set the system date and time. The time entered should be accurate for the time zone configured for the system. The system will convert the local time to UTC before saving to the system clock which is always set to UTC. If SNTP or NTP is enabled (no shutdown) then this command cannot be used. The set-time command does not take into account any daylight saving offset if defined.

**CLI Syntax:** admin  
                  set-time *date time*

**Example:** admin# set-time 2007/02/06 04:10:00

The following example displays the set-time command results.

```
ALA-2# admin set-time 2007/02/06 04:10:00
ALA-2# show time
Thu Feb 2 04:10:04 GMT 2007
ALA-2#
```

---

## Display-config

The **display-config** command displays the system's running configuration.

**CLI Syntax:** admin  
                  display-config [detail] [index]

**Example:** admin# display-config detail

The following example displays a portion of the **display-config detail** command results.

```
A:ALA-12>admin# display-config detail
TiMOS-B-0.0.current both/i386 ALCATEL SR 7710 Copyright (c) 2000-2006 Alcatel.
All rights reserved. All use subject to applicable license agreements.
Built on Mon Jul 31 17:50:37 PST 2006 by builder in /rel0.0/current/panos/main

Generated TUE AUG 01 11:36:19 2006 UTC

exit all
configure
#-----
echo "System Configuration"
#-----
system
 name "ALA-12"
 contact "Fred Information Technology"
 location "Bldg.1-floor 2-Room 201"
 cli-code "abcdefg1234"
 coordinates "N 45 58 23, W 34 56 12"
```

```

config-backup 7
boot-good-exec "ftp://test:test@192.168.xx.xxx/./1xx.cfg.A"
boot-bad-exec "ftp://test:test@192.168.xx.xxx/./1xx.cfg.1"
power-supply 1 dc
power-supply 2 dc
lACP-system-priority 1
no synchronize
snmp
 shutdown
 engineID "0000197f000000000467ff00"
 packet-size 1500
 general-port 161
exit
login-control
 ftp
 inbound-max-sessions 3
 exit
 telnet
 inbound-max-sessions 5
 outbound-max-sessions 2
 exit
 idle-timeout 1440
 pre-login-message "Property of Service Routing Inc.Unauthorized access prohib-
ited."
 motd text "Notice to all users: Software upgrade scheduled 3/2 1:00 AM"
exit
security
 management-access-filter
 default-action permit
 entry 1
 no description
...
#-----
echo "Mirror Configuration"
#-----
 mirror
 mirror-dest 218 create
 fc be
 no remote-source
 sap 1/1/10:0 create
 egress
 qos 1
 exit
 exit
 no slice-size
 no shutdown
 exit
...
A:ALA-12>admin#

```

## Tech-support

The `tech-support` command creates a system core dump. **NOTE:** This command should only be used with explicit authorization and direction from Alcatel-Lucent's Technical Assistance Center (TAC).

---

## Save

The `save` command saves the running configuration to a configuration file. When the `debug-save` parameter is specified, debug configurations are saved in the config file. If this parameter is not specified, debug configurations are not saved between reboots.

**CLI Syntax:** `admin`  
`save [file-url] [detail] [index]`  
`debug-save [file-url]`

**Example:** `admin# save ftp://test:test@192.168.x.xx/./1.cfg`  
`admin# debug-save debugsave.txt`

The following example displays the `save` command results.

```
A:ALA-1>admin# save ftp://test:test@192.168.x.xx/./1x.cfg
Writing file to ftp://test:test@192.168.x.xx/./1x.cfg
Saving configuration ...Completed.
ALA-1>admin# debug-save ftp://test:test@192.168.x.xx/./debugsave.txt
Writing file to ftp://julie:julie@192.168.x.xx/./debugsave.txt
Saving debug configurationCompleted.
A:ALA-1>admin#
```

## Reboot

The `reboot` command reboots the router including redundant CFMs in redundant systems. If the `now` option is not specified, you are prompted to confirm the reboot operation. The **reboot upgrade** command forces an upgrade of the boot ROM and reboot.

**CLI Syntax:** `admin`  
`reboot [active | standby] | [upgrade] [now]`

**Example:** `admin# reboot now`

The following example displays the `reboot` command results.

```
A:ALA-1>admin# reboot now
Are you sure you want to reboot (y/n)? y
Rebooting...
Using preloaded VxWorks boot loader.
...
```

If synchronization fails, the standby does not reboot automatically. The `show redundancy synchronization` command displays synchronization output information.

## Post-Boot Configuration Extension Files

Two post-boot configuration extension files are supported and are triggered when either a successful or failed boot configuration file is processed. The commands specify URLs for the CLI scripts to be run following the completion of the boot-up configuration. A URL must be specified or no action is taken. The commands are persistent between router (re)boots and are included in the configuration saves (admin>save).

**CLI Syntax:** config>system  
                   boot-bad-exec *file-url*  
                   boot-good-exec *file-url*

**Example:** config>system# boot-bad-exec ftp://test:test@192.168.xx.xxx/./fail.cfg  
 config>system# boot-good-exec ftp://test:test@192.168.xx.xxx/./ok.cfg

The following example displays the command output:

```
A:ALA-12>config>system# info
#-----
echo "System Configuration"
#-----
 name "ALA-12"
 contact "Fred Information Technology"
 location "Bldg.1-floor 2-Room 201"
 clli-code "abcdefg1234"
 coordinates "N 45 58 23, W 34 56 12"
 config-backup 7
 boot-good-exec "ftp://test:test@192.168.xx.xxx/./ok.cfg"
 boot-bad-exec "ftp://test:test@192.168.xx.xxx/./fail.cfg"
 power-supply 1 dc
 power-supply 2 dc
 lacp-system-priority 1
 sync-if-timing
 begin
 ref-order ref1 ref2 bits
 ..
#-----
A:ALA-12>config>system#
```

## Show Command Output and Console Messages

The `show>system>information` command displays the current value of the bad/good exec URLs and indicates whether a post-boot configuration extension file was executed when the system was booted. If an extension file was executed, the `show>system>information` command also indicates if it completed successfully or not.

```
A:7710-3# show system information
```

```
=====
System Information
=====
System Name : 7710-3
System Type : 7710 SR-c12
System Version : B-5.0.R3
System Contact : Fred Information Technology
System Location : Bldg.1-floor 2-Room 201
System Coordinates : N 45 58 23, W 34 56 12
System Active Slot : A
System Up Time : 1 days, 02:03:17.62 (hr:min:sec)

SNMP Port : 161
SNMP Engine ID : 0000197f000000164d3c3910
SNMP Max Message Size : 1500
SNMP Admin State : Enabled
SNMP Oper State : Enabled
SNMP Index Boot Status : Not Persistent
SNMP Sync State : OK

Tel/Tel6/SSH/FTP Admin : Enabled/Disabled/Enabled/Disabled
Tel/Tel6/SSH/FTP Oper : Up/Down/Up/Down

BOF Source : cf3:
Image Source : primary
Config Source : primary
Last Booted Config File: cf3:/config.cfg
Last Boot Cfg Version : FRI APR 20 16:24:27 2007 UTC
Last Boot Config Header: # TiMOS-B-5.0.R3 both/hops ALCATEL SR 7710
 Copyright (c) 2000-2007 Alcatel-Lucent. # All rights
 reserved. All use subject to applicable license
 agreements. # Built on Thu Apr 19 19:45:00 PST 2007 by
 builder in /rel5.0/R3/panos/main # Generated FRI
 APR 20 16:24:27 2007 UTC

Last Boot Index Version: N/A
Last Boot Index Header : # TiMOS-B-5.0.R3 both/hops ALCATEL SR 7710
 Copyright (c) 2000-2007 Alcatel-Lucent. # All rights
 reserved. All use subject to applicable license
 agreements. # Built on Thu Apr 19 19:45:00 PST 2007 by
 builder in /rel5.0/R3/panos/main # Generated FRI
 APR 20 16:24:27 2007 UTC

Last Saved Config : N/A
Time Last Saved : N/A
Changes Since Last Save: Yes
Time Last Modified : 2007/04/19 10:03:09
Max Cfg/BOF Backup Rev : 5
Cfg-OK Script : N/A
```

## System Administration Parameters

```
Cfg-OK Script Status : not used
Cfg-Fail Script : N/A
Cfg-Fail Script Status : not used

Management IP Addr : 192.168.1.202/24
DNS Server : 192.168.x.x
DNS Domain : domain.com
BOF Static Routes :
 To Next Hop
 192.168.0.0/16 192.168.1.1
ATM Location ID : 01:00:00:00:00:00:00:00:00:00:00:00:00:00:00
ATM OAM Retry Up : 2
ATM OAM Retry Down : 4
ATM OAM Loopback Period: 10
=====
A:7710-3#
```

When executing a post-boot configuration extension file, status messages are output to the CONSOLE screen prior to the “Login” prompt.

Following is an example of a failed boot-up configuration that caused a boot-bad-exec file containing another error to be executed:

```
Attempting to exec configuration file:
'ftp://test:test@192.168.xx.xxx/./12.cfg' ...
System Configuration
Log Configuration
MAJOR: CLI #1009 An error occurred while processing a CLI command -
File ftp://test:test@192.168.xx.xxx/./12.cfg, Line 195: Command "log" failed.
CRITICAL: CLI #1002 An error occurred while processing the configuration file.
The system configuration is missing or incomplete.
MAJOR: CLI #1008 The SNMP daemon is disabled.
If desired, enable SNMP with the 'config>system>snmp no shutdown' command.
Attempting to exec configuration failure extension file:
'ftp://test:test@192.168.xx.xxx/./fail.cfg' ...
Config fail extension
Enabling SNMP daemon
MAJOR: CLI #1009 An error occurred while processing a CLI command -
File ftp://test:test@192.168.xx.xxx/./fail.cfg, Line 5: Command "abc log" failed.
TiMOS-B-x.0.Rx both/hops ALCATEL SR 7710 Copyright (c) 2000-2009 Alcatel-Lucent.
All rights reserved. All use subject to applicable license agreements.
Built on Thu Nov 207 19:19:11 PST 2008 by builder in /rel5x.0/b1/Rx/panos/main

Login:
```



## System Timing

When synchronous Ethernet is enabled, the operator can select an Ethernet port as a candidate for timing reference. The timing information recovered from this port is used to time the system.

Note: In the current release the derived time is distributed only through other Ethernet ports.

CLI Syntax:

```
config>system>sync-if-timing
 abort
 begin
 commit
 ref-order first second
 ref1
 source-port port-id
 no shutdown
 ref2
 source-port port-id
 no shutdown
 no revert
```

In the event that network timing is required for the synchronous interfaces in the router, a timing subsystem is utilized to provide a clock to all synchronous interfaces within the system.

This section describes the commands used to configure and control the timing subsystem.

Use the CLI syntax displayed below to:

- [Edit Mode on page 314](#)
- [Using the Revert Command on page 315](#)
- [Other Editing Commands on page 316](#)
- [Forcing a Specific Reference on page 317](#)

## Edit Mode

To enter the mode to edit timing references, you must enter the **begin** keyword at the **config>system>sync-if-timing#** prompt.

Use the following CLI syntax to enter the edit mode:

**CLI Syntax:** config>system>sync-if-timing  
begin

The following error message displays when the you try to modify **sync-if-timing** parameters without entering the keyword **begin**.

```
A:ALA-12>config>system>sync-if-timing>ref1# source-port 1/1/1
MINOR: CLI The sync-if-timing must be in edit mode by calling begin before any changes can
be made.
MINOR: CLI Unable to set source port for ref1 to 1/1/1
A:ALA-12>config>system>sync-if-timing>ref1#
```

The following displays a timing reference configuration example:

```
ALA-12>config>system>sync-if-timing# info

 ref-order ref2 ref1
 ref1
 no shutdown
 exit
 ref2
 no shutdown
 exit

ALA-12>config>system>sync-if-timing#
```

## Using the Revert Command

The **revert** command allows the clock to revert to a higher priority reference if the current reference goes offline or becomes unstable. When the failed reference becomes operational, it is eligible for selection.

When mode is non-revertive, a failed clock source is not selected again. If a node would enter holdover due to the references being in previous failed state, then the node will select one of the previously failed references rather than going into holdover.

**CLI Syntax:** `config>system>sync-if-timing  
revert`

If the current reference goes offline or becomes unstable the revert command allows the clock to **revert** to a higher-priority reference.

When revert is switching enabled a valid timing reference of the highest priority is used. If a reference with a higher priority becomes valid, a reference switch over to that reference is initiated. If a failure on the current reference occurs, the next highest reference takes over.

If non-revertive switching is enabled, the valid active reference always remains selected even if a higher priority reference becomes available. If the active reference becomes invalid, a reference switch over to a valid reference with the highest priority is initiated. The failed reference is eligible for selection once it becomes operational.

CLI Syntax: `config>system>sync-if-timing  
no revert`

## Other Editing Commands

Other editing commands include:

- `commit` — This command saves changes made to the timing references during a session. Modifications are not persistent across system boots unless this command is entered.
- `abort` — This command discards changes that have been made to the timing references during a session.

**CLI Syntax:** `config>system>sync-if-timing`  
`abort`  
`commit`

## Forcing a Specific Reference

Note: The debug sync-if-timing force-reference command should only be used to test and debug problems. Network synchronization problems may appear if network elements are left with this manual override setting. Once the system timing reference input has been forced, it may be cleared using the no force-reference command.

You can force the CPM clock to use a specific input reference using the force-reference command.

When the command is executed, the CPM clock on the active CPM immediately switches its input reference to that specified by the command. If the specified input is not available (shutdown), or in a disqualified state, the CPM clock shall use the next qualified input reference based on the selection rules.

This command also affects the BITS output port. If the BITS output port selection is set to line-reference and the reference being forced is not the BITS input port, then the system uses the forced reference to generate the signal out the BITS output port. If the BITS output port selection is set to internal-clock, then the system uses the output of the CPM clock to generate the signal for the BITS output port.

On a CPM activity switch, the force command is cleared and normal reference selection is determined.

Debug configurations are not saved between reboots.

**CLI Syntax:** debug>sync-if-timing  
force-reference {ref1 | ref2 | bits}

**Example:** debug>sync-if-timing# force-reference

The 7750 SR-c4 has two BITS input ports on the CFM. The force reference command on this system allows the selection of the specific port.

**CLI Syntax:** debug>sync-if-timing  
force-reference {ref1 | ref2 | bits1 | bits2}

# Configuring System Monitoring Thresholds

---

## Creating Events

The **event** command controls the generation and notification of threshold crossing events configured with the **alarm** command. When a threshold crossing event is triggered, the **rmon event** configuration optionally specifies whether an entry in the RMON-MIB log table be created to record the occurrence of the event. It can also specify whether an SNMP notification (trap) be generated for the event. There are two notifications for threshold crossing events, a rising alarm and a falling alarm.

Creating an event entry in the RMON-MIB log table does not create a corresponding entry in the event logs. However, when the event is set to trap the generation of a rising alarm or falling alarm notification creates an entry in the event logs and that is distributed to whatever log destinations are configured: console, session, memory, file, syslog, or SNMP trap destination. The logger message includes a rising or falling threshold crossing event indicator, the sample type (absolute or delta), the sampled value, the threshold value, the *rmon-alarm-id*, the associated *rmon-event-id* and the sampled SNMP object identifier.

The **alarm** command configures an entry in the RMON-MIB alarm table. The **alarm** command controls the monitoring and triggering of threshold crossing events. In order for notification or logging of a threshold crossing event to occur there must be at least one associated **rmon event** configured.

The agent periodically takes statistical sample values from the MIB variable specified for monitoring and compares them to thresholds that have been configured with the **alarm** command. The **alarm** command configures the MIB variable to be monitored, the polling period (interval), sampling type (absolute or delta value), and rising and falling threshold parameters. If a sample has crossed a threshold value, the associated 'event' is generated.

Preconfigured CLI threshold commands are available. Preconfigured commands hide some of the complexities of configuring RMON alarm and event commands and perform the same function. In particular, the preconfigured commands do not require the user to know the SNMP object identifier to be sampled. The preconfigured threshold configurations include memory warnings and alarms and compact flash usage warnings and alarms.

To create events, use the following CLI:

**Example:** `config>system>thresholds# cflash-cap-warn cfl-B: rising-threshold 2000000 falling-threshold 1999900 interval 240 trap startup-alarm either`

**Example:** config>system>thresholds# memory-use-alarm rising-threshold 50000000 falling-threshold 45999999 interval 500 both startup-alarm either

**Example:** config>system>thresh# rmon

**Example:** config>system>thresh>rmon# event 5 both description "alarm testing" owner "Timos CLI"

The following example displays the command output:

```
A:ALA-49>config>system>thresholds# info

 rmon
 event 5 description "alarm testing" owner "Timos CLI"
 exit
 cflash-cap-warn cf1-B: rising-threshold 2000000 falling-threshold 1999900
interval 240 trap
 memory-use-alarm rising-threshold 50000000 falling-threshold 45999999 interval
500

A:ALA-49>config>system>thresholds#
```

## System Alarm Contact Inputs

The hardware supports alarm contact inputs that allow an operator to monitor and report changes in the external environmental conditions. In a remote or outdoor deployment, alarm contact inputs allow an operator to detect conditions, for example, air conditioner fault, open door.

An operator can configure generation of events when alarm contact inputs transition between the open and close states. For each generated event, the operator can specify the:

- Action associated with each state transition.
- Severity associated with each state transition.
- Log message associated with each state transition.



## Configuring LLDP

The following output displays LLDP defaults:

```
A:testSr1>config>system>lldp# info detail

 no tx-interval
 no tx-hold-multiplier
 no reinit-delay
 no notification-interval
 no tx-credit-max
 no message-fast-tx
 no message-fast-tx-init
 no shutdown

A:testSr1>config>system>lldp#
```

The following example shows an LLDP port configuration.

```
*A:ALA-48>config>port>ethernet>lldp# info

 dest-mac nearest-bridge
 admin-status tx-rx
 tx-tlvs port-desc sys-cap
 tx-mgmt-address system
 exit

*A:ALA-48>config>port>ethernet>lldp#
```

The following example shows a global system LLDP configuration.

```
A:ALA-48>config>system>lldp# info

 tx-interval 10
 tx-hold-multiplier 2
 reinit-delay 5
 notification-interval 10

A:ALA-48>config>system>lldp#
```



---

# System Command Reference

---

## Command Hierarchies

### Configuration Commands

- [System Information Commands on page 323](#)
- [System Alarm Commands on page 325](#)
- [Hardware Configuration Commands on page 326](#)
- [Persistence Commands on page 326](#)
- [System Time Commands on page 326](#)
- [Cron Commands on page 328](#)
- [System Synchronization Commands on page 331](#)
- [System Administration \(Admin\) Commands on page 330](#)
- [High Availability \(Redundancy\) Commands on page 331](#)
- [LLDP System Commands on page 334](#)
- [LLDP Ethernet Port Commands on page 334](#)
- [Show Commands on page 335](#)
- [Debug Commands on page 336](#)
- [Clear Commands on page 336](#)
- [Tools Commands on page 337](#)

### System Information Commands

```

config
 — system
 — atm
 — atm-location-id
 — oam
 — loopback-period period
 — retry-down retries
 — retry-up retries
 — boot-bad-exec file-url
 — no boot-bad-exec
 — boot-bad-exec file-url
 — no boot-bad-exec
 — ccm ccm-slot
 — cli-code cli-code
 — no cli-code
 — config-backup count
 — no config-backup
 — contact contact-name

```

- **no contact**
- **coordinates** *coordinates*
- **no coordinates**
- **dns**
  - **address-pref** {*ipv4-only* | *ipv6-first*}
  - **no address-pref**
- **[no] enable-icmp-vse**
- **lacp-system-priority** *lacp-system-priority*
- **no lacp-system-priority**
- **[no] l4-load-balancing**
- **location** *location*
- **no location**
- **name** *system-name*
- **no name**
- **no system-ip-load-balancing**

## System Alarm Commands

- ```

config
  — system
    — thresholds
      — cflash-cap-alarm cflash-id rising-threshold threshold [falling-threshold threshold]
         interval seconds [rmon-event-type] [startup-alarm alarm-type]
      — no cflash-cap-alarm cflash-id
      — cflash-cap-warn cflash-id rising-threshold threshold [falling-threshold threshold]
         interval seconds [rmon-event-type] [startup-alarm alarm-type]
      — no cflash-cap-warn cflash-id
      — kb-memory-use-alarm rising-threshold threshold [falling-threshold threshold] inter-
         val seconds [rmon-event-type] [startup-alarm alarm-type]
      — no kb-memory-use-alarm
      — kb-memory-use-warn rising-threshold threshold [falling-threshold threshold] interval
         seconds [rmon-event-type] [startup-alarm alarm-type]
      — no kb-memory-use-warn
      — memory-use-alarm rising-threshold threshold [falling-threshold threshold] interval
         seconds [rmon-event-type] [startup-alarm alarm-type]
      — no memory-use-alarm
      — memory-use-warn rising-threshold threshold [falling-threshold threshold] interval
         seconds [rmon-event-type] [startup-alarm alarm-type]
      — no memory-use-warn
      — [no] rmon
         — alarm rmon-alarm-id variable-oid oid-string interval seconds [sample-type]
            [startup-alarm alarm-type] [rising-event rmon-event-id rising-threshold
            threshold] [falling event rmon-event-id falling-threshold threshold] [owner
            owner-string]
         — no alarm rmon-alarm-id
         — event rmon-event-id [event-type] [description description-string] [owner
            owner-string]
         — no event rmon-event-id

```

Hardware Configuration Commands

```
config
  — system
    — power-supply [power-supply-id] [type]
```

Persistence Commands

```
config
  — system
    — persistence
      — application-assurance
        — description description-string
        — no description
        — location cflash-id
        — no location
      — dhcp-server
        — description description-string
        — no description
        — location cflash-id
        — no location
      — nat-port-forwarding
        — description description-string
        — no description
        — location cflash-id
        — no location
      — subscriber-mgmt
        — description description-string
        — no description
        — location cflash-id
        — no location
```

System Time Commands

```
root
  — admin
    — set-time [date] [time]
config
  — system
    — time
      — [no] ntp
        — [no] authentication-check
        — authentication-key key-id key key [hash | hash2] type {des | message-digest}
        — no authentication-key key-id
        — [no] broadcast [router router-name] {interface ip-int-name} [key-id key-id]
          [version version] [ttl ttl]
        — broadcastclient [router router-name] {interface ip-int-name} [authenticate]
        — [no] multicast [version version] [key-id key-id]
        — [no] multicastclient [authenticate]
```

- [no] **ntp-server** [transmit *key-id*]
- [no] **peer** *ip-address* [version *version*] [key-id *key-id*] [prefer]
- [no] **server** *ip-address* [version *version*] [key-id *key-id*] [prefer]
- [no] **shutdown**
- [no] **sntp**
 - [no] **broadcast-client**
 - **server-address** *ip-address* [version *version-number*] [normal | preferred] [interval *seconds*]
 - no **server-address** *ip-address*
 - [no] **shutdown**
- [no] **dst-zone** [*std-zone-name* | *non-std-zone-name*]
 - **end** {*end-week*} {*end-day*} {*end-month*} [*hours-minutes*]
 - **offset** *offset*
 - **start** {*start-week*} {*start-day*} {*start-month*} [*hours-minutes*]
- **zone** *std-zone-name* | *non-std-zone-name* [*hh* [:*mm*]]
- no **zone**

Cron Commands

- config
 - [no] **cron**
 - [no] **action** *action-name* [owner *owner-name*]
 - **expire-time** {seconds | forever}
 - **lifetime** {seconds | forever}
 - **max-completed** *unsigned*
 - [no] **results** *file-url*
 - [no] **script** *script-name* [owner *owner-name*]
 - [no] **shutdown**
 - [no] **schedule** *schedule-name* [owner *owner-name*]
 - [no] **action** *action-name* [owner *owner-name*]
 - [no] **day-of-month** {*day-number* [..*day-number*] **all**}
 - **count** *number*
 - [no] **description** *description-string*
 - [no] **end-time** [*date*/*day-name*] *time*
 - [no] **hour** {..*hour-number* [..*hour-number*] **all**}
 - [no] **interval** *seconds*
 - [no] **minute** {*minute-number* [..*minute-number*] **all**}
 - [no] **month** {*month-number* [..*month-number*]/*month-name* [..*month-name*] **all**}
 - [no] **shutdown**
 - **type** {*schedule-type*}
 - [no] **weekday** {*weekday-number* [..*weekday-number*]/*day-name* [..*day-name*] **all**}
 - [no] **script** [no] **script** *script-name* [owner *owner-name*]
 - [no] **description** *description-string*
 - [no] **Specifies the script name.location** *file-url*
 - [no] **shutdown**
 - [no] **time-range** *name*
 - **absolute start** *start-absolute-time end end-absolute-time*
 - **no absolute start** *start-absolute-time*
 - **daily start** *start-time-of-day end end-time-of-day*
 - **no daily start** *start-time-of-day*
 - **weekdays start** *start-time-of-day end end-time-of-day*
 - **no weekdays start** *start-time-of-day*
 - **weekend start** *start-time-of-day end end-time-of-day*
 - **no weekend start** *start-time-of-day*
 - **weekly start** *start-time-in-week end end-time-in-week*
 - **no weekly start** *start-time-in-week*
 - [no] **tod-suite**
 - **egress**
 - **filter ip** *ip-filter-id* [**time-range** *time-range-name*] [**priority** *priority*]
 - **filter ipv6** *ipv6-filter-id* [**time-range** *time-range-name*] [**priority** *priority*]
 - **filter mac** *mac-filter-id* [**time-range** *time-range-name*] [**priority** *priority*]
 - **no filter ip** *ip-filter-id* [**time-range** *time-range-name*]
 - **no filter ipv6** *ipv6-filter-id* [**time-range** *time-range-name*]
 - **no filtermac** *mac-filter-id* [**time-range** *time-range-name*]
 - **qos** *policy-id* [**time-range** *time-range-name*] [**priority** *priority*]
 - **no qos** *policy-id* [**time-range** *time-range-name*]
 - **scheduler-policy** *scheduler-policy-name* [**time-range** *time-range-name*] [**priority** *priority*]
 - **no scheduler-policy** *scheduler-policy-name* [**time-range** *time-range-name*]
 - **ingress**
 - **filter ip** *ip-filter-id* [**time-range** *time-range-name*] [**priority** *priority*]
 - **filter ipv6** *ipv6-filter-id* [**time-range** *time-range-name*] [**priority** *priority*]

- **filter mac** *mac-filter-id* [**time-range** *time-range-name*] [**priority** *priority*]
- **no filter ip** *ip-filter-id* [**time-range** *time-range-name*]
- **no filter ipv6** *ipv6-filter-id* [**time-range** *time-range-name*]
- **no filter mac** *mac-filter-id* [**time-range** *time-range-name*]
- **qos** *policy-id* [**time-range** *time-range-name*] [**priority** *priority*]
- **no qos** *policy-id* [**time-range** *time-range-name*]
- **scheduler-policy** *scheduler-policy-name* [**time-range** *time-range-name*] [**priority** *priority*]
- **no scheduler-policy** *scheduler-policy-name* [**time-range** *time-range-name*]

System Administration (Admin) Commands

root

— **admin**

- **debug-save** *file-url*
- **disconnect** {**address** *ip-address* | **username** *user-name* | **console** | **telnet** | **ftp** | **ssh**}
- **display-config** [**detail** | **index**]
- [**no**] **enable-tech**
- **radius-discovery**
 - **force-discover** [**svc-id** *service-id*]
- **reboot** [**active** | **standby** | **upgrade**] [**now**]
- **redundancy**
 - [**no**] **cert-sync**
 - **synchronize** {**boot-env**|**config**}
 - **no synchronize**
- **save** [*file-url*] [**detail**] [**index**]
- **synchronize** [**boot-env** | **config**]
- **tech-support** [*file-url*]

System Synchronization Commands

- **ql-override** {prs | stu | st2 | tnc | st3e | st3 | eec1 | sec | prc | ssu-a | ssu-b | eec2}
- **no ql-override**
- **[no] shutdown**
- **source-port** *port-id*
- **no source-port**
- **ql-override** {prs | stu | st2 | tnc | st3e | st3 | eec1 | sec | prc | ssu-a | ssu-b | eec2}
- **no ql-override**
- **[no] shutdown**
- **source-port** *port-id*
- **no source-port**
- **[no] ql-selection**
- **[no] revert**

The following commands apply to the 7710 SR-c4 and an 7710 SR-c12 models.

config

- **system**
 - **sync-if-timing**
 - **abort**
 - **begin**
 - **commit**
 - **ref-order** *first second*
 - **no ref-order**
 - **ref1**
 - **bits-interface-type** {ds1 [{esf | sf}] | e1 [{pcm30crc | pcm31crc}]}
 - **no bits-interface-type**
 - **ql-override** {prs | stu | st2 | tnc | st3e | st3 | eec1 | sec | prc | ssu-a | ssu-b | eec2}
 - **no ql-override**
 - **[no] shutdown**
 - **source-bits** *slot/mda*
 - **no source-bits**
 - **source-port** *port-id*
 - **no source-port**
 - **ssm-bit** *sa-bit*
 - **ref2**
 - **bits-interface-type** {ds1 [{esf | sf}] | e1 [{pcm30crc | pcm31crc}]}
 - **no bits-interface-type**
 - **ql-override** {prs | stu | st2 | tnc | st3e | st3 | eec1 | sec | prc | ssu-a | ssu-b | eec2}
 - **no ql-override**
 - **[no] shutdown**
 - **source-bits** *slot/mda*
 - **no source-bits**
 - **source-port** *port-id*
 - **no source-port**
 - **ssm-bit** *sa-bit*
 - **[no] ql-selection**
 - **[no] revert**

High Availability (Redundancy) Commands

root

- admin
 - **redundancy**
 - **display-config** [detail/index]
 - **redundancy**
 - **force-switchover** [now]
 - **rollback-sync**
 - **synchronize** {boot-env | config}
 - **rollback**
 - **redundancy** [to source I]
 - **delete** {latest-rb | checkpoint-id | rescue}
 - **revert** [latest-rb] | checkpoint-id | rescue [now]
 - **revert**
 - **save** [rescue] [comment comment-string]
 - **view** [latest-rb | checkpoint-id | rescue]
 - **view** {latest-cfg | active-cfg | latest-rb | checkpoint-id}
- config
 - system
 - **rollback**
 - [no] **rollback-location** file-url
 - [no] **rescue-location** file-url
 - [no] **local-max-checkpoints** <1...50>
 - [no] **remote-max-checkpoints** <1...50>
 - **switchover-exec** file-url
 - **no switchover-exec**
 - **redundancy**
 - **multi-chassis**
 - [no] **peer** ip-address
 - **authentication-key** [authentication-key | hash-key] [hash | hash2]
 - **no authentication-key**
 - **description** description-string
 - **no description**
 - [no] **mc-endpoint**
 - [no] **bfd-enable**
 - **boot-timer** interval
 - **no boot-timer**
 - **hold-on-neighbor-failure** multiplier
 - **no hold-on-neighbor-failure**
 - **keep-alive-interval** interval
 - **no keep-alive-interval**
 - [no] **passive-mode**
 - [no] **shutdown**
 - **system-priority** value
 - **no system-priority**
 - [no] **mc-lag**
 - **hold-on-neighbor-failure** multiplier
 - **no hold-on-neighbor-failure**
 - **keep-alive-interval** interval
 - **no keep-alive-interval**
 - **lag** lag-id lacp-key admin-key system-id system-id [remote-lag lag-id] system-priority system-priority
 - **no lag** lag-id
 - [no] **shutdown**
 - **mc-ring**
 - **ring** sync-tag [create]
 - **no ring** sync-tag

- **in-band-control-path**
 - **dst-ip** *ip-address*
 - **no dst-ip**
 - **interface** *ip-int-name*
 - **no interface**
 - **service-id** *service-id*
 - **no service-id**
- **[no] path-b**
 - **[no] range** *vlan-range*
- **[no] path-excl**
 - **[no] range** *vlan-range*
- **ring-node** *ring-node-name* [**create**]
- **no ring-node** *ring-node-name*
 - **connectivity-verify**
 - **dst-ip** *ip-address*
 - **no dst-ip**
 - **interval** *interval*
 - **no interval**
 - **service-id** *service-id*
 - **no service-id**
 - **[no] shutdown**
 - **src-ip** *ip-address*
 - **no src-ip**
 - **src-mac** *ieee-address*
 - **no src-mac**
 - **vlan** [**0..4094**]
 - **no vlan**
 - **[no] shutdown**
- **peer-name** *name*
- **no peer-name**
- **[no] shutdown**
- **source-address** *ip-address*
- **no source-address**
- **[no] sync**
 - **[no] igmp**
 - **[no] igmp-snooping**
 - **[no] local-dhcp-server**
 - **[no] mc-ring**
 - **[no] mld-snooping**
 - **port** [*port-id* | *lag-id*] [**sync-tag** *sync-tag*]
 - **no port** [*port-id* | *lag-id*]
 - **range** *encap-range* [**sync-tag** *sync-tag*]
 - **no range** *encap-range*
 - **[no] shutdown**
 - **[no] srrp**
 - **[no] sub-mgmt**
- **bgp-multi-homing**
 - **boot-timer** *seconds*
 - **no boot-timer**
 - **site-activation-timer** *seconds*
 - **no site-activation-timer**
- **[no] rollback-sync**
- **synchronize** {*boot-env* | *config*}

LLDP System Commands

```
configure
  — system
    — lldp
      — message-fast-tx time
      — no message-fast-tx
      — message-fast-tx-init count
      — no message-fast-tx-init
      — notification-interval time
      — no notification-interval
      — reinit-delay time
      — no reinit-delay
      — [no] shutdown
      — tx-credit-max count
      — no tx-credit-max
      — tx-hold-multiplier multiplier
      — no tx-hold-multiplier
      — tx-interval interval
      — no tx-interval
```

LLDP Ethernet Port Commands

```
configure
  — port port-id
    — ethernet
      — lldp
        — dest-mac {nearest-bridge | nearest-non-tpmr | nearest-customer}
        — admin-status {rx | tx | tx-rx | disabled}
        — [no] notification
        — tx-mgmt-address [system]
        — no tx-mgmt-address
        — tx-tlvs [port-desc] [sys-name] [sys-desc] [sys-cap]
        — no tx-tlvs
```

Show Commands

```

show
  — chassis [environment] [power-supply] [ccm]
  — cron
    — action
    — schedule
    — script
    — tod-suite tod-suite-name [detail] associations failed-associations
    — time-range name associations [detail]
  — redundancy
    — multi-chassis
      — all [detail]
      — mc-endpoint statistics
      — mc-endpoint peer [ip-address] statistics
      — mc-endpoint endpoint [mcep-id] statistics
      — mc-endpoint peer [ip-address]
      — mc-lag [lag lag-id]
        — peer [peer ip-address [lag lag-id]] mc-lag
        — statistics
      — mc-ring peer ip-address statistics
      — mc-ring peer ip-address [ring sync-tag [detail|statistics] ]
      — mc-ring peer ip-address ring sync-tag ring-node [ring-node-name [detail | statistics] ]
      — mc-ring global-statistics
      — sync [port port-id | lag-id]
        — peer [port port-id]
        — detail
    — synchronization
  — time
  — system
    — connections [address ip-address [interface interface-name]] [port port-number] [detail]
    — cpu [sample-period seconds]
    — information
    — lldp neighbor
    — memory-pools
    — ntp
    — rollback
    — sntp
    — sync-if-timing
    — thresholds
    — time
  — uptime

```

Clear Commands

- clear
 - **redundancy**
 - **multi-chassis**
 - **mc-endpoint endpoint** [*mcep-id*] **statistics**
 - **mc-endpoint statistics**
 - **mc-endpoint peer** [*ip-address*] **statistics**
 - **mc-lag** [**peer** *ip-address* [**lag** *lag-id*]]
 - **mc-ring**
 - **debounce peer** *ip-address ring sync-tag*
 - **ring-nodes peer** *ip-address ring sync-tag*
 - **statistics**
 - **global**
 - **peer** *ip-address*
 - **ring peer** *ip-address ring sync-tag*
 - **ring-node peer** *ip-address ring sync-tag node ring-node-name*
 - **Clears ring-node peer statistics for the specified ring node name.sync-database peer** *ip-address all application application*
 - **Clears ring-node peer statistics for the specified ring node name.sync-database peer** *ip-address {port port-id | lag-id | sync-tag sync-tag} application application*
 - **Clears ring-node peer statistics for the specified ring node name.sync-database peer** *ip-address port port-id | lag-id sync-tag sync-tag application application*
 - **screen action-name** [**owner** *owner-name*]
 - **system sync-if-timing** {**ref1** | **ref2** | **bits**}
 - **trace log**

Debug Commands

- debug
 - **sync-if-timing**
 - **force-reference** {**ref1** | **ref2** | **bits**}
 - **no force-reference**
 - [**no**] **system**
 - **http-connections** [*host-ip-address/mask*]
 - **no http-connections**
 - **ntp** [**router** *router-name*] [**interface** *ip-int-name*]
 - **persistence**

Tools Commands

- tools
 - **dump**
 - **redundancy**
 - **multi-chassis**
 - **mc-endpoint peer** *ip-address*
 - **mc-ring**
 - **mc-ring peer** *ip-address* [*ring sync-tag*]
 - **sync-database** [*instance instance-id*] [**peer** *ip-address*]
 - **sync-database** [**peer** *ip-address*] [**port** *port-id* | *lag-id*] [**sync-tag** *sync-tag*] [**application** *application*] [**detail**] [**type** *type*]

System Command Reference

Generic Commands

shutdown

Syntax [no] shutdown

Context config>system>time>ntp
 config>system>time>sntp
 config>system>persistence>app-assure
 config>system>persistence>dhcp-server
 config>system>persistence>nat-port-forward
 config>system>persistence>subscriber-mgmt
 config>cron>action
 config>cron>sched
 config>cron>script
 config>redundancy>multi-chassis>peer
 config>redundancy>multi-chassis>peer>mc-lag
 config>redundancy>multi-chassis>peer>sync
 config>redundancy>mc>peer>mcr>node>cv
 config>system>lldp
 config>redundancy>multi-chassis>peer>mc-ep

Description This command administratively disables the entity. When disabled, an entity does not change, reset, or remove any configuration settings or statistics.

The operational state of the entity is disabled as well as the operational state of any entities contained within. Many objects must be shut down before they may be deleted.

The **no** form of this command places the entity into an administratively enabled state.

Default no shutdown

description

Syntax **description** *description-string*
no description

Context config>cron>sched
 config>redundancy>multi-chassis>peer

Description This command creates a text description stored in the configuration file for a configuration context.

The **description** command associates a text string with a configuration context to help identify the content in the configuration file.

Generic Commands

The **no** form of this command removes the string from the configuration.

Default No description associated with the configuration context.

Parameters *string* — The description character string. Allowed values are any string up to 80 characters long composed of printable, 7-bit ASCII characters. If the string contains special characters (#, \$, spaces, etc.), the entire string must be enclosed within double quotes.

System Information Commands

atm

Syntax atm

Context config>system

Description This command enables the context to configure system-wide ATM parameters.

atm-location-id

Syntax atm-location-id *location-id*

Context config>system

Description This command indicates the location ID for ATM OAM.

Refer to the *7750 SR OS Services Guide* for information about ATM QoS policies and ATM-related service parameters.

Default no atm-location-id

Parameters *location-id* — Specify the 16 octets that identifies the system loopback location ID as required by the ATM OAM Loopback capability. This textual convention is defined in ITU-T standard I.610.

Invalid values include a location ID where the first octet is : 00, FF, 6A
Acceptable *location-ids* include values where the first octet is: 01, 03
Other values are not accepted.

Values 01:00:00:00:00:00:00:00:00:00:00:00:00:00:00:00

oam

Syntax oam

Context config>system>atm

Description This command configures system-wide ATM parameters.

loopback-period

| | | | | | |
|--------------------|---|---------------|--------|----------------|----|
| Syntax | loopback-period <i>period</i>
no loopback-period | | | | |
| Context | config>system>atm>oam | | | | |
| Description | This command specifies the number of seconds between periodic loopback attempts on an ATM endpoint that has periodic loopback enabled. | | | | |
| Parameters | <i>period</i> — Specify the time, in seconds, between periodic loopback attempts.
<table><tr><td>Values</td><td>1 — 40</td></tr><tr><td>Default</td><td>10</td></tr></table> | Values | 1 — 40 | Default | 10 |
| Values | 1 — 40 | | | | |
| Default | 10 | | | | |

retry-down

| | | | | | |
|--------------------|---|---------------|--|----------------|---|
| Syntax | retry-down <i>retries</i>
no retry-down | | | | |
| Context | config>system>atm>oam | | | | |
| Description | Specifies the number of OAM loopback attempts that must fail after the periodic attempt before the endpoint will transition to AIS-LOC state.

The retry values are configured on a system wide basis and are affective on the next period cycle of any ATM VC SAP using periodic-loopback , if changed. The timeout for receiving a loopback response from the remote peer and declaring the loopback failed is 1 second and is not configurable. | | | | |
| Parameters | <i>retries</i> — Specify the number of failed loopback attempts before an ATM VC goes down.
<table><tr><td>Values</td><td>0 — 10 (A zero value means that the endpoint will transition to AIS-LOC state immediately if the periodic loopback attempt fails.)</td></tr><tr><td>Default</td><td>4</td></tr></table> | Values | 0 — 10 (A zero value means that the endpoint will transition to AIS-LOC state immediately if the periodic loopback attempt fails.) | Default | 4 |
| Values | 0 — 10 (A zero value means that the endpoint will transition to AIS-LOC state immediately if the periodic loopback attempt fails.) | | | | |
| Default | 4 | | | | |

retry-up

| | |
|--------------------|--|
| Syntax | retry-up <i>retries</i>
no retry-up |
| Context | config>system>atm>oam |
| Description | This command specifies the number of consecutive OAM loopback attempts that must succeed after the periodic attempt before the endpoint will transition the state to up. |
| Parameters | <i>retries</i> — Specify the number of successful loopback replies before an ATM VC goes up. |

| | |
|----------------|--|
| Values | 0 — 10 (A zero value means that the endpoint will transition to the up state immediately if the periodic loopback attempt succeeds.) |
| Default | 2 |

boot-bad-exec

| | |
|-------------------------|--|
| Syntax | boot-bad-exec <i>file-url</i>
no boot-bad-exec |
| Context | config>system |
| Description | Use this command to configure a URL for a CLI script to exec following a failure of a boot-up configuration. The command specifies a URL for the CLI scripts to be run following the completion of the boot-up configuration. A URL must be specified or no action is taken.

The commands are persistent between router (re)boots and are included in the configuration saves (admin>save). |
| Default | no boot-bad-exec |
| Parameters | <i>file-url</i> — Specifies the location and name of the CLI script file executed following failure of the boot-up configuration file execution. When this parameter is not specified, no CLI script file is executed. |
| Values | file url: local-url remote-url: 255 chars max
local-url: [<i>cflash-id</i>]/[<i>file-path</i>]
remote-url: [{ ftp:// } login:pswd@remote-locn/][<i>file-path</i>]
remote-locn [<i>hostname</i> <i>ipv4-address</i> [<i>ipv6-address</i>]]
ipv4-address a.b.c.d
ipv6-address - x:x:x:x:x:x[-interface]
x:x:x:x:x:d.d.d.d[-interface]
x - [0..FFFF]H
d - [0..255]D
interface - 32 chars max, for link local addresses
cflash-id: cf1:, cf1-A:,cf1-B:,cf2:,cf2-A:,cf2-B:,cf3:,cf3-A:,cf3-B: |
| Related Commands | exec command on page 71 — This command executes the contents of a text file as if they were CLI commands entered at the console. |

boot-good-exec

| | |
|--------------------|--|
| Syntax | boot-good-exec <i>file-url</i>
no boot-good-exec |
| Context | config>system |
| Description | Use this command to configure a URL for a CLI script to exec following the success of a boot-up configuration. |

System Information Commands

Default no boot-good-exec

Parameters *file-url* — Specifies the location and name of the file executed following successful completion of the boot-up configuration file execution. When this parameter is not specified, no CLI script file is executed.

Values

| | |
|--------------|---|
| file url: | local-url remote-url: 255 chars max |
| local-url: | [<i>cflash-id</i>]/[<i>file-path</i>] |
| remote-url: | [[ftp://} login:pswd@remote-locn/][file-path] |
| remote-locn | [<i>hostname</i> <i>ipv4-address</i> [<i>ipv6-address</i>]] |
| ipv4-address | a.b.c.d |
| ipv6-address | - x:x:x:x:x:x:x[-interface] |
| | x:x:x:x:x:d.d.d.d[-interface] |
| | x - [0..FFFF]H |
| | d - [0..255]D |
| | interface - 32 chars max, for link local addresses |
| cflash-id: | cf1:, cf1-A:,cf1-B:;cf2:,cf2-A:;cf2-B:;cf3:,cf3-A:;cf3-B: |

Related Commands

exec command on page 71 — This command executes the contents of a text file as if they were CLI commands entered at the console.

ccm

Syntax **ccm** *ccm-slot*

Context config>system

Description This command is used to shutdown (or no shutdown) the 7710 SR Chassis Control Module (CCM).

Default [no] shutdown

Parameters *ccm-slot* — Specifies the CCM slot.

If this is the desired behavior, for example, chassis-mode **d** is configured and IPv6 is running, you can then downgrade to chassis-mode **a** or **b** if you want to disable IPv6.

clli-code

Syntax **clli-code** *clli-code*
no clli-code

Context config>system

Description This command creates a Common Language Location Identifier (CLLI) code string for the 7710 SR router. A CLLI code is an 11-character standardized geographic identifier that uniquely identifies geographic locations and certain functional categories of equipment unique to the telecommunications industry.

No CLLI validity checks other than truncating or padding the string to eleven characters are performed.

Only one CLLI code can be configured, if multiple CLLI codes are configured the last one entered overwrites the previous entry.

The **no** form of the command removes the CLI code.

Default none — No CLI codes are configured.

Parameters *cli-code* — The 11 character string CLI code. Any printable, seven bit ASCII characters can be used within the string. If the string contains special characters (#, \$, spaces, etc.), the entire string must be enclosed within double quotes. If more than 11 characters are entered, the string is truncated. If less than 11 characters are entered the string is padded with spaces.

config-backup

Syntax **config-backup** *count*
no config-backup

Context config>system

Description This command configures the maximum number of backup versions maintained for configuration files and BOF.

For example, assume the **config-backup** *count* is set to 5 and the configuration file is called *xyz.cfg*. When a **save** command is executed, the file *xyz.cfg* is saved with a .1 extension. Each subsequent **config-backup** command increments the numeric extension until the maximum count is reached.

```
xyz.cfg
xyz.cfg.1
xyz.cfg.2
xyz.cfg.3
xyz.cfg.4
xyz.cfg.5
xyz.ndx
```

Each persistent index file is updated at the same time as the associated configuration file. When the index file is updated, then the save is performed to *xyz.cfg* and the index file is created as *xyz.ndx*. Synchronization between the active and standby CFM is performed for all configurations and their associated persistent index files.

The **no** form of the command returns the configuration to the default value.

Default 5

Parameters *count* — The maximum number of backup revisions.

Values 1 — 9

contact

System Information Commands

| | |
|--------------------|---|
| Syntax | contact <i>contact-name</i>
no contact |
| Context | config>system |
| Description | This command creates a text string that identifies the contact name for the device.

Only one contact can be configured, if multiple contacts are configured the last one entered will overwrite the previous entry.

The no form of the command reverts to default. |
| Default | none — No contact name is configured. |
| Parameters | <i>contact-name</i> — The contact name character string. The string can be up to 80 characters long. Any printable, seven-bit ASCII characters can be used within the string. If the string contains special characters (#, \$, spaces, etc.), the entire string must be enclosed within double quotes. |

coordinates

| | |
|--------------------|--|
| Syntax | coordinates <i>coordinates</i>
no coordinates |
| Context | config>system |
| Description | This command creates a text string that identifies the system coordinates for the device location. For example, the command coordinates "37.390 -122.0550" is read as latitude 37.390 north and longitude 122.0550 west.

Only one set of coordinates can be configured. If multiple coordinates are configured, the last one entered overwrites the previous entry.

The no form of the command reverts to the default value. |
| Default | none — No coordinates are configured. |
| Parameters | <i>coordinates</i> — The coordinates describing the device location character string. The string may be up to 80 characters long. Any printable, seven-bit ASCII characters can be used within the string. If the string contains special characters (#, \$, spaces, etc.), the entire string must be enclosed within double quotes. If the coordinates are subsequently used by an algorithm that locates the exact position of this node then the string must match the requirements of the algorithm. |

dns

| | |
|--------------------|---------------------------------------|
| Syntax | dns |
| Context | config>system |
| Description | This command configures DNS settings. |

address-pref

Syntax **address-pref {ipv4-only | ipv6-first}**
no address-pref

Context config>system>dns

Description This command configures the DNS address resolving order preference. By default DNS names are queried for A-records only (address-preference is IPv4-only).

If the address-preference is set to IPv6-first, the DNS server will be queried for AAAA-records (IPv6) first and if a successful replied is not received, then the DNS server is queried for A-records.

enable-icmp-vse

Syntax **[no] enable-icmp-vse**

Context config>system

Description This command enables vendor specific extensions to ICMP.

I4-load-balancing

Syntax **[no] I4-load-balancing**

Context config>system

Description This command configures system-wide Layer 4 load balancing. The configuration at system level can enable or disable load balancing based on Layer 4 fields. If enabled, Layer 4 source and destination port fields will be included in hashing calculation for TCP/UDP packets.

The hashing algorithm addresses finer spraying granularity where many hosts are connected to the network.

To address more efficient traffic distribution between network links (forming a LAG group), a hashing algorithm extension takes into account L4 information (i.e., src/dst L4-protocol port).

The hashing index can be calculated according to the following algorithm:

```

If [(TCP or UDP traffic) & enabled]
    hash (<TCP/UDP ports>, <IP addresses>)
else if (IP traffic)
    hash (<IP addresses>)
else
    hash (<MAC addresses>)
endif

```

This algorithm will be used in all cases where IP information in per-packet hashing is included (see [LAG and ECMP Hashing in the Interfaces Guide](#)). However the Layer 4 information (TCP/UDP ports) will not be used in the following cases:

- Fragmented packets

System Information Commands

Default no l4-load-balancing

lsr-load-balancing

Syntax **lsr-load-balancing** {lbi-only | lbi-ip}
no lsr-load-balancing

Context config>system

Description This command configures system-wide LSR load balancing. Hashing can be enabled on IP header at an LSR for spraying labeled IP packets over multiple equal cost paths in ECMP in an LDP LSP and/or over multiple links of a LAG group in all types of LSPs.

In previous releases, the LSR hash routine operated on the label stack only. However, this lacked the granularity to provide hashing on the IP header if a packet is IPv4. An LSR will consider a packet to be IPv4 if the first nibble following the bottom of the label stack is 4. This feature is supported for IPv4 support only and on IOM-3 and IMMs only. IPv6 packets are hashed on label stack only. The hash on label and IPv4 header can be enabled or disabled at the system level only

Default disabled

lACP-system-priority

Syntax **lACP-system-priority** *lACP-system-priority*
no lACP-system-priority

Context config>system

Description This command configures the Link Aggregation Control Protocol (LACP) system priority on aggregated Ethernet interfaces. LACP allows the operator to aggregate multiple physical interfaces to form one logical interface.

Default 32768

Parameters *lACP-system-priority* — Specifies the LACP system priority.

Values 1 — 65535

location

Syntax **location** *location*
no location

Context config>system

Description This command creates a text string that identifies the system location for the device.

Only one location can be configured. If multiple locations are configured, the last one entered overwrites the previous entry.

The **no** form of the command reverts to the default value.

Default **none** — No system location is configured.

Parameters *location* — Enter the location as a character string. The string may be up to 80 characters long. Any printable, seven-bit ASCII characters can be used within the string. If the string contains special characters (#, \$, spaces, etc.), the entire string must be enclosed within double quotes.

name

Syntax **name system-name**
no name

Context config>system

Description This command creates a system name string for the device.

For example, system-name parameter ALA-1 for the **name** command configures the device name as ALA-1.

```
ABC>config>system# name "ALA-1"
ALA-1>config>system#
```

Only one system name can be configured. If multiple system names are configured, the last one encountered overwrites the previous entry.

The **no** form of the command reverts to the default value.

Default The default system name is set to the chassis serial number which is read from the backplane EEPROM.

Parameters *system-name* — Enter the system name as a character string. The string may be up to 32 characters long. Any printable, seven-bit ASCII characters can be used within the string. If the string contains special characters (#, \$, spaces, etc.), the entire string must be enclosed within double quotes.

system-ip-load-balancing

Syntax **system-ip-load-balancing**
no system-ip-load-balancing

Context config>system

Description This command enables the use of the system IP address in the ECMP hash algorithm to add a per system variable. This can help guard against cases where multiple routers, in series, will end up hashing traffic to the same ECMP/LAG path.

This command is set at a system wide basis, however if certain IOMs do not support the new load-balancing algorithm, they will continue to use the default algorithm.

The **no** form of the command resets the system wide algorithm to default.

Default no system-ip-load-balancing

switchover-exec

Syntax **switchover-exec** *file-url*
no switchover-exec

Context config>system

Description This command specifies the location and name of the CLI script file executed following a redundancy switchover from the previously active CFM card. A switchover can happen because of a fatal failure or by manual action.

The CLI script file can contain commands for environment settings, debug (excluding mirroring settings), and other commands not maintained by the configuration redundancy.”

When the *file-url* parameter is not specified, no CLI script file is executed.

Default none

Parameters *file-url* — Specifies the location and name of the CLI script file.

| | | |
|---------------|-------------|--|
| Values | file url: | local-url remote-url: 255 chars max |
| | local-url: | [<i>cflash-id</i> /][<i>file-path</i>] |
| | remote-url: | [{ftp:// tftp://} login:pswd@remote-locn/][<i>file-path</i>] |
| | cflash-id: | cf1:, cf1-A:, cf1-B:, cf2:, cf2-A:, cf2-B:, cf3:, cf3-A:, cf3-B: |

System Alarm Commands

alarm

Syntax **alarm** *rmon-alarm-id* **variable-oid** *oid-string* **interval** *seconds* [*sample-type*] [**startup-alarm** *alarm-type*] [**rising-event** *rmon-event-id* **rising-threshold** *threshold*] [**falling-event** *rmon-event-id* **falling threshold** *threshold*] [**owner** *owner-string*]
no alarm *rmon-alarm-id*

Context config>system>thresholds>rmon

Description The alarm command configures an entry in the RMON-MIB alarmTable. The alarm command controls the monitoring and triggering of threshold crossing events. In order for notification or logging of a threshold crossing event to occur there must be at least one associated rmon>event configured.

The agent periodically takes statistical sample values from the MIB variable specified for monitoring and compares them to thresholds that have been configured with the alarm command. The alarm command configures the MIB variable to be monitored, the polling period (interval), sampling type (absolute or delta value), and rising and falling threshold parameters. If a sample has crossed a threshold value, the associated event is generated.

Use the **no** form of this command to remove an rmon-alarm-id from the configuration.

Parameters *rmon-alarm-id* — The rmon-alarm-id is a numerical identifier for the alarm being configured. The number of alarms that can be created is limited to 1200.

Default None

Values 1 — 65535

variable-oid *oid-string* — The oid-string is the SNMP object identifier of the particular variable to be sampled. Only SNMP variables that resolve to an ASN.1 primitive type of integer (integer, Integer32, Counter32, Counter64, Gauge, or TimeTicks) may be sampled. The oid-string may be expressed using either the dotted string notation or as object name plus dotted instance identifier. For example, "1.3.6.1.2.1.2.2.1.10.184582144" or "ifInOctets.184582144".

The oid-string has a maximum length of 255 characters

Default None

interval *seconds* — The interval in seconds specifies the polling period over which the data is sampled and compared with the rising and falling thresholds. When setting this interval value, care should be taken in the case of 'delta' type sampling - the interval should be set short enough that the sampled variable is very unlikely to increase or decrease by more than 2147483647 - 1 during a single sampling interval. Care should also be taken not to set the interval value too low to avoid creating unnecessary processing overhead.

Default None

Values 1 — 2147483647

System Alarm Commands

sample-type — Specifies the method of sampling the selected variable and calculating the value to be compared against the thresholds.

Default **Absolute**

Values **absolute** — Specifies that the value of the selected variable will be compared directly with the thresholds at the end of the sampling interval.

delta — Specifies that the value of the selected variable at the last sample will be subtracted from the current value, and the difference compared with the thresholds.

startup-alarm *alarm-type* — Specifies the alarm that may be sent when this alarm is first created.

If the first sample is greater than or equal to the rising threshold value and 'startup-alarm' is equal to 'rising' or 'either', then a single rising threshold crossing event is generated.

If the first sample is less than or equal to the falling threshold value and 'startup-alarm' is equal to 'falling' or 'either', a single falling threshold crossing event is generated.

Default **either**

Values **rising, falling, either**

rising-event *rmon-event-id* — The identifier of the the **rmon>event** that specifies the action to be taken when a rising threshold crossing event occurs.

If there is no corresponding 'event' configured for the specified rmon-event-id, then no association exists and no action is taken.

If the 'rising-event rmon-event-id' has a value of zero (0), no associated event exists.

If a 'rising event rmon-event' is configured, the CLI requires a 'rising-threshold' to also be configured.

Default **0**

Values **0 — 65535**

rising-threshold *threshold* — Specifies a threshold for the sampled statistic. When the current sampled value is greater than or equal to this threshold, and the value at the last sampling interval was less than this threshold, a single threshold crossing event will be generated. A single threshold crossing event will also be generated if the first sample taken is greater than or equal to this threshold and the associated startup-alarm is equal to rising or either.

After a rising threshold crossing event is generated, another such event will not be generated until the sampled value falls below this threshold and reaches less than or equal the 'falling-threshold' value.

Default **0**

Values **-2147483648 — 2147483647**

falling-event *rmon-event-id* — The identifier of the **rmon>event** that specifies the action to be taken when a falling threshold crossing event occurs. If there is no corresponding event configured for the specified rmon-event-id, then no association exists and no action is taken. If the falling-event has a value of zero (0), no associated event exists.

If a 'falling event' is configured, the CLI requires a 'falling-threshold' to also be configured.

Default **0**

Values **-2147483648 — 2147483647**

falling-threshold *threshold* — Specifies a threshold for the sampled statistic. When the current sampled value is less than or equal to this threshold, and the value at the last sampling interval was greater than

this threshold, a single threshold crossing event will be generated. A single threshold crossing event will also be generated if the first sample taken is less than or equal to this threshold and the associated 'startup-alarm' is equal to 'falling' or 'either'.

After a rising threshold crossing event is generated, another such event will not be generated until the sampled value rises above this threshold and reaches greater than or equal the **rising-threshold threshold** value.

Default 0

Values -2147483648 — 2147483647

owner *owner* — The owner identifies the creator of this alarm. It defaults to "TiMOS CLI". This parameter is defined primarily to allow entries that have been created in the RMON-MIB alarmTable by remote SNMP managers to be saved and reloaded in a CLI configuration file. The owner will not normally be configured by CLI users and can be a maximum of 80 characters long.

Default TiMOS CLI

Configuration example:

```
alarm 3 variable-oid ifInOctets.184582144 interval 20 sample-type delta start-alarm either
rising-event 5 rising-threshold 10000 falling-event 5 falling-threshold 9000 owner "TiMOS
CLI"
```

cflash-cap-alarm

Syntax **cflash-cap-alarm** *cflash-id* **rising-threshold** *threshold* [**falling-threshold** *threshold*] **interval** *seconds* [*rmon-event-type*] [**startup-alarm** *alarm-type*]
no cflash-cap-alarm *cflash-id*

Context config>system>thresholds

Description This command enables capacity monitoring of the compact flash specified in this command. The severity level is alarm. Both a rising and falling threshold can be specified.

The **no** form of this command removes the configured compact flash threshold alarm.

Parameters *cflash-id* — The cflash-id specifies the name of the cflash device to be monitored.

Values cf1:, cf1-A:,cf1-B:,cf2:,cf2-A:,cf2-B:,cf3:,cf3-A:,cf3-B:

rising-threshold *threshold* — Specifies a threshold for the sampled statistic. When the current sampled value is greater than or equal to this threshold, and the value at the last sampling interval was less than this threshold, a single threshold crossing event will be generated. A single threshold crossing event will also be generated if the first sample taken is greater than or equal to this threshold and the associated 'startup-alarm' is equal to 'rising' or 'either'.

After a rising threshold crossing event is generated, another such event will not be generated until the sampled value falls below this threshold and reaches less than or equal the 'falling-threshold' value.

Default 0

Values -2147483648 — 2147483647

System Alarm Commands

falling-threshold *threshold* — Specifies a threshold for the sampled statistic. When the current sampled value is less than or equal to this threshold, and the value at the last sampling interval was greater than this threshold, a single threshold crossing event will be generated. A single threshold crossing event will also be generated if the first sample taken is less than or equal to this threshold and the associated startup-alarm is equal to falling or either.

After a rising threshold crossing event is generated, another such event will not be generated until the sampled value raises above this threshold and reaches greater than or equal the rising-threshold value.

Default 0

Values -2147483648 — 2147483647

interval *seconds* — Specifies the polling period, in seconds, over which the data is sampled and compared with the rising and falling thresholds.

Values 1 — 2147483647

rmon-event-type — Specifies the type of notification action to be taken when this event occurs.

Values log — An entry is made in the RMON-MIB log table for each event occurrence. This does not create a TiMOS logger entry. The RMON-MIB log table entries can be viewed using the **show>system>thresholds** CLI command.

trap — A TiMOS logger event is generated. The TiMOS logger utility then distributes the notification of this event to its configured log destinations which may be CONSOLE, telnet session, memory log, cflash file, syslog, or SNMP trap destinations logs.

both — Both an entry in the RMON-MIB logTable and a TiMOS logger event are generated.

none — No action is taken.

Default both

startup-alarm *alarm-type* — Specifies the alarm that may be sent when this alarm is first created.

If the first sample is greater than or equal to the rising threshold value and startup-alarm is equal to rising or either, then a single rising threshold crossing event is generated.

If the first sample is less than or equal to the falling threshold value and startup-alarm is equal to falling or either, a single falling threshold crossing event is generated.

Default either

Values rising, falling, either

Configuration example:

```
cflash-cap-alarm cf1-A: rising-threshold 50000000 falling-threshold 49999900 interval 120 rmon-event-type both start-alarm rising.
```

cflash-cap-warn

| | |
|--------------------|--|
| Syntax | cflash-cap-warn <i>cflash-id</i> rising-threshold <i>threshold</i> [falling-threshold <i>threshold</i>] interval <i>seconds</i> [<i>rmon-event-type</i>] [startup-alarm <i>alarm-type</i>]
no cflash-cap-warn <i>cflash-id</i> |
| Context | config>system>thresholds |
| Description | This command enables capacity monitoring of the compact flash specified in this command. The severity level is warning. Both a rising and falling threshold can be specified. The no form of this command removes the configured compact flash threshold warning. |
| Parameters | <p><i>cflash-id</i> — The cflash-id specifies the name of the cflash device to be monitored.</p> <p>Values cf1:, cf1-A:,cf1-B:,cf2:,cf2-A:,cf2-B:,cf3:,cf3-A:,cf3-B:</p> <p>rising-threshold <i>threshold</i> — Specifies a threshold for the sampled statistic. When the current sampled value is greater than or equal to this threshold, and the value at the last sampling interval was less than this threshold, a single threshold crossing event will be generated. A single threshold crossing event will also be generated if the first sample taken is greater than or equal to this threshold and the associated startup-alarm is equal to rising or either.</p> <p>After a rising threshold crossing event is generated, another such event will not be generated until the sampled value falls below this threshold and reaches less than or equal the falling-threshold value.</p> <p>Default 0</p> <p>Values -2147483648 — 2147483647</p> <p>falling-threshold <i>threshold</i> — Specifies a threshold for the sampled statistic. When the current sampled value is less than or equal to this threshold, and the value at the last sampling interval was greater than this threshold, a single threshold crossing event will be generated. A single threshold crossing event will also be generated if the first sample taken is less than or equal to this threshold and the associated startup-alarm is equal to falling or either.</p> <p>After a rising threshold crossing event is generated, another such event will not be generated until the sampled value raises above this threshold and reaches greater than or equal the rising-threshold value.</p> <p>Default 0</p> <p>Values -2147483648 — 2147483647</p> <p>interval <i>seconds</i> — Specifies the polling period over which the data is sampled and compared with the rising and falling thresholds.</p> <p>Values 1 — 2147483647</p> <p>rmon-event-type — Specifies the type of notification action to be taken when this event occurs.</p> <p>Values</p> <p>log — In the case of log, an entry is made in the RMON-MIB log table for each event occurrence. This does not create a TiMOS logger entry. The RMON-MIB log table entries can be viewed using the show>system>thresholds CLI command.</p> <p>trap — In the case of trap, a TiMOS logger event is generated. The TiMOS logger utility then distributes the notification of this event to its configured log destinations which may be CONSOLE, telnet session, memory log, cflash file, syslog, or SNMP trap destinations logs.</p> <p>both — In the case of both, both a entry in the RMON-MIB logTable and a TiMOS logger event are generated.</p> |

System Alarm Commands

none — In the case of none, no action is taken.

Default both

startup-alarm *alarm-type* — Specifies the alarm that may be sent when this alarm is first created. If the first sample is greater than or equal to the rising threshold value and startup-alarm is equal to rising or either, then a single rising threshold crossing event is generated. If the first sample is less than or equal to the falling threshold value and startup-alarm is equal to falling or either, a single falling threshold crossing event is generated.

Values rising, falling, either

Default either

Configuration example:

```
cflash-cap-warn cf1-B: rising-threshold 2000000 falling-threshold 1999900 interval 240 rmon-event-type trap start-alarm either
```

kb-memory-use-alarm

Syntax **kb-memory-use-alarm rising-threshold** *threshold* [**falling-threshold** *threshold*] **interval** *seconds* [*rmon-event-type*] [**startup-alarm** *alarm-type*]
no kb-memory-use-warn

Context config>system>thresholds

Description This command configures memory use, in kilobytes, alarm thresholds.

The **no** form of the command removes the parameters from the configuration.

Default none

Parameters **rising-threshold** *threshold* — Specifies a threshold for the sampled statistic. When the current sampled value is greater than or equal to this threshold, and the value at the last sampling interval was less than this threshold, a single threshold crossing event will be generated. A single threshold crossing event will also be generated if the first sample taken is greater than or equal to this threshold and the associated startup-alarm is equal to rising or either.

After a rising threshold crossing event is generated, another such event will not be generated until the sampled value falls below this threshold and reaches less than or equal the falling-threshold value.

Default 0

Values -2147483648 — 2147483647

falling-threshold *threshold* — Specifies a threshold for the sampled statistic. When the current sampled value is less than or equal to this threshold, and the value at the last sampling interval was greater than this threshold, a single threshold crossing event will be generated. A single threshold crossing event will also be generated if the first sample taken is less than or equal to this threshold and the associated startup-alarm is equal to falling or either.

After a rising threshold crossing event is generated, another such event will not be generated until the sampled value raises above this threshold and reaches greater than or equal the rising-threshold value.

Default 0

Values -2147483648 — 2147483647

interval *seconds* — Specifies the polling period over which the data is sampled and compared with the rising and falling thresholds.

Values 1 — 2147483647

rmon-event-type — Specifies the type of notification action to be taken when this event occurs.

Values *log* — In the case of *log*, an entry is made in the RMON-MIB log table for each event occurrence. This does not create a TiMOS logger entry. The RMON-MIB log table entries can be viewed using the `show>system>thresholds` CLI command.

trap — In the case of *trap*, a TiMOS logger event is generated. The TiMOS logger utility then distributes the notification of this event to its configured log destinations which may be CONSOLE, telnet session, memory log, cflash file, syslog, or SNMP trap destinations logs.

both — In the case of *both*, both a entry in the RMON-MIB logTable and a TiMOS logger event are generated.

none — In the case of *none*, no action is taken.

Default *both*

startup-alarm *alarm-type* — Specifies the alarm that may be sent when this alarm is first created. If the first sample is greater than or equal to the rising threshold value and *startup-alarm* is equal to *rising* or *either*, then a single rising threshold crossing event is generated. If the first sample is less than or equal to the falling threshold value and *startup-alarm* is equal to *falling* or *either*, a single falling threshold crossing event is generated.

Values *rising*, *falling*, *either*

Default *either*

kb-memory-use-warn

Syntax `kb-memory-use-warn rising-threshold threshold [falling-threshold threshold] interval seconds [rmon-event-type] [startup-alarm alarm-type]`
no kb-memory-use-warn

Context `config>system>thresholds`

Description This command configures memory usage, in kilobytes, for warning thresholds

Default *none*

Parameters **rising-threshold** *threshold* — Specifies a threshold for the sampled statistic. When the current sampled value is greater than or equal to this threshold, and the value at the last sampling interval was less than this threshold, a single threshold crossing event will be generated. A single threshold crossing event

System Alarm Commands

will also be generated if the first sample taken is greater than or equal to this threshold and the associated startup-alarm is equal to rising or either.

After a rising threshold crossing event is generated, another such event will not be generated until the sampled value falls below this threshold and reaches less than or equal the falling-threshold value.

Default 0

Values -2147483648 — 2147483647

falling-threshold *threshold* — Specifies a threshold for the sampled statistic. When the current sampled value is less than or equal to this threshold, and the value at the last sampling interval was greater than this threshold, a single threshold crossing event will be generated. A single threshold crossing event will also be generated if the first sample taken is less than or equal to this threshold and the associated startup-alarm is equal to falling or either.

After a rising threshold crossing event is generated, another such event will not be generated until the sampled value raises above this threshold and reaches greater than or equal the rising-threshold value.

Default 0

Values -2147483648 — 2147483647

interval *seconds* — Specifies the polling period over which the data is sampled and compared with the rising and falling thresholds.

Values 1 — 2147483647

rmon-event-type — Specifies the type of notification action to be taken when this event occurs.

Values log — In the case of log, an entry is made in the RMON-MIB log table for each event occurrence. This does not create a TiMOS logger entry. The RMON-MIB log table entries can be viewed using the show>system>thresholds CLI command.

trap — In the case of trap, a TiMOS logger event is generated. The TiMOS logger utility then distributes the notification of this event to its configured log destinations which may be CONSOLE, telnet session, memory log, cflash file, syslog, or SNMP trap destinations logs.

both — In the case of both, both a entry in the RMON-MIB logTable and a TiMOS logger event are generated.

none — In the case of none, no action is taken.

Default both

startup-alarm *alarm-type* — Specifies the alarm that may be sent when this alarm is first created. If the first sample is greater than or equal to the rising threshold value and startup-alarm is equal to rising or either, then a single rising threshold crossing event is generated. If the first sample is less than or equal to the falling threshold value and startup-alarm is equal to falling or either, a single falling threshold crossing event is generated.

Values rising, falling, either

Default either

event

Syntax `event rmon-event-id [event-type] [description description-string] [owner owner-string]`
`no event rmon-event-id`

Context config>system>thresholds>rmon

Description The event command configures an entry in the RMON-MIB event table. The event command controls the generation and notification of threshold crossing events configured with the alarm command. When a threshold crossing event is triggered, the **rmon>event** configuration optionally specifies if an entry in the RMON-MIB log table should be created to record the occurrence of the event. It may also specify that an SNMP notification (trap) should be generated for the event. The RMON-MIB defines two notifications for threshold crossing events: Rising Alarm and Falling Alarm.

Creating an event entry in the RMON-MIB log table does not create a corresponding entry in the TiMOS event logs. However, when the **event-type** is set to trap, the generation of a Rising Alarm or Falling Alarm notification creates an entry in the TiMOS event logs and that is distributed to whatever TiMOS log destinations are configured: CONSOLE, session, memory, file, syslog, or SNMP trap destination.

The TiMOS logger message includes a rising or falling threshold crossing event indicator, the sample type (absolute or delta), the sampled value, the threshold value, the RMON-alarm-id, the associated RMON-event-id and the sampled SNMP object identifier.

Use the **no** form of this command to remove an rmon-event-id from the configuration.

Parameters **rmon-event-type** — The rmon-event-type specifies the type of notification action to be taken when this event occurs.

Values log — In the case of log, an entry is made in the RMON-MIB log table for each event occurrence.

This does **not** create a TiMOS logger entry. The RMON-MIB log table entries can be viewed using the **show>system>thresholds** CLI command.

trap — In the case of trap, a TiMOS logger event is generated. The TiMOS logger utility then distributes the notification of this event to its configured log destinations which may be CONSOLE, telnet session, memory log, cflash file, syslog, or SNMP trap destinations logs.

both — In the case of both, both a entry in the RMON-MIB logTable and a TiMOS logger event are generated.

none — In the case of none, no action is taken.

Default both

description — The description is a user configurable string that can be used to identify the purpose of this event. This is an optional parameter and can be 80 characters long. If the string contains special characters (#, \$, spaces, etc.), the entire string must be enclosed within double quotes.

Default An empty string.

owner *owner* — The owner identifies the creator of this alarm. It defaults to "TiMOS CLI". This parameter is defined primarily to allow entries that have been created in the RMON-MIB alarmTable by

System Alarm Commands

remote SNMP managers to be saved and reloaded in a CLI configuration file. The owner will not normally be configured by CLI users and can be a maximum of 80 characters long.

Default TiMOS CLI

Configuration example:

Default event 5 rmon-event-type both description "alarm testing" owner "TiMOS CLI"

memory-use-alarm

Syntax **memory-use-alarm rising-threshold** *threshold* [**falling-threshold** *threshold*] **interval** *seconds* [*rmon-event-type*] [**startup-alarm** *alarm-type*]
no memory-use-alarm

Context config>system>thresholds

Description The memory thresholds are based on monitoring the TIMETRA-SYSTEM-MIB `sgiMemoryUsed` object. This object contains the amount of memory currently used by the system. The severity level is Alarm. The absolute sample type method is used.

The **no** form of this command removes the configured memory threshold warning.

Parameters **rising-threshold** *threshold* — Specifies a threshold for the sampled statistic. When the current sampled value is greater than or equal to this threshold, and the value at the last sampling interval was less than this threshold, a single threshold crossing event will be generated. A single threshold crossing event will also be generated if the first sample taken is greater than or equal to this threshold and the associated startup-alarm is equal to rising or either.

After a rising threshold crossing event is generated, another such event will not be generated until the sampled value falls below this threshold and reaches less than or equal the falling-threshold value.

Default 0

Values -2147483648 — 2147483647

falling-threshold *threshold* — Specifies a threshold for the sampled statistic. When the current sampled value is less than or equal to this threshold, and the value at the last sampling interval was greater than this threshold, a single threshold crossing event will be generated. A single threshold crossing event will also be generated if the first sample taken is less than or equal to this threshold and the associated startup-alarm is equal to falling or either.

After a rising threshold crossing event is generated, another such event will not be generated until the sampled value raises above this threshold and reaches greater than or equal the rising-threshold threshold value.

Default 0

Values -2147483648 — 2147483647

interval *seconds* — Specifies the polling period over which the data is sampled and compared with the rising and falling thresholds.

Values 1 — 2147483647

rmon-event-type — Specifies the type of notification action to be taken when this event occurs.

- Values**
- log — In the case of log, an entry is made in the RMON-MIB log table for each event occurrence. This does not create an OS logger entry. The RMON-MIB log table entries can be viewed using the CLI command.
 - trap — In the case of trap, a TiMOS logger event is generated. The TiMOS logger utility then distributes the notification of this event to its configured log destinations which may be CONSOLE, telnet session, memory log, cflash file, syslog, or SNMP trap destinations logs.
 - both — In the case of both, both a entry in the RMON-MIB logTable and a TiMOS logger event are generated.
 - none — In the case of none, no action is taken.

Default both

startup-alarm *alarm-type* — Specifies the alarm that may be sent when this alarm is first created. If the first sample is greater than or equal to the rising threshold value and startup-alarm is equal to rising or either, then a single rising threshold crossing event is generated. If the first sample is less than or equal to the falling threshold value and startup-alarm is equal to falling or either, a single falling threshold crossing event is generated.

Values rising, falling, either

Default either

Configuration example:

```
memory-use-alarm rising-threshold 50000000 falling-threshold 45999999 interval 500 rmon-event-type
both start-alarm either
```

memory-use-warn

Syntax **memory-use-warn rising-threshold** *threshold* [**falling-threshold** *threshold*] **interval** *seconds* [*rmon-event-type*] [**startup-alarm** *alarm-type*]
no memory-use-warn

Context config>system>thresholds

Description The memory thresholds are based on monitoring MemoryUsed object. This object contains the amount of memory currently used by the system. The severity level is Alarm.

The absolute sample type method is used.

The **no** form of this command removes the configured compact flash threshold warning.

Parameters **rising-threshold** *threshold* — The rising-threshold specifies a threshold for the sampled statistic. When the current sampled value is greater than or equal to this threshold, and the value at the last sampling interval was less than this threshold, a single threshold crossing event will be generated. A single threshold crossing event will also be generated if the first sample taken is greater than or equal to this threshold and the associated startup-alarm is equal to rising or either.

System Alarm Commands

After a rising threshold crossing event is generated, another such event will not be generated until the sampled value falls below this threshold and reaches less than or equal the falling-threshold value.

Default 0

Values -2147483648 — 2147483647

falling-threshold *threshold* — The falling-threshold specifies a threshold for the sampled statistic. When the current sampled value is less than or equal to this threshold, and the value at the last sampling interval was greater than this threshold, a single threshold crossing event will be generated. A single threshold crossing event will also be generated if the first sample taken is less than or equal to this threshold and the associated startup-alarm is equal to falling or either.

After a rising threshold crossing event is generated, another such event will not be generated until the sampled value raises above this threshold and reaches greater than or equal the rising-threshold threshold value.

Default 0

Values -2147483648 — 2147483647

interval *seconds* — The interval in seconds specifies the polling period over which the data is sampled and compared with the rising and falling thresholds.

Values 1 — 2147483647

rmon-event-type — Specifies the type of notification action to be taken when this event occurs.

Values log — In the case of log, an entry is made in the RMON-MIB log table for each event occurrence.

This does not create a TiMOS logger entry. The RMON-MIB log table entries can be viewed using the **show>system>thresholds** CLI command.

trap — In the case of trap, a TiMOS logger event is generated. The TiMOS logger utility then distributes the notification of this event to its configured log destinations which may be CONSOLE, telnet session, memory log, cflash file, syslog, or SNMP trap destinations logs.

both — In the case of both, both a entry in the RMON-MIB logTable and a TiMOS logger event are generated.

none — In the case of none, no action is taken.

Default both

Values log, trap, both, none

startup-alarm *alarm-type* — Specifies the alarm that may be sent when this alarm is first created. If the first sample is greater than or equal to the rising threshold value and startup-alarm is equal to rising or either, then a single rising threshold crossing event is generated. If the first sample is less than or equal to the falling threshold value and startup-alarm is equal to falling or either, a single falling threshold crossing event is generated.

Default either

Values rising, falling, either

Configuration example:

```
memory-use-warn rising-threshold 500000 falling-threshold 400000 interval 800 rmon-event-  
type log start-alarm falling
```

rmon

Syntax `rmon`

Context `config>system>thresholds`

Description This command creates the context to configure generic RMON alarms and events. Generic RMON alarms can be created on any SNMP object-ID that is valid for RMON monitoring (for example, an integer-based datatype). The configuration of an event controls the generation and notification of threshold crossing events configured with the alarm command.

thresholds

Syntax `thresholds`

Context `config>system`

Description This command enables the context to configure monitoring thresholds.

Hardware Configuration Commands

power-supply

Syntax `power-supply [power-supply-id] [type]`

Context `config>system`

Description This command specifies the power supply slot ID and the power type. This allows for the proper generation of traps and LED management.

Specify the **none** keyword when a power supply unit is removed from an 7710 SR chassis or if a power supply slot will not be populated.

If this command is not configured the LEDs will indicate the installed power supplies but traps will not be issued and alarms will not raised because the desired behavior is not known.

If this command is not modified to reflect the current power configuration when a unit is removed or the power type is changed, alarms will be generated.

There are three power supply positions on the 7710 SR-c4.

Parameters *power-supply-id* — Specifies the identifier for a power supply tray in the chassis.

Values 1 | 2 | 3 — Specifies the power supply slot ID. Option 3 is valid on the 7710 SR-c4 only.

type — Specifies the type of power supply for a platform. Based on the value assigned to this object, various power supply monitoring signals are interpreted. For example, if a platform is provisioned to use DC power supplies, then the signal that indicates an AC power supply is missing can be ignored. This is required for proper generation of traps and LED management.

Values **dc** — Specifies that the power supply slot is DC.

ac — Specifies that the power supply slot is AC.

none — Specifies that no power supply unit is installed in the given power supply slot.

single — Specifies that one AC power supply unit is installed in the power supply slot.

Date and Time Commands

set-time

Syntax `set-time [date] [time]`

Context admin

Description This command sets the local system time.

The time entered should be accurate for the time zone configured for the system. The system will convert the local time to UTC before saving to the system clock which is always set to UTC. This command does not take into account any daylight saving offset if defined.

Parameters *date* — The local date and time accurate to the minute in the YYYY/MM/DD format.

Values *YYYY* is the four-digit year
MM is the two-digit month
DD is the two-digit date

time — The time (accurate to the second) in the *hh:mm[:ss]* format. If no seconds value is entered, the seconds are reset to :00.

Default 0

Values *hh* is the two-digit hour in 24 hour format (00=midnight, 12=noon)
mm is the two-digit minute

time

Syntax `time`

Context config>system

Description This command enables the context to configure the system time zone and time synchronization parameters.

Network Time Protocol Commands

ntp

Syntax [no] ntp

Context config>system>time

Description This command enables the context to configure Network Time Protocol (NTP) and its operation. This protocol defines a method to accurately distribute and maintain time for network elements. Furthermore this capability allows for the synchronization of clocks between the various network elements. Use the no form of the command to stop the execution of NTP and remove its configuration.

Default none

authentication-check

Syntax [no] authentication-check

Context config>system>time>ntp

Description This command provides the option to skip the rejection of NTP PDUs that do not match the authentication key-id, type or key requirements. The default behavior when authentication is configured is to reject all NTP protocol PDUs that have a mismatch in either the authentication key-id, type or key.

When **authentication-check** is enabled, NTP PDUs are authenticated on receipt. However, mismatches cause a counter to be increased, one counter for type and one for key-id, one for type, value mismatches. These counters are visible in a show command.

The **no** form of this command allows authentication mismatches to be accepted; the counters however are maintained.

Default authentication-check — Rejects authentication mismatches.

authentication-key

Syntax **authentication-key** *key-id* {**key** *key*} [**hash** | **hash2**] **type** {**des** | **message-digest**}
no authentication-key *key-id*

Context config>system>time>ntp

Description This command sets the authentication key-id, type and key used to authenticate NTP PDUs sent to or received by other network elements participating in the NTP protocol. For authentication to work, the authentication key-id, type and key value must match.

The **no** form of the command removes the authentication key.

Default none

| | |
|-------------------|--|
| Parameters | <p><i>key-id</i> — Configure the authentication key-id that will be used by the node when transmitting or receiving Network Time Protocol packets.</p> <p>Entering the authentication-key command with a key-id value that matches an existing configuration key will result in overriding the existing entry.</p> <p>Recipients of the NTP packets must have the same authentication key-id, type, and key value in order to use the data transmitted by this node. This is an optional parameter.</p> <p>Default None</p> <p>Values 1 — 255</p> <p>key — The authentication key associated with the configured key-id, the value configured in this parameter is the actual value used by other network elements to authenticate the NTP packet.</p> <p>The key can be any combination of ASCII characters up to 32 characters in length for message-digest (md5) or 8 characters in length for des (length limits are unencrypted lengths). If spaces are used in the string, enclose the entire string in quotation marks (“ ”).</p> <p>hash — Specifies the key is entered in an encrypted form. If the hash or hash2 parameter is not used, the key is assumed to be in a non-encrypted, clear text form. For security, all keys are stored in encrypted form in the configuration file with the hash or hash2 parameter specified.</p> <p>hash2 — Specifies the key is entered in a more complex encrypted form that involves more variables than the key value alone, this means that hash2 encrypted variable can't be copied and pasted. If the hash or hash2 parameter is not used, the key is assumed to be in a non-encrypted, clear text form. For security, all keys are stored in encrypted form in the configuration file with the hash or hash2 parameter specified.</p> <p>type — This parameter determines if DES or message-digest authentication is used.</p> <p>This is a required parameter; either DES or message-digest must be configured.</p> <p>Values des — Specifies that DES authentication is used for this key
 message-digest — Specifies that MD5 authentication in accordance with RFC 2104 is used for this key.</p> |
|-------------------|--|

broadcast

| | |
|--------------------|---|
| Syntax | broadcast [router <i>router-name</i>] { interface <i>ip-int-name</i> } [key-id <i>key-id</i>] [version <i>version</i>] [ttl <i>ttl</i>]
no broadcast [router <i>router-name</i>] { interface <i>ip-int-name</i> } |
| Context | config>system>time>ntp |
| Description | <p>This command configures the node to transmit NTP packets on a given interface. Broadcast and multicast messages can easily be spoofed, thus, authentication is strongly recommended.</p> <p>The no form of this command removes the address from the configuration.</p> |
| Parameters | <p><i>router</i> — Specifies the router name used to transmit NTP packets. Base is the default. Select management to use the management port (Ethernet port on the CCM).</p> |

Network Time Protocol Commands

Values Base, management

Default Base

ip-int-name — Specifies the local interface on which to transmit NTP broadcast packets. If the string contains special characters (#, \$, spaces, etc.), the entire string must be enclosed within double quotes.

Values 32 character maximum

key-id *key-id* — Identifies the configured authentication key and authentication type used by this node to receive and transmit NTP packets to and from an NTP server and peers. If an NTP packet is received by this node both authentication key and authentication type must be valid otherwise the packet will be rejected and an event/trap generated.

Values 1 — 255

Default none

version *version* — Specifies the NTP version number that is generated by this node. This parameter does not need to be configured when in client mode in which case all versions will be accepted.

Values 1 — 4

Default 4

ttl *ttl* — Specifies the IP Time To Live (TTL) value.

Values 1 — 255

Default none

broadcastclient

Syntax **broadcastclient** [**router** *router-name*] {**interface** *ip-int-name*} [**authenticate**]
no broadcastclient [**router** *router-name*] {**interface** *ip-int-name*}

Context config>system>time>ntp

Description When configuring NTP, the node can be configured to receive broadcast packets on a given subnet. Broadcast and multicast messages can easily be spoofed, thus, authentication is strongly recommended. If broadcast is not configured then received NTP broadcast traffic will be ignored. Use the **show** command to view the state of the configuration.

The **no** form of this command removes the address from the configuration.

Parameters **router** *router-name* — Specifies the router name used to receive NTP packets.

Values Base, management

Default Base

interface *ip-int-name* — Specifies the local interface on which to receive NTP broadcast packets. If the string contains special characters (#, \$, spaces, etc.), the entire string must be enclosed within double quotes.

Values 32 character maximum

authenticate — Specifies whether or not to require authentication of NTP PDUs. When enabled, NTP PDUs are authenticated upon receipt.

multicast

Syntax **multicast** [**version** *version*] [**key-id** *key-id*]
no multicast

Context config>system>time>ntp

Description This command configures NTP the node to transmit multicast packets on the CPMCCM MGMT port. Broadcast and multicast messages can easily be spoofed; authentication is strongly recommended. The **no** form of this command removes the multicast address from the configuration.

Parameters **version** *version* — Specifies the NTP version number that is generated by this node. This parameter does not need to be configured when in client mode in which case all three versions are accepted.

Values 2 — 4

Default 4

key-id *key-id* — Specifies the configured authentication key and authentication type used by this version to transmit NTP packets. If this command is omitted from the configuration, packets are sent un-encrypted.

Values 1 — 255

Default None

multicastclient

Syntax **multicastclient** [**authenticate**]
no multicastclient

Context config>system>time>ntp

Description This command configures the node to receive multicast NTP messages on the CCM MGMT port. If **multicastclient** is not configured, received NTP multicast traffic will be ignored. Use the **show** command to view the state of the configuration.

The **no** construct of this message removes the multicast client for the specified interface from the configuration.

Parameters **authenticate** — This optional parameter makes authentication a requirement. If authentication is required, the authentication key-id received must have been configured in the “authentication-key” command, and that key-id’s type and key value must also match.

ntp-server

Network Time Protocol Commands

Syntax `ntp-server [transmit key-id]`
`no ntp-server`

Context `config>system>time>ntp`

Description This command configures the node to assume the role of an NTP server. Unless the server command is used, this node will function as an NTP client only and will not distribute the time to downstream network elements.

Default `no ntp-server`

Parameters *key-id* — If specified, requires client packets to be authenticated.

Values 1 — 255

Default None

peer

Syntax `peer ip-address [key-id key-id] [version version] [prefer]`
`no peer ip-address`

Context `config>system>time>ntp`

Description Configuration of an NTP peer configures symmetric active mode for the configured peer. Although any system can be configured to peer with any other NTP node it is recommended to configure authentication and to configure known time servers as their peers.

The **no** form of the command removes the configured peer.

Parameters *ip-address* — Configure the IP address of the peer that requires a peering relationship to be set up. This is a required parameter.

Default None

Values Any valid IP-address

key-id *key-id* — Successful authentication requires that both peers must have configured the same authentication key-id, type and key value.

Specify the *key-id* that identifies the configured authentication key and authentication type used by this node to transmit NTP packets to an NTP peer. If an NTP packet is received by this node, the authentication key-id, type, and key value must be valid otherwise the packet will be rejected and an event/trap generated.

Default None

Values 1 — 255

version *version* — Specify the NTP version number that is generated by this node. This parameter does not need to be configured when in client mode in which case all three nodes are accepted.

Default 4

Values 2 — 4

prefer — When configuring more than one peer, one remote system can be configured as the preferred peer. When a second peer is configured as preferred, then the new entry overrides the old entry.

server

Syntax **server** *ip address* [**key-id** *key-id*] [**version** *version*] [**prefer**]
no server *ip address*

Context config>system>time>ntp

Description This command is used when the node should operate in client mode with the ntp server specified in the address field of this command. The no construct of this command removes the server with the specified address from the configuration.

Up to five NTP servers can be configured.

Parameters *ip-address* — Configure the IP address of a node that acts as an NTP server to this network element. This is a required parameter.

Values Any valid IP address

key-id *key-id* — Enter the key-id that identifies the configured authentication key and authentication type used by this node to transmit NTP packets to an NTP server. If an NTP packet is received by this node, the authentication key-id, type, and key value must be valid otherwise the packet will be rejected and an event/trap generated. This is an optional parameter.

Values 1 — 255

version *version* — Use this command to configure the NTP version number that is expected by this node. This is an optional parameter

Default 4

Values 2 — 4

prefer — When configuring more than one peer, one remote system can be configured as the preferred peer. When a second peer is configured as preferred, then the new entry overrides the old entry.

SNTP Commands

sntp

Syntax [no] sntp

Context config>system>time

Description This command creates the context to edit the Simple Network Time Protocol (SNTP).
SNTP can be configured in either broadcast or unicast client mode. SNTP is a compact, client-only version of the NTP. SNTP can only receive the time from SNTP/NTP servers. It cannot be used to provide time services to other systems.
The system clock is automatically adjusted at system initialization time or when the protocol first starts up. When the time differential between the SNTP/NTP server and the system is more than 2.5 seconds, the time on the system is gradually adjusted.
SNTP is created in an administratively enabled state (**no shutdown**).
The **no** form of the command removes the SNTP instance and configuration. SNTP does not need to be administratively disabled when removing the SNTP instance and configuration.

Default no sntp

broadcast-client

Syntax [no] broadcast-client

Context config>system>time>sntp

Description This command enables listening to SNTP/NTP broadcast messages on interfaces with broadcast client enabled at global device level.
When this global parameter is configured then the **ntp-broadcast** parameter must be configured on selected interfaces on which NTP broadcasts are transmitted.
SNTP must be shutdown prior to changing either to or from broadcast mode.
The **no** form of the command disables broadcast client mode.

Default no broadcast-client

server-address

Syntax **server-address** *ip-address* [**version** *version-number*] [**normal** | **preferred**]
 [**interval** *seconds*]
no server-address

Context config>system>time>sntp

Description This command creates an SNTP server for unicast client mode.

Parameters *ip-address* — Specifies the IP address of the SNTP server.

version *version-number* — Specifies the SNTP version supported by this server.

Values 1 — 3

Default 3

normal | **preferred** — Specifies the preference value for this SNTP server. When more than one time-server is configured, one server can have preference over others. The value for that server should be set to **preferred**. Only one server in the table can be a preferred server.

Default normal

interval *seconds* — Specifies the frequency at which this server is queried.

Values 64 — 1024

Default 64

CRON Commands

cron

Syntax `cron`

Context `config`

Description This command creates the context to create scripts, script parameters and schedules which support the Service Assurance Agent (SAA) functions.

CRON features are saved to the configuration file on both primary and backup control modules. If a control module switchover occurs, CRON events are restored when the new configuration is loaded. If a control module switchover occurs during the execution of a cron script, the failover behavior will be determined by the contents of the script.

action

Syntax `[no] action action-name [owner action-owner]`

Context `config>cron`
`config>cron>sched`

Description This command configures action parameters for a script.

Default `none`

Parameters `action action-name` — Specifies the action name.

Values Maximum 32 characters.

`owner action-owner` — Specifies the owner name.

Default `TiMOS CLI`

expire-time

Syntax `expire-time {seconds | forever}`

Context `config>cron>action`

Description This command configures the maximum amount of time to keep the results from a script run.

Parameters `seconds` — Specifies the maximum amount of time to keep the results from a script run.

Values `1 — 21474836`

Default `3600 (1 hour)`

`forever` — Specifies to keep the results from a script run forever.

lifetime

| | |
|--------------------|--|
| Syntax | lifetime {seconds forever} |
| Context | config>cron>action |
| Description | This command configures the maximum amount of time the script may run. |
| Parameters | seconds — Specifies the maximum amount of time to keep the results from a script run. |
| | Values 1 — 21474836 |
| | Default 3600 (1 hour) |
| | forever — Specifies to keep the results from a script run forever. |

max-completed

| | |
|--------------------|--|
| Syntax | max-completed <i>unsigned</i> |
| Context | config>cron>action |
| Description | This command specifies the maximum number of completed sessions to keep in the event execution log. If a new event execution record exceeds the number of records specified this command, the oldest record is deleted.

The no form of this command resets the value to the default. |
| Parameters | <i>unsigned</i> — Specifies the maximum number of completed sessions to keep in the event execution log. |
| | Values 0 — 255 |
| | Default 1 |

results

| | |
|--------------------|--|
| Syntax | [no] results <i>file-url</i> |
| Context | config>cron>action |
| Description | This command specifies the location where the system writes the output of an event script's execution.

The no form of this command removes the file location from the configuration. |
| Parameters | <i>file-url</i> — Specifies the location where the system writes the output of an event script's execution. |
| | Values |
| | file url: local-url remote-url: 255 chars max |
| | local-url: [<i>cflash-id</i>]/[<i>file-path</i>] |
| | remote-url: [{ftp://} login:pswd@remote-locn/][<i>file-path</i>] |
| | remote-locn [<i>hostname</i> <i>ipv4-address</i> [<i>ipv6-address</i>]] |
| | ipv4-address a.b.c.d |
| | ipv6-address - x:x:x:x:x:x[-interface] |
| | x:x:x:x:x:d.d.d.d[-interface] |

Network Time Protocol Commands

x - [0..FFFF]H
d - [0..255]D
interface - 32 chars max, for link local addresses
cflash-id: cf1:, cf1-A:,cf1-B:,cf2:,cf2-A:,cf2-B:,cf3:,cf3-A:,cf3-B:

script

Syntax [no] **script** *script-name* [owner *owner-name*]

Context config>cron>action

Description This command creates action parameters for a script including the maximum amount of time to keep the results from a script run, the maximum amount of time a script may run, the maximum number of script runs to store and the location to store the results.

The **no** form of this command removes the script parameters from the configuration.

Default none — No server-address is configured.

Parameters **script** *script-name* — The script command in the action context connects and event to the script which will run when the event is triggered.

owner *owner-name* — Owner name of the schedule.

Default TiMOS CLI

The **no** form of this command removes the script entry from the action context.

schedule

Syntax [no] **schedule** *schedule-name* [owner *owner-name*]

Context config>cron

Description This command configures the type of schedule to run, including one-time only (oneshot), periodic or calendar-based runs. All runs are determined by month, day of month or weekday, hour, minute and interval (seconds).

The **no** form of the command removes the context from the configuration.

Default none

Parameters *schedule-name* — Name of the schedule.

owner *owner-name* — Owner name of the schedule.

count

Syntax `count number`

Context `config>cron>sched`

Description This command configures the total number of times a CRON “interval” schedule is run. For example, if the interval is set to 600 and the count is set to 4, the schedule runs 4 times at 600 second intervals.

Parameters *number* — The number of times the schedule is run.

Values 1 — 65535

Default 65535

day-of-month

Syntax `[no] day-of-month {day-number [..day-number] all}`

Context `config>cron>sched`

Description This command specifies which days of the month that the schedule will occur. Multiple days of the month can be specified. When multiple days are configured, each of them will cause the schedule to trigger. If a day-of-month is configured without configuring [month](#), [weekday](#), [hour](#) and [minute](#), the event will not execute.

Using the **weekday** command as well as the **day-of-month** command will cause the script to run twice. For example, consider that “today” is Monday January 1. If “Tuesday January 5” is configured, the script will run on Tuesday (tomorrow) as well as January 5 (Friday).

The **no** form of this command removes the specified day-of-month from the list.

Parameters *day-number* — The positive integers specify the day of the month counting from the first of the month. The negative integers specify the day of the month counting from the last day of the month. For example, configuring **day-of-month -5, 5** in a month that has 31 days will specify the schedule to occur on the 27th and 5th of that month.

Integer values must map to a valid day for the month in question. For example, February 30 is not a valid date.

Values 1 — 31, -31 — -1 (maximum 62 day-numbers)

all — Specifies all days of the month.

end-time

Network Time Protocol Commands

Syntax [no] end-time [date | day-name] time

Context config>cron>sched

Description This command is used concurrently with type **periodic** or **calendar**. Using the type of **periodic**, end-time determines at which interval the schedule will end. Using the type of **calendar**, end-time determines on which date the schedule will end.

When **no end-time** is specified, the schedule runs forever.

Parameters *date* — Specifies the date to schedule a command.

Values YYYY:MM:DD in year:month:day number format

day-name — Specifies the day of the week to schedule a command.

Values sunday|monday|tuesday|wednesday|thursday|friday|saturday

time — Specifies the time of day to schedule a command.

Values hh:mm in hour:minute format

hour

Syntax [no] hour {..*hour-number* [..*hour-number*]| all}

Context config>cron>sched

Description This command specifies which hour to schedule a command. Multiple hours of the day can be specified. When multiple hours are configured, each of them will cause the schedule to trigger. Day-of-month or weekday must also be specified. All days of the month or weekdays can be specified. If an hour is configured without configuring [month](#), [weekday](#), [day-of-month](#), and [minute](#), the event will not execute.

The **no** form of this command removes the specified hour from the configuration.

Parameters *hour-number* — Specifies the hour to schedule a command.

Values 0 — 23 (maximum 24 hour-numbers)

all — Specifies all hours.

interval

Syntax [no] interval *seconds*

Context config>cron>sched

Description This command specifies the interval between runs of an event.

Parameters *seconds* — The interval, in seconds, between runs of an event.

Values 30 — 4,294,967,295

minute

Syntax [no] **minute** {*minute-number* [*..minute-number*] | **all**}

Context config>cron>sched

Description This command specifies the minute to schedule a command. Multiple minutes of the hour can be specified. When multiple minutes are configured, each of them will cause the schedule to occur. If a minute is configured, but no hour or day is configured, the event will not execute. If a minute is configured without configuring [month](#), [weekday](#), [day-of-month](#), and [hour](#), the event will not execute.

The **no** form of this command removes the specified minute from the configuration.

Parameters *minute-number* — Specifies the minute to schedule a command.

Values 0 — 59 (maximum 60 minute-numbers)

all — Specifies all minutes.

month

Syntax [no] **month** {*month-number* [*..month-number*] | *month-name* [*..month-name*] | **all**}

Context config>cron>sched

Description This command specifies the month when the event should be executed. Multiple months can be specified. When multiple months are configured, each of them will cause the schedule to trigger. If a month is configured without configuring [weekday](#), [day-of-month](#), [hour](#) and [minute](#), the event will not execute.

The **no** form of this command removes the specified month from the configuration.

Parameters **month-number** — Specifies a month number.

Values 1 — 12 (maximum 12 month-numbers)

all — Specifies all months.

month-name — Specifies a month by name

Values january, february, march, april, may, june, july, august, september, october, november, december (maximum 12 month names)

type

| | |
|--------------------|---|
| Syntax | type { <i>schedule-type</i> } |
| Context | config>cron>sched |
| Description | This command specifies how the system should interpret the commands contained within the schedule node. |
| Parameters | <i>schedule-type</i> — Specify the type of schedule for the system to interpret the commands contained within the schedule node.
Values
periodic — Specifies a schedule which runs at a given interval. <i>interval</i> must be specified for this feature to run successfully.
calendar — Specifies a schedule which runs based on a calendar. <i>weekday</i> , <i>month</i> , <i>day-of-month</i> , <i>hour</i> and <i>minute</i> must be specified for this feature to run successfully.
oneshot — Specifies a schedule which runs one time only. As soon as the first event specified in these parameters takes place and the associated event occurs, the schedule enters a shutdown state. <i>month</i> , <i>weekday</i> , <i>day-of-month</i> , <i>hour</i> and <i>minute</i> must be specified for this feature to run successfully.
Default periodic |

weekday

| | |
|--------------------|---|
| Syntax | [no] weekday { <i>weekday-number</i> [.. <i>weekday-number</i>] <i>day-name</i> [.. <i>day-name</i>] all } |
| Context | config>cron>sched |
| Description | <p>This command specifies which days of the week that the schedule will fire on. Multiple days of the week can be specified. When multiple days are configured, each of them will cause the schedule to occur. If a weekday is configured without configuring <i>month</i>, <i>day-of-month</i>, <i>hour</i> and <i>minute</i>, the event will not execute.</p> <p>Using the weekday command as well as the day-of month command will cause the script to run twice. For example, consider that “today” is Monday January 1. If “Tuesday January 5” is configured, the script will run on Tuesday (tomorrow) as well as January 5 (Friday).</p> <p>The no form of this command removes the specified weekday from the configuration.</p> |
| Parameters | day-number — Specifies a weekday number.
Values 1 —7 (maximum 7 week-day-numbers)
day-name — Specifies a day by name
Values sunday, monday, tuesday, wednesday, thursday, friday, saturday (maximum 7 weekday names)
all — Specifies all days of the week. |

script

Syntax [no] script *script-name* [owner *owner-name*]

Context config>cron>script

Description This command configures the name associated with this script.

Parameters *script-name* — Specifies the script name.location

Syntax [no] location *file-url*

Context config>cron>script

Description This command configures the location of script to be scheduled.

Parameters *file-url* — Specifies the location where the system writes the output of an event script's execution.

| | | |
|---------------|--------------|---|
| Values | file url: | local-url remote-url: 255 chars max |
| | local-url: | [<i>cflash-id</i> /][<i>file-path</i>] |
| | remote-url: | [{ftp://} login:pswd@remote-locn/][<i>file-path</i>] |
| | remote-locn | [<i>hostname</i> <i>ipv4-address</i> [<i>ipv6-address</i>]] |
| | ipv4-address | a.b.c.d |
| | ipv6-address | - x:x:x:x:x:x[-interface]
x:x:x:x:x:d.d.d.d[-interface]
x - [0..FFFF]H
d - [0..255]D
interface - 32 chars max, for link local addresses |
| | cflash-id: | cf1:, cf1-A:,cf1-B:,cf2:,cf2-A:,cf2-B:,cf3:,cf3-A:,cf3-B: |

Time Range Commands

time-range

Syntax [no] **time-range** *name*

Context config>cron

Description This command configures a time range.
The **no** form of the command removes the *name* from the configuration.

Default none

Parameters *name* — Configures a name for the time range up to 32 characters in length.

absolute

Syntax **absolute start** *start-absolute-time* **end** *end-absolute-time*
no absolute start *absolute-time*

Context config>cron>time-range

Description This command configures an absolute time interval that will not repeat.
The **no** form of the command removes the absolute time range from the configuration.

Parameters **start** *absolute-time* — Specifies starting parameters for the absolute time-range.

| | | |
|---------------|----------------|----------------------|
| Values | absolute-time: | year/month/day,hh:mm |
| | year: | 2005 — 2099 |
| | month: | 1 — 12 |
| | day: | 1 — 31 |
| | hh: | 0 — 23 |
| | mm: [| 0 — 59 |

end *absolute-time* — Specifies end parameters for the absolute time-range.

| | | |
|---------------|----------------|----------------------|
| Values | absolute-time: | year/month/day,hh:mm |
| | year: | 2005 — 2099 |
| | month: | 1 — 12 |
| | day: | 1 — 31 |
| | hh: | 0 — 23 |
| | mm: [| 0 — 59 |

daily

Syntax **daily start** *start-time-of-day* **end** *end-time-of-day*
no daily start *start-time-of-day*

Context config>cron>time-range

Description This command configures the start and end of a schedule for every day of the week. To configure a daily time-range across midnight, use a combination of two entries. An entry that starts at hour zero will take over from an entry that ends at hour 24.

The **no** form of the command removes the daily time parameters from the configuration.

Parameters *start-time-of-day* — Specifies the starting time for the time range.

| | | |
|---------------|---------|-----------|
| Values | Syntax: | hh:mm |
| | | hh 0 — 23 |
| | | mm 0 — 59 |

end-time-of-day — Specifies the ending time for the time range.

| | | |
|---------------|---------|-----------|
| Values | Syntax: | hh:mm |
| | | hh 0 — 24 |
| | | mm 0 — 59 |

weekdays

Syntax **weekdays start** *start-time-of-day* **end** *end-time-of-day*
no weekdays start *start-time-of-day*

Context config>cron>time-range

Description This command configures the start and end of a weekday schedule.

The **no** form of the command removes the weekday parameters from the configuration.

Parameters *start-time-of-day* — Specifies the starting time for the time range.

| | | |
|---------------|---------|-----------|
| Values | Syntax: | hh:mm |
| | | hh 0 — 23 |
| | | mm 0 — 59 |

end-time-of-day — Specifies the ending time for the time range.

| | | |
|---------------|---------|-----------|
| Values | Syntax: | hh:mm |
| | | hh 0 — 24 |
| | | mm 0 — 59 |

weekend

Syntax **weekend start** *start-time-of-day* **end** *end-time-of-day*
no weekend start *start-time-of-day*

Context config>cron>time-range

Description This command configures a time interval for every weekend day in the time range. The resolution must be at least one minute apart, for example, start at 11:00 and end at 11:01. An 11:00 start and end time is invalid. This example configures a start at 11:00 and an end at 11:01 on both Saturday and Sunday.

The **no** form of the command removes the weekend parameters from the configuration.

Parameters *start-time-of-day* — Specifies the starting time for the time range.

| | | |
|---------------|---------|---------------|
| Values | Syntax: | hh:mm |
| | | hh 0 — 23 |
| | | mm 0 — 59 |

end-time-of-day — Specifies the ending time for the time range.

| | | |
|---------------|---------|---------------|
| Values | Syntax: | hh:mm |
| | | hh 0 — 24 |
| | | mm 0 — 59 |

weekly

Syntax **weekly start** *start-time-in-week* **end** *end-time-in-week*
no weekly start *start-time-in-week*

Context config>cron>time-range

Description This command configures a weekly periodic interval in the time range. The **no** form of the command removes the weekly parameters from the configuration.

Parameters *start-time-in-week* — Specifies the start day and time of the week.

| | | |
|---------------|---------|---|
| Values | Syntax: | day, hh:mm |
| | | day sun, mon, tue, wed, thu, fri, sat |
| | | sunday, monday, tuesday, wednesday, thursday, friday, |
| | | saturday |
| | | hh 0 — 23 |
| | | mm 0 — 59 |

end-time-in-week — Specifies the end day and time of the week.

| | | |
|---------------|---------|---|
| Values | Syntax: | day, hh:mm |
| Values | | day sun, mon, tue, wed, thu, fri, sat |
| | | sunday, monday, tuesday, wednesday, thursday, friday, |
| | | saturday |

hh 0 — 24
mm 0 — 59

weekly start *time-in-week* **end** *time-in-week* — This parameter configures the start and end of a schedule for the same day every week, for example, every Friday. The start and end dates must be the same. The resolution must be at least one minute apart, for example, start at 11:00 and end at 11:01. A start time and end time of 11:00 is invalid.

Values 00 — 23, 00 — 59

Default no time-range

Time of Day Commands

tod-suite

Syntax [no] **tod-suite** *tod-suite name* **create**

Context config>cron

Description This command creates the tod-suite context.

Default no tod-suite

egress

Syntax **egress**

Context config>cron>tod-suite

Description This command enables the TOD suite egress parameters.

ingress

Syntax **ingress**

Context config>cron>tod-suite

Description This command enables the TOD suite ingress parameters.

filter

Syntax **filter ip** *ip-filter-id* [**time-range** *time-range-name*] [**priority** *priority*]
filter ipv6 *ipv6-filter-id* [**time-range** *time-range-name*] [**priority** *priority*]
filter mac *mac-filter-id* [**time-range** *time-range-name*] [**priority** *priority*]
no ip *ip-filter-id* [**time-range** *time-range-name*]
no filter ipv6 *ipv6-filter-id* [**time-range** *time-range-name*]
no filter mac *mac-filter-id* [**time-range** *time-range-name*]

Context config>cron>tod-suite>egress
config>cron>tod-suite>ingress

Description This command creates time-range based associations of previously created filter policies. Multiple policies may be included and each must be assigned a different priority; in case time-ranges overlap, the priority will be used to determine the prevailing policy. Only a single reference to a policy may be included without a time-range.

| | |
|-------------------|---|
| Parameters | <p>ip-filter <i>ip-filter-id</i> — Specifies an IP filter for this tod-suite.</p> <p>Values 1 — 65535</p> <p>ipv6-filter <i>ipv6-filter-id</i> — Specifies an IPv6 filter for this tod-suite.</p> <p>Values 1 — 65535</p> <p>time-range <i>time-range-name</i> — Name for the specified time-range. If the time-range is not populated the system will assume the assignment to mean “all times”. Only one entry without a time-range is allowed for every type of policy. The system does not allow the user to specify more than one policy with the same time-range and priority.</p> <p>Values Up to 32 characters</p> <p>priority <i>priority</i> — Priority of the time-range. Only one time-range assignment of the same type and priority is allowed.</p> <p>Values 1 — 10</p> <p>mac <i>mac-filter-id</i> — Specifies a MAC filter for this tod-suite.</p> <p>Values 1 — 65535</p> |
|-------------------|---|

qos

| | |
|--------------------|---|
| Syntax | <p>qos <i>policy-id</i> [time-range <i>time-range-name</i>] [priority <i>priority</i>]</p> <p>no qos <i>policy-id</i> [time-range <i>time-range-name</i>] [</p> |
| Context | <p>config>cron>tod-suite>egress</p> <p>config>cron>tod-suite>ingress</p> |
| Description | <p>This command creates time-range based associations of previously created QoS policies. Multiple policies may be included and each must be assigned a different priority; in case time-ranges overlap, the priority will be used to determine the prevailing policy. Only a single reference to a policy may be included without a time-range.</p> <p>The no form of the command reverts to the</p> |
| Parameters | <p>policy-id — Specifies an egress QoS policy for this tod-suite.</p> <p>Values 1 — 65535</p> <p>time-range <i>time-range-name</i> — Name for the specified time-range. If the time-range is not populated the system will assume the assignment to mean “all times”. Only one entry without a time-range is allowed for every type of policy. The system does not allow the user to specify more than one policy with the same time-range and priority.</p> <p>Values Up to 32 characters</p> <p>Default "NO-TIME-RANGE" policy</p> <p>priority <i>priority</i> — Priority of the time-range. Only one time-range assignment of the same type and priority is allowed.</p> |

Network Time Protocol Commands

Values 1 — 10

Default 5

scheduler-policy

Syntax **[no] scheduler-policy** *scheduler-policy-name* [**time-range** *time-range-name*] [**priority** *priority*]

Context config>cron>tod-suite>egress
config>cron>tod-suite>ingress

Description This command creates time-range based associations of previously created scheduler policies. Multiple policies may be included and each must be assigned a different priority; in case time-ranges overlap, the priority will be used to determine the prevailing policy. Only a single reference to a policy may be included without a time-range.

Parameters *scheduler-policy-name* — Specifies a scheduler policy for this tod-suite.

Values Up to 32 characters

time-range *time-range-name* — Specifies the name for a time-range. If the time-range is not populated the system will assume the assignment to mean “all times”. Only one entry without a time-range is allowed for every type of policy. The system does not allow the user to specify more than one policy and the same time-range and priority.

Values Up to 32 characters

priority *priority* — Specifies the time-range priority. Only one time-range assignment of the same type and priority is allowed.

Values 1 — 10

System Time Commands

dst-zone

Syntax [no] **dst-zone** [*std-zone-name* | *non-std-zone-name*]

Context config>system>time

Description This command configures the start and end dates and offset for summer time or daylight savings time to override system defaults or for user defined time zones.

When configured, the time is adjusted by adding the configured offset when summer time starts and subtracting the configured offset when summer time ends.

If the time zone configured is listed in [Table 27, System-defined Time Zones, on page 224](#), then the starting and ending parameters and offset do not need to be configured with this command unless it is necessary to override the system defaults. The command returns an error if the start and ending dates and times are not available either in [Table 27](#) or entered as optional parameters in this command.

Up to five summer time zones may be configured, for example, for five successive years or for five different time zones. Configuring a sixth entry will return an error message. If no summer (daylight savings) time is supplied, it is assumed no summer time adjustment is required.

The **no** form of the command removes a configured summer (daylight savings) time entry.

Default none — No summer time is configured.

Parameters *std-zone-name* — The standard time zone name. The standard name must be a system-defined zone in [Table 27](#). For zone names in the table that have an implicit summer time setting, for example MDT for Mountain Daylight Saving Time, the remaining **start-date**, **end-date** and **offset** parameters need to be provided unless it is necessary to override the system defaults for the time zone.

Values *std-zone-name* ADT, AKDT, CDT, CEST, EDT, EEST, MDT, PDT, WEST

non-std-zone-name — The non-standard time zone name. Create a user-defined name created using the [zone](#) command on page 392

Values 5 characters maximum

end

Syntax **end** {*end-week*} {*end-day*} {*end-month*} [*hours-minutes*]

Context config>system>time>dst-zone

Description This command configures start of summer time settings.

Parameters *end-week* — Specifies the starting week of the month when the summer time will end.

Values first, second, third, fourth, last

Default first

Network Time Protocol Commands

end-day — Specifies the starting day of the week when the summer time will end.

Values sunday, monday, tuesday, wednesday, thursday, friday, saturday

Default sunday

end-month — The starting month of the year when the summer time will take effect.

Values january, february, march, april, may, june, july, august, september, october, november, december}

Default january

hours — Specifies the hour at which the summer time will end.

Values 0 — 24

Default 0

minutes — Specifies the number of minutes, after the hours defined by the *hours* parameter, when the summer time will end.

Values 0 — 59

Default 0

offset

Syntax **offset** *offset*

Context config>system>time>dst-zone

Description This command specifies the number of minutes that will be added to the time when summer time takes effect. The same number of minutes will be subtracted from the time when the summer time ends.

Parameters *offset* — The number of minutes added to the time at the beginning of summer time and subtracted at the end of summer time, expressed as an integer.

Default 60

Values 0 — 60

start

Syntax **start** {*start-week*} {*start-day*} {*start-month*} [*hours-minutes*]

Context config>system>time>dst-zone

Description This command configures start of summer time settings.

Parameters **start-week** — Specifies the starting week of the month when the summer time will take effect.

Values first, second, third, fourth, last

Default first

start-day — Specifies the starting day of the week when the summer time will take effect.

Default sunday

Values sunday, monday, tuesday, wednesday, thursday, friday, saturday

start-month — The starting month of the year when the summer time will take effect.

Values january, february, march, april, may, june, july, august, september, october, november, december

Default january

hours — Specifies the hour at which the summer time will take effect.

Default 0

minutes — Specifies the number of minutes, after the hours defined by the *hours* parameter, when the summer time will take effect.

Default 0

zone

Syntax **zone** [*std-zone-name* | *non-std-zone-name*] [*hh* [:*mm*]]
no zone

Context config>system>time

Description This command sets the time zone and/or time zone offset for the device.

7710 SR OS supports system-defined and user-defined time zones. The system-defined time zones are listed in [Table 27, System-defined Time Zones, on page 224](#).

For user-defined time zones, the zone and the UTC offset must be specified.

The **no** form of the command reverts to the default of Coordinated Universal Time (UTC). If the time zone in use was a user-defined time zone, the time zone will be deleted. If a **dst-zone** command has been configured that references the zone, the summer commands must be deleted before the zone can be reset to UTC.

Default **zone utc** - The time zone is set for Coordinated Universal Time (UTC).

Parameters *std-zone-name* — The standard time zone name. The standard name must be a system-defined zone in [Table 27](#). For zone names in the table that have an implicit summer time setting, for example MDT for Mountain Daylight Saving Time, the remaining **start-date**, **end-date** and **offset** parameters need to be provided unless it is necessary to override the system defaults for the time zone.

For system-defined time zones, a different offset cannot be specified. If a new time zone is needed with a different offset, the user must create a new time zone. Note that some system-defined time zones have implicit summer time settings which causes the switchover to summer time to occur automatically; configuring the **dst-zone** parameter is not required.

A user-defined time zone name is case-sensitive and can be up to 5 characters in length.

Values A user-defined value can be up to 4 characters or one of the following values:
GMT, BST, IST, WET, WEST, CET, CEST, EET, EEST, MSK, MSD, AST, ADT, EST, EDT, ET, CST, CDT, CT, MST, MDT, MT, PST, PDT, PT, HST, AKST, AKDT, WAST, CAST, EAST

non-std-zone-name — The non-standard time zone name.

Values Up to 5 characters maximum.

hh [:*mm*] — The hours and minutes offset from UTC time, expressed as integers. Some time zones do not have an offset that is an integral number of hours. In these instances, the *minutes-offset* must be specified. For example, the time zone in Pirlanngimpi, Australia UTC + 9.5 hours.

Default hours: 0
minutes: 0

Values hours: -11 — 11
minutes: 0 — 59

System Synchronization Configuration Commands

sync-if-timing

Syntax `sync-if-timing`

Context `config>system`

Description This command creates or edits the context to create or modify timing reference parameters.

Default Disabled (The ref-order must be specified in order for this command to be enabled.)

abort

Syntax `abort`

Context `config>system>sync-if-timing`

Description This command is required to discard changes that have been made to the synchronous interface timing configuration during a session.

Default No default

begin

Syntax `begin`

Context `config>system>sync-if-timing`

Description This command is required in order to enter the mode to create or edit the system synchronous interface timing configuration.

Default No default

commit

Syntax `commit`

Context `config>system>sync-if-timing`

Description This command saves changes made to the system synchronous interface timing configuration.

Default No default

bits-interface-type

| | |
|--------------------|--|
| Syntax | bits-interface-type { ds1 [{ esf sf }] e1 [{ pcm30crc pcm31crc }]}
no bits-interface-type |
| Context | config>system>sync-if-timing>bits |
| Description | This command configures the Building Integrated Timing Source (BITS) timing reference. The no form of the command reverts to the default configuration. |
| Default | ds1 esf |
| Parameters | ds1 esf — Specifies Extended Super Frame (ESF). This is a framing type used on DS1 circuits that consists of 24 192-bit frames. The 193rd bit provides timing and other functions.
ds1 sf — Specifies Super Frame (SF), also called D4 framing. This is a common framing type used on DS1 circuits. SF consists of 12 192-bit frames. The 193rd bit provides error checking and other functions. ESF supersedes SF.
e1 pcm30crc — Specifies the pulse code modulation (PCM) type. PCM30CRC uses PCM to separate the signal into 30 user channels with CRC protection.
e1 pcm31crc — Specifies the pulse code modulation (PCM) type. PCM31CRC uses PCM to separate the signal into 31 user channels with CRC protection. |

ssm-bit

| | |
|--------------------|---|
| Syntax | ssm-bit <i>sa-bit</i> |
| Context | config>system>sync-if-timing>bits
config>system>sync-if-timing>ref1
config>system>sync-if-timing>ref2 |
| Description | This command configures which sa-bit to use for conveying SSM information when the interface-type is E1. |
| Default | 8 |
| Parameters | <i>sa-bit</i> — Specifies the sa-bit value.
Values 4–8 |

ql-override

| | |
|--------------------|--|
| Syntax | ql-override {prs stu st2 tnc st3e st3 eec1 sec prc ssu-a ssu-b eec2}
no ql-override |
| Context | config>system>sync-if-timing>bits
config>system>sync-if-timing>ref1
config>system>sync-if-timing>ref2 |
| Description | This command configures the QL value to be used for the reference for SETS input selection and BITS output. This value overrides any value received by that reference's SSM process. |
| Default | no ql-overide |
| Parameters | <i>prs</i> — SONET Primary Reference Source Traceable
<i>stu</i> — SONET Synchronous Traceability Unknown
<i>st2</i> — SONET Stratum 2 Traceable
<i>tnc</i> — SONET Transit Node Clock Traceable
<i>st3e</i> — SONET Stratum 3E Traceable
<i>st3</i> — SONET Stratum 3 Traceable
<i>eec1</i> — Ethernet Equipment Clock Option 1 Traceable (sdh)
<i>eec2</i> — Ethernet Equipment Clock Option 2 Traceable (sonet)
<i>prc</i> — SDH Primary Reference Clock Traceable
<i>ssu-a</i> — SDH Primary Level Synchronization Supply Unit Traceable
<i>ssu-b</i> — SDH Second Level Synchronization Supply Unit Traceable
<i>sec</i> — SDH Synchronous Equipment Clock Traceable |

ql-selection

| | |
|--------------------|---|
| Syntax | [no] ql-selection |
| Context | config>system>sync-if-timing |
| Description | When enabled the selection of system timing reference and BITS output timing reference takes into account quality level. This command turns -on or turns-off SSM encoding as a means of timing reference selection. |
| Default | no ql-selection |

System Synchronization Configuration Commands

ref-order

Syntax **ref-order** *first second* [*third* [*fourth*]]
no ref-order

Context config>system>sync-if-timing

Description The synchronous equipment timing subsystem can lock to different timing reference inputs, those specified in the **ref1**, **ref2**, **bits** and **ptp** command configuration. This command organizes the priority order of the timing references.

If a reference source is disabled, then the clock from the next reference source as defined by **ref-order** is used. If all reference sources are disabled, then clocking is derived from a local oscillator.

Note that if a **sync-if-timing** reference is linked to a source port that is operationally down, the port is no longer qualified as a valid reference.

The **no** form of the command resets the reference order to the default values.

The **bits** option is not supported on the 7710 SR-c12 chassis.

Default **ref1 ref2 ptp**

first — Specifies the first timing reference to use in the reference order sequence.

Values f2, bits, ptp

second — Specifies the second timing reference to use in the reference order sequence.

Values f2, bits, ptp

third — Specifies the third timing reference to use in the reference order sequence.

Values f2, bits, ptp

Values ref1, ref2

fourth — Specifies the fourth timing reference to use in the reference order sequence.

Values f2, bits, ptp

ref1

Syntax **ref1**

Context config>system>sync-if-timing

Description This command enables the context to configure parameters for the first timing reference.

Parameters **source-port** — Configure the source port for the first timing reference.

ref2

| | |
|--------------------|---|
| Syntax | ref2 |
| Context | config>system>sync-if-timing |
| Description | This command enables the context to configure parameters for the second timing reference. |
| Parameters | source-port — Configure the source port for the first timing reference. |

revert

| | |
|--------------------|---|
| Syntax | [no] revert |
| Context | config>system>sync-if-timing |
| Description | This command allows the clock to revert to a higher priority reference if the current reference goes offline or becomes unstable. When the failed reference becomes operational, it is eligible for selection. When the mode is non-revertive, a failed clock source is not selected again. |
| Default | no revert |

source-bits

| | |
|--------------------|---|
| Syntax | source-bits <i>slot/mda</i>
no source-bits |
| Context | config>system>sync-if-timing>ref1
config>system>sync-if-timing>ref2 |
| Description | This command configures the source bits for the first (ref1) or second (ref2) timing reference. |
| Parameters | <i>slot/mda</i> — Specifies the chassis slot and MDA containing the BITS port to be used as one of the two timing reference sources in the system timing subsystem. |
| Values | slot: 1
mda: 1 — 12 |

source-port

Syntax **source-port** *port-id*
no source-port

Context config>system>sync-if-timing>ref1
config>system>sync-if-timing>ref2

Description This command configures the source port for timing reference **ref1** or **ref2**. If the port is unavailable or the link is down, then the reference sources are re-evaluated according to the reference order configured in the **ref-order** command.

In addition to physical port, T1 or E1 channels on a Channelized OC3/OC12/STM1/STM4 Circuit Emulation Service port can be specified if they are using adaptive timing.

Parameters *port-id* — Identify the physical port in the *slot/mda/port* format.

Generic Commands

shutdown

Syntax [no] shutdown

Context config>system>time>sntp
config>system>sync-if-timing>ref1
config>system>sync-if-timing>ref2

Description This command administratively disables an entity. When disabled, an entity does not change, reset, or remove any configuration settings or statistics.

The operational state of the entity is disabled as well as the operational state of any entities contained within. Many objects must be shut down before they may be deleted.

The **no** form of this command administratively enables an entity.

Unlike other commands and parameters where the default state is not indicated in the configuration file, the **shutdown** and **no shutdown** states are always indicated in system generated configuration files.

The **no** form of the command places an entity in an administratively enabled state.

description

Syntax **description** *description-string*
no description

Context config>system>persistence>sub-mgmt
config>system>persistence>dhcp-server

Description The command allows the user to configure a string that can be used to identify the purpose of this event. This is an optional parameter and can be 80 characters long. If the string contains special characters (#, \$, spaces, etc.), the entire string must be enclosed within double quotes.

System Administration Commands

admin

| | |
|--------------------|--|
| Syntax | admin |
| Context | <ROOT> |
| Description | The context to configure administrative system commands. Only authorized users can execute the commands in the admin context. |
| Default | none |

debug-save

| | |
|--------------------|---|
| Syntax | debug-save <i>file-url</i> |
| Context | admin |
| Description | This command saves existing debug configuration. Debug configurations are not preserved in configuration saves. |
| Default | none |
| Parameters | <i>file-url</i> — The file URL location to save the debug configuration. |

| Values | |
|--------------|---|
| file url: | local-url remote-url: 255 chars max |
| local-url: | [<i>cflash-id</i>]/[<i>file-path</i>], 200 chars max, including the cflash-id directory length, 99 chars max each |
| remote-url: | [{ftp://} login:pswd@remote-locn/][<i>file-path</i>]
remote-locn [<i>hostname</i> <i>ipv4-address</i> [<i>ipv6-address</i>]] |
| ipv4-address | a.b.c.d |
| ipv6-address | - x:x:x:x:x:x[-interface]
x:x:x:x:x:d.d.d.d[-interface]
x - [0..FFFF]H
d - [0..255]D
interface - 32 chars max, for link local addresses |
| cflash-id: | 255 chars max, directory length 99 chars max each
cf1:, cf1-A:,cf1-B:,cf2:,cf2-A:,cf2-B:,cf3:,cf3-A:,cf3-B: |

disconnect

Syntax **disconnect** {**address** *ip-address* | **username** *user-name* | **console** | **telnet** | **ftp** | **ssh**}

Context admin

Description This command disconnects a user from a console, Telnet, FTP, or SSH session.

If any of the console, Telnet, FTP, or SSH options are specified, then only the respective console, Telnet, FTP, or SSH sessions are affected.

If no console, Telnet, FTP, or SSH options are specified, then all sessions from the IP address or from the specified user are disconnected.

Any task that the user is executing is terminated. FTP files accessed by the user will not be removed.

A major severity security log event is created specifying what was terminated and by whom.

Default none — No disconnect options are configured.

Parameters **address** *ip-address* — The IP address to disconnect, specified in dotted decimal notation.

| | | |
|---------------|----------------|---|
| Values | ipv4-address | a.b.c.d |
| | ipv6-address - | x:x:x:x:x:x[-interface]
x:x:x:x:x:d.d.d.d[-interface]
x - [0..FFFF]H
d - [0..255]D |

username *user-name* — The name of the user.

console — Disconnects the console session.

telnet — Disconnects the Telnet session.

ftp — Disconnects the FTP session.

ssh — Disconnects the SSH session.

display-config

Syntax **display-config** [**detail** | **index**]

Context admin

Description This command displays the system's running configuration.

By default, only non-default settings are displayed.

Specifying the **detail** option displays all default and non-default configuration parameters.

Parameters **detail** — Displays default and non-default configuration parameters.

index — Displays only persistent-indices.

reboot

Syntax `reboot [active | standby | upgrade] [now]`

Context admin

Description This command reboots the router including redundant CFMs or upgrades the boot ROMs. If no options are specified, the user is prompted to confirm the reboot operation. For example:

```
ALA-1>admin# reboot
Are you sure you want to reboot (y/n)?
```

If the **now** option is specified, boot confirmation messages appear.

Parameters **active** — Keyword to reboot the active CFM.

Default active

standby — Keyword to reboot the standby CFM.

Default active

upgrade — Enables card firmware to be upgraded during chassis reboot. The 7710 SR OS and the boot.ldr support functionality to perform automatic firmware upgrades on CFMs. The automatic upgrade must be enabled in the 7710 SR OS Command Line Interface (CLI) when rebooting the system.

When the **upgrade** keyword is specified, a chassis flag is set for the BOOT Loader (boot.ldr) and on the subsequent boot of the 7710 SR OS on the chassis, any firmware images on CFMs requiring upgrading will be upgraded automatically.

If an 7710 SR is rebooted with the **admin reboot** command (without the **upgrade** keyword), the firmware images are left intact.

Any CFMs or IOMs that are installed in the chassis will be upgraded automatically. For example, if a card is inserted with down revision firmware as a result of a card hot swap with the latest OS version running, the firmware on the card will be automatically upgraded before the card is brought online.

If the card firmware is upgraded automatically, a chassis cardUpgraded (event 2032) log event is generated. The corresponding SNMP trap for this log event is tmnxEqCardFirmwareUpgraded.

During any firmware upgrade, automatic or manual, it is imperative that during the upgrade procedure:

- Power must NOT be switched off or interrupted.
- The system must NOT be reset.
- No cards are inserted or removed.

Any of the above conditions may render cards inoperable requiring a return of the card for resolution.

The time required to upgrade the firmware on the cards in the chassis depends on the number of cards to be upgraded. On system reboot, the firmware upgrades can take from approximately 3 minutes for a minimally loaded 7710 SR to 8 minutes for a fully loaded 7710 SR chassis after which the configuration file will be loaded. The progress of the firmware upgrades can be monitored at the console. Inserting a single card requiring a firmware upgrade in a running system generally takes less than 2 minutes before the card becomes operationally up.

now — Forces a reboot of the router immediately without an interactive confirmation.

save

Syntax `save [file-url] [detail] [index]`

Context admin

Description This command saves the running configuration to a configuration file. For example:

```
A:ALA-1>admin# save ftp://test:test@192.168.x.xx/./100.cfg
Saving configuration .....Completed.
```

By default, the running configuration is saved to the primary configuration file.

Parameters *file-url* — The file URL location to save the configuration file.

Default The primary configuration file location.

Values

| | |
|--------------------|---|
| file url: | local-url remote-url: 255 chars max |
| local-url: | [<i>cflash-id</i>]/[<i>file-path</i>], 200 chars max, including the <i>cflash-id</i> directory length, 99 chars max each |
| remote-url: | [{ftp://} login:pswd@remote-locn/][<i>file-path</i>]
remote-locn [<i>hostname</i> <i>ipv4-address</i> [<i>ipv6-address</i>]]
ipv4-address a.b.c.d
ipv6-address - x:x:x:x:x:x[-interface]
x:x:x:x:x:d.d.d.d[-interface]
x - [0..FFFF]H
d - [0..255]D
interface - 32 chars max, for link local addresses |
| | 255 chars max, directory length 99 chars max each |
| <i>cflash-id</i> : | cf1:, cf1-A:,cf1-B:,cf2:,cf2-A:,cf2-B:,cf3:,cf3-A:,cf3-B: |

detail — Saves both default and non-default configuration parameters.

index — Forces a save of the persistent index file regardless of the persistent status in the BOF file. The index option can also be used to avoid an additional boot required while changing your system to use the persistence indices.

enable-tech

Syntax `[no] enable-tech`

Context admin

Description This command enables the shell and kernel commands.

NOTE: This command should only be used with authorized direction from the Alcatel-Lucent Technical Assistance Center (TAC).

radius-discovery

System Administration Commands

Syntax **radius-discovery**

Context admin

Description This command performs RADIUS discovery operations.

force-discover

Syntax **force-discover** [**svc-id** *service-id*]

Context admin>radius-discovery

Description When enabled, the server is immediately contacted to attempt discovery.

Parameters **svc-id** *service-id* — Specifies an existing service ID.

Values 1 — 2147483648 | *svc-name*, up to 64 char max

tech-support

Syntax **tech-support** *file-url*

Context admin

Description This command creates a system core dump.

NOTE: This command should only be used with authorized direction from the Alcatel-Lucent Technical Assistance Center (TAC).

file-url — The file URL location to save the binary file.

file url: local-url | remote-url: 255 chars max

local-url: [*cflash-id*]/[*file-path*], 200 chars max, including the cflash-id directory length, 99 chars max each

remote-url: [{ftp://} login:pswd@remote-locn/][*file-path*]
remote-locn [*hostname* | *ipv4-address* | [*ipv6-address*]]

ipv4-address a.b.c.d

ipv6-address - x:x:x:x:x:x[-interface]

x:x:x:x:x:d.d.d.d[-interface]

x - [0..FFFF]H

d - [0..255]D

interface - 32 chars max, for link local addresses

255 chars max, directory length 99 chars max each

cflash-id: cf1:, cf1-A:,cf1-B:,cf2:,cf2-A:,cf2-B:,cf3:,cf3-A:,cf3-B:

view

| | |
|--------------------|---|
| Syntax | view { bootup-cfg active-cfg candidate-cfg latest-rb < checkpoint-id > rescue } |
| Context | <ROOT> |
| Description | The context to configure administrative system viewing parameters. Only authorized users can execute the commands in the admin context. |
| Default | none |
| Parameters | bootup-cfg — Specifies the bootup configuration.
active-cfg — Specifies current running configuration.
candidate-cfg — Specifies candidate configuration.
latest-rb — Specifies the latest configuration.
checkpoint-id — Specifies a specific checkpoint file configuration.
Values 1 — 9
rescue — Specifies a rescue checkpoint configuration. |

Persistence Commands

persistence

Syntax [no] persistence

Context config>system

Description This command enables the context to configure persistence parameters on the system.

The persistence feature enables state on information learned through DHCP snooping across reboots to be retained. This information includes data such as the IP address and MAC binding information, lease-length information, and ingress sap information (required for VPLS snooping to identify the ingress interface).

If persistence is enabled when there are no DHCP relay or snooping commands enabled, it will simply create an empty file.

Default no persistence

dhcp-server

Syntax dhcp-server

Context config>system>persistence

Description This command configures DHCP server persistence parameters.

subscriber-mgmt

Syntax subscriber-mgmt

Context config>system>persistence

Description This command configures subscriber management persistence parameters.

location

Syntax **location [cf1: | cf2: | cf3:]**
no location

Context config>system>persistence>sub-mgmt
config>system>persistence>dhcp-server

Description This command instructs the system where to write the file. The name of the file is: dhcp-persistence.db. On boot the system scans the file systems looking for dhcp-persistence.db, if it finds it it starts to load it.

In the subscriber management context, the location specifies the flash device on a CFM card where the data for handling subscriber management persistency is stored.

The **no** form of this command returns the system to the default. If there is a change in file location while persistence is running, a new file will be written on the new flash, and then the old file will be removed.

Default no location

Redundancy Commands

redundancy

Syntax **redundancy**

Context admin
 config

Description This command enters the context to allow the user to perform redundancy operations.

cert-sync

Syntax **[no] cert-sync**

Context admin>redundancy

Description This command automatically synchronizes the certificate/CRL/key automatically when importing or generating (for the key); also, if there is new CF card inserted into slot3 into backup CPM, the system will sync the whole system-pki directory from the active CPM.

Default none

rollback-sync

Syntax **no rollback-sync**

Context admin>redundancy

Description This command copies the entire set of rollback checkpoint files from the active CPM CF to the inactive CPM CF.

Default None.

synchronize

Syntax **synchronize {boot-env|config}**
 no synchronize

Context admin>redundancy

Description This command performs a synchronization of the standby CPM's images and/or configuration files to the active CPM. Either the **boot-env** or **config** parameter must be specified.

In the **admin>redundancy** context, this command performs a manually triggered standby CPM synchronization. When the standby CPM takes over operation following a failure or reset of the active CPM, it is important to ensure that the active and standby CPM have identical operational parameters. This includes the saved configuration, CPM and IOM images.

The active CPM ensures that the active configuration is maintained on the standby CPM. However, to ensure smooth operation under all circumstances, runtime images and system initialization configurations must also be automatically synchronized between the active and standby CPM. If synchronization fails, alarms and log messages that indicate the type of error that caused the failure of the synchronization operation are generated. When the error condition ceases to exist, the alarm is cleared.

Only files stored on the router are synchronized. If a configuration file or image is stored in a location other than on a local compact flash, the file is not synchronized (for example, storing a configuration file on an FTP server).

Certificate synchronization is supported. With the **cert** parameter configured, the system will sync the system-pki directory from active CPM to the backup CPM.

The **no** form of the command removes the parameter from the configuration.

Default none

Parameters **boot-env** — Synchronizes all files required for the boot process (loader, BOF, images, and config).
config — Synchronizes only the primary, secondary, and tertiary configuration files.

force-switchover

Syntax **force-switchover [now]**

Context admin>redundancy

Description This command forces a switchover to the standby CFM card. The primary CFM reloads its software image and becomes the secondary CFM.

Parameters **now** — Forces the switchover to the redundant CFM card immediately.

bgp-multi-homing

Syntax **bgp-multi-homing**

Context config>redundancy

Description This command configures BGP multi-homing parameters.

boot-timer

Redundancy Commands

| | |
|--------------------|---|
| Syntax | boot-timer <i>seconds</i>
no boot-timer |
| Context | config>redundancy>bgp-multi-homing |
| Description | This command configures the time the service manager waits after a node reboot before running the DF election algorithm. The boot-timer value should be configured to allow for the BGP sessions to come up and for the NLRI information to be refreshed/exchanged.

The no form of the command reverts the default. |
| Default | no boot-timer |
| Parameters | <i>seconds</i> — Specifies the BGP multi-homing boot-timer in seconds.

Values 1 — 100 |

site-activation-timer

| | |
|--------------------|---|
| Syntax | site-activation-timer <i>seconds</i>
no site-activation-timer |
| Context | config>redundancy>bgp-multi-homing |
| Description | This command defines the amount of time the service manager will keep the local sites in standby status, waiting for BGP updates from remote PEs before running the DF election algorithm to decide whether the site should be unblocked. The timer is started when one of the following events occurs if the site is operationally up: <ul style="list-style-type: none">• Manual site activation using the no shutdown command at site-id level or at member object(s) level (SAP(s) or PW(s))• Site activation after a failure |
| Default | no site-activation-timer |
| Parameters | <i>seconds</i> — Specifies the standby status in seconds.

Values 1 — 100
Default 2 |

synchronize

| | |
|--------------------|---|
| Syntax | synchronize { boot-env config } |
| Context | config>redundancy |
| Description | This command performs a synchronization of the standby CFM's images and/or config files to the active CFM. Either the boot-env or config parameter must be specified.

In the config>redundancy context, this command performs an automatically triggered standby CFM synchronization. When the standby CFM takes over operation following a failure or reset of the active |

CFM, it is important to ensure that the active and standby CFMs have identical operational parameters. This includes the saved configuration and CFM images.

The active CFM ensures that the active configuration is maintained on the standby CFM. However, to ensure smooth operation under all circumstances, runtime images and system initialization configurations must also be automatically synchronized between the active and standby CFM.

If synchronization fails, alarms and log messages that indicate the type of error that caused the failure of the synchronization operation are generated. When the error condition ceases to exist, the alarm is cleared.

Only files stored on the router are synchronized. If a configuration file or image is stored in a location other than on a local compact flash, the file is not synchronized (for example, storing a configuration file on an FTP server).

Default enabled

Parameters **boot-env** — Synchronizes all files required for the boot process (loader, BOF, images, and config).
config — Synchronize only the primary, secondary, and tertiary configuration files.

Default **config**

synchronize

Syntax **synchronize** {**boot-env** | **config**}

Context admin>redundancy

Description This command performs a synchronization of the standby CFM's images and/or config files to the active CFM. Either the **boot-env** or **config** parameter must be specified.

In the **admin>redundancy** context, this command performs a manually triggered standby CFM synchronization. When the standby CFM takes over operation following a failure or reset of the active CFM, it is important to ensure that the active and standby CFM have identical operational parameters. This includes the saved configuration and CFM images.

The active CFM ensures that the active configuration is maintained on the standby CFM. However, to ensure smooth operation under all circumstances, runtime images and system initialization configurations must also be automatically synchronized between the active and standby CFM.

If synchronization fails, alarms and log messages that indicate the type of error that caused the failure of the synchronization operation are generated. When the error condition ceases to exist, the alarm is cleared.

Only files stored on the router are synchronized. If a configuration file or image is stored in a location other than on a local compact flash, the file is not synchronized (for example, storing a configuration file on an FTP server).

Default none

Parameters **boot-env** — Synchronizes all files required for the boot process (loader, BOF, images, and configuration files).
config — Synchronize only the primary, secondary, and tertiary configuration files.

Redundancy Commands

multi-chassis

Syntax **multi-chassis**

Context config>redundancy

Description This command enables the context to configure multi-chassis parameters.

peer-name

Syntax **peer-name** *name*
 no peer-name

Context config>redundancy>multi-chassis>peer

Description This command specifies a peer name.

Parameters *name* — The string may be up to 32 characters long. Any printable, seven-bit ASCII characters can be used within the string. If the string contains special characters (#, \$, spaces, etc.), the entire string must be enclosed within double quotes.

rollback-sync

Syntax **[no] rollback-sync**

Context config>redundancy

Description The operator can enable automatic synchronization of rollback checkpoint files between the active CPM and inactive CPM. When this automatic synchronization is enabled, a rollback save will cause the new checkpoint file to be saved on both the active and standby CPMs. The suffixes of the old checkpoint files on both active and standby CPMs are incremented. Note that automatic sync only causes the ONE new checkpoint file to be copied to both CFs (the other 9 checkpoints are not automatically copied from active to standby but that can be done manually with "admin red rollback-sync").

Automatic synchronization of rollback checkpoint files across CPMs is only performed if the rollback-location is configured as a local file-url (for example, "cf3:/rollback-files/rollback). Synchronization is not done if the rollback-location is remote.

Note that "config red sync {boot-env|config}" and "admin red sync {boot-env|config}" do not apply to rollback checkpoint files. These commands do not manually or automatically sync rollback checkpoint files. The dedicated rollback-sync commands must be used to sync rollback checkpoint files.

source-address

Syntax **source-address** *ip-address*
no source-address

Context config>redundancy>multi-chassis>peer

Description This command specifies the source address used to communicate with the multi-chassis peer.

Parameters *ip-address* — Specifies the source address used to communicate with the multi-chassis peer.

sync

Syntax [**no**] **sync**

Context config>redundancy>multi-chassis>peer

Description This command enables the context to configure synchronization parameters.

igmp

Syntax [**no**] **igmp**

Context config>redundancy>multi-chassis>peer>sync

Description This command specifies whether IGMP protocol information should be synchronized with the multi-chassis peer.

Default no igmp

igmp-snooping

Syntax [**no**] **igmp-snooping**

Context config>redundancy>multi-chassis>peer>sync

Description This command specifies whether IGMP snooping information should be synchronized with the multi-chassis peer.

Default no igmp-snooping

local-dhcp-server

Redundancy Commands

Syntax [no] local-dhcp-server

Context config>redundancy>multi-chassis>peer>sync

Description This command synchronizes DHCP server information.

mld-snooping

Syntax [no] mld-snooping

Context config>redundancy>multi-chassis>peer>sync

Description This command synchronizes MLD Snooping information.

port

Syntax port [port-id | lag-id] [sync-tag sync-tag]
no port [port-id | lag-id]

Context config>redundancy>multi-chassis>peer>sync

Description This command specifies the port to be synchronized with the multi-chassis peer and a synchronization tag to be used while synchronizing this port with the multi-chassis peer.

Parameters *port-id* — Specifies the port to be synchronized with the multi-chassis peer.
lag-id — Specifies the LAG ID to be synchronized with the multi-chassis peer.
sync-tag *sync-tag* — Specifies a synchronization tag to be used while synchronizing this port with the multi-chassis peer.

range

Syntax range *encap-range* sync-tag *sync-tag*
no range *encap-range*

Context config>redundancy>multi-chassis>peer>sync>port

Description This command configures a range of encapsulation values.

Parameters *encap-range* — Specifies a range of encapsulation values on a port to be synchronized with a multi-chassis peer.

| | | |
|---------------|-------|----------------------------------|
| Values | Dot1Q | <i>start-vlan-end-vlan</i> |
| | QinQ | <i>Q1.start-vlan-Q1.end-vlan</i> |

sync-tag *sync-tag* — Specifies a synchronization tag up to 32 characters in length to be used while synchronizing this encapsulation value range with the multi-chassis peer.

srrp

Syntax [no] srrp

Context config>redundancy>multi-chassis>peer>sync

Description This command specifies whether subscriber routed redundancy protocol (SRRP) information should be synchronized with the multi-chassis peer.

Default no srrp

sub-mgmt

Syntax [no] sub-mgmt

Context config>redundancy>multi-chassis>peer>sync

Description This command specifies whether subscriber management information should be synchronized with the multi-chassis peer.

Default no sub-mgmt

Peer Commands

peer

Syntax [no] peer *ip-address*

Context config>redundancy>multi-chassis

Description This command configures a multi-chassis redundancy peer.

Parameters *ip-address* — Specifies a peer IP address. Multicast address are not allowed.

authentication-key

Syntax authentication-key [*authentication-key* | *hash-key*] [hash | hash2]
no authentication-key

Context config>redundancy>multi-chassis>peer

Description This command configures the authentication key used between this node and the multi-chassis peer. The authentication key can be any combination of letters or numbers.

Parameters *authentication-key* — Specifies the authentication key. Allowed values are any string up to 20 characters long composed of printable, 7-bit ASCII characters. If the string contains special characters (#, \$, spaces, etc.), the entire string must be enclosed within double quotes.

hash-key — The hash key. The key can be any combination of ASCII characters up to 33 (hash1-key) or 55 (hash2-key) characters in length (encrypted). If spaces are used in the string, enclose the entire string in quotation marks (“ ”).

hash — Specifies the key is entered in an encrypted form. If the hash or hash2 parameter is not used, the key is assumed to be in a non-encrypted, clear text form. For security, all keys are stored in encrypted form in the configuration file with the hash or hash2 parameter specified.

hash2 — Specifies the key is entered in a more complex encrypted form that involves more variables than the key value alone, this means that hash2 encrypted variable cannot be copied and pasted. If the hash or hash2 parameter is not used, the key is assumed to be in a non-encrypted, clear text form. For security, all keys are stored in encrypted form in the configuration file with the hash or hash2 parameter specified.

MC Endpoint Commands

mc-endpoint

Syntax [no] mc-endpoint

Context config>redundancy>multi-chassis>peer

Description This command specifies that the endpoint is multi-chassis. This value should be the same on both MC-EP peers for the pseudowires that must be part of the same group.

The **no** form of this command removes the endpoint from the MC-EP. Single chassis behavior applies.

bfd-enable

Syntax [no] bfd-enable

Context config>redundancy>multi-chassis>peer>mc-ep
config>router>rsvp
config>router>bgp
config>router>bgp>group
config>router>bgp>group>neighbor
config>redundancy>multi-chassis>peer>mc-ep

Description This command enables the use of bi-directional forwarding (BFD) to control the state of the associated protocol interface. By enabling BFD on a given protocol interface, the state of the protocol interface is tied to the state of the BFD session between the local node and the remote node. The parameters used for the BFD are set via the BFD command under the IP interface.

The **no** form of this command disables BFD.

Default no bfd-enable

boot-timer

Syntax boot-timer *interval*
no boot-timer

Context config>redundancy>multi-chassis>peer>mc-ep

Description This command configures the boot timer interval. This command applies only when the node reboots. It specifies the time the MC-EP protocol keeps trying to establish a connection before assuming a failure of the remote peer. This is different from the keep-alives mechanism which is used just after the peer-peer communication was established. After this time interval passed all the mc-endpoints configured under services will revert to single chassis behavior, activating the best local PW.

The **no** form of this command sets the interval to default.

Redundancy Commands

Default 300

Parameters *interval* — Specifies the boot timer interval.

Values 1 — 600

hold-on-neighbor-failure

Syntax **hold-on-neighbor-failure** *multiplier*
no hold-on-neighbor-failure

Context config>redundancy>multi-chassis>peer>mc-ep

Description This command specifies the number of keep-alive intervals that the local node will wait for packets from the MC-EP peer before assuming failure. After this time interval passed the all the mc-endpoints configured under services will revert to single chassis behavior, activating the best local pseudowire.

The **no** form of this command sets the multiplier to default value

Default 3

Parameters *multiplier* — Specifies the hold time applied on neighbor failure.

Values 2 — 25

keep-alive-interval

Syntax **keep-alive-interval** *interval*
no keep-alive-interval

Context config>redundancy>multi-chassis>peer>mc-ep

Description This command sets the interval at which keep-alive messages are exchanged between two systems participating in MC-EP when bfd is not enabled or is down. These fast keep-alive messages are used to determine remote-node failure and the interval is set in deci-seconds.

The **no** form of this command sets the interval to default value

Default 5 (0.5s)

Parameters *interval* — The time interval expressed in deci-seconds.

Values 5 — 500 (tenths of a second)

passive-mode

Syntax [no] **passive-mode**

Context config>redundancy>multi-chassis>peer>mc-ep

Description This command configures the passive mode behavior for the MC-EP protocol. When in passive mode the MC-EP pair will be dormant until two of the pseudowires in a MC-EP will be signaled as active by the remote PEs, being assumed that the remote pair is configured with regular MC-EP. As soon as more than one pseudowire is active, dormant MC-EP pair will activate. It will use the regular exchange to select the best pseudowire between the active ones and it will block the Rx and Tx directions of the other pseudowires.

The **no** form of this command will disable the passive mode behavior.

Default no passive-mode

system-priority

Syntax **system-priority** *value*
no system-priority

Context config>redundancy>multi-chassis>peer>mc-ep

Description This command allows the operator to set the system priority. The peer configured with the lowest value is chosen to be the master. If system-priority are equal then the one with the highest system-id (chassis MAC address) is chosen as the master.

The **no** form of this command sets the system priority to default

Default no system-priority

Parameters *value* — Specifies the priority assigned to the local MC-EP peer.

Values 1 — 255

MC-LAG Commands

mc-lag

- Syntax** [no] mc-lag
- Context** config>redundancy>multi-chassis>peer>mc-lag
- Description** This command enables the context to configure multi-chassis LAG operations and related parameters. The **no** form of this command administratively disables multi-chassis LAG. MC-LAG can only be issued only when mc-lag is shutdown.

hold-on-neighbor-failure

- Syntax** hold-on-neighbor-failure *multiplier*
no hold-on-neighbor-failure
- Context** config>redundancy>multi-chassis>peer>mc-lag
- Description** This command specifies the interval that the standby node will wait for packets from the active node before assuming a redundant-neighbor node failure. This delay in switch-over operation is required to accommodate different factors influencing node failure detection rate, such as IGP convergence, or HA switch-over times and to prevent the standby node to take action prematurely. The **no** form of this command sets this parameter to default value.
- Default** 3
- Parameters** *multiplier* — The time interval that the standby node will wait for packets from the active node before assuming a redundant-neighbor node failure.
- Values** 2 — 25

keep-alive-interval

- Syntax** keep-alive-interval *interval*
no keep-alive-interval
- Context** config>redundancy>multi-chassis>peer>mc-lag
- Description** This command sets the interval at which keep-alive messages are exchanged between two systems participating in MC-LAG. These keep-alive messages are used to determine remote-node failure and the interval is set in deci-seconds. The **no** form of this command sets the interval to default value
- Default** 1s (10 hundreds of milliseconds means interval value of 10)

Parameters *interval* — The time interval expressed in deci-seconds

Values 5 — 500

lag

Syntax **lag** *lag-id* **lACP-key** *admin-key* **system-id** *system-id* [**remote-lag** *lag-id*] **system-priority** *system-priority*
no lag *lag-id*

Context config>redundancy>multi-chassis>peer>mc-lag

Description This command defines a LAG which is forming a redundant-pair for MC-LAG with a LAG configured on the given peer. The same LAG group can be defined only in the scope of 1 peer.

The same **lACP-key**, **system-id**, and **system-priority** must be configured on both nodes of the redundant pair in order to MC-LAG to become operational. In order MC-LAG to become operational, all parameters (**lACP-key**, **system-id**, **system-priority**) must be configured the same on both nodes of the same redundant pair.

The partner system (the system connected to all links forming MC-LAG) will consider all ports using the same **lACP-key**, **system-id**, **system-priority** as the part of the same LAG. In order to achieve this in MC operation, both redundant-pair nodes have to be configured with the same values. In case of the mismatch, MC-LAG is kept operationally down.

Default none

Parameters *lag-id* — The LAG identifier, expressed as a decimal integer. Specifying the *lag-id* allows the mismatch between *lag-id* on redundant-pair. If no **lag-id** is specified it is assumed that neighbor system uses the same *lag-id* as a part of the given MC-LAG. If no matching MC-LAG group can be found between neighbor systems, the individual LAGs will operate as usual (no MC-LAG operation is established.).

Values 1 — 64

lACP-key *admin-key* — Specifies a 16 bit key that needs to be configured in the same manner on both sides of the MC-LAG in order for the MC-LAG to come up.

Values 1 — 65535

system-id *system-id* — Specifies a 6 byte value expressed in the same notation as MAC address

Values xx:xx:xx:xx:xx:xx - xx [00..FF]

remote-lag *lag-id* — Specifies the LAG ID on the remote system.

Values 1 — 64

system-priority *system-priority* — Specifies the system priority to be used in the context of the MC-LAG. The partner system will consider all ports using the same **lACP-key**, **system-id**, and **system-priority** as part of the same LAG.

Values 1 — 65535

Multi-Chassis Ring Commands

mc-ring

Syntax **mc-ring**

Context config>redundancy>mc>peer
config>redundancy>multi-chassis>peer>sync

Description This command enables the context to configure the multi-chassis ring parameters.

ring

Syntax **ring** *sync-tag*
no ring *sync-tag*

Context config>redundancy>mc>peer>mcr

Description This command configures a multi-chassis ring.

Parameters *sync-tag* — Specifies a synchronization tag to be used while synchronizing this port with the multi-chassis peer.

in-band-control-path

Syntax **in-band-control-path**

Context config>redundancy>mc>peer>mcr>ring

Description This command enables the context to configure multi-chassis ring inband control path parameters.

dst-ip

Syntax **dst-ip** *ip-address*
no dst-ip

Context config>redundancy>mc>peer>mcr>ring>in-band-control-path

Description This command specifies the destination IP address used in the inband control connection. If the address is not configured, the ring cannot become operational.

Parameters *ip-address* — Specifies the destination IP address.

interface

Syntax **interface** *ip-int-name*
no interface

Context config>redundancy>mc>peer>mcr>ring>in-band-control-path

Description This command specifies the name of the IP interface used for the inband control connection. If the name is not configured, the ring cannot become operational.

service-id

Syntax **service-id** *service-id*
no service-id

Context config>redundancy>mc>peer>mcr>ring>ibc

Description This command specifies the service ID if the interface used for the inband control connection belongs to a VPRN service. If not specified, the *service-id* is zero and the interface must belong to the Base router.

The **no** form of the command removes the service-id from the IBC configuration.

Parameters *service-id* — Specifies the service ID if the interface.

path-b

Syntax [**no**] **path-b**

Context config>redundancy>mc>peer>mcr>ring

Description This command specifies the set of upper-VLAN IDs associated with the SAPs that belong to path B with respect to load-sharing. All other SAPs belong to path A.

Default If not specified, the default is an empty set.

range

Syntax [**no**] **range** *vlan-range*

Context config>redundancy>mc>peer>mcr>ring>path-b
 config>redundancy>mc>peer>mcr>ring>path-excl

Description This command configures a MCR b-path VLAN range.

Parameters *vla-range* — Specifies the VLAN range.

Values 1 to 4094 — 1 to 4094

Redundancy Commands

path-excl

| | |
|--------------------|---|
| Syntax | [no] path-excl |
| Context | config>redundancy>mc>peer>mcr>ring |
| Description | This command specifies the set of upper-VLAN IDs associated with the SAPs that are to be excluded from control by the multi-chassis ring. |
| Default | If not specified, the default is an empty set. |

ring-node

| | |
|--------------------|---|
| Syntax | ring-node <i>ring-node-name</i> [create]
no ring-node <i>ring-node-name</i> |
| Context | config>redundancy>mc>peer>mcr>ring |
| Description | This command specifies the unique name of a multi-chassis ring access node. |
| Parameters | <i>ring-node-name</i> — Specifies the unique name of a multi-chassis ring access node.
create — Keyword used to create the ring node instance. The create keyword requirement can be enabled/disabled in the environment>create context. |

connectivity-verify

| | |
|--------------------|---|
| Syntax | connectivity-verify |
| Context | config>redundancy>mc>peer>mcr>ring>ring-node |
| Description | This command enables the context to configure node connectivity check parameters. |

dst-ip

| | |
|--------------------|---|
| Syntax | dst-ip <i>ip-address</i>
no dst-ip |
| Context | config>redundancy>mc>peer>mcr>ring>ring-node>connectivity-verify |
| Description | This command configures the node cc destination IP address. |
| Default | no dst-ip |
| Parameters | <i>ip-address</i> — Specifies the destination IP address used in the inband control connection. |

interval

| | |
|--------------------|---|
| Syntax | interval <i>interval</i>
no interval |
| Context | config>redundancy>mc>peer>mcr>ring>ring-node>connectivity-verify |
| Description | This command specifies the polling interval of the ring-node connectivity verification of this ring node. |
| Default | 5 |
| Parameters | <i>interval</i> — Specifies the polling interval, in minutes. |
| | Values 1 — 6000 |

service-id

| | |
|--------------------|--|
| Syntax | service-id <i>service-id</i>
no service-id |
| Context | config>redundancy>mc>peer>mcr>ring>ring-node>connectivity-verify |
| Description | This command specifies the service ID of the SAP used for the ring-node connectivity verification of this ring node. |
| Default | no service-id |
| Parameters | <i>service-id</i> — Specifies the service ID of the SAP. |
| | Values 1 — 2147483647 |

src-ip

| | |
|-------------------|---|
| Syntax | src-ip <i>ip-address</i>
no src-ip |
| Context | config>redundancy>mc>peer>mcr>ring>ring-node>connectivity-verify

This command specifies the source IP address used in the ring-node connectivity verification of this ring node. |
| Default | no src-ip |
| Parameters | <i>ip-address</i> — Specifies the address of the multi-chassis peer. |

Redundancy Commands

src-mac

| | |
|--------------------|--|
| Syntax | src-mac <i>ieee-address</i>
no src-mac |
| Context | config>redundancy>mc>peer>mcr>node>cv |
| Description | This command specifies the source MAC address used for the Ring-Node Connectivity Verification of this ring node.

A value of all zeroes (000000000000 H (0:0:0:0:0:0)) specifies that the MAC address of the system management processor (CPM) is used. |
| Default | no src-mac |
| Parameters | <i>ieee-address</i> — Specifies the source MAC address. |

vlan

| | |
|--------------------|---|
| Syntax | vlan [0..4094]
no vlan |
| Context | config>redundancy>mc>peer>mcr>node>cv |
| Description | This command specifies the VLAN tag of the SAP used for the ring-node connectivity verification of this ring node. It is only meaningful if the value of service ID is not zero. A zero value means that no VLAN tag is configured. |
| Default | no vlan |
| Parameters | [0..4094] — Specifies the set of VLAN IDs associated with the SAPs that are to be controlled by the slave peer. |

Rollback Commands

compare

Syntax **compare** [**to** *source2*]
compare *source1 to source2*

Context admin
 admin>rollback

Description This command displays the differences between rollback checkpoints and the active operational configuration, with *source1* as the base/first file to which *source2* is compared.

Parameters *source1, source2* — Specifies comparison information.

Values **active-cfg** — The currently operational configuration that is active in the node.

latest-rb — The most recent rollback checkpoint (the checkpoint file at the configured rollback-location with “*.rb” as the suffix).

rescue — The rescue configuration (at the configured rescue-location).

checkpoint-id — An id from [1 ..max] indicating a specific rollback checkpoint (where max is the highest checkpoint allowed/configured). A checkpoint-id of 1 indicates the rollback checkpoint file (at the configured rollback-location) with “*.rb.1” as the suffix, 2 for file “*.rb.2”, etc.

Default The defaults for *source1* and *source2* are context aware and differ based on the branch in which the command is executed. In general, the default for *source1* matches the context from which the command is issued.

- In the admin node: No defaults. *source1* and *source2* must be specified.
- In the admin>rollback node:
 - source1 default = active-cfg, source2 default = latest-rb
 - compare: Equivalent to “compare active-cfg to latest-rb”
 - compare to source2: Equivalent to “compare active-cfg to source2”

delete

Syntax **delete** {**latest-rb** | *checkpoint-id* | **rescue**}

Context admin>rollback

Description This command deletes a rollback checkpoint and causes the suffixes to be adjusted (decremented) for all checkpoints older than the one that was deleted (to close the “hole” in the list of checkpoint files and create room to create another checkpoint).

Rollback Commands

If “**config redundancy rollback-sync**” is enabled, a rollback delete will also delete the equivalent checkpoint on the standby CF and shuffle the suffixes on the standby CF.

It is not advised to manually delete a rollback checkpoint (for example, using a "file delete" command). If a rollback checkpoint file is manually deleted without using the "admin rollback delete" command then the suffixes of the checkpoint files are NOT shuffled, nor is the equivalent checkpoint file deleted from the standby CF. This manual deletion creates a “hole” in the checkpoint file list until enough new checkpoints have been created to roll the “hole” off the end of the list.

Default none

Parameters **latest-rb** — Specifies the most recently created rollback checkpoint (corresponds to the file-url.rb rollback checkpoint file).

checkpoint-id — An id from [1 ..max] indicating a specific rollback checkpoint (where max is the highest checkpoint allowed/configured). A checkpoint-id of 1 indicates the rollback checkpoint file (at the configured rollback-location) with “*.rb.1” as the suffix, 2 for file “*.rb.2”, etc.

rescue — Deletes the rescue checkpoint. No checkpoint suffix numbers are changed.

rollback-location

Syntax **no rollback-location** *file-url*

Context config>system>rollback

Description The location and name of the rollback checkpoint files is configurable to be local (on compact flash) or remote. The file-url must not contain a suffix (just a path/directory + filename). The suffixes for rollback checkpoint files are “.rb”, “.rb.1”, ..., “.rb.9” and are automatically appended to rollback checkpoint files.

Default None. A valid rollback-location must be configured before a rollback save is executed.

rescue-location

Syntax **no rescue-location** *file-url*

Context config>system>rollback

Description The location and filename of the rescue configuration is configurable to be local (on compact flash) or remote. The suffix “.rc” will be automatically appended to the filename when a rescue configuration file is saved. Trivial FTP (tftp) is not supported for remote locations.

Default None. A valid rescue-location must be configured before a rescue configuration is saved.

remote-max-checkpoints

| | |
|--------------------|---|
| Syntax | remote-max-checkpoints <1..200> |
| Context | config>system>rollback |
| Description | Configures the maximum number of rollback checkpoint files when the rollback-location is remote (e.g. ftp). |
| Default | 10 |

local-max-checkpoints

| | |
|--------------------|--|
| Syntax | local-max-checkpoints <1..50> |
| Context | config>system>rollback |
| Description | Configures the maximum number of rollback checkpoint files when the rollback-location is on local compact flash. |
| Default | 10 |

save

| | |
|--------------------|--|
| Syntax | save [rescue] [comment <i>comment-string</i>] |
| Context | admin>rollback |
| Description | <p>If the optional “rescue” keyword is not used, this command saves a rollback checkpoint at the location and with the filename specified by the rollback-location with a suffix of “.rb”. The previously saved checkpoints will have their suffixes incremented by one (.rb.1 becomes .rb.2, etc). If there are already as many checkpoint files as the maximum number supported, then the last checkpoint file is deleted.</p> <p>If the “rescue” keyword is used, then this command saves the current operational configuration as a rescue configuration at the location and with the filename specified by the rescue-location. The filename will have the suffix “.rc” appended.</p> |
| Default | none |
| Parameters | <p><i>comment-string</i> — A comment of up to 255 characters in length that is associated with the checkpoint.</p> <p>rescue — Save the rescue checkpoint instead of a normal rollback checkpoint.</p> |

revert

| | |
|--------------------|--|
| Syntax | revert [latest-rb] <i>checkpoint-id</i> rescue] [now] |
| Context | admin>rollback |
| Description | This command initiates a configuration rollback revert operation that will return the configuration state of the node to a previously saved checkpoint. The rollback revert minimizes impacts to running services. |

Rollback Commands

There are no impacts in areas of configuration that did not change since the checkpoint. Configuration parameters that changed (or items on which changed configuration have dependencies) are first removed (revert to default) and the previous values are then restored (can be briefly service impacting in changed areas).

- Parameters**
- latest-rb** — Specifies the most recently created rollback checkpoint (corresponds to the file-url.rb rollback checkpoint file).
 - checkpoint-id* — >Indicates the configuration to return to (which rollback checkpoint file to use). Checkpoint-id of “1” corresponds to the file-url.rb.1 rollback checkpoint file. The higher the id, the older the checkpoint. Max is the highest rollback checkpoint supported or configured.
 - Values** 1—max, where max is the number of configured checkpoints minus 1 (since, for example, the 10th checkpoint has an id of 9)
 - rescue** — Revert to the rescue checkpoint.
 - now** — Forces a rollback revert without any interactive confirmations (assumes ‘y’ for any confirmations that would have occurred).

view

- Syntax** view [**latest-rb** | *checkpoint-id* | **rescue**]
- Context** admin>rollback
- Description** This command displays checkpoint..
- Default** none
- Parameters**
 - latest-rb** — Specifies the most recently created rollback checkpoint (corresponds to the file-url.rb rollback checkpoint file).
 - checkpoint-id* — >Indicates rollback checkpoint file to be viewed. Checkpoint-id of “1” corresponds to the file-url.rb.1 rollback checkpoint file. The higher the id, the older the checkpoint. Max is the highest rollback checkpoint supported or configured.
 - Values** 1..max
 - rescue** — View the rescue configuration.

LLDP System Commands

lldp

Syntax `lldp`

Context `config>system`

Description This command enables the context to configure system-wide Link Layer Discovery Protocol parameters.

message-fast-tx

Syntax `message-fast-tx time`
`no message-fast-tx`

Context `config>system>lldp`

Description This command configures the duration of the fast transmission period.

Parameters *time* — Specifies the fast transmission period in seconds.

Values 1 — 3600

Default 1

message-fast-tx-init

Syntax `message-fast-tx-init count`
`no message-fast-tx-init`

Context `config>system>lldp`

Description This command configures the number of LLDPDUs to send during the fast transmission period.

Parameters *count* — Specifies the number of LLDPDUs to send during the fast transmission period.

Values 1 — 8

Default 4

notification-interval

Syntax **notification-interval** *time*
 no notification-interval

Context config>system>lldp

Description This command configures the minimum time between change notifications.

Parameters *time* — Specifies the minimum time, in seconds, between change notifications.

Values 5 — 3600

Default 5

reinit-delay

Syntax **reinit-delay** *time*
 no reinit-delay

Context config>system>lldp

Description This command configures the time before re-initializing LLDP on a port.

Parameters *time* — Specifies the time, in seconds, before re-initializing LLDP on a port.

Values 1 — 10

Default 2

tx-credit-max

Syntax **tx-credit-max** *count*
 no tx-credit-max

Context config>system>lldp

Description This command configures the maximum consecutive LLDPDUs transmitted.

Parameters *count* — Specifies the maximum consecutive LLDPDUs transmitted.

Values 1 — 100

Default 5

tx-hold-multiplier

Syntax **tx-hold-multiplier** *multiplier*
no tx-hold-multiplier

Context config>system>lldp

Description This command configures the multiplier of the tx-interval.

Parameters *multiplier* — Specifies the multiplier of the tx-interval.

Values 2 — 10

Default 4

tx-interval

Syntax **tx-interval** *interval*
no tx-interval

Context config>system>lldp

Description This command configures the LLDP transmit interval time.

Parameters *interval* — Specifies the LLDP transmit interval time.

Values 1 — 100

Default 5

LLDP Ethernet Port Commands

Refer to the 7710 SR OS Interface Guide for command descriptions and CLI usage.

lldp

| | |
|--------------------|--|
| Syntax | lldp |
| Context | config>port>ethernet |
| Description | This command enables the context to configure Link Layer Discovery Protocol (LLDP) parameters on the specified port. |

dest-mac

| | |
|--------------------|--|
| Syntax | dest-mac { <i>bridge-mac</i> } |
| Context | config>port>ethernet>lldp |
| Description | This command configures destination MAC address parameters. |
| Parameters | bridge-mac — Specifies destination bridge MAC type to use by LLDP.
Values
nearest-bridge — Specifies to use the nearest bridge.
nearest-non-tpmr — Specifies to use the nearest non-Two-Port MAC Relay (TPMR) .
nearest-customer — Specifies to use the nearest customer. |

admin-status

| | |
|--------------------|---|
| Syntax | admin-status { rx tx tx-rx disabled } |
| Context | config>port>ethernet>lldp>dstmac |
| Description | This command specifies the administratively desired status of the local LLDP agent. |
| Parameters | rx — Specifies the LLDP agent will receive, but will not transmit LLDP frames on this port.
tx — Specifies that the LLDP agent will transmit LLDP frames on this port and will not store any information about the remote systems connected.
tx-rx — Specifies that the LLDP agent will transmit and receive LLDP frames on this port.
disabled — Specifies that the LLDP agent will not transmit or receive LLDP frames on this port. If there is remote systems information which is received on this port and stored in other tables, before the port's admin status becomes disabled, then the information will naturally age out. |

notification

- Syntax** [no] notification
- Context** config>port>ethernet>lldp>dstmac
- Description** This command enables LLDP notifications.
The **no** form of the command disables LLDP notifications.

tx-mgmt-address

- Syntax** tx-mgmt-address [system]
no tx-mgmt-address
- Context** config>port>ethernet>lldp>dstmac
- Description** This command specifies which management address to transmit.
The no form of the command resets value to the default.
- Default** no tx-mgmt-address
- Parameters** **system** — Specifies to use the system IP address. Note that the system address will only be transmitted once it has been configured if this parameter is specified

tx-tlvs

- Syntax** tx-tlvs [port-desc] [sys-name] [sys-desc] [sys-cap]
no tx-tlvs
- Context** config>port>ethernet>lldp>dstmac
- Description** This command specifies which LLDP TLVs to transmit.
The **no** form of the command resets the value to the default.
- Default** no tx-tlvs
- Parameters** **port-desc** — Indicates that the LLDP agent should transmit port description TLVs.
sys-name — Indicates that the LLDP agent should transmit system name TLVs.
sys-desc — Indicates that the LLDP agent should transmit system description TLVs.
sys-cap — Indicates that the LLDP agent should transmit system capabilities TLVs.

Show Commands

SYSTEM COMMANDS

connections

Syntax `connections [address ip-address [interface interface-name]] [port port-number] [detail]`

Context `show>system`

Description This command displays UDP and TCP connection information. If no command line options are specified, a summary of the TCP and UDP connections displays.

Parameters *ip-address* — Displays only the connection information for the specified IP address.

Values

| | |
|---------------|---|
| ipv4-address: | a.b.c.d (host bits must be 0) |
| ipv6-address: | x:x:x:x:x:x:x[-interface] |
| | x:x:x:x:x:x:d.d.d.d[-interface] |
| x: | [0 — FFFF]H |
| d: | [0 — 255]D |
| interface: | 32 characters maximum, mandatory for link local addresses |

port-number — Displays only the connection information for the specified port number.

Values 0 — 65535

detail — Appends TCP statistics to the display output.

Output **Standard Connection Output** — The following table describes the system connections output fields.

| Label | Description |
|----------------|--|
| Proto | Displays the socket protocol, either TCP or UDP. |
| RecvQ | Displays the number of input packets received by the protocol. |
| TxmtQ | Displays the number of output packets sent by the application. |
| Local Address | Displays the local address of the socket. The socket port is separated by a period. |
| Remote Address | Displays the remote address of the socket. The socket port is separated by a period. |
| State | Listen — The protocol state is in the listen mode.
Established — The protocol state is established. |

| Label | Description (Continued) |
|-------|-------------------------|
|-------|-------------------------|

Sample Output

```
A:ALA-12# show system connections
=====
Connections :
=====
Proto      RecvQ      TxmtQ Local Address      Remote Address      State
-----
TCP         0           0 0.0.0.0.21         0.0.0.0.0          LISTEN
TCP         0           0 0.0.0.0.23         0.0.0.0.0          LISTEN
TCP         0           0 0.0.0.0.179        0.0.0.0.0          LISTEN
TCP         0           0 10.0.0.xxx.51138   10.0.0.104.179     SYN_SENT
TCP         0           0 10.0.0.xxx.51139   10.0.0.91.179      SYN_SENT
TCP         0           0 10.10.10.xxx.646   0.0.0.0.0          LISTEN
TCP         0           0 10.10.10.xxx.646   10.10.10.104.49406 ESTABLISHED
TCP         0           0 11.1.0.1.51140     11.1.0.2.179      SYN_SENT
TCP         0           993 192.168.x.xxx.23   192.168.x.xx.xxxx  ESTABLISHED
UDP         0           0 0.0.0.0.123        0.0.0.0.0          ---
UDP         0           0 0.0.0.0.646        0.0.0.0.0          ---
UDP         0           0 0.0.0.0.17185      0.0.0.0.0          ---
UDP         0           0 10.10.10.xxx.646   0.0.0.0.0          ---
UDP         0           0 127.0.0.1.50130    127.0.0.1.17185   ---
-----
No. of Connections: 14
=====
A:ALA-12#
```

Sample Detailed Output

```
A:ALA-12# show system connections detail
-----
TCP Statistics
-----
packets sent           : 659635
data packets           : 338982 (7435146 bytes)
data packet retransmitted : 73 (1368 bytes)
ack-only packets       : 320548 (140960 delayed)
URG only packet        : 0
window probe packet    : 0
window update packet   : 0
control packets        : 32
packets received       : 658893
acks                   : 338738 for (7435123 bytes)
duplicate acks         : 23
ack for unsent data    : 0
packets received in-sequence : 334705 (5568368 bytes)
completely duplicate packet : 2 (36 bytes)
packet with some dup. data : 0 (0 bytes)
out-of-order packets   : 20 (0 bytes)
packet of data after window : 0 (0 bytes)
```

```

window probe : 0
window update packet : 3
packets received after close : 0
discarded for bad checksum : 0
discarded for bad header offset field : 0
discarded because packet too short : 0
connection request : 4
connection accept : 24
connections established (including accepts) : 27
connections closed : 26 (including 2 drops)
embryonic connections dropped : 0
segments updated rtt : 338742 (of 338747 attempts)
retransmit timeouts : 75
connections dropped by retransmit timeout : 0
persist timeouts : 0
keepalive timeouts : 26
keepalive probes sent : 0
connections dropped by keepalive : 1
pcb cache lookups failed : 0
=====
A:ALA-12#

```

cpu

Syntax `cpu [sample-period seconds]`

Context `show>system`

Description This command displays CPU utilization per task over a sample period.

Parameters `sample-period seconds` — The number of seconds over which to sample CPU task utilization.

Default 1

Values 1 — 5

Output **System CPU Output** — The following table describes the system CPU output fields.

Table 32: Show System CPU Output Fields

| Label | Description |
|-----------------|---|
| CPU Utilization | The total amount of CPU time. |
| Name | The process or protocol name. |
| CPU Time (uSec) | The CPU time each process or protocol has used in the specified time. |

Table 32: Show System CPU Output Fields (Continued)

| Label | Description |
|----------------|--|
| CPU Usage | The sum of CPU usage of all the processes and protocols. |
| Capacity Usage | Displays the level the specified service is being utilized. When this number hits 100%, this part of the system is busied out. There may be extra CPU cycles still left for other processes, but this service is running at capacity.
This column does not reflect the true CPU utilization value; that data is still available in the CPU Usage column. This column is the busiest task in each group, where busiest is defined as either actually running or blocked attempting to acquire a lock. |

Sample Output

```
*A:cses-E11# show system cpu sample-period 2
=====
CPU Utilization (Sample period: 2 seconds)
=====
Name                               CPU Time      CPU Usage     Capacity
                                (uSec)                               Usage
-----
BFD                                 10            ~0.00%        ~0.00%
BGP                                  0             0.00%         0.00%
CFLOWD                               61            ~0.00%        ~0.00%
Cards & Ports                        8,332         0.41%         0.08%
DHCP Server                          79            ~0.00%        ~0.00%
ICC                                   408           0.02%         0.01%
IGMP/MLD                             1,768         0.08%         0.08%
IOM                                  17,197        0.85%         0.31%
IP Stack                             4,080         0.20%         0.09%
IS-IS                                1,213         0.06%         0.06%
ISA                                  2,496         0.12%         0.07%
LDP                                   0             0.00%         0.00%
Logging                              32            ~0.00%        ~0.00%
MPLS/RSVP                           2,380         0.11%         0.08%
MSDP                                  0             0.00%         0.00%
Management                          5,969         0.29%         0.15%
OAM                                   907           0.04%         0.02%
OSPF                                  25            ~0.00%        ~0.00%
PIM                                  5,600         0.27%         0.27%
RIP                                   0             0.00%         0.00%
RTM/Policies                         0             0.00%         0.00%
Redundancy                          3,635         0.18%         0.13%
SIM                                  1,462         0.07%         0.04%
SNMP Daemon                         0             0.00%         0.00%
Services                            2,241         0.11%         0.05%
Stats                                 0             0.00%         0.00%
Subscriber Mgmt                     2,129         0.10%         0.04%
System                              8,802         0.43%         0.17%
Traffic Eng                          0             0.00%         0.00%
VRRP                                  697           0.03%         0.02%
WEB Redirect                        125           ~0.00%        ~0.00%
```



```

-----
Total                2,014,761          100.00%
  Idle                1,945,113           96.54%
  Usage                69,648              3.45%
Busiest Core Utilization 69,648              3.45%
-----
*A:cses-E11#

```

cron

Syntax `cron`

Context `show>cron`

Description This command enters the show CRON context.

action

Syntax `action [action-name] [owner action-owner] run-history run-state`

Context `show>cron#`

Description This command displays cron action parameters.

Parameters `action action-name` — Specifies the action name.

Values maximum 32 characters

`owner action-owner` — Specifies the owner name.

Default TiMOS CLI

`run-history run-state` — Specifies the state of the test to be run.

Values executing, initializing, terminated

Output The following table describes the show cron action output fields.

| Label | Description |
|-----------------------|--|
| Action | Displays the name of the action. |
| Action owner | The name of the action owner. |
| Administrative status | Enabled — Administrative status is enabled
Disabled — Administrative status is disabled |
| Script | The name of the script |
| Script owner | The name of the script owner. |

System Commands

| Label | Description (Continued) |
|-----------------------------|--|
| Script source location | Displays the location of scheduled script. |
| Max running allowed | Displays the maximum number of allowed sessions. |
| Max completed run histories | Displays the maximum number of sessions previously run. |
| Max lifetime allowed | Displays the maximum amount of time the script may run. |
| Completed run histories | Displays the number of completed sessions. |
| Executing run histories | Displays the number of sessions in the process of executing. |
| Initializing run histories | Displays the number of sessions ready to run/queued but not executed. |
| Max time run history saved | Displays the maximum amount of time to keep the results from a script run. |
| Last change | Displays the system time a change was made to the configuration. |

Sample Output

```
*A:Redundancy# show cron action run-history terminated
=====
CRON Action Run History
=====
Action "test"
Owner "TiMOS CLI"
-----
Script Run #17
-----
Start time      : 2006/11/06 20:30:09      End time       : 2006/11/06 20:35:24
Elapsed time    : 0d 00:05:15             Lifetime      : 0d 00:00:00
State          : terminated               Run exit code : noError
Result time    : 2006/11/06 20:35:24     Keep history  : 0d 00:49:57
Error time     : never
Results file   : ftp://*:*@192.168.15.18/home/testlab_bgp/cron/_20061106-203008.
                out
Run exit      : Success
-----
Script Run #18
-----
Start time      : 2006/11/06 20:35:24      End time       : 2006/11/06 20:40:40
Elapsed time    : 0d 00:05:16             Lifetime      : 0d 00:00:00
State          : terminated               Run exit code : noError
Result time    : 2006/11/06 20:40:40     Keep history  : 0d 00:55:13
Error time     : never
Results file   : ftp://*:*@192.168.15.18/home/testlab_bgp/cron/_20061106-203523.
                out
Run exit      : Success
```

```

-----
*A:Redundancy#

*A:Redundancy# show cron action run-history executing
=====
CRON Action Run History
=====
Action "test"
Owner "TiMOS CLI"
-----
Script Run #20
-----
Start time      : 2006/11/06 20:46:00      End time       : never
Elapsed time    : 0d 00:00:56             Lifetime       : 0d 00:59:04
State          : executing                Run exit code  : noError
Result time     : never                   Keep history   : 0d 01:00:00
Error time      : never
Results file    : ftp://*:*@192.168.15.18/home/testlab_bgp/cron/_20061106-204559.
                    out
=====
*A:Redundancy#

*A:Redundancy# show cron action run-history initializing
=====
CRON Action Run History
=====
Action "test"
Owner "TiMOS CLI"
-----
Script Run #21
-----
Start time      : never                   End time       : never
Elapsed time    : 0d 00:00:00             Lifetime       : 0d 01:00:00
State          : initializing             Run exit code  : noError
Result time     : never                   Keep history   : 0d 01:00:00
Error time      : never
Results file    : none
-----
Script Run #22
-----
Start time      : never                   End time       : never
Elapsed time    : 0d 00:00:00             Lifetime       : 0d 01:00:00
State          : initializing             Run exit code  : noError
Result time     : never                   Keep history   : 0d 01:00:00
Error time      : never
Results file    : none
-----
Script Run #23
-----
Start time      : never                   End time       : never
Elapsed time    : 0d 00:00:00             Lifetime       : 0d 01:00:00
State          : initializing             Run exit code  : noError
Result time     : never                   Keep history   : 0d 01:00:00
Error time      : never
Results file    : none
=====
*A:Redundancy#

```

schedule

Syntax `schedule [schedule-name] [owner schedule-owner]`

Context `show>cron#`

Description This command displays cron schedule parameters.

Parameters *schedule-name* — Displays information for the specified scheduler name.
owner schedule-owner — Displays information for the specified scheduler owner.

Output The following table describes the show cron schedule output fields.

```
A:sim1>show>cron schedule test
```

| Label | Description |
|-------------------------|--|
| Schedule name | Displays the schedule name. |
| Schedule owner | Displays the owner name of the action. |
| Description | Displays the schedule's description. |
| Administrative status | Enabled — The administrative status is enabled.
Disabled — Administratively disabled. |
| Operational status | Enabled — The operational status is enabled.
Disabled — Operationally disabled. |
| Action | Displays the action name |
| Action owner | Displays the name of action owner. |
| Script | Displays the name of the script. |
| Script owner | Displays the name of the script. |
| Script owner | Displays the name of the of script owner. |
| Script source location | Displays the location of scheduled script. |
| Script results location | Displays the location where the script results have been sent. |
| Schedule type | Periodic — Displays a schedule which ran at a given interval.
Calendar — Displays a schedule which ran based on a calendar.
Oneshot — Displays a schedule which ran one time only. |
| Interval | Displays the interval between runs of an event. |
| Next scheduled run | Displays the time for the next scheduled run. |

| Label | Description (Continued) |
|------------------------------|---|
| Weekday | Displays the configured weekday. |
| Month | Displays the configured month. |
| Day of Month | Displays the configured day of month. |
| Hour | Displays the configured hour. |
| Minute | Displays the configured minute. |
| Number of scheduled runs | Displays the number of scheduled sessions. |
| Last scheduled run | Displays the last scheduled session. |
| Number of scheduled failures | Displays the number of scheduled sessions that failed to execute. |
| Last scheduled failure | Displays the last scheduled session that failed to execute. |
| Last failure time | Displays the system time of the last failure. |

```

=====
CRON Schedule Information
=====
Schedule                : test
Schedule owner          : TiMOS CLI
Description              : none
Administrative status   : enabled
Operational status      : enabled
Action                  : test
Action owner            : TiMOS CLI
Script                  : test
Script Owner            : TiMOS CLI
Script source location  : ftp://*****:*****@192.168.15.1/home/testlab_bgp
                        /cron/test1.cfg
Script results location : ftp://*****:*****@192.168.15.1/home/testlab_bgp
                        /cron/res

Schedule type           : periodic
Interval                : 0d 00:01:00 (60 seconds)
Next scheduled run      : 0d 00:00:42
Weekday                 : tuesday
Month                   : none
Day of month            : none
Hour                    : none
Minute                  : none
Number of schedule runs : 10
Last schedule run       : 2008/01/01 17:20:52
Number of schedule failures : 0
Last schedule failure   : no error
Last failure time       : never
=====
A:sim1>show>cron

```

System Commands

script

Syntax `script [script-name] [owner script-owner]`

Context `show>cron#`

Description This command displays cron script parameters.

Parameters *schedule-name* — Displays information for the specified script.
owner schedule-owner — Displays information for the specified script owner.

Output The following table describes the show cron script output fields.

| Label | Description |
|------------------------|---|
| Script | Displays the name of the script. |
| Script owner | Displays the owner name of script. |
| Administrative status | Enabled — Administrative status is enabled.
Disabled — Administratively abled. |
| Operational status | Enabled — Operational status is enabled.
Disabled — Operationally disabled. |
| Script source location | Displays the location of scheduled script. |
| Last script error | Displays the system time of the last error. |
| Last change | Displays the system time of the last change. |

Sample Output

```
A:sim1>show>cron# script
=====
CRON Script Information
=====
Script                : test
Owner name            : TiMOS CLI
Description           : asd
Administrative status : enabled
Operational status    : enabled
Script source location : ftp://*****:*****@192.168.15.1/home/testlab_bgp
                       /cron/test1.cfg
Last script error     : none
Last change           : 2006/11/07 17:10:03
=====
A:sim1>show>cron#
```

information

Syntax `information`

Context `show>system`

Description This command displays general system information including basic system, SNMP server, last boot and DNS client information.

Output **System Information Output** — The following table describes the system information output fields.

| Label | Description |
|------------------------|--|
| System Name | The configured system name. |
| System Contact | A text string that describes the system contact information. |
| System Location | A text string that describes the system location. |
| System Coordinates | A text string that describes the system coordinates. |
| System Up Time | The time since the last boot. |
| SNMP Port | The port number used by this node to receive SNMP request messages and to send replies. |
| SNMP Engine ID | The SNMP engineID to uniquely identify the SNMPv3 node. |
| SNMP Max Message Size | The maximum SNMP packet size generated by this node. |
| SNMP Admin State | Enabled — SNMP is administratively enabled and running.
Disabled — SNMP is administratively shutdown and not running. |
| SNMP Oper State | Enabled — SNMP is operationally enabled.
Disabled — SNMP is operationally disabled. |
| SNMP Index Boot Status | Persistent — System indexes are saved between reboots.
Not Persistent — System indexes are not saved between reboots. |
| Telnet/SSH/FTP Admin | Displays the administrative state of the Telnet, SSH, and FTP sessions. |
| Telnet/SSH/FTP Oper | Displays the operational state of the Telnet, SSH, and FTP sessions. |
| BOF Source | The location of the BOF. |
| Image Source | Primary — Indicates that the directory location for runtime image file was loaded from the primary source. |

| Label | Description (Continued) |
|-------------------------|---|
| | <p>Secondary – Indicates that the directory location for runtime image file was loaded from the secondary source.</p> <p>Tertiary – Indicates that the directory location for runtime image file was loaded from the tertiary source.</p> |
| Config Source | <p>Primary – Indicates that the directory location for configuration file was loaded from the primary source.</p> <p>Secondary – Indicates that the directory location for configuration file was loaded from the secondary source.</p> <p>Tertiary – Indicates that the directory location for configuration file was loaded from the tertiary source.</p> |
| DNS Resolve Preference | <p>ipv4-only – Dns-names are queried for A-records only.</p> <p>ipv6-first – Dns-server will be queried for AAAA-records first and a successful reply is not received, the dns-server is queried for A-records.</p> |
| Last Booted Config File | The URL and filename of the last loaded configuration file. |
| Last Boot Cfg Version | The date and time of the last boot. |
| Last Boot Config Header | Displays header information such as image version, date built, date generated. |
| Last Boot Index Version | The version of the persistence index file read when this card was last rebooted. |
| Last Boot Index Header | The header of the persistence index file read when this card was last rebooted. |
| Last Saved Config | The location and filename of the last saved configuration file. |
| Time Last Saved | The date and time of the last time configuration file was saved. |
| Changes Since Last Save | <p>Yes – There are unsaved configuration file changes.</p> <p>No – There are no unsaved configuration file changes.</p> |
| Time Last Modified | The date and time of the last modification. |
| Max Cfg/BOF Backup Rev | The maximum number of backup revisions maintained for a configuration file. This value also applies to the number of revisions maintained for the BOF file. |
| Cfg-OK Script | URL – The location and name of the CLI script file executed following successful completion of the boot-up configuration file execution. |
| Cfg-OK Script Status | <p>Successful/Failed – The results from the execution of the CLI script file specified in the Cfg-OK Script location.</p> <p>Not used – No CLI script file was executed.</p> |

| Label | Description (Continued) |
|------------------------|---|
| Cfg-Fail Script | URL — The location and name of the CLI script file executed following a failed boot-up configuration file execution.
Not used — No CLI script file was executed. |
| Cfg-Fail Script Status | Successful/Failed — The results from the execution of the CLI script file specified in the Cfg-Fail Script location.
Not used — No CLI script file was executed. |
| Management IP Addr | The management IP address and mask. |
| DNS Server | The IP address of the DNS server. |
| DNS Domain | The DNS domain name of the node. |
| BOF Static Routes | To — The static route destination.

Next Hop — The next hop IP address used to reach the destination.
Metric — Displays the priority of this static route versus other static routes.
None — No static routes are configured. |

Sample Output

```
A:7710-3# show system information
=====
System Information
=====
System Name           : sim150
System Type           : 7710 SR-c12
System Version        : B-6.0.B1-12
System Contact        :
System Location       :
System Coordinates    :
System Active Slot    : A
System Up Time        : 17 days, 00:44:55.73 (hr:min:sec)

SNMP Port             : 161
SNMP Engine ID        : 0000197f000008096ff000000
SNMP Max Message Size : 1500
SNMP Admin State      : Enabled
SNMP Oper State       : Enabled
SNMP Index Boot Status : Not Persistent
SNMP Sync State       : OK

Tel/Tel6/SSH/FTP Admin : Enabled/Disabled/Enabled/Disabled
Tel/Tel6/SSH/FTP Oper  : Up/Down/Up/Down

BOF Source            : cf3:
Image Source          : primary
Config Source         : primary
Last Booted Config File: ftp://*: *@138.120.193.125/tftpboot/simbed150/sim150/co
nfig.cfg
```

System Commands

```
Last Boot Cfg Version : THU JUN 07 10:12:46 2007 UTC
Last Boot Config Header: # TiMOS-B-0.0.I1522 both/i386 ALCATEL SR 7710
                        Copyright (c) 2000-2007 Alcatel-Lucent. # All rights
                        reserved. All use subject to applicable license
                        agreements. # Built on Wed Jun 6 19:25:26 PDT 2007 by
                        builder in /rel0.0/I1522/panos/main # Generated THU
                        JUN 07 10:12:46 2007 UTC

Last Boot Index Version: N/A
Last Boot Index Header : # TiMOS-B-0.0.I1522 both/i386 ALCATEL SR 7710
                        Copyright (c) 2000-2007 Alcatel-Lucent. # All rights
                        reserved. All use subject to applicable license
                        agreements. # Built on Wed Jun 6 19:25:26 PDT 2007 by
                        builder in /rel0.0/I1522/panos/main # Generated THU
                        JUN 07 10:12:46 2007 UTC

Last Saved Config      : N/A
Time Last Saved       : N/A
Changes Since Last Save: Yes
Time Last Modified    : 2008/02/22 17:52:40
Max Cfg/BOF Backup Rev : 5
Cfg-OK Script         : ftp://*:~@xxx.xxx.xx.xxx/home/spr210/images/env.cfg
Cfg-OK Script Status  : success
Cfg-Fail Script       : N/A
Cfg-Fail Script Status: not used

Management IP Addr    : 138.120.192.150/24
Primary DNS Server    : 138.120.118.196
Secondary DNS Server  : N/A
Tertiary DNS Server   : N/A
DNS Domain            : ca.newbridge.com
DNS Resolve Preference : ipv4-only
BOF Static Routes    :
  To                   Next Hop
  128.0.0.0/8          xxx.xxx.xx.xxx
  138.120.0.0/16       xxx.xxx.xx.xxx
  172.0.0.0/8          xxx.xxx.xx.xxx

ATM Location ID      : 01:00:00:00:00:00:00:00:00:00:00:00:00:00:00:00
ATM OAM Retry Up     : 2
ATM OAM Retry Down   : 4
ATM OAM Loopback Period: 10
=====
A:7710-3#
```

lldp

Syntax **lldp neighbor**

Context show>system

Description This command displays neighbor information for all configured ports without having to specify each individual port ID.

Parameters **neighbor** — Displays LLDP neighbor information.

Sample Output

```
*A:Dut-C# show system lldp neighbor
Link Layer Discovery Protocol (LLDP) System Information
=====
NB = nearest-bridge   NTPMR = nearest-non-tpmr   NC = nearest-customer
=====
Port      Scope  Chassis ID           Index  Port ID   System Name
-----
1/1/1     NB     16:2f:ff:00:00:00    1      35717120  Dut-A
2/1/2     NB     16:34:ff:00:00:00    1      35782656  Dut-D
2/1/1     NB     16:36:ff:00:00:00    2      35684352  Dut-E
1/1/2     NB     16:30:ff:00:00:00    2      35749888  Dut-B
1/1/3     NB     16:30:ff:00:00:00    3      35782656  Dut-B
2/1/3     NB     16:30:ff:00:00:00    3      35815424  Dut-B
=====
Number of neighbors : 6
*A:Dut-C#
```

```
A:GHR-API# show system lldp neighbor
Link Layer Discovery Protocol (LLDP) System Information
=====
NB = nearest-bridge   NTPMR = nearest-non-tpmr   NC = nearest-customer
=====
Port      Scope  Chassis ID           Index  Port ID   System Name
-----
1/1/6     NTPMR 00:21:05:1b:bc:17    1      36044800  RXI-AMI
1/1/8     NTPMR 00:21:06:6d:bd:53    2      36110336  YOY-WOW
1/1/9     NTPMR 00:21:08:2b:ab:81    3      36143104  FRI-MON
=====
Number of neighbors : 3
```

memory-pools**Syntax** memory-pools**Context** show>system**Description** This command displays system memory status.**Output** **Memory Pools Output** — The following table describes memory pool output fields.**Table 33: Show Memory Pool Output Fields**

| Label | Description |
|--------------|---|
| Name | The name of the system or process. |
| Max Allowed | Integer — The maximum allocated memory size.
No Limit — No size limit. |
| Current Size | The current size of the memory pool. |

Table 33: Show Memory Pool Output Fields (Continued)

| Label | Description |
|--------------------|---|
| Max So Far | The largest amount of memory pool used. |
| In Use | The current amount of the memory pool currently in use. |
| Current Total Size | The sum of the Current Size column. |
| Total In Use | The sum of the In Use column. |
| Available Memory | The amount of available memory. |

Sample Output

```
A:ALA-1# show system memory-pools
=====
Memory Pools
=====
Name                Max Allowed      Current Size      Max So Far        In Use
-----
System              No limit         24,117,248       24,117,248       16,974,832
Icc                  8,388,608        1,048,576        1,048,576        85,200
RTM/Policies        No limit         5,242,912        5,242,912        3,944,104
OSPF                 No limit         3,145,728        3,145,728        2,617,384
MPLS/RSVP           No limit         9,769,480        9,769,480        8,173,760
LDP                  No limit         0                0                0
IS-IS               No limit         0                0                0
RIP                  No limit         0                0                0
VRRP                 No limit         1,048,576        1,048,576        96
BGP                  No limit         2,097,152        2,097,152        1,624,800
Services             No limit         2,097,152        2,097,152        1,589,824
IOM                  No limit         205,226,800      205,226,800      202,962,744
SIM                  No limit         1,048,576        1,048,576        392
CFLOWD              No limit         0                1,048,576        0
IGMP                 No limit         0                0                0
PIM                  No limit         0                0                0
ATM                  No limit         2,872,648        2,872,648        2,790,104
MMPI                 No limit         0                0                0
MFIB                 No limit         0                0                0
PIP                  No limit         79,943,024       79,943,024       78,895,248
MBUF                 67,108,864      5,837,328        5,837,328        4,834,280
-----
Current Total Size : 343,495,200 bytes
Total In Use       : 324,492,768 bytes
Available Memory   : 640,178,652 bytes
=====
A:ALA-1#
```

ntp

Syntax ntp

Context show>system

Description This command displays NTP protocol configuration and state.

Output **Show NTP Output** — The following table describes NTP output fields.

| Label | Description |
|----------------------|---|
| Enabled | yes — NTP is enabled.
no — NTP is disabled. |
| Admin Status | yes — Administrative state is enabled.
no — Administrative state is disabled. |
| NTP Server | Displays NTP server state of this node. |
| Stratum | Displays stratum level of this node. |
| Oper Status | yes — The operational state is enabled.
no — The operational state is disabled. |
| Auth Check | Displays the authentication requirement |
| System Ref. ID | IP address of this node or a 4-character ASCII code showing the state. |
| Auth Error | Displays the number of authentication errors. |
| Auth Errors Ignored | Displays the number of authentication errors ignored. |
| Auth key ID Errors | Displays the number of key identification errors . |
| Auth Key Type Errors | Displays the number of authentication key type errors. |
| Reject | The peer is rejected and will not be used for synchronization. Rejection reasons could be the peer is unreachable, the peer is synchronized to this local server so synchronizing with it would create a sync loop, or the synchronization distance is too large. This is the normal startup state. |
| Invalid | The peer is not maintaining an accurate clock. This peer will not be used for synchronization. |
| Excess | The peer's synchronization distance is greater than ten other peers. This peer will not be used for synchronization. |
| Outlyer | The peer is discarded as an outlyer. This peer will not be used for synchronization. |
| Candidate | The peer is accepted as a possible source of synchronization. |
| Selected | The peer is an acceptable source of synchronization, but its synchronization distance is greater than six other peers. |

| Label | Description (Continued) |
|--------------|---|
| Chosen | The peer is chosen as the source of synchronization. |
| ChosenPPS | The peer is chosen as the source of synchronization, but the actual synchronization is occurring from a pulse-per-second (PPS) signal. |
| Remote | The IP address of the remote NTP server or peer with which this local host is exchanging NTP packets. |
| Reference ID | <p>When stratum is between 0 and 15 this field shows the IP address of the remote NTP server or peer with which the remote is exchanging NTP packets. For reference clocks, this field shows the identification assigned to the clock, such as, “.GPS.” For an NTP server or peer, if the client has not yet synchronized to a server/peer, the status cannot be determined and displays the following codes:</p> <p>Peer Codes:</p> <p>ACST — The association belongs to any cast server.</p> <p>AUTH — Server authentication failed. Please wait while the association is restarted.</p> <p>AUTO — Autokey sequence failed. Please wait while the association is restarted.</p> <p>BCST — The association belongs to a broadcast server.</p> <p>CRPT — Cryptographic authentication or identification failed. The details should be in the system log file or the cryptostats statistics file, if configured. No further messages will be sent to the server.</p> <p>DENY — Access denied by remote server. No further messages will be sent to the server.</p> <p>DROP — Lost peer in symmetric mode. Please wait while the association is restarted.</p> <p>RSTR — Access denied due to local policy. No further messages will be sent to the server.</p> <p>INIT — The association has not yet synchronized for the first time.</p> <p>MCST — The association belongs to a manycast server.</p> <p>NKEY — No key found. Either the key was never installed or is not trusted.</p> <p>RATE — Rate exceeded. The server has temporarily denied access because the client exceeded the rate threshold.</p> <p>RMOT — The association from a remote host running ntpdc has had unauthorized attempted access.</p> <p>STEP — A step change in system time has occurred, but the association has not yet resynchronized.</p> <p>System Codes</p> <p>INIT — The system clock has not yet synchronized for the first time.</p> <p>STEP — A step change in system time has occurred, but the system clock has not yet resynchronized.</p> |
| St | Stratum level of this node. |

| Label | Description (Continued) |
|--------|---|
| Auth | yes — Authentication is enabled.
no — Authentication is disabled. |
| Poll | Polling interval in seconds. |
| R | Yes — The NTP peer or server has been reached at least once in the last 8 polls.
No — The NTP peer or server has not been reached at least once in the last 8 polls. |
| Offset | The time between the local and remote UTC time, in milliseconds. |

Sample Output

```
A:pc-40>config>system>time>ntp# show system ntp
```

```
=====
NTP Status
```

```
=====
Enabled           : Yes           Stratum           : 3
Admin Status     : up            Oper Status       : up
Server enabled   : No            Server keyId      : none
System Ref Id    : 192.168.15.221  Auth Check       : Yes
=====
```

```
A:pc-40>config>system>time>ntp# show system ntp all
```

```
=====
NTP Status
```

```
=====
Enabled           : Yes           Stratum           : 3
Admin Status     : up            Oper Status       : up
Server enabled   : No            Server keyId      : none
System Ref Id    : 192.168.15.221  Auth Check       : Yes
=====
```

```
NTP Active Associations
```

```
=====
State   Remote      Reference ID   St  Type  Auth  Poll  R  Offset
-----
reject  192.168.15.221  192.168.14.50  2  srvr  none  64   y  0.901
chosen  192.168.15.221  192.168.14.50  2  mclnt none  64   y  1.101
=====
```

```
A:pc-40>config>system>time>ntp#
```

```
A:pc-40>config>system>time>ntp# show system ntp detail
```

```
=====
NTP Status
```

```
=====
Enabled           : Yes           Stratum           : 3
Admin Status     : up            Oper Status       : up
Server enabled   : No            Server keyId      : none
System Ref Id    : 192.168.15.221  Auth Check       : Yes
Auth Errors      : 0              Auth Errors Ignored : 0
=====
```

System Commands

```
Auth Key Id Errors : 0                      Auth Key Type Errors : 0
=====
NTP Configured Broadcast/Multicast Interfaces
=====
vRouter      Interface      Address          Type   Auth   Poll
-----
Base         il/1/1          Host-ones       bcast yes    off
management  management      224.0.1.1       mcast no     off
Base         t2              224.0.1.1       bclnt no     n/a
management  management      224.0.1.1       mclnt no     n/a
=====
A:pc-40>config>system>time>ntp#
```

```
A:pc-40>config>system>time>ntp# show system ntp detail all
=====
NTP Status
=====
Enabled           : Yes           Stratum           : 3
Admin Status     : up           Oper Status      : up
Server enabled   : No           Server keyId     : none
System Ref Id    : 192.168.15.221 Auth Check       : Yes
Auth Errors      : 0           Auth Errors Ignored : 0
Auth Key Id Errors : 0       Auth Key Type Errors : 0
=====
NTP Configured Broadcast/Multicast Interfaces
=====
vRouter      Interface      Address          Type   Auth   Poll
-----
Base         il/1/1          Host-ones       bcast yes    off
management  management      224.0.1.1       mcast no     off
Base         t2              224.0.1.1       bclnt no     n/a
management  management      224.0.1.1       mclnt no     n/a
=====
NTP Active Associations
=====
State   Remote      Reference ID   St  Type  Auth  Poll  R  Offset
-----
reject  192.168.15.221 192.168.14.50  2  srvr  none  64   y  0.901
chosen  192.168.15.221 192.168.1.160  4  mclnt none  64   y  1.101
=====
A:pc-40>config>system>time>ntp#
```

rollback

Syntax rollback

Context show>system

Description This command displays rollback configuration and state.

Sample Output

```
A:dut-a_a># show system rollback
```



```

=====
Rollback Information
=====
Rollback Location          : cf1:/Rollback
Save
  Last Rollback Save Result : In Progress, Successful or Failed
  Last Save Completion Time : 10/15/2010 21:24:06
Revert
  In Progress              : Yes, No
  Last Revert Initiated Time : 10/15/2010 21:26:23
  Last Revert Initiated User : xyz
  Last Initiated Checkpoint  : cf1:/Rollback.rb.3
  Last Completed Revert Result : Successful or Failed
  Last Revert Completion Time : 10/15/2010 21:27:19
=====
Rollback Files
=====
Idx      Suffix  Creation time      Release  User
      Comment
-----
latest  .rb      2010/10/15 21:24:02  9.0.R4  fred
        This checkpoint was saved after the 3 VPLS services were created
1       .rb.1    2010/10/15 21:23:58  9.0.R4  John
        John's checkpoint on Sunday
2       .rb.2    2010/10/15 21:23:52  9.0.R4  admin
        A long checkpoint comment that an operator is using to summarize
        various some of the changes that were made. They may even have so
        much to say that they use the maximum comment size. Notice that
        words are not chopped.
...
9       .rb.9    2010/10/14 22:00:01  9.0.R4  admin
        VPLS services 1000-2000 created
...
53      .rb.53   2010/10/14 22:10:10  9.0.R4  admin
-----
No. of Rollback Files: 10
=====

```

sntp

Syntax sntp

Context show>system

Description This command displays SNTP protocol configuration and state.

Output **Show SNTP Output** — The following table describes SNTP output fields.

Table 34: Show System SNTP Output Fields

| Label | Description |
|-------------|---|
| SNTP Server | The SNTP server address for SNTP unicast client mode. |
| Version | The SNTP version number, expressed as an integer. |

Table 34: Show System SNTP Output Fields (Continued)

| Label | Description |
|------------|---|
| Preference | Normal – When more than one time server is configured, one server can be configured to have preference over another.

Preferred – Indicates that this server has preference over another. |
| Interval | The frequency, in seconds, that the server is queried. |

Sample Output

```
A:ALA-1# show system sntp
=====
SNTP
=====
SNTP Server          Version          Preference       Interval
-----
10.10.20.253        3                Preferred        64
=====
A:ALA-1#
```

thresholds

Syntax thresholds

Context show>system

Description This command display system monitoring thresholds.

Output **Thresholds Output** — following table describes system threshold output fields.

| Label | Description |
|------------------|--|
| Variable | Displays the variable OID. |
| Alarm Id | Displays the numerical identifier for the alarm. |
| Last Value | Displays the last threshold value. |
| Rising Event Id | Displays the identifier of the RMON rising event. |
| Threshold | Displays the identifier of the RMON rising threshold. |
| Falling Event Id | Displays the identifier of the RMON falling event. |
| Threshold | Displays the identifier of the RMON falling threshold. |
| Sample Interval | Displays the polling interval, in seconds, over which the data is sampled and compared with the rising and falling thresholds. |

| Label | Description (Continued) |
|---------------|---|
| Sample Type | Displays the method of sampling the selected variable and calculating the value to be compared against the thresholds. |
| Startup Alarm | Displays the alarm that may be sent when this alarm is first created. |
| Owner | Displays the owner of this alarm. |
| Description | Displays the event cause. |
| Event Id | Displays the identifier of the threshold event. |
| Last Sent | Displays the date and time the alarm was sent. |
| Action Type | log — An entry is made in the RMON-MIB log table for each event occurrence. This does not create a TiMOS logger entry. The RMON-MIB log table entries can be viewed using the show>system>thresholds CLI command.
trap — A TiMOS logger event is generated. The TiMOS logger utility then distributes the notification of this event to its configured log destinations which may be CONSOLE, telnet session, memory log, cflash file, syslog, or SNMP trap destinations logs.
both — Both a entry in the RMON-MIB logTable and a TiMOS logger event are generated.
none — No action is taken |
| Owner | Displays the owner of the event. |

Sample Output

```
A:ALA-48# show system thresholds
=====
Threshold Alarms
=====
Variable: tmnxCpmFlashUsed.1.11.1
Alarm Id      : 1      Last Value : 835
Rising Event Id : 1      Threshold  : 5000
Falling Event Id : 2      Threshold  : 2500
Sample Interval : 2147483* SampleType : absolute
Startup Alarm  : either Owner      : TiMOS CLI
Variable: tmnxCpmFlashUsed.1.11.1
Alarm Id      : 2      Last Value : 835
Rising Event Id : 3      Threshold  : 10000
Falling Event Id : 4      Threshold  : 5000
Sample Interval : 2147483* SampleType : absolute
Startup Alarm  : rising Owner      : TiMOS CLI
Variable: sgiMemoryUsed.0
Alarm Id      : 3      Last Value : 42841056
Rising Event Id : 5      Threshold  : 4000
Falling Event Id : 6      Threshold  : 2000
Sample Interval : 2147836 SampleType : absolute
Startup Alarm  : either Owner      : TiMOS CLI
=====
* indicates that the corresponding row element may have been truncated.
```

System Commands

```

=====
Threshold Events
=====
Description: TiMOS CLI - cflash capacity alarm rising event
Event Id      : 1      Last Sent   : 10/31/2006 08:47:59
Action Type   : both   Owner        : TiMOS CLI
Description: TiMOS CLI - cflash capacity alarm falling event
Event Id      : 2      Last Sent   : 10/31/2006 08:48:00
Action Type   : both   Owner        : TiMOS CLI
Description: TiMOS CLI - cflash capacity warning rising event
Event Id      : 3      Last Sent   : 10/31/2006 08:47:59
Action Type   : both   Owner        : TiMOS CLI
Description: TiMOS CLI - cflash capacity warning falling event
Event Id      : 4      Last Sent   : 10/31/2006 08:47:59
Action Type   : both   Owner        : TiMOS CLI
Description: TiMOS CLI - memory usage alarm rising event
Event Id      : 5      Last Sent   : 10/31/2006 08:48:00
Action Type   : both   Owner        : TiMOS CLI
Description: TiMOS CLI - memory usage alarm falling event
Event Id      : 6      Last Sent   : 10/31/2006 08:47:59
Action Type   : both   Owner        : TiMOS CLI
=====
Threshold Events Log
=====
Description      : TiMOS CLI - cflash capacity alarm falling event : value=835, <=2500 : alarm-index 1, event
                  -index 2 alarm-variable OID tmnxCpmFlashUsed.
                  1.11.1
Event Id         : 2      Time Sent    : 10/31/2006 08:48:00
Description      : TiMOS CLI - memory usage alarm rising event :
                  value=42841056, >=4000 : alarm-index 3, event
                  -index 5 alarm-variable OID sgiMemoryUsed.0
Event Id         : 5      Time Sent    : 10/31/2006 08:48:00
=====
A:ALA-48#

```

time

Syntax time

Context show>system

Description This command displays the system time and zone configuration parameters.

Output **System Time Output** — The following table describes system time output fields.

Table 35: Show System Time Output Fields

| Label | Description |
|-------------|---|
| Date & Time | The system date and time using the current time zone. |
| DST Active | Yes — Daylight Savings Time is currently in effect.
No — Daylight Savings Time is not currently in effect. |

Table 35: Show System Time Output Fields (Continued)

| Label | Description |
|---------------------|--|
| Zone | The zone names for the current zone, the non-DST zone, and the DST zone if configured. |
| Zone type | Non-standard – The zone is user-defined.
Standard – The zone is system defined. |
| Offset from UTC | The number of hours and minutes added to universal time for the zone, including the DST offset for a DST zone |
| Offset from Non-DST | The number of hours (always 0) and minutes (0–60) added to the time at the beginning of Daylight Saving Time and subtracted at the end Daylight Saving Time. |
| Starts | The date and time Daylight Saving Time begins. |
| Ends | The date and time Daylight Saving Time ends. |

Sample Output

```

A:ALA-1# show system time
=====
Date & Time
=====
Current Date & Time : 2006/05/05 23:03:13   DST Active       : yes
Current Zone       : PDT                   Offset from UTC  : -7:00
-----
Non-DST Zone      : PST                   Offset from UTC  : -8:00
Zone type         : standard
-----
DST Zone          : PDT                   Offset from Non-DST : 0:60
Starts            : first sunday in april 02:00
Ends              : last sunday in october 02:00
=====
A:ALA-1#

A:ALA-1# show system time (with no DST zone configured)
=====
Date & Time
=====
Current Date & Time : 2006/05/12 11:12:05   DST Active       : no
Current Zone       : APA                   Offset from UTC  : -8:00
-----
Non-DST Zone      : APA                   Offset from UTC  : -8:00
Zone Type         : non-standard
-----
No DST zone configured
=====
A:ALA-1#

```

System Commands

time

Syntax `time`

Context `show`

Description This command displays the current day, date, time and time zone.

The time is displayed either in the local time zone or in UTC depending on the setting of the root level **time-display** command for the console session.

Output **Sample Output**

```
A:ALA-49# show time
Tue Oct 31 12:17:15 GMT 2006
```

tod-suite

Syntax `tod-suite [detail]`
`tod-suite associations`
`tod-suite failed-associations`

Context `show>cron`

Description This command displays information on the configured time-of-day suite.

Output **CRON TOD Suite Output** — The following table describes TOD suite output fields:

Table 36: Show System tod-suite Output Fields

| Label | Description |
|---------------------|---|
| Associations | Shows which SAPs this tod-suite is associated with. |
| failed-associations | Shows the SAPs or Multiservice sites where the TOD Suite could not be applied successfully. |
| Detail | Shows the details of this tod-suite. |

Sample Output

```
A:kerckhot_4# show cron tod-suite suite_sixteen detail
=====
Cron tod-suite details
=====
Name          : suite_sixteen
Type / Id          Time-range          Prio  State
-----
Ingress Qos Policy
  1160           day                5     Inact
  1190           night              6     Activ
Ingress Scheduler Policy
```

```

    SchedPolCust1_Day          day          5      Inact
    SchedPolCust1_Night       night     6      Activ
Egress Qos Policy
    1160                      day          5      Inact
    1190                      night     6      Activ
Egress Scheduler Policy
    SchedPolCust1Egress_Day   day          5      Inact
=====

```

A:kerckhot_4#

The following example shows output for TOD suite associations.

A:kerckhot_4# show cron tod-suite suite_sixteen associations

```

=====
Cron tod-suite associations for suite suite_sixteen
=====

```

Service associations

```

-----
Service Id   : 1                               Type    : VPLS
SAP 1/1/1:1
SAP 1/1/1:2
SAP 1/1/1:3
SAP 1/1/1:4
SAP 1/1/1:5
SAP 1/1/1:6
SAP 1/1/1:20
-----

```

Number of SAP's : 7

Customer Multi-Service Site associations

```

-----
Multi Service Site: mss_1_1
-----

```

Number of MSS's: 1

```

=====
A:kerckhot_4#

```

The following example shows output for TOD suite failed-associations.

A:kerckhot_4# show cron tod-suite suite_sixteen failed-associations

```

=====
Cron tod-suite associations failed
=====

```

tod-suite suite_sixteen : failed association for SAP

```

-----
Service Id   : 1                               Type    : VPLS
SAP 1/1/1:2
SAP 1/1/1:3
SAP 1/1/1:4
SAP 1/1/1:5
SAP 1/1/1:6
SAP 1/1/1:20
-----

```

tod-suite suite_sixteen : failed association for Customer MSS

None

```

-----
Number of tod-suites failed/total : 1/1
=====

```

A:kerckhot_4#

System Commands

Zooming in on one of the failed SAPs, the assignments of QoS and scheduler policies are shown as not as intended:

```
A:kerckhot_4# show service id 1 sap 1/1/1:2
=====
Service Access Points(SAP)
=====
Service Id      : 1
SAP             : 1/1/1:2                Encap           : q-tag
Dot1Q Ethertype : 0x8100                 QinQ Ethertype  : 0x8100
Admin State     : Up                    Oper State      : Up
Flags           : None
Last Status Change : 10/05/2006 18:11:34
Last Mgmt Change  : 10/05/2006 22:27:48
Max Nbr of MAC Addr: No Limit           Total MAC Addr  : 0
Learned MAC Addr : 0                   Static MAC Addr : 0
Admin MTU        : 1518                 Oper MTU        : 1518
Ingress qos-policy : 1130               Egress qos-policy : 1130
Intend Ing qos-pol* : 1190             Intend Egr qos-po* : 1190
Shared Q plcy    : n/a                 Multipoint shared : Disabled
Ingr IP Fltr-Id : n/a                 Egr IP Fltr-Id   : n/a
Ingr Mac Fltr-Id : n/a                 Egr Mac Fltr-Id  : n/a
Ingr IPv6 Fltr-Id : n/a               Egr IPv6 Fltr-Id : n/a
tod-suite       : suite_sixteen        qinq-pbit-marking : both
Egr Agg Rate Limit : max
ARP Reply Agent   : Unknown            Host Conn Verify  : Disabled
Mac Learning      : Enabled            Discard Unkwn Srce: Disabled
Mac Aging         : Enabled            Mac Pinning       : Disabled
L2PT Termination : Disabled           BPDU Translation  : Disabled

Multi Svc Site    : None
I. Sched Pol      : SchedPolCust1
Intend I Sched Pol : SchedPolCust1_Night
E. Sched Pol      : SchedPolCust1Egress
Intend E Sched Pol : SchedPolCust1Egress_Night
Acct. Pol         : None                Collect Stats     : Disabled
Anti Spoofing     : None                Nbr Static Hosts : 0
=====
A:kerckhot_4#
```

If a time-range is specified for a filter entry, use the **show filter** command to view results:

```
A:kerckhot_4# show filter ip 10
=====
IP Filter
=====
Filter Id      : 10                    Applied          : No
Scope         : Template              Def. Action      : Drop
Entries       : 2
-----
Filter Match Criteria : IP
-----
Entry         : 1010
time-range   : day                  Cur. Status     : Inactive
Log Id        : n/a
Src. IP       : 0.0.0.0/0              Src. Port       : None
Dest. IP      : 10.10.100.1/24        Dest. Port      : None
Protocol      : Undefined              Dscp            : Undefined
```



```

ICMP Type      : Undefined
Fragment       : Off
Sampling       : Off
IP-Option      : 0/0
TCP-syn        : Off
Match action   : Forward
Next Hop       : 138.203.228.28
Ing. Matches   : 0
Entry          : 1020
time-range    : night
Log Id         : n/a
Src. IP        : 0.0.0.0/0
Dest. IP       : 10.10.1.1/16
Protocol       : Undefined
ICMP Type      : Undefined
Fragment       : Off
Sampling       : Off
IP-Option      : 0/0
TCP-syn        : Off
Match action   : Forward
Next Hop       : 172.22.184.101
Ing. Matches   : 0
=====
A:kerckhot_4#

```

If a filter is referred to in a TOD Suite assignment, use the show filter associations command to view the output:

```

A:kerckhot_4# show filter ip 160 associations
=====
IP Filter
=====
Filter Id      : 160
Scope          : Template
Entries        : 0
Applied        : No
Def. Action    : Drop
-----
Filter Association : IP
-----
Tod-suite "english_suite"
- ingress, time-range "day" (priority 5)
=====
A:kerckhot_4#

```

redundancy

Syntax redundancy

Context show

Description This command enables the context to show redundancy information.

multi-chassis

Syntax **multi-chassis**

Context show>redundancy

Description This command enables the context to show multi-chassis redundancy information.

all

Syntax **all [detail]**

Context show>redundancy>multi-chassis

Description This command displays brief multi-chassis redundancy information.

Parameters **detail** — Shows detailed multi-chassis redundancy information.

Output **Show Redundancy Multi-Chassis All Output** — The following table describes Redundancy Multi-Chassis All fields:

Table 37: Show Multi-Chassis Redundancy Output Fields

| Label | Description |
|-------------------|--|
| Peer IP Address | Displays the multi-chassis redundancy peer. |
| Description | The text string describing the peer. |
| Authentication | If configured, displays the authentication key used between this node and the MC peer. |
| Source IP Address | Displays the source address used to communicate with the MC peer. |
| Admin State | Displays the administrative state of the peer. |

Sample Output

```

B:Dut-B# show redundancy multi-chassis all
=====
Multi-chassis Peer Table
=====
Peer
-----
Peer IP Address      : 10.10.10.2
Description          : Mc-Lag peer 10.10.10.2
Authentication       : Disabled
Source IP Address    : 0.0.0.0
Admin State          : Enabled
=====
B:Dut-B#

B:Dut-B# show lag detail

```

```

=====
LAG Details
=====
LAG 1
-----
Description: Description For LAG Number 1
-----
Details
-----
Lag-id          : 1                Mode          : access
Adm             : up              Opr           : up
Thres. Exceeded Cnt : 9          Port Threshold : 0
Thres. Last Cleared : 05/20/2006 00:12:35 Threshold Action : down
Dynamic Cost     : false         Encap Type    : null
Configured Address : 1c:71:ff:00:01:41 Lag-IfIndex   : 1342177281
Hardware Address  : 1c:71:ff:00:01:41 Adapt Qos    : distribute
Hold-time Down   : 0.0 sec
LACP            : enabled        Mode          : active
LACP Transmit Intvl : fast      LACP xmit stdby : enabled
Selection Criteria : highest-count Slave-to-partner : disabled
Number of sub-groups: 1         Forced       : -
System Id       : 1c:71:ff:00:00:00 System Priority : 32768
Admin Key       : 32768         Oper Key      : 32666
Prtr System Id  : 20:f4:ff:00:00:00 Prtr System Priority : 32768
Prtr Oper Key   : 32768

MC Peer Address : 10.10.10.2          MC Peer Lag-id : 1
MC System Id    : 00:00:00:33:33:33 MC System Priority : 32888
MC Admin Key    : 32666         MC Active/Standby : active
MC Lacp ID in use : true          MC extended timeout : false
MC Selection Logic : peer decided
MC Config Mismatch : no mismatch
-----
Port-id      Adm   Act/Stdby Opr   Primary  Sub-group  Forced  Prio
-----
331/2/1      up   active   up   yes      1          -       32768
331/2/2      up   active   up           1          -       32768
331/2/3      up   active   up           1          -       32768
331/2/4      up   active   up           1          -       32768
-----
Port-id      Role   Exp  Def  Dist  Col  Syn  Aggr  Timeout  Activity
-----
331/2/1      actor  No   No   Yes  Yes  Yes  Yes  Yes  Yes
331/2/1      partner No   No   Yes  Yes  Yes  Yes  Yes  Yes
331/2/2      actor  No   No   Yes  Yes  Yes  Yes  Yes  Yes
331/2/2      partner No   No   Yes  Yes  Yes  Yes  Yes  Yes
331/2/3      actor  No   No   Yes  Yes  Yes  Yes  Yes  Yes
331/2/3      partner No   No   Yes  Yes  Yes  Yes  Yes  Yes
331/2/4      actor  No   No   Yes  Yes  Yes  Yes  Yes  Yes
331/2/4      partner No   No   Yes  Yes  Yes  Yes  Yes  Yes
=====
B:Dut-B#

```

mc-endpoint

Syntax mc-endpoint statistics

System Commands

mc-endpoint peer *[ip-address]* **statistics**
mc-endpoint endpoint *[mcep-id]* **statistics**
mc-endpoint peer *[ip-address]*

Context show>redundancy>multi-chassis

Description This command displays multi-chassis endpoint information.

Parameters **statistics** — Displays the global statistics for the MC endpoint.

peer *ip-address* — Specifies the IP address of multi-chassis end-point peer.

endpoint *mcep-id* — Specifies the multi-chassis endpoint.

Values 1 — 4294967295

Sample Output

```
*A:Dut-B# show redundancy multi-chassis mc-endpoint statistics
=====
Multi-Chassis Endpoint Global Statistics
=====
Packets Rx                               : 533
Packets Rx Keepalive                     : 522
Packets Rx Config                         : 3
Packets Rx Peer Config                   : 1
Packets Rx State                         : 7
Packets Dropped Keep-Alive Task          : 7
Packets Dropped Too Short                 : 0
Packets Dropped Verify Failed            : 0
Packets Dropped Tlv Invalid Size         : 0
Packets Dropped Out Of Seq               : 0
Packets Dropped Unknown Tlv              : 0
Packets Dropped Tlv Invalid MC-Endpoint Id : 0
Packets Dropped MD5                      : 0
Packets Dropped Unknown Peer             : 0
Packets Dropped MC Endpoint No Peer      : 0
Packets Tx                               : 26099
Packets Tx Keepalive                     : 8221
Packets Tx Config                         : 2
Packets Tx Peer Config                   : 17872
Packets Tx State                         : 4
Packets Tx Failed                        : 0
=====
*A:Dut-B#

*A:Dut-B# show redundancy multi-chassis mc-endpoint peer 3.1.1.3 statistics
=====
Multi-Chassis MC-Endpoint Statistics
=====
Peer Addr                               : 3.1.1.3
-----
Packets Rx                               : 597
Packets Rx Keepalive                     : 586
Packets Rx Config                         : 3
Packets Rx Peer Config                   : 1
Packets Rx State                         : 7
Packets Dropped State Disabled           : 0
```

```

Packets Dropped Packets Too Short : 0
Packets Dropped Tlv Invalid Size : 0
Packets Dropped Tlv Invalid LagId : 0
Packets Dropped Out of Seq : 0
Packets Dropped Unknown Tlv : 0
Packets Dropped MD5 : 0
Packets Tx : 636
Packets Tx Keepalive : 600
Packets Tx Peer Config : 30
Packets Tx Failed : 0
Packets Dropped No Peer : 0
=====
*A:Dut-B#

*A:Dut-B# show redundancy multi-chassis mc-endpoint endpoint 1 statistics
=====
Multi-Chassis Endpoint Statistics
=====
MC-Endpoint Id 1
=====
Packets Rx Config : 3
Packets Rx State : 7
Packets Tx Config : 2
Packets Tx State : 4
Packets Tx Failed : 0
=====
Number of Entries 1
=====

```

mc-lag

Syntax `mc-lag [lag lag-id]`

Context `show>redundancy>multi-chassis`

Description This command displays multi-chassis LAG information.

Parameters `lag lag-id` — Shows information for the specified LAG identifier.

Values 1 — 20020064

peer

Syntax `peer ip-address [lag lag-id]`

Context `show>redundancy>multi-chassis>mc-lag`

Description This command enables the context to display mc-lag peer-related redundancy information.

Parameters `ip-address` — Shows peer information about the specified IP address.

lag lag-id — Shows information for the specified LAG identifier.

Values 1 — 20020064

Output **Show Redundancy Multi-chassis MC-Lag Peer Output** — The following table describes show redundancy multi-chassis mc-lag peer output fields:

Table 38: Show Redundancy Multi-chassis MC-Lag Peer Output Fields

| Label | Description |
|----------------------|---|
| Last Changed | Displays date and time of the last mc-lag peer. |
| Admin State | Displays the administrative state of the mc-lag peer. |
| Oper State | Displays the operation state of the mc-lag peer. |
| KeepAlive | Displays the length of time to keep alive the mc-lag peer. |
| Hold On Ngbr Failure | Specifies how many “keepalive” intervals the standby SR will wait for packets from the active node before assuming a redundant-neighbor node failure. |

Sample Output

```
A:subscr_mgt# show redundancy multi-chassis mc-lag peer 10.10.10.30
=====
Multi-Chassis MC-Lag Peer 10.10.10.30
=====
Last Changed      : 01/23/2007 18:20:13
Admin State      : Up
Oper State       : Up
KeepAlive        : 10 deci-seconds
Hold On Ngbr Failure : 3
-----
Lag Id LACP Key Remote Lag Id System Id          Sys Prio Last Changed
-----
1      1      1          00:00:00:00:00:01  1          01/23/2007 18:20:13
2      2      2          00:00:00:00:00:02  2          01/24/2007 08:53:48
-----
Number of LAGs : 2
=====
A:subscr_mgt#
```

```
A:subscr_mgt# show redundancy multi-chassis mc-lag peer 10.10.10.30 lag 1
=====
Multi-Chassis MC-Lag Peer 10.10.10.30
=====
Last Changed      : 01/23/2007 18:20:13
Admin State      : Up
Oper State       : Up
KeepAlive        : 10 deci-seconds
Hold On Ngbr Failure : 3
-----
Lag Id LACP Key Remote Lag Id System Id          Sys Prio Last Changed
-----
1      1      1          00:00:00:00:00:01  1          01/23/2007 18:20:13
-----
Number of LAGs : 1
```

```
=====
A:subscr_mgt#
```

statistics

Syntax **statistics mc-lag** [**peer** *ip-address* [**lag** *lag-id*]]

Context show>redundancy>multi-chassis>mc-lag

Description This command displays multi-chassis statistics.

Parameters **mc-lag** — Displays multi-chassis LAG statistics.

peer *ip-address* — Shows the specified address of the multi-chassis peer.

lag *lag-id* — Shows information for the specified LAG identifier.

Values 1 — 64

Output **Show Redundancy Multi-chassis MC-Lag Peer Statistics Output** — The following table describes show redundancy multi-chassis mc-lag peer output fields:

Table 39: ShowRedundancy Multi-chassis mc-lag Peer Output Fields

| Label | Description |
|-----------------------------------|---|
| Packets Rx | Indicates the number of MC-Lag packets received from the peer. |
| Packets Rx Keepalive | Indicates the number of MC-Lag keepalive packets received from the peer. |
| Packets Rx Config | Indicates the number of received MC-Lag configured packets from the peer. |
| Packets Rx Peer Config | Indicates the number of received MC-Lag packets configured by the peer. |
| Packets Rx State | Indicates the number of MC-Lag “lag” state packets received from the peer. |
| Packets Dropped State Disabled | Indicates the number of packets that were dropped because the peer was administratively disabled. |
| Packets Dropped Packets Too Short | Indicates the number of packets that were dropped because the packet was too short. |
| Packets Dropped Tlv Invalid Size | Indicates the number of packets that were dropped because the packet size was invalid. |
| Packets Dropped Tlv Invalid LagId | Indicates the number of packets that were dropped because the packet referred to an invalid or non multi-chassis lag. |
| Packets Dropped Out of Seq | Indicates the number of packets that were dropped because the packet size was out of sequence. |

System Commands

| Label | Description |
|-----------------------------|---|
| Packets Dropped Unknown Tlv | Indicates the number of packets that were dropped because the packet contained an unknown TLV. |
| Packets Dropped MD5 | Indicates the number of packets that were dropped because the packet failed MD5 authentication. |
| Packets Tx | Indicates the number of packets transmitted from this system to the peer. |
| Packets Tx Keepalive | Indicates the number of keepalive packets transmitted from this system to the peer. |
| Packets Tx Peer Config | Indicates the number of configured packets transmitted from this system to the peer. |
| Packets Tx Failed | Indicates the number of packets that failed to be transmitted from this system to the peer. |

Sample Output

```
A:subscr_mgt# show redundancy multi-chassis mc-lag statistics
=====
Multi-Chassis Statistics
=====
Packets Rx                : 52535
Packets Rx Keepalive      : 52518
Packets Rx Config         : 2
Packets Rx Peer Config    : 4
Packets Rx State          : 6
Packets Dropped KeepaliveTask : 0
Packets Dropped Packet Too Short : 0
Packets Dropped Verify Failed : 0
Packets Dropped Tlv Invalid Size : 0
Packets Dropped Out of Seq : 0
Packets Dropped Unknown Tlv : 0
Packets Dropped Tlv Invalid LagId : 0
Packets Dropped MD5      : 0
Packets Dropped Unknown Peer : 0
Packets Tx                : 52583
Packets Tx Keepalive      : 52519
Packets Tx Config         : 2
Packets Tx Peer Config    : 54
Packets Tx State          : 8
Packets Tx Failed         : 0
=====
A:subscr_mgt#

B:Dut-B# show redundancy multi-chassis mc-lag peer 10.10.10.2 statistics
=====
Multi-Chassis Statistics, Peer 10.10.10.2
=====
Packets Rx                : 231
Packets Rx Keepalive      : 216
Packets Rx Config         : 1
Packets Rx Peer Config    : 2
```



```

Packets Rx State           : 12
Packets Dropped State Disabled : 0
Packets Dropped Packets Too Short : 0
Packets Dropped Tlv Invalid Size : 0
Packets Dropped Tlv Invalid LagId : 0
Packets Dropped Out of Seq      : 0
Packets Dropped Unknown Tlv     : 0
Packets Dropped MD5             : 0
Packets Tx                    : 235
Packets Tx Keepalive           : 216
Packets Tx Peer Config         : 3
Packets Tx Failed              : 0
=====
B:Dut-B#

```

mc-ring

Syntax

```

mc-ring peer ip-address statistics
mc-ring peer ip-address [ring sync-tag [detail|statistics] ]
mc-ring peer ip-address ring sync-tag ring-node [ring-node-name [detail|statistics] ]
mc-ring global-statistics

```

Context show>redundancy>multi-chassis

Description This command displays multi-chassis ring information.

Parameters

ip-address — Specifies the address of the multi-chassis peer to display.

ring *sync-tag* — Specifies a synchronization tag to be displayed that was used while synchronizing this port with the multi-chassis peer.

node *ring-node-name* — Specifies a ring-node name.

global-statistics — Displays global statistics for the multi-chassis ring.

detail — Displays detailed peer information for the multi-chassis ring.

Output **Show mc-ring peer ip-address ring Output** — The following table describes mc-ring peer ip-address ring output fields.

| Label | Description |
|------------|---|
| Sync Tag | Displays the synchronization tag that was used while synchronizing this port with the multi-chassis peer. |
| Oper State | noPeer — The peer has no corresponding ring configured.
connected — The inband control connection with the peer is operational.
broken — The inband control connection with the peer has timed out. |

| Label | Description |
|------------------------|--|
| | <p><code>conflict</code> – The inband control connection with the peer has timed out but the physical connection is still OK; the failure of the inband signaling connection is caused by a misconfiguration. For example, a conflict between the configuration of this system and its peer, or a misconfiguration on one of the ring access node systems.</p> <p><code>testingRing</code> – The inband control connection with the peer is being set up. Waiting for result.</p> <p><code>waitingForPeer</code> – Verifying if this ring is configured on the peer.</p> <p><code>configErr</code> – The ring is administratively up, but a configuration error prevents it from operating properly.</p> <p><code>halfBroken</code> – The inband control connection indicates that the ring is broken in one direction (towards the peer).</p> <p><code>localBroken</code> – The inband control connection with the peer is known to be broken due to local failure or local administrative action.</p> <p><code>shutdown</code> – The ring is shutdown.</p> |
| Failure Reason | Displays the reason of the failure of the operational state of a MC ring. |
| No. of MC Ring entries | Displays the number of MC ring entries. |

Sample Output

```
*A:ALA-48>show>redundancy>multi-chassis# mc-ring peer 10.0.0.2 ring ring11 detail
=====
Multi-Chassis MC-Ring Detailed Information
=====
Peer           : 10.0.0.2
Sync Tag       : ring11
Port ID        : 1/1/3
Admin State    : inService
Oper State     : connected
Admin Change   : 01/07/2008 21:40:07
Oper Change    : 01/07/2008 21:40:24
Failure Reason : None
-----
In Band Control Path
-----
Service ID     : 10
Interface Name : to_an1
Oper State     : connected
Dest IP        : 10.10.0.2
Src IP         : 10.10.0.1
-----
VLAN Map B Path Provisioned
-----
```

```

range 13-13
range 17-17
-----
VLAN Map Excluded Path Provisioned
-----
range 18-18
-----
VLAN Map B Path Operational
-----
range 13-13
range 17-17
-----
VLAN Map Excluded Path Operational
-----
range 18-18
=====
*A:ALA-48>show>redundancy>multi-chassis#

*A:ALA-48>show>redundancy>multi-chassis# mc-ring peer 192.251.10.104
=====
MC Ring entries
=====
Sync Tag                               Oper State      Failure Reason
-----
No. of MC Ring entries: 0
=====
*A:ALA-48>show>redundancy>multi-chassis#

*A:ALA-48>show>redundancy>multi-chassis# mc-ring peer 10.0.0.2
=====
MC Ring entries
=====
Sync Tag                               Oper State      Failure Reason
-----
ring11                                 connected       None
ring12                                 shutdown       None
-----
No. of MC Ring entries: 4
=====
*A:ALA-48>show>redundancy>multi-chassis#

*A:ALA-48>show>redundancy>multi-chassis# mc-ring peer 10.0.0.2 ring ring11 ring-node an1
detail
=====
Multi-Chassis MC-Ring Node Detailed Information
=====
Peer           : 10.0.0.2
Sync Tag       : ring11
Node Name      : an1
Oper State Loc : connected
Oper State Rem : notTested
In Use         : True
Admin Change   : 01/07/2008 21:40:07
Oper Change    : 01/07/2008 21:40:25
Failure Reason : None
-----

```

System Commands

```

Ring Node Connectivity Verification
-----
Admin State      : inService
Service ID       : 11
VLAN Tag         : 11
Dest IP          : 10.11.3.1
Src IP           : None
Interval         : 1 minutes
Src MAC          : None
=====
*A:ALA-48>show>redundancy>multi-chassis#

*A:ALA-48>show>redundancy>multi-chassis# mc-ring peer 10.0.0.2 ring ring11 ring-node
=====
MC Ring Node entries
=====
Name              Loc Oper St.      Failure Reason
In Use            Rem Oper St.
-----
an1               connected         None
Yes              notTested
an2               connected         None
Yes              notTested
-----
No. of MC Ring Node entries: 2
=====
*A:ALA-48>show>redundancy>multi-chassis#

```

Show Redundancy Multi-Chassis Ring Peer Statistics Output — The following table describes multi-chassis ring peer output fields

| Label | Description |
|----------------------|---|
| Message | Displays the message type. |
| Received | Indicates the number of valid MC-ring signalling messages received from the peer. |
| Transmitted | Indicates the number of valid MC-ring signalling messages transmitted from the peer. |
| MCS ID Request | Displays the number of valid MCS ID requests were received from the peer. |
| MCS ID Response | Displays the number of valid MCS ID responses were received from the peer. |
| Ring Exists Request | Displays the number of valid 'ring exists' requests were received from the peer. |
| Ring Exists Response | Displays the number of valid ring exists' responses were received from the peer. |
| Keepalive | Displays the number of valid MC-ring control packets of type 'keepalive' were received from the peer. |

```

*A:ALA-48>show>redundancy>multi-chassis# mc-ring peer 192.251.10.104 statistics
=====
MC Ring statistics for peer 192.251.10.104
=====
Message                                     Received      Transmitted
-----
MCS ID Request                             0             0
MCS ID Response                             0             0
Ring Exists Request                         0             0
Ring Exists Response                         0             0
Keepalive                                   0             0
-----
Total                                       0             0
=====
*A:ALA-48>show>redundancy>multi-chassis#

```

Show mc-ring ring-node Command Output

| Label | Description |
|--------------|---|
| Oper State | <p>Displays the state of the connection verification (both local and remote).</p> <p><code>notProvisioned</code> – Connection verification is not provisioned.</p> <p><code>configErr</code> – Connection verification is provisioned but a configuration error prevents it from operating properly.</p> <p><code>notTested</code> – Connection verification is administratively disabled or is not possible in the current situation.</p> <p><code>testing</code> – Connection Verification is active, but no results are yet available.</p> <p><code>connected</code> – The ring node is reachable.</p> <p><code>disconnected</code> – Connection verification has timed out.</p> |
| In Use | <p>Displays “True” if the ring node is referenced on an e-pipe or as an inter-dest-id on a static host or dynamic lease.</p> |

Show mc-ring global-statistics Command Output

| Label | Description |
|-------------------------|--|
| Rx | Displays the number of MC-ring signalling packets were received by this system. |
| Rx Too Short | Displays the number of MC-ring signalling packets were received by this system that were too short. |
| Rx Wrong Authentication | Displays the number of MC-ring signalling packets were received by this system with invalid authentication. |
| Rx Invalid TLV | Displays the number of MC-ring signalling packets were received by this system with invalid TLV. |
| Rx Incomplete | Displays the number of MC-ring signalling packets were received by this system that were incomplete. |
| Rx Unknown Type | Displays the number of MC-ring signalling packets were received by this system that were of unknown type. |
| Rx Unknown Peer | Displays the number of MC-ring signalling packets were received by this system that were related to an unknown peer. |
| Rx Unknown Ring | Displays the number of MC-ring signalling packets were received by this system that were related to an unknown ring. |

| Label | Description |
|-----------------------------|--|
| Rx Unknown Ring Node | Displays the number of MC-ring signalling packets were received by this system that were related to an unknown ring node. |
| Tx | Displays the number of MC-ring signalling packets were transmitted by this system. |
| Tx No Buffer | Displays the number of MC-ring signalling packets could not be transmitted by this system due to a lack of packet buffers. |
| Tx Transmission Failed | Displays the number of MC-ring signalling packets could not be transmitted by this system due to a transmission failure. |
| Tx Unknown Destination | Displays the number of MC-ring 'unknown destination' signalling packets were transmitted by this system. |
| Missed Configuration Events | Displays the number of missed configuration events on this system. |
| Missed BFD Events | Displays the number of missed BFD events on this system. |

```
*A:ALA-48>show>redundancy>multi-chassis# mc-ring global-statistics
=====
Global MC Ring statistics
=====
Rx                               : 0
Rx Too Short                     : 0
Rx Wrong Authentication          : 0
Rx Invalid TLV                   : 0
Rx Incomplete                    : 0
Rx Unknown Type                  : 0
Rx Unknown Peer                  : 0
Rx Unknown Ring                  : 0
Rx Unknown Ring Node             : 0
Tx                               : 36763
Tx No Buffer                       : 0
Tx Transmission Failed           : 0
Tx Unknown Destination           : 0
Missed Configuration Events      : 0
Missed BFD Events                : 0
=====
*A:ALA-48>show>redundancy>multi-chassis#
```

sync

Syntax `sync [port port-id | lag-id]`

Context `show>redundancy>multi-chassis`

Description This command displays synchronization information.

System Commands

Parameters **port** *port-id* — Shows the specified port ID of the multi-chassis peer.

lag *lag-id* — Shows information for the specified LAG identifier.

Values 1 — 20020064

Output **Show Redundancy Multi-chassis Sync Output** — The following table describes show redundancy multi-chassis sync output fields:

Table 40: Show Redundancy Multi-chassis Sync Output Fields

| Label | Description |
|-------------------------|---|
| Peer IP Address | Displays the multi-chassis redundancy peer. |
| Description | The text string describing the peer. |
| Authentication | If configured, displays the authentication key used between this node and the multi-chassis peer. |
| Source IP Address | Displays the source address used to communicate with the multi-chassis peer. |
| Admin State | Displays the administrative state of the peer. |
| Client Applications | Displays the list of client applications synchronized between SRs. |
| Sync Admin State | Displays the administrative state of the synchronization. |
| Sync Oper State | Displays the operation state of the synchronization. |
| DB Sync State | Displays the database state of the synchronization. |
| Num Entries | Displays the number of entries on local router. |
| Lcl Deleted Entries | Displays the number of deleted entries made at the local router. |
| Alarm Entries | Displays the alarm entries on the local router. |
| Rem Num Entries | Displays the number of entries on the remote router. |
| Rem Lcl Deleted Entries | Displays the number of locally deleting entries made by the remote router. |
| Rem Alarm Entries | Displays alarm entries on the remote router. |

Sample Output

```
*A:subscr_mgt_2# show redundancy multi-chassis sync
=====
Multi-chassis Peer Table
=====
Peer
-----
```



```

Peer IP Address      : 10.10.10.20
Description          : Mc-Lag peer 10.10.10.20
Authentication      : Disabled
Source IP Address   : 0.0.0.0
Admin State         : Enabled
-----
Sync-status
-----
Client Applications  : SUBMGMT
Sync Admin State    : Up
Sync Oper State     : Up
DB Sync State       : inSync
Num Entries         : 1
Lcl Deleted Entries : 0
Alarm Entries       : 0
Rem Num Entries     : 1
Rem Lcl Deleted Entries : 0
Rem Alarm Entries   : 0
=====
A:subscr_mgt_2#

```

peer

Syntax `peer ip-address`

Context `show>redundancy>multi-chassis>sync`

Description This command enables the context to display peer-related redundancy information.

Parameters *ip-address* — Shows peer information about the specified IP address.

Output **Show Redundancy Multi-chassis Sync Peer Output** — The following table describes show redundancy multi-chassis sync output fields:

Table 41: Show Redundancy Multi-chassis Sync Peer Output Fields

| Label | Description |
|---------------------|---|
| Peer IP Address | Displays the multi-chassis redundancy peer. |
| Description | The text string describing the peer. |
| Authentication | If configured, displays the authentication key used between this node and the multi-chassis peer. |
| Source IP Address | Displays the source address used to communicate with the multi-chassis peer. |
| Admin State | Displays the administrative state of the peer. |
| Client Applications | Displays the list of client applications synchronized between SRs. |
| Sync Admin State | Displays the administrative state of the synchronization. |
| Sync Oper State | Displays the operation state of the synchronization. |

Table 41: Show Redundancy Multi-chassis Sync Peer Output Fields (Continued)

| Label | Description |
|-------------------------|--|
| DB Sync State | Displays the database state of the synchronization. |
| Num Entries | Displays the number of entries on local router. |
| Lcl Deleted Entries | Displays the number of deleted entries made at the local router. |
| Alarm Entries | Displays the alarm entries on the local router. |
| Rem Num Entries | Displays the number of entries on the remote router. |
| Rem Lcl Deleted Entries | Displays the number of locally deleting entries made by the remote router. |
| Rem Alarm Entries | Displays alarm entries on the remote router. |

Sample Output

```
*A:subscr_mgt_2# show redundancy multi-chassis sync peer 10.10.10.20
=====
Multi-chassis Peer Table
=====
Peer
-----
Peer IP Address      : 10.10.10.20
Description          : Mc-Lag peer 10.10.10.20
Authentication       : Disabled
Source IP Address    : 0.0.0.0
Admin State          : Enabled
-----
Sync-status
-----
Client Applications  : SUBMGMT
Sync Admin State     : Up
Sync Oper State      : Up
DB Sync State        : inSync
Num Entries          : 1
Lcl Deleted Entries  : 0
Alarm Entries        : 0
Rem Num Entries      : 1
Rem Lcl Deleted Entries : 0
Rem Alarm Entries    : 0
=====
MCS Application Stats
=====
Application          : igmp
Num Entries          : 0
Lcl Deleted Entries  : 0
Alarm Entries        : 0
-----
Rem Num Entries      : 0
Rem Lcl Deleted Entries : 0
Rem Alarm Entries    : 0
```

```

-----
Application          : igmpSnooping
Num Entries          : 0
Lcl Deleted Entries  : 0
Alarm Entries        : 0
-----
Rem Num Entries      : 0
Rem Lcl Deleted Entries : 0
Rem Alarm Entries    : 0
-----
Application          : subMgmt
Num Entries          : 1
Lcl Deleted Entries  : 0
Alarm Entries        : 0
-----
Rem Num Entries      : 1
Rem Lcl Deleted Entries : 0
Rem Alarm Entries    : 0
-----
Application          : srrp
Num Entries          : 0
Lcl Deleted Entries  : 0
Alarm Entries        : 0
-----
Rem Num Entries      : 0
Rem Lcl Deleted Entries : 0
Rem Alarm Entries    : 0
=====
*A:subscr_mgt_2#

```

detail

Syntax detail

Context show>redundancy>multi-chassis>peer

Description This command displays detailed peer information.

Output **Show Redundancy Multi-chassis Sync Peer Detail Output** — The following table describes show redundancy multi-chassis sync detail output fields:

Table 42: Show Redundancy Multi-chassis Sync Peer Detail Output Fields

| Label | Description |
|-----------------|---|
| Peer IP Address | Displays the multi-chassis redundancy peer. |
| Description | The text string describing the peer. |
| Authentication | If configured, displays the authentication key used between this node and the multi-chassis peer. |

Table 42: Show Redundancy Multi-chassis Sync Peer Detail Output Fields (Continued)

| Label | Description |
|-------------------------|--|
| Source IP Address | Displays the source address used to communicate with the multi-chassis peer. |
| Admin State | Displays the administrative state of the peer. |
| Client Applications | Displays the list of client applications synchronized between routers. |
| Sync Admin State | Displays the administrative state of the synchronization. |
| Sync Oper State | Displays the operation state of the synchronization. |
| DB Sync State | Displays the database state of the synchronization. |
| Num Entries | Displays the number of entries on local router. |
| Lcl Deleted Entries | Displays the number of deleted entries made at the local router. |
| Alarm Entries | Displays the alarm entries on the local router. |
| Rem Num Entries | Displays the number of entries on the remote router. |
| Rem Lcl Deleted Entries | Displays the number of locally deleting entries made by the remote router. |
| Rem Alarm Entries | Displays alarm entries on the remote router. |

Sample Output

```
*A:subscr_mgt_2# show redundancy multi-chassis sync peer 10.10.10.20 detail
=====
Multi-chassis Peer Table
=====
Peer
-----
Peer IP Address      : 10.10.10.20
Description          : Mc-Lag peer 10.10.10.20
Authentication       : Disabled
Source IP Address    : 0.0.0.0
Admin State          : Enabled
-----
Sync-status
-----
Client Applications  : SUBMGMT
Sync Admin State     : Up
Sync Oper State      : Up
DB Sync State        : inSync
Num Entries          : 1
Lcl Deleted Entries  : 0
Alarm Entries        : 0
Rem Num Entries      : 1
```

```

Rem Lcl Deleted Entries : 0
Rem Alarm Entries      : 0
=====
MCS Application Stats
=====
Application           : igmp
Num Entries           : 0
Lcl Deleted Entries   : 0
Alarm Entries         : 0
-----
Rem Num Entries       : 0
Rem Lcl Deleted Entries : 0
Rem Alarm Entries     : 0
-----
Application           : igmpSnooping
Num Entries           : 0
Lcl Deleted Entries   : 0
Alarm Entries         : 0
-----
Rem Num Entries       : 0
Rem Lcl Deleted Entries : 0
Rem Alarm Entries     : 0
-----
Application           : subMgmt
Num Entries           : 1
Lcl Deleted Entries   : 0
Alarm Entries         : 0
-----
Rem Num Entries       : 1
Rem Lcl Deleted Entries : 0
Rem Alarm Entries     : 0
-----
Application           : srrp
Num Entries           : 0
Lcl Deleted Entries   : 0
Alarm Entries         : 0
-----
Rem Num Entries       : 0
Rem Lcl Deleted Entries : 0
Rem Alarm Entries     : 0
=====
Ports synced on peer 10.10.10.20
=====
Port/Encap           Tag
-----
lag-1                 test123
=====
*A:subscr_mgt_2#

```

synchronization

Syntax **synchronization**

Context show>redundancy

Description This command displays redundancy synchronization times.

Sample Output

```
A:ALA-48>show>redundancy# synchronization
=====
Synchronization Information
=====
Standby Status           : disabled
Last Standby Failure    : N/A
Standby Up Time         : N/A
Failover Time           : N/A
Failover Reason         : N/A
Boot/Config Sync Mode   : None
Boot/Config Sync Status : No synchronization
Last Config File Sync Time : Never
Last Boot Env Sync Time : Never
=====
A:ALA-48>show>redundancy#
```

time-range

Syntax `time-range name associations [detail]`

Context `show>cron`

Description This command displays information on the configured time ranges.

Output **Time Range Output** — The following table displays system time range output fields:

Table 43: Show System Time-range Output Fields

| Label | Description |
|--------------|--|
| Associations | Shows the time-range as it is associated with the TOD suites and ACL entries as well as the SAPs using them. |
| Detail | Shows the details of this time-range. |

Sample Output

The following example shows time-range detail output.

```
A:ala# show cron time-range time-range2 detail
=====
Cron time-range
=====
Name       : time-range1
Periodic   : Start * * * * End * * * *
Absolute   : Start * * * * End * * * *
```

The following example shows output for time-range associations with previously created IP and MAC filters.

```
A:ala# show cron time-range day associations
```

```

=====
Cron time-range associations
=====
Name          : day                      State : Inactive
-----
IP Filter associations
-----
IP filter Id  : 10, entry 1010
-----
MAC Filter associations
-----
None
-----
Tod-suite associations
-----
Tod-suite : suite_sixteen, for Ingress Qos Policy "1160"
Tod-suite : suite_sixteen, for Ingress Scheduler Policy "SchedPolCust1_Day"
Tod-suite : suite_sixteen, for Egress Qos Policy "1160"
Tod-suite : suite_sixteen, for Egress Scheduler Policy "SchedPolCust1Egress_Day"
=====

```

uptime

Syntax **uptime**

Context show

Description This command displays the time since the system started.

Output **Uptime Output** — The following table describes uptime output fields.

Table 44: System Timing Output Fields

| Label | Description |
|----------------|--|
| System Up Time | Displays the length of time the system has been up in days, hr:min:sec format. |

Sample Output

```

A:ALA-1# show uptime
System Up Time      : 11 days, 18:32:02.22 (hr:min:sec)

A:ALA-1#

```

sync-if-timing

Syntax **sync-if-timing**

Context show>system

System Commands

Description This command displays synchronous interface timing operational information.

Output **System Timing Output** — The following table describes sync-if-timing output fields.

| Label | Description |
|-----------------------------|--|
| System Status CPM
A/B | Indicates the present status of the synchronous timing equipment sub-system (SETS).
not-present
master-freerun
master-holdover
master-locked
slave
acquiring |
| Reference Input
Mode | Revertive — Indicates that for a re-validated or a newly validated reference source which has a higher priority than the currently selected reference has reverted to the new reference source.

Non-revertive — The clock cannot revert to a higher priority clock if the current clock goes offline. |
| Quality Level
Selection | Indicates whether the ql-selection command has been enabled or disabled. If this command is enabled, then the reference is selected first using the QL value, then by the priority reference order. If this command is not enabled, then the reference is selected by the priority reference order. |
| Reference
Selected | Indicates which reference has been selected:
<ul style="list-style-type: none"> • ref1, ref2 - (for all chassis) • |
| System Quality
Level | Indicates the quality level being generated by the system clock. |
| Current Frequency
Offset | (value) — The frequency offset of the currently selected timing reference in parts per million. |
| Reference Order | ref1, ref2 — Indicates that the priority order of the timing references. |
| Reference Mate CPM | Data within this block represents the status of the timing reference provided by the Mate CPM. This will be the BITS input from the standby CPM. |
| Admin Status | down — The ref1 or ref2 configuration is administratively shutdown.
up — The ref1 or ref2 configuration is administratively enabled.

diag — Indicates the reference has been forced using the force-reference command. |

| Label | Description (Continued) |
|------------------------|---|
| Quality Level Override | Indicates whether the QL value used to determine the reference was configured directly by the user. |
| Rx Quality Level | Indicates the QL value received on the interface. <ul style="list-style-type: none"> • inv - SSM received on the interface indicates an invalid code for the interface type. • unknown - No QL value was received on the interface. |
| Qualified for Use | Indicates whether the reference has been qualified to be used as a source of timing for the node. |
| Not Qualified Due To | Indicates the reason why the reference has not been qualified: <ul style="list-style-type: none"> - disabled - LOS - OOPIR - OOF |
| Selected for Use | Indicates whether the method is presently selected. |
| Not Selected Due To | Indicates the reason why the method is not selected: <ul style="list-style-type: none"> - disabled - not qualified - previous failure - LOF - AIS-L - validating - on standby - ssm quality |
| Source Port | Identifies the Source port for the reference. |

The following example is for a node locked to the active BITS input and directing the signal on ref1 to the BITS output:

Sample Output

```
*A:SR7# show system sync-if-timing
=====
System Interface Timing Operational Info
=====
System Status CPM A           : Master Locked
Reference Input Mode          : Non-revertive
Quality Level Selection       : Disabled
Reference Selected             : BITS A
System Quality Level          : prs
Current Frequency Offset (ppm) : +0

Reference Order                : bits ref1 ref2

Reference Mate CPM
Qualified For Use              : Yes
```

System Commands

```
Selected For Use          : No
  Not Selected Due To    :      on standby

Reference Input 1
  Admin Status           : up
  Rx Quality Level       : prs
  Qualified Level Override : none
  Qualified For Use      : Yes
  Selected For Use       : No
    Not Selected Due To  :      on standby
  Source Port           : 3/1/2

Reference Input 2
  Admin Status           : down
  Rx Quality Level       : unknown
  Qualified Level Override : none
  Qualified For Use      : No
    Not Qualified Due To :      disabled
  Selected For Use       : No
    Not Selected Due To  :      disabled
  Source Port           : None
```

=====
*A:SR7#

The following example is for a node locked to the standby CPM BITS input and directing the ref1 signal to the BITS output port:

```
*A:Dut-B# show system sync-if-timing
```

```
=====  
System Interface Timing Operational Info  
=====  
System Status CPM A          : Master Locked  
  Reference Input Mode       : Non-revertive  
  Quality Level Selection    : Disabled  
  Reference Selected         : Mate CPM (BITS B)  
  System Quality Level       : prs  
  Current Frequency Offset (ppm) : +0  
  
Reference Order              : bits ref1 ref2  
  
Reference Mate CPM  
  Qualified For Use          : Yes  
  Selected For Use           : Yes  
  
Reference Input 1  
  Admin Status              : up  
  Rx Quality Level          : prs  
  Quality Level Override    : none  
  Qualified For Use         : Yes  
  Selected For Use          : No  
    Not Selected Due To     : on standby  
  Source Port               : 3/1/2  
  
Reference Input 2  
  Admin Status              : down  
  Rx Quality Level          : unknown  
  Quality Level Override    : none
```

```

Qualified For Use           : No
  Not Qualified Due To     : disabled
Selected For Use           : No
  Not Selected Due To     : disabled
Source Port                : None
=====

```

The following example is for a node whose standby CPM is locked to its local BITS port and the signal from ref1 is directed to the BITS output port:

```

A:SR7# show system sync-if-timing standby
=====
System Interface Timing Operational Info
=====
System Status CPM B       : Master Locked
  Reference Input Mode    : Non-revertive
  Quality Level Selection : Disabled
  Reference Selected      : BITS B
  System Quality Level    : prs
  Current Frequency Offset (ppm) : +0

Reference Order           : bits ref1 ref2

Reference Mate CPM
  Qualified For Use       : Yes
  Selected For Use       : No
  Not Selected Due To    : on standby

Reference Input 1
  Admin Status           : down
  Rx Quality Level      : unknown
  Quality Level Override : none
  Qualified For Use     : No
  Not Qualified Due To  : disabled
  Selected For Use      : No
  Not Selected Due To   : disabled
  Source Port           : None

Reference Input 2
  Rx Quality Level      : unknown
  Quality Level Override : none
  Qualified For Use     : No
  Not Qualified Due To  : disabled
  Selected For Use      : No
  Not Selected Due To   : disabled
  Source Port           : None

=====
*A:SR7#

```

chassis

Syntax `chassis [environment] [power-supply] [ccm]`

Context show

Description This command displays general chassis status information.

Parameters **environment** — Displays chassis environmental status information.

Default Display all chassis information.

power-supply — Displays chassis power supply status information.

Default Display all chassis information.

ccm — Displays chassis control module information.

Default Display all ccm information.

Output **Chassis Output** — The following table describes chassis output fields.

| Label | Description |
|--------------------|--|
| Name | The system name for the router. |
| Type | The router series model number. |
| Location | The system location for the device. |
| Coordinates | A user-configurable string that indicates the Global Positioning System (GPS) coordinates for the location of the chassis.
For example:
N 45 58 23, W 34 56 12
N37 37' 00 latitude, W122 22' 00 longitude
N36*39.246' W121*40.121' |
| CLLI Code | The Common Language Location Identifier (CLLI) that uniquely identifies the geographic location of places and certain functional categories of equipment unique to the telecommunications industry. |
| Number of slots | The number of slots in this chassis that are available for plug-in cards. The total number includes the IOM slots and the all CFM slots. |
| Number of ports | The total number of ports currently installed in this chassis. This count does not include the Ethernet ports on the CPMCCMs that are used for management access. |
| Critical LED state | The current state of the Critical LED in this chassis. |
| Major LED state | The current state of the Major LED in this chassis. |
| Minor LED state | The current state of the Minor LED in this chassis. |

| Label | Description (Continued) |
|--|---|
| Base MAC address | The base chassis Ethernet MAC address. |
| Part number | The CFM part number. |
| CLEI code | The code used to identify the router. |
| Serial number | The CFM part number. Not user modifiable. |
| Manufacture date | The chassis manufacture date. Not user modifiable. |
| Manufacturing string | Factory-inputted manufacturing text string. Not user modifiable. |
| Time of last boot | The date and time the most recent boot occurred. |
| Current alarm state | Displays the alarm conditions for the specific board. |
| Number of fan trays | The total number of fan trays installed in this chassis. |
| Number of fans | The total number of fans installed in this chassis. |
| Operational status | Current status of the fan tray. |
| Fan speed | Half speed – The fans are operating at half speed.
Full speed – The fans are operating at full speed. |
| Number of power supplies | The number of power supplies installed in the chassis. |
| Power supply number | The ID for each power supply installed in the chassis. |
| AC power | Within range – AC voltage is within range.
Out of range – AC voltage is out of range. |
| DC power | Within range – DC voltage is within range.
Out of range – DC voltage is out of range. |
| Over temp | Within range – The current temperature is within the acceptable range.
Out of range – The current temperature is above the acceptable range. |
| Chassis Control Module (CCM) Information | CCM number – Chassis Control Module number.
Equipped – Yes: Equipped / No: Not Equipped |

System Commands

| Label | Description (Continued) |
|--------|--|
| Status | Up/Present — The specified power supply is up.
Down — The specified power supply is down. |

Sample Output

```
A:ALA-1# show chassis
=====
Chassis Information
=====
Name                : 7710-3
Type                : 7710 SR-c12
Location            :
Coordinates         :
CLLI code           :
Number of slots     : 3
Number of ports     : 85
Critical LED state  : Off
Major LED state     : Off
Minor LED state     : Off
Over Temperature state : OK
Base MAC address    : 04:7b:ff:00:00:00

Hardware Data
Part number         :
CLEI code          :
Serial number       :
Manufacture date    : 01012003
Manufacturing string : MfgString
Manufacturing deviations : MfgDeviation
Time of last boot   : 2007/02/20 13:11:53
Current alarm state : alarm cleared
-----
Environment Information
Number of fan trays : 1
Number of fans      : 10

Fan tray number     : 1
Status              : up
Speed               : half speed
-----
Power Supply Information
Number of power supplies : 2

Power supply number   : 1
Defaulted power supply type : dc
Status                : up
Input power           : within range
Output power          : within range

Power supply number   : 2
Defaulted power supply type : dc
Status                : up
Input power           : within range
Output power          : within range
```

```

-----
Chassis Control Module (CCM) Information
  CCM number           : 1
  Equipped             : yes
  Type                 : ccm-cl2-v1

Hardware Data
  Part number          : Part#
  CLEI code            : CLEI
  Serial number        : ccm-0
  Manufacture date     : 01012003
  Manufacturing string  : MfgString ccm-0
  Manufacturing deviations : MfgDeviation ccm-0
  Administrative state : up
  Operational state    : up
  Temperature          : 32C
  Temperature threshold : 75C
  Time of last boot    : N/A
  Current alarm state   : alarm cleared
=====
A:ALA-4#

A:7710-3>config# show chassis environment
=====
Chassis Information
=====
Environment Information
  Number of fan trays   : 1
  Number of fans        : 10

  Fan tray number      : 1
  Status                : up
  Speed                 : half speed
=====
A:7710-3>config#

```

synchronization

Syntax **synchronization**

Context show>redundancy>synchronization

Description This command displays redundancy synchronization times.

Output **Synchronization Output** — The following table describes redundancy synchronization output fields.

Table 45: Show Synchronization Output Fields

| Label | Description |
|----------------------|--|
| Standby Status | Displays the status of the standby CFM. |
| Last Standby Failure | Displays the timestamp of the last standby failure. |
| Standby Up Time | Displays the length of time the standby CFM has been up. |

Table 45: Show Synchronization Output Fields (Continued)

| Label | Description |
|----------------------------|--|
| Failover Time | Displays the timestamp when the last redundancy failover occurred causing a switchover from active to standby CFM. If there is no redundant CFM card in this system or no failover has occurred since the system last booted, the value will be 0. |
| Failover Reason | Displays a text string giving an explanation of the cause of the last redundancy failover. If no failover has occurred, an empty string displays. |
| Boot/Config Sync Mode | Displays the type of synchronization operation to perform between the primary and secondary CFMs after a change has been made to the configuration files or the boot environment information contained in the boot options file (BOF). |
| Boot/Config Sync Status | Displays the results of the last synchronization operation between the primary and secondary CFMs. |
| Last Config File Sync Time | Displays the timestamp of the last successful synchronization of the configuration files. |
| Last Boot Env Sync Time | Displays the timestamp of the last successful synchronization of the boot environment files. |

Sample Output

```
A:ALA-1>show>redundancy# synchronization
=====
Synchronization Information
=====
Standby Status           : disabled
Last Standby Failure     : N/A
Standby Up Time          : N/A
Failover Time            : N/A
Failover Reason          : N/A
Boot/Config Sync Mode    : None
Boot/Config Sync Status  : No synchronization
Last Config File Sync Time : Never
Last Boot Env Sync Time  : Never
=====
A:ALA-1>show>redundancy#
```

Debug Commands

sync-if-timing

Syntax `sync-if-timing`

Context `debug`

Description The context to debug synchronous interface timing references.

force-reference

Syntax `force-reference {ref1 | ref2}`
`no force-reference`

Context `debug>sync-if-timing`

Description This command allows an operator to force the system synchronous timing output to use a specific reference.

NOTE: This command should be used for testing and debugging purposes only. Once the system timing reference input has been forced, it will not revert back to another reference at anytime. The state of this command is not persistent between system boots.

When the **debug force-reference** command is executed, the current system synchronous timing output is immediately referenced from the specified reference input. If the specified input is not available (shutdown), or in a disqualified state, the timing output will enter the holdover state based on the previous input reference.

Parameters **ref1** — The clock will use the first timing reference.
ref2 — The clock will use the second timing reference.

system

Syntax `[no] system`

Context `debug`

Description This command displays system debug information.

http-connections

Syntax `http-connections [host-ip-address/mask]`
`http-connections`

Context `debug>system`

System Commands

Description This command displays HTTP connections debug information.

Parameters *host-ip-address/mask* — Displays information for the specified host IP address and mask.

ntp

Syntax **[no] router** *router-name* **interface** *ip-int-name*

Context debug>system

Description This command enables and configures debugging for NTP.
The **no** form of the command disables debugging for NTP.

Parameters *router-name* — Base, management

Default Base

ip-int-name — maximum 32 characters; must begin with a letter. If the string contains special characters (#, \$, spaces, etc.), the entire string must be enclosed within double quotes.

persistence

Syntax **[no] persistence**

Context debug>system

Description This command displays persistence debug information.

Tools Commands

redundancy

Syntax **redundancy**

Context tools>dump

Description This command enables the context to dump redundancy parameters.

multi-chassis

Syntax **multi-chassis**

Context tools>dump>redundancy

Description This command enables the context to dump multi-chassis parameters.

mc-endpoint

Syntax **mc-endpoint peer *ip-address***

Context tools>dump>redundancy>multi-chassis

Description This command dumps multi-chassis endpoint information.

Parameters **peer *ip-address*** — Specifies the peer's IP address.

Sample Output

```
*A:Dut-B# tools dump redundancy multi-chassis mc-endpoint peer 3.1.1.3
MC Endpoint Peer Info
  peer addr           : 3.1.1.3
  peer name           : Dut-C
  peer name refs      : 1
  src addr conf       : Yes
  source addr         : 2.1.1.2
  num of mcep         : 1
  num of non-mcep     : 0
  own sess num        : 58ba0d39
  mc admin state      : Up
  tlv own mc admin state : Up
  tlv peer mc admin state : Up
  reachable           : Yes

  own sys priority    : 50
  own sys id          : 00:03:fa:72:c3:c0
  peer sys priority   : 21
```

System Commands

```
peer sys id           : 00:03:fa:c6:31:f8
master               : No

conf boot timer      : 300
boot timer active    : No
conf ka intv         : 10
conf hold on num of fail : 3
tlv own ka intv      : 10
tlv peer ka intv     : 10
ka timeout tmr active : Yes
ka timeout tmr intvl : 20
ka timeout tmr time left : 4
peer ka intv         : 10
mc peer timed out    : No

initial peer conf rx : Yes
peer-mc disabled     : No
initial peer conf sync : Yes
peer conf sync       : Yes

own passive mode     : Disable
peer passive mode    : No

retransmit pending   : No
non-mcep retransmit pending : No
retransmit intvl     : 5
last tx time         : 1437130
last rx time         : 1437156

own bfd              : Enable
peer bfd             : Enable
bfd vrtr if         : 2
bfd handle          : 1
bfd state           : 3
bfd code            : 0

*A:Dut-B#
```

mc-ring

Syntax **mc-ring**
mc-ring peer *ip-address* [**ring sync-tag**]

Context tools>dump>redundancy>multi-chassis

Description This command dumps multi-chassis ring information.

peer *ip-address* — Specifies the peer's IP address.

ring *sync-tag* — Specifies the ring's sync-tag created in the **config>redundancy>mc>peer>mcr> ring** context.

sync-database

Syntax **sync-database** [**peer** *ip-address*] [**port** *port-id* | *lag-id*] [**sync-tag** *sync-tag*] [**application** *application*] [**detail**] [**type** *type*]

Context tools>dump>redundancy>multi-chassis

Description This command dumps MCS database information.

peer *ip-address* — Specifies the peer's IP address.

port *port-id* | *lag-id* — Indicates the port or LAG ID to be synchronized with the multi-chassis peer.
slot/mda/port or *lag-lag-id*

sync-tag *sync-tag* — Specifies a synchronization tag to be used while synchronizing this port with the multi-chassis peer.

application *application* — Specifies a particular multi-chassis peer synchronization protocol application.

| | | |
|---------------|----------------|---------------------------------------|
| Values | dhcp-server: | local dhcp server |
| | igmp: | Internet group management protocol |
| | igmp-snooping: | igmp-snooping |
| | mc-ring: | multi-chassis ring |
| | mld-snooping: | multicast listener discovery-snooping |
| | srrp: | simple router redundancy protocol |
| | sub-host-trk: | subscriber host tracking |
| | sub-mgmt: | subscriber management |

type *type* — Indicates the locally deleted or alarmed deleted entries in the MCS database per multi-chassis peer.

| | |
|---------------|------------------------------|
| Values | alarm-deleted, local-deleted |
|---------------|------------------------------|

detail — Displays detailed information.

srrp-sync-data

Syntax **srrp-sync-database** [**instance** *instance-id*] [**peer** *ip-address*]

Context tools>dump>redundancy>multi-chassis

Description This command dumps SRRP database information.

peer *ip-address* — Specifies the peer's IP address.

instance *instance-id* — Dumps information for the specified Subscriber Router Redundancy Protocol instance configured on this system.

| | |
|---------------|----------------|
| Values | 1 — 4294967295 |
|---------------|----------------|

Clear Commands

cron

Syntax `cron action completed` [*action-name*] [**owner** *action-owner*]

Context clear

Description This command clears completed CRON action run history entries.

Parameters **action-name** — Specifies the action name.

Values maximum 32 characters

owner *action-owner* — Specifies the owner name.

Default TiMOS CLI

redundancy

Syntax `redundancy`

Context clear

Description This command enables the context to clear redundancy parameters.

multi-chassis

Syntax `multi-chassis`

Context clear>redundancy

Description This command enables the context to clear multi-chassis parameters.

mc-endpoint

Syntax `mc-endpoint endpoint` [*mcep-id*] **statistics**
`mc-endpoint statistics`
`mc-endpoint peer` [*ip-address*] **statistics**

Context clear>redundancy>multi-chassis

Description This command clears multi-chassis endpoint statistics.

endpoint *mcep-id* — Clears information for the specified multi-chassis endpoint ID.

Values 1 — 4294967295

peer *ip-address* — Clears information for the specified peer IP address.

statistics — Clears statistics for this multi-chassis endpoint.

mc-lag

Syntax **mc-lag** [**peer** *ip-address* [**lag** *lag-id*]]

Context clear>redundancy>multi-chassis

Description This command clears multi-chassis Link Aggregation Group (LAG) information.

Parameters **peer** *ip-address* — Clears the specified address of the multi-chassis peer.

lag *lag-id* — Clears the specified LAG on this system.

Values 1 — 100

mc-ring

Syntax **mc-ring**

Context clear>redundancy>multi-chassis

Description This command clears multi-chassis ring data.

debounce

Syntax **debounce peer** *ip-address* **ring** *sync-tag*

Context clear>redundancy>multi-chassis

Description This command clears multi-chassis ring operational state debounce history.

Parameters *ip-address* — Clears debounce history of the specified IP address.

ring *sync-tag* — Clears debounce history for the specified sync tag.

ring-nodes

Syntax **ring-nodes peer** *ip-address* **ring** *sync-tag*

Context clear>redundancy>multi-chassis>mcr

Description This command clears multi-chassis ring unreferenced ring nodes.

System Commands

Parameters *ip-address* — Clears ring statistics for the specified IP address.
ring sync-tag — Clears ring statistics for the specified sync tag.

statistics

Syntax **statistics**

Context clear>redundancy>multi-chassis>mcr

Description This command clears multi-chassis ring

global

Syntax **global**

Context clear>redundancy>multi-chassis>mcr>statistics

Description This command clears multi-chassis ring global statistics.

peer

Syntax **peer** *ip-address*

Context clear>redundancy>multi-chassis>mcr>statistics

Description This command clears multi-chassis ring peer statistics.

Parameters *ip-address* — Clears ring peer statistics for the specified IP address.

ring

Syntax **ring peer** *ip-address* **ring** *sync-tag*

Context clear>redundancy>multi-chassis>mcr>statistics

Description This command clears multi-chassis ring statistics.

Parameters *ip-address* — Clears ring statistics for the specified IP address.
ring sync-tag — Clears ring statistics for the specified sync tag.

ring-node

Syntax **ring-node peer** *ip-address* **ring** *sync-tag* **node** *ring-node-name*

Context clear>redundancy>multi-chassis>mcr>statistics

Description This command clears multi-chassis ring statistics.

Parameters **peer** *ip-address* — Clears ring-node peer statistics for the specified IP address.

ring *sync-tag* — Clears ring-node peer statistics for the specified sync-tag.

node *ring-node-name* — Clears ring-node peer statistics for the specified ring node name.**sync-database**

Syntax **sync-database peer** *ip-address* **all application** *application*
sync-database peer *ip-address* { **port** *port-id* | *lag-id* | **sync-tag** *sync-tag* } **application**
application
sync-database peer *ip-address* **port** *port-id* | *lag-id* **sync-tag** *sync-tag* **application** *application*

Context clear>redundancy>multi-chassis

Description This command clears multi-chassis sync database information.

Parameters **peer** *ip-address* — Clears the specified address of the multi-chassis peer.

port *port-id* — Clears the specified port ID of the multi-chassis peer.

port *lag-id* — Clears the specified Link Aggregation Group (LAG) on this system.

all — Clears all ports and/or sync tags.

sync-tag *sync-tag* — Clears the synchronization tag used while synchronizing this port with the multi-chassis peer.

application — Clears the specified application information that was synchronized with the multi-chassis peer.

| | | |
|---------------|----------------|---------------------------------------|
| Values | all: | All supported applications |
| | dhcp-server: | local dhcp server |
| | igmp: | internet group management protocol |
| | igmp-snooping: | igmp-snooping |
| | mc-ring: | multi-chassis ring |
| | mld-snooping: | multicast listener discovery-snooping |
| | srrp: | simple router redundancy protocol |
| | sub-host-trk | subscriber host tracking |
| | sub-mgmt: | subscriber management |

screen

Syntax screen

Context clear

Description This command allows an operator to clear the Telnet or console screen.

system

System Commands

Syntax `system sync-if-timing {ref1 | ref2}`

Context clear

Description This command allows an operator to individually clear (re-enable) a previously failed reference. As long as the reference is one of the valid options, this command is always executed. An inherent behavior enables the revertive mode which causes a re-evaluation of all available references.

sync-if-timing

Syntax `system sync-if-timing {ref1 | ref2}`

Context clear

Description This command allows an operator to individually clear (re-enable) a previously failed reference. As long as the reference is one of the valid options, this command is always executed. An inherent behavior enables the revertive mode which causes a re-evaluation of all available references.

Parameters **ref1** — clears the first timing reference
ref2 — clears the second timing reference

trace

Syntax `trace log`

Context clear

Description This command allows an operator to clear the trace log.

Standards and Protocol Support

Standards Compliance

IEEE 802.1ab-REV/D3 Station and Media Access Control Connectivity Discovery
IEEE 802.1d Bridging
IEEE 802.1p/Q VLAN Tagging
IEEE 802.1s Multiple Spanning Tree
IEEE 802.1w Rapid Spanning Tree Protocol
IEEE 802.1x Port Based Network Access Control
IEEE 802.1ad Provider Bridges
IEEE 802.1ah Provider Backbone Bridges
IEEE 802.1ag Service Layer OAM
IEEE 802.3ah Ethernet in the First Mile
IEEE 802.1ak Multiple MAC Registration Protocol
IEEE 802.3 10BaseT
IEEE 802.3ad Link Aggregation
IEEE 802.3ae 10Gbps Ethernet
IEEE 802.3ah Ethernet OAM
IEEE 802.3u 100BaseTX
IEEE 802.3x Flow Control
IEEE 802.3z 1000BaseSX/LX
ITU-T Y.1731 OAM functions and mechanisms for Ethernet based networks
ITU-T G.8031 Ethernet linear protection switching
ITU-T G.8032 Ethernet Ring Protection Switching (version 2)

Protocol Support

OSPF

RFC 1765 OSPF Database Overflow
RFC 2328 OSPF Version 2
RFC 2370 Opaque LSA Support
RFC 2740 OSPF for IPv6 (OSPFv3)
draft-ietf-ospf-ospfv3-update-14.txt
RFC 3101 OSPF NSSA Option
RFC 3137 OSPF Stub Router Advertisement

RFC 3623 Graceful OSPF Restart – GR helper
RFC 3630 Traffic Engineering (TE) Extensions to OSPF Version 2
RFC 4203 - Shared Risk Link Group (SRLG) sub-TLV
RFC 5185 OSPF Multi-Area Adjacency
RFC 3623 Graceful OSPF Restart — GR helper
RFC 3630 Traffic Engineering (TE) Extensions to OSPF Version 2
RFC 4203 for Shared Risk Link Group (SRLG) sub-TLV

BGP

RFC 1397 BGP Default Route Advertisement
RFC 1772 Application of BGP in the Internet
RFC 1965 Confederations for BGP
RFC 1997 BGP Communities Attribute
RFC 2385 Protection of BGP Sessions via MD5
RFC 2439 BGP Route Flap Dampening
RFC 2547bis BGP/MPLS VPNs
RFC 2918 Route Refresh Capability for BGP-4
RFC 3107 Carrying Label Information in BGP-4
RFC 3392 Capabilities Advertisement with BGP4
RFC 4271 BGP-4 (previously RFC 1771)
RFC 4360 BGP Extended Communities Attribute
RFC 4364 BGP/MPLS IP Virtual Private Networks (VPNs) (previously RFC 2547bis BGP/MPLS VPNs)
RFC 4456 BGP Route Reflection: Alternative to Full-mesh IBGP (previously RFC 1966 & 2796)
RFC 4486 Subcodes for BGP Cease Notification Message
RFC 4577 OSPF as the Provider/Customer Edge Protocol for BGP/MPLS IP Virtual Private Networks (VPNs)

RFC 4659 BGP/MPLS IP Virtual Private Network (VPN) Extension for IPv6 VPN
RFC 4684 Constrained Route Distribution for Border Gateway Protocol/MultiProtocol Label Switching (BGP/MPLS) Internet Protocol (IP) Virtual Private Networks (VPNs)
RFC 4724 Graceful Restart Mechanism for BGP – GR helper
RFC 4760 Multi-protocol Extensions for BGP
RFC 4798 Connecting IPv6 Islands over IPv4 MPLS Using IPv6 Provider Edge Routers (6PE)
RFC 4893 BGP Support for Four-octet AS Number Space
RFC 5004 Avoid BGP Best Path Transitions from One External to Another
RFC 5065 Confederations for BGP (obsoletes 3065)
RFC 5291 Outbound Route Filtering Capability for BGP-4
RFC 5575 Dissemination of Flow Specification Rules
RFC 5668 4-Octet AS Specific BGP Extended Community
draft-ietf-idr-add-paths
draft-ietf-idr-best-external

IS-IS

RFC 1142 OSI IS-IS Intra-domain Routing Protocol (ISO 10589)
RFC 1195 Use of OSI IS-IS for routing in TCP/IP & dual environments
RFC 2763 Dynamic Hostname Exchange for IS-IS
RFC 2966 Domain-wide Prefix Distribution with Two-Level IS-IS
RFC 2973 IS-IS Mesh Groups
RFC 3373 Three-Way Handshake for Intermediate System to Intermediate System (IS-IS) Point-to-Point Adjacencies

Standards and Protocols

RFC 3567 Intermediate System to Intermediate System (ISIS) Cryptographic Authentication
RFC 3719 Recommendations for Interoperable Networks using IS-IS
RFC 3784 Intermediate System to Intermediate System (IS-IS) Extensions for Traffic Engineering (TE)
RFC 3787 Recommendations for Interoperable IP Networks
RFC 3847 Restart Signaling for IS-IS – GR helper
RFC 4205 for Shared Risk Link Group (SRLG) TLV
draft-ietf-isis-igp-p2p-over-lan-05.txt

IPSec

RFC 2401 Security Architecture for the Internet Protocol
RFC 2409 The Internet Key Exchange (IKE)
RFC 3706 IKE Dead Peer Detection
RFC 3947 Negotiation of NAT-Traversal in the IKE
RFC 3948 UDP Encapsulation of IPsec ESP Packets
draft-ietf-ipsec-isakmp-xauth-06.txt – Extended Authentication within ISAKMP/Oakley (XAUTH)
draft-ietf-ipsec-isakmp-modecfg-05.txt – The ISAKMP Configuration Method

IPv6

RFC 1981 Path MTU Discovery for IPv6
RFC 2375 IPv6 Multicast Address Assignments
RFC 2460 Internet Protocol, Version 6 (IPv6) Specification
RFC 2461 Neighbor Discovery for IPv6
RFC 2462 IPv6 Stateless Address Auto configuration
RFC 2463 Internet Control Message Protocol (ICMPv6) for the Internet Protocol Version 6 Specification
RFC 2464 Transmission of IPv6 Packets over Ethernet Networks
RFC 2529 Transmission of IPv6 over IPv4 Domains without Explicit Tunnels

RFC 2545 Use of BGP-4 Multiprotocol Extension for IPv6 Inter-Domain Routing
RFC 2710 Multicast Listener Discovery (MLD) for IPv6
RFC 2740 OSPF for IPv6
RFC 3306 Unicast-Prefix-based IPv6 Multicast Addresses
RFC 3315 Dynamic Host Configuration Protocol for IPv6
RFC 3587 IPv6 Global Unicast Address Format
RFC3590 Source Address Selection for the Multicast Listener Discovery (MLD) Protocol
RFC 3810 Multicast Listener Discovery Version 2 (MLDv2) for IPv6
RFC 4007 IPv6 Scoped Address Architecture
RFC 4193 Unique Local IPv6 Unicast Addresses
RFC 4291 IPv6 Addressing Architecture
RFC 4552 Authentication/Confidentiality for OSPFv3
RFC 4659 BGP-MPLS IP Virtual Private Network (VPN) Extension for IPv6 VPN
RFC 5072 IP Version 6 over PPP
RFC 5095 Deprecation of Type 0 Routing Headers in IPv6
draft-ietf-isis-ipv6-05
draft-ietf-isis-wg-multi-topology-xx.txt

Multicast

RFC 1112 Host Extensions for IP Multicasting (Snooping)
RFC 2236 Internet Group Management Protocol, (Snooping)
RFC 3376 Internet Group Management Protocol, Version 3 (Snooping)
RFC 2362 Protocol Independent Multicast-Sparse Mode (PIMSM)
RFC 3618 Multicast Source Discovery Protocol (MSDP)
RFC 3446 Anycast Rendezvous Point (RP) mechanism using Protocol Independent Multicast (PIM) and Multicast Source Discovery Protocol (MSDP)
RFC 4601 Protocol Independent Multicast - Sparse Mode (PIM-SM): Protocol Specification (Revised)

RFC 4604 Using IGMPv3 and MLDv2 for Source-Specific Multicast
RFC 4607 Source-Specific Multicast for IP
RFC 4608 Source-Specific Protocol Independent Multicast in 232/8
RFC 4610 Anycast-RP Using Protocol Independent Multicast (PIM)
RFC 5186, Internet Group Management Protocol Version 3 (IGMPv3)/ Multicast Listener Discovery Version 2 (MLDv2) and Multicast Routing Protocol Interaction
draft-ietf-pim-sm-bsr-06.txt
draft-rosen-vpn-mcast-15.txt Multicast in MPLS/BGP IP VPNs
draft-ietf-mboned-msdp-mib-01.txt
draft-ietf-l3vpn-2547bis-mcast-07: Multicast in MPLS/BGP IP VPNs
draft-ietf-l3vpn-2547bis-mcast-bgp-05: BGP Encodings and Procedures for Multicast in MPLS/BGP IP VPNs
RFC 3956: Embedding the Rendezvous Point (RP) Address in an IPv6 Multicast Address

MPLS — General

RFC 2430 A Provider Architecture DiffServ & TE
RFC 2474 Definition of the DS Field the IPv4 and IPv6 Headers (Rev)
RFC 2597 Assured Forwarding PHB Group (rev3260)
RFC 2598 An Expedited Forwarding PHB
RFC 3031 MPLS Architecture
RFC 3032 MPLS Label Stack Encoding
RFC 3443 Time To Live (TTL) Processing in Multi-Protocol Label Switching (MPLS) Networks
RFC 4182 Removing a Restriction on the use of MPLS Explicit NULL
RFC 3140 Per-Hop Behavior Identification Codes
RFC 4905, Encapsulation methods for transport of layer 2 frames over MPLS
RFC 5332 MPLS Multicast Encapsulations

MPLS — LDP

RFC 3037 LDP Applicability

RFC 3478 Graceful Restart Mechanism for LDP – GR helper
 RFC 5036 LDP Specification
 RFC 5283 LDP extension for Inter-Area LSP
 RFC 5443 LDP IGP Synchronization
 draft-ietf-mpls-ldp-p2mp-05 LDP Extensions for Point-to-Multipoint and Multipoint-to-Multipoint LSP
 draft-ietf-mpls-mldp-in-band-signaling-05 Multipoint LDP in-band signaling for Point-to-Multipoint and Multipoint-to-Multipoint Label Switched Paths

MPLS/RSVP-TE

RFC 2702 Requirements for Traffic Engineering over MPLS
 RFC2747 RSVP Cryptographic Authentication
 RFC3097 RSVP Cryptographic Authentication
 RFC 3209 Extensions to RSVP for Tunnels
 RFC 3564 Requirements for Diff-Serv-aware TE
 RFC 3906 Calculating Interior Gateway Protocol (IGP) Routes Over Traffic Engineering Tunnels
 RFC 4090 Fast reroute Extensions to RSVP-TE for LSP Tunnels
 RFC 4124 Protocol Extensions for Support of Diffserv-aware MPLS Traffic Engineering
 RFC 4125 Maximum Allocation Bandwidth Constraints Model for Diffserv-aware MPLS Traffic Engineering
 RFC 4127 Russian Dolls Bandwidth Constraints Model for Diffserv-aware MPLS Traffic Engineering
 RFC 4561 Definition of a RRO Node-Id Sub-Object
 RFC 4875 Extensions to Resource Reservation Protocol - Traffic Engineering (RSVP-TE) for Point-to-Multipoint TE Label Switched Paths (LSPs)
 RFC 5151 Inter-domain MPLS and GMPLS Traffic Engineering – RSVP-TE Extensions
 RFC 5712 MPLS Traffic Engineering Soft Preemption

draft-newton-mpls-te-dynamic-overbooking-00 A Diffserv-TE Implementation Model to dynamically change booking factors during failure events
 RFC 5817 Graceful Shutdown in GMPLS Traffic Engineering Networks

MPLS — OAM

RFC 4379 Detecting Multi-Protocol Label Switched (MPLS) Data Plane Failures
 draft-ietf-mpls-p2mp-lsp-ping-06 Detecting Data Plane Failures in Point-to-Multipoint Multiprotocol Label Switching (MPLS) - Extensions to LSP Ping

RIP

RFC 1058 RIP Version 1
 RFC 2082 RIP-2 MD5 Authentication
 RFC 2453 RIP Version 2

TCP/IP

RFC 768 UDP
 RFC 1350 The TFTP Protocol (Rev.
 RFC 791 IP
 RFC 792 ICMP
 RFC 793 TCP
 RFC 826 ARP
 RFC 854 Telnet
 RFC 951 BootP (rev)
 RFC 1519 CIDR
 RFC 1542 Clarifications and Extensions for the Bootstrap Protocol
 RFC 1812 Requirements for IPv4 Routers
 RFC 2347 TFTP option Extension
 RFC 2328 TFTP Blocksize Option
 RFC 2349 TFTP Timeout Interval and Transfer Size option
 RFC 2401 Security Architecture for Internet Protocol
 RFC 2428 FTP Extensions for IPv6 and NATs
 RFC 3596 DNS Extensions to Support IP version 6
 draft-ietf-bfd-mib-00.txtBidirectional Forwarding Detection Management Information Base
 RFC 5880 Bidirectional Forwarding Detection

RFC 5881 BFD IPv4 and IPv6 (Single Hop)
 RFC 5883 BFD for Multihop Paths

VRRP

RFC 2787 Definitions of Managed Objects for the Virtual Router Redundancy Protocol
 RFC 3768 Virtual Router Redundancy Protocol
 RFC 5798, Virtual Router Redundancy Protocol Version 3 for IPv4 and IPv6

PPP

RFC 1332 PPP IPCP
 RFC 1377 PPP OSINLCP
 RFC 1638/2878PPP BCP
 RFC 1661 PPP (rev RFC2151)
 RFC 1662 PPP in HDLC-like Framing
 RFC 1877 PPP Internet Protocol Control Protocol Extensions for Name Server Addresses
 RFC 1989 PPP Link Quality Monitoring
 RFC 1990 The PPP Multilink Protocol (MP)
 RFC 1994 PPP Challenge Handshake Authentication Protocol (CHAP)
 RFC 2615 PPP over SONET/SDH
 RFC 2516 A Method for Transmitting PPP Over Ethernet
 RFC 2686 The Multi-Class Extension to Multi-Link PPP

Frame Relay

FRF.1.2 - PVC User-to-Network Interface (UNI) Implementation Agreement
 FRF.5 - Frame Relay/ATM PVC Network Interworking Implementation
 ANSI T1.617 Annex D, DSS1 — Signalling Specification For Frame Relay Bearer Service.
 FRF2.2 -PVC Network-to- Network Interface (NNI) Implementation Agreement.
 FRF.12 Frame Relay Fragmentation Implementation Agreement
 FRF.16.1 Multilink Frame Relay UNI/ NNI Implementation Agreement
 ITU-T Q.933 Annex A- Additional procedures for Permanent Virtual Connection (PVC) status management

Standards and Protocols

ATM

- RFC 1626 Default IP MTU for use over ATM AAL5
- RFC 2514 Definitions of Textual Conventions and OBJECT_IDENTITIES for ATM Management
- RFC 2515 Definition of Managed Objects for ATM Management RFC 2684 Multiprotocol Encapsulation over ATM Adaptation Layer 5
- AF-TM-0121.000 Traffic Management Specification Version 4.1
- ITU-T Recommendation I.610 - B-ISDN Operation and Maintenance Principles and Functions version 11/95
- ITU-T Recommendation I.432.1 – BISDN user-network interface – Physical layer specification: General characteristics
- GR-1248-CORE - Generic Requirements for Operations of ATM Network Elements (NEs). Issue 3
- GR-1113-CORE - Bellcore, Asynchronous Transfer Mode (ATM) and ATM Adaptation Layer (AAL) Protocols Generic Requirements, Issue 1
- AF-ILMI-0065.000 Integrated Local Management Interface (ILMI) Version 4.0
- AF-TM-0150.00 Addendum to Traffic Management v4.1 optional minimum desired cell rate indication for UBR
- AF-PHY-0086.001, Inverse Multiplexing for ATM (IMA) Specification Version 1.1

DHCP

- RFC 2131 Dynamic Host Configuration Protocol (REV)
- RFC 3046 DHCP Relay Agent Information Option (Option 82)
- RFC 1534 Interoperation between DHCP and BOOTP

VPLS

- RFC 4762 Virtual Private LAN Services Using LDP
- RFC5501: Requirements for Multicast Support in Virtual Private LAN

- Services (previously draft-ietf-l2vpn-vpls-mcast-reqts-04)
- draft-ietf-l2vpn-vpls-mcast-reqts-04
- draft-ietf-l2vpn-signaling-08

PSEUDOWIRE

- RFC 3985 Pseudo Wire Emulation Edge-to-Edge (PWE3)
- RFC 4385 Pseudo Wire Emulation Edge-to-Edge (PWE3) Control Word for Use over an MPLS PSN
- RFC 3916 Requirements for Pseudo-Wire Emulation Edge-to-Edge (PWE3)
- RFC 4717 Encapsulation Methods for Transport ATM over MPLS Networks (draft-ietf-pwe3-atm-encap-10.txt)
- RFC 4816 PWE3 ATM Transparent Cell Transport Service (draft-ietf-pwe3-cell-transport-04.txt)
- RFC 4448 Encapsulation Methods for Transport of Ethernet over MPLS Networks (draft-ietf-pwe3-ethernet-encap-11.txt)
- RFC 4619 Encapsulation Methods for Transport of Frame Relay over MPLS Networks (draft-ietf-pwe3-frame-relay-07.txt)
- RFC 4446 IANA Allocations for PWE3
- RFC 4447 Pseudowire Setup and Maintenance Using LDP (draft-ietf-pwe3-control-protocol-17.txt)
- RFC 5085, Pseudowire Virtual Circuit Connectivity Verification (VCCV): A Control Channel for Pseudowires
- RFC 5659 An Architecture for Multi-Segment Pseudowire Emulation Edge-to-Edge
- draft-ietf-l2vpn-vpws-iw-oam-02.txt, OAM Procedures for VPWS Interworking
- RFC6310, Pseudowire (PW) OAM Message Mapping
- draft-ietf-l2vpn-arp-mediation-19.txt, ARP Mediation for IP Interworking of Layer 2 VPN
- RFC6073, Segmented Pseudowire (draft-ietf-pwe3-segmented-pw-18.txt)
- draft-ietf-pwe3-dynamic-ms-pw-14.txt, Dynamic Placement of Multi Segment Pseudo Wires

- draft-ietf-pwe3-redundancy-bit-06.txt, Pseudowire Preferential Forwarding Status bit definition
- draft-ietf-pwe3-redundancy-06.txt, Pseudowire (PW) Redundancy
- RFC6391 Flow Aware Transport of Pseudowires over an MPLS PSN
- MFA Forum 9.0.0 The Use of Virtual trunks for ATM/MPLS Control Plane Interworking
- MFA Forum 12.0.0 Multiservice Interworking - Ethernet over MPLS
- MFA forum 13.0.0 - Fault Management for Multiservice Interworking v1.0
- MFA Forum 16.0.0 – Multiservice Interworking - IP over MPLS

ANCP/L2CP

- RFC5851 ANCP framework
- draft-ietf-ancp-protocol-02.txt ANCP Protocol

Voice /Video Performance

- ITU-T G.107 The E Model- A computational model for use in planning.
- ETSI TS 101 329-5 Annex E extensions- QoS Measurement for VoIP - Method for determining an Equipment Impairment Factor using Passive Monitoring
- ITU-T Rec. P.564 - Conformance testing for voice over IP transmission quality assessment models
- ITU-T G.1020 - Appendix I - Performance Parameter Definitions for Quality of Speech and other Voiceband Applications Utilizing IP Networks- Mean Absolute Packet Delay Variation.& Markov Models.
- RFC 3550 Appendix A.8- RTP: A Transport Protocol for Real-Time Applications- Estimating the Interarrival Jitter

CIRCUIT EMULATION

- RFC 4553 Structure-Agnostic Time Division Multiplexing (TDM) over Packet (SAToP)
- RFC 5086 Structure-Aware Time Division Multiplexed (TDM) Circuit Emulation Service over Packet Switched Network (CESoPSN)

MEF-8 Implementation Agreement for the Emulation of PDH Circuits over Metro Ethernet Networks, October 2004

RFC 5287 Control Protocol Extensions for the Setup of Time-Division Multiplexing (TDM) Pseudowires in MPLS Networks

SONET/SDH

ITU-G.841 Telecommunication Standardization Section of ITU, Types and Characteristics of SDH Networks Protection Architecture, issued in October 1998 and as augmented by Corrigendum1 issued in July 2002

RADIUS

RFC 2865 Remote Authentication Dial In User Service

RFC 2866 RADIUS Accounting

SSH

RFC 4250 The Secure Shell (SSH) Protocol

draft-ietf-secsh-architecture.txt SSH Protocol Architecture

draft-ietf-secsh-userauth.txt SSH Authentication Protocol

draft-ietf-secsh-transport.txt SSH Transport Layer Protocol

draft-ietf-secsh-connection.txt SSH Connection Protocol

draft-ietf-secsh-newmodes.txt SSH Transport Layer Encryption Modes

TACACS+

draft-grant-tacacs-02.txt

Timing

GR-253-CORE SONET Transport Systems: Common Generic Criteria. Issue 3, September 2000

ITU-T G.781 Telecommunication Standardization Section of ITU, Synchronization layer functions, issued 09/2008

ITU-T G.813 Telecommunication Standardization Section of ITU, Timing characteristics of SDH equipment slave clocks (SEC), issued 03/2003.

GR-1244-CORE Clocks for the Synchronized Network: Common Generic Criteria, Issue 3, May 2005

ITU-T G.8261 Telecommunication Standardization Section of ITU, Timing and synchronization aspects in packet networks, issued 04/2008.

ITU-T G.8262 Telecommunication Standardization Section of ITU, Timing characteristics of synchronous Ethernet equipment slave clock (EEC), issued 08/2007.

ITU-T G.8264 Telecommunication Standardization Section of ITU, Distribution of timing information through packet networks, issued 10/2008.

NETWORK MANAGEMENT

ITU-T X.721: Information technology-OSI-Structure of Management Information

ITU-T X.734: Information technology-OSI-Systems Management: Event Report Management Function

M.3100/3120 Equipment and Connection Models

TMF 509/613 Network Connectivity Model

RFC 1157 SNMPv1

RFC 1215 A Convention for Defining Traps for use with the SNMP

RFC 1657 BGP4-MIB

RFC 1724 RIPv2-MIB

RFC 1850 OSPF-MIB

RFC 1907 SNMPv2-MIB

RFC 2011 IP-MIB

RFC 2012 TCP-MIB

RFC 2013 UDP-MIB

RFC 2138 RADIUS

RFC 2206 RSVP-MIB

RFC 2452 IPv6 Management Information Base for the Transmission Control Protocol

RFC 2454 IPv6 Management Information Base for the User Datagram Protocol

RFC 2465 Management Information Base for IPv6: Textual Conventions and General Group

RFC 2558 SONET-MIB

RFC 2571 SNMP-Framework MIB

RFC 2572 SNMP-MPD-MIB

RFC 2573 SNMP-Target-&-notification-MIB

RFC 2574 SNMP-User-based-SMMIB

RFC 2575 SNMP-View-based ACM-MIB

RFC 2576 SNMP-Community-MIB

RFC 2665 EtherLike-MIB

RFC 2819 RMON-MIB

RFC 2863 IF-MIB

RFC 2864 Inverted-stack-MIB

RFC 2987 VRRP-MIB

RFC 3014 Notification-log MIB

RFC 3019 IP Version 6 Management Information Base for The Multicast Listener Discovery Protocol

RFC 3164 Syslog

RFC 3273 HCRMON-MIB

RFC 3411 An Architecture for Describing Simple Network Management Protocol (SNMP) Management Frameworks

RFC 3412 Message Processing and Dispatching for the Simple Network Management Protocol (SNMP)

RFC 3413 Simple Network Management Protocol (SNMP) Applications

RFC 3414 User-based Security Model (USM) for version 3 of the Simple Network Management Protocol (SNMPv3)

RFC 3418 SNMP MIB

RFC 4292 IP-Forward-MIB

RFC 4293 MIB for the Internet Protocol

RFC 5101 Specification of the IP Flow Information Export (IPFIX) Protocol for the Exchange of IP Traffic Flow Information

draft-ietf-ospf-mib-update-04.txt

draft-ietf-mpls-lsr-mib-06.txt

draft-ietf-mpls-te-mib-04.txt

draft-ietf-mpls-ldp-mib-07.txt

draft-ietf-isis-wg-mib-05.txt

IANA-IFType-MIB

IEEE8023-LAG-MIB

Proprietary MIBs

TIMETRA-APS-MIB.mib

TIMETRA-ATM-MIB.mib

TIMETRA-BGP-MIB.mib

TIMETRA-BSX-NG-MIB.mib

TIMETRA-CAPABILITY-7750-V4v0.mib

Standards and Protocols

TIMETRA-CFLOWD-MIB.mib
TIMETRA-CHASSIS-MIB.mib
TIMETRA-CLEAR-MIB.mib
TIMETRA-FILTER-MIB.mib
TIMETRA-GLOBAL-MIB.mib
TIMETRA-IGMP-MIB.mib
TIMETRA-ISIS-MIB.mib
TIMETRA-LAG-MIB.mib
TIMETRA-LDP-MIB.mib
TIMETRA-LOG-MIB.mib
TIMETRA-MIRROR-MIB.mib
TIMETRA-MPLS-MIB.mib
TIMETRA-NG-BGP-MIB.mib
TIMETRA-OAM-TEST-MIB.mib
TIMETRA-OSPF-NG-MIB.mib
TIMETRA-OSPF-V3-MIB.mib
TIMETRA-PIM-NG-MIB.mib
TIMETRA-PORT-MIB.mib
TIMETRA-PPP-MIB.mib
TIMETRA-QOS-MIB.mib
TIMETRA-RIP-MIB.mib
TIMETRA-ROUTE-POLICY-MIB.mib
TIMETRA-RSVP-MIB.mib
TIMETRA-SECURITY-MIB.mib
TIMETRA-SERV-MIB.mib
TIMETRA-SUBSCRIBER-
MGMTMIB.mib
TIMETRA-SYSTEM-MIB.mib
TIMETRA-TC-MIB.mib
TIMETRA-VRRP-MIB.mib
TIMETRA-VRTR-MIB.mib

INDEX

B

BOF

- overview
 - compact flash
 - boot loader file 170
 - image location 170
 - synchronization 237, 259
 - image loading 174
 - persistence 176
 - saving a configuration 192, 170
- configuring
 - accessing
 - the CLI 187
 - console connection 187
 - basic 183
 - BOF parameters 189
 - command reference 195
 - management tasks 190
 - overview 182
 - rebooting 194
 - searching for BOF file 185

C

CLI

- usage
 - basic commands 23
 - command prompt 30
 - displaying context configurations 31, 28
 - entering CLI commands 33, 26, 32
 - monitor commands 27
 - navigating 21
 - structure 18

F

File system

- overview
 - compact flash devices 142
 - URLs 143
- configuring 147

- command reference 155, 149, 148
- displaying information 151
- modifying 147, 150
- removing/deleting 150

L

lldp 334

S

System

- overview
 - active and standby designations 238, 259
 - backup config files 304
 - CLLI 223
 - contact 221, 222
 - location 222
 - manual synchronization 260
 - name 221, 258
 - power supplies 258
 - saving configurations 256, 265, 237
 - time 224
- configuring
 - basic 266
 - command reference
 - administration commands 330
 - power supply commands 326
 - synchronization commands 331, 323, 326
 - power supplies 301
 - revert 315
 - system administration parameters 305, 268, 272
 - timing 313

