



Nokia Service Router Linux  
7215 Interconnect System  
7220 Interconnect Router  
7250 Interconnect Router  
7730 Service Interconnect Router  
Release 25.10

## Log Events Guide

---

3HE 21395 AAAC TQZZA  
Edition: 01  
November 2025

Nokia is committed to diversity and inclusion. We are continuously reviewing our customer documentation and consulting with standards bodies to ensure that terminology is inclusive and aligned with the industry. Our future customer documentation will be updated accordingly.

---

This document includes Nokia proprietary and confidential information, which may not be distributed or disclosed to any third parties without the prior written consent of Nokia.

This document is intended for use by Nokia's customers ("You"/"Your") in connection with a product purchased or licensed from any company within Nokia Group of Companies. Use this document as agreed. You agree to notify Nokia of any errors you may find in this document; however, should you elect to use this document for any purpose(s) for which it is not intended, You understand and warrant that any determinations You may make or actions You may take will be based upon Your independent judgment and analysis of the content of this document.

Nokia reserves the right to make changes to this document without notice. At all times, the controlling version is the one available on Nokia's site.

No part of this document may be modified.

NO WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF AVAILABILITY, ACCURACY, RELIABILITY, TITLE, NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS MADE IN RELATION TO THE CONTENT OF THIS DOCUMENT. IN NO EVENT WILL NOKIA BE LIABLE FOR ANY DAMAGES, INCLUDING BUT NOT LIMITED TO SPECIAL, DIRECT, INDIRECT, INCIDENTAL OR CONSEQUENTIAL OR ANY LOSSES, SUCH AS BUT NOT LIMITED TO LOSS OF PROFIT, REVENUE, BUSINESS INTERRUPTION, BUSINESS OPPORTUNITY OR DATA THAT MAY ARISE FROM THE USE OF THIS DOCUMENT OR THE INFORMATION IN IT, EVEN IN THE CASE OF ERRORS IN OR OMISSIONS FROM THIS DOCUMENT OR ITS CONTENT.

Copyright and trademark: Nokia is a registered trademark of Nokia Corporation. Other product names mentioned in this document may be trademarks of their respective owners.

The registered trademark Linux® is used pursuant to a sublicense from the Linux Foundation, the exclusive licensee of Linus Torvalds, owner of the mark on a worldwide basis.

© 2025 Nokia.

# Table of contents

- 1 About this guide..... 23**
  - 1.1 Precautionary and information messages..... 23
  - 1.2 Conventions..... 23
- 2 Log events overview..... 25**
  - 2.1 Example log event..... 25
  - 2.2 Log event properties..... 26
- 3 What's new..... 28**
- 4 aaa..... 29**
  - 4.1 serverDown..... 29
  - 4.2 serverGroupDown..... 29
  - 4.3 serverGroupUp..... 30
  - 4.4 serverRouteUnavailable..... 30
  - 4.5 serverTimeout..... 30
  - 4.6 serverUp..... 31
  - 4.7 sessionClosed..... 31
  - 4.8 sessionDisconnected..... 32
  - 4.9 sessionIdleDisconnected..... 32
  - 4.10 sessionOpened..... 33
  - 4.11 tacacsRoleInvalid..... 33
  - 4.12 userAuthenticationFailed..... 33
  - 4.13 userAuthenticationSucceeded..... 34
  - 4.14 userLockoutReset..... 34
  - 4.15 userLockoutSet..... 35
  - 4.16 userPasswordChanged..... 35
  - 4.17 userPasswordExpired..... 35
- 5 app..... 37**
  - 5.1 applicationFailed..... 37
  - 5.2 applicationFailureActionTriggered..... 37
  - 5.3 applicationRestarted..... 38
  - 5.4 applicationStarted..... 38

---

5.5	applicationStarting.....	38
<b>6</b>	<b>acl.....</b>	<b>40</b>
6.1	aclCpmIpv4MatchedPacket.....	40
6.2	aclCpmIpv6MatchedPacket.....	40
6.3	aclInterfaceInputIpv4MatchedPacket.....	41
6.4	aclInterfaceInputIpv6MatchedPacket.....	41
6.5	aclInterfaceOutputIpv4MatchedPacket.....	42
6.6	aclInterfaceOutputIpv6MatchedPacket.....	42
6.7	aclTcamProgComplete.....	43
6.8	platformAclHighUtilization.....	43
6.9	platformAclHighUtilizationLowered.....	44
6.10	platformTcamHighUtilization.....	44
6.11	platformTcamHighUtilizationLowered.....	45
<b>7</b>	<b>arpnd.....</b>	<b>46</b>
7.1	ipArpEntryUpdated.....	46
7.2	ipSubinterfaceDuplicateIpv4Address.....	46
7.3	ipSubinterfaceDuplicateIpv6Address.....	47
7.4	ipSubinterfaceDuplicateMacAddress.....	47
7.5	ipSubinterfaceInvalidArp.....	47
7.6	ipSubinterfaceInvalidIpv6NeighborSolicitation.....	48
7.7	ipv6NeighborEntryUpdated.....	48
7.8	ipv6NeighborSubinterfaceLimit.....	49
7.9	ipv6NeighborSubinterfaceLimitThreshold.....	49
<b>8</b>	<b>bfd.....</b>	<b>50</b>
8.1	bfdDownEvent.....	50
8.2	bfdMaxSessionActive.....	50
8.3	bfdProtocolClientAdd.....	51
8.4	bfdProtocolClientRemove.....	51
8.5	bfdSessionDeleted.....	52
8.6	bfdSessionUp.....	52
8.7	bfdWarmrebootAdjustTimers.....	53
8.8	bfdWarmrebootRestoreTimers.....	53
8.9	microbfdDownEvent.....	53

8.10	microbfdMaxSessionActive.....	54
8.11	microbfdSessionDeleted.....	55
8.12	microbfdSessionUp.....	55
8.13	sbfdechoDownEvent.....	56
8.14	sbfdechoMaxSessionActive.....	56
8.15	sbfdechoSessionDeleted.....	57
8.16	sbfdechoSessionUp.....	57
<b>9</b>	<b>bgp.....</b>	<b>58</b>
9.1	bgpIncomingDynamicPeerLimitReached.....	58
9.2	bgpIncomingInterfaceDynamicPeerLimitReached.....	58
9.3	bgpInstanceConvergenceStateTransition.....	59
9.4	bgpLowMemory.....	59
9.5	bgpNeighborBackwardTransition.....	60
9.6	bgpNeighborClosedTCPConn.....	60
9.7	bgpNeighborEstablished.....	60
9.8	bgpNeighborGRHelpingStarted.....	61
9.9	bgpNeighborGRHelpingStopped.....	61
9.10	bgpNeighborHoldTimeExpired.....	62
9.11	bgpNeighborInvalidLocalIP.....	62
9.12	bgpNeighborNoOpenReceived.....	63
9.13	bgpNeighborPrefixLimitReached.....	63
9.14	bgpNeighborPrefixLimitThresholdReached.....	64
9.15	bgpNeighborUnknownRemoteIP.....	64
9.16	bgpNLRIInvalid.....	65
9.17	bgpNotificationReceivedFromNeighbor.....	65
9.18	bgpNotificationSentToNeighbor.....	66
9.19	bgpOutgoingDynamicPeerLimitReached.....	66
9.20	bgpPathAttributeDiscarded.....	67
9.21	bgpPathAttributeMalformed.....	67
9.22	bgpRouteWithdrawnDueToError.....	68
9.23	bgpUpdateInvalid.....	68
<b>10</b>	<b>bridgetable.....</b>	<b>69</b>
10.1	evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimit HighUtilization.....	69
10.2	evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimit HighUtilizationLowered.....	69

10.3	evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitLowered.....	70
10.4	evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitReached.....	70
10.5	I2ConnectionpointBridgeTableDuplicateMacAddressDeleted.....	71
10.6	I2ConnectionpointBridgeTableDuplicateMacAddressDetected.....	71
10.7	I2ConnectionpointBridgeTableMacLimitHighUtilization.....	72
10.8	I2ConnectionpointBridgeTableMacLimitHighUtilizationLowered.....	72
10.9	I2ConnectionpointBridgeTableMacLimitLowered.....	73
10.10	I2ConnectionpointBridgeTableMacLimitReached.....	73
10.11	I2SubinterfaceBridgeTableDuplicateMacAddressDeleted.....	74
10.12	I2SubinterfaceBridgeTableDuplicateMacAddressDetected.....	74
10.13	I2SubinterfaceBridgeTableMacLimitHighUtilization.....	75
10.14	I2SubinterfaceBridgeTableMacLimitHighUtilizationLowered.....	75
10.15	I2SubinterfaceBridgeTableMacLimitLowered.....	76
10.16	I2SubinterfaceBridgeTableMacLimitReached.....	76
10.17	networkInstanceBridgeTableDuplicateMacAddressDeleted.....	77
10.18	networkInstanceBridgeTableDuplicateMacAddressDetected.....	77
10.19	networkInstanceBridgeTableMacLimitHighUtilization.....	78
10.20	networkInstanceBridgeTableMacLimitHighUtilizationLowered.....	78
10.21	networkInstanceBridgeTableMacLimitLowered.....	79
10.22	networkInstanceBridgeTableMacLimitReached.....	79
10.23	networkInstanceBridgeTableProxyArpLimitHighUtilization.....	80
10.24	networkInstanceBridgeTableProxyArpLimitHighUtilizationLowered.....	80
10.25	networkInstanceBridgeTableProxyArpNdDuplicateIpAddressDeleted.....	81
10.26	networkInstanceBridgeTableProxyArpNdDuplicateIpAddressDetected.....	81
10.27	networkInstanceBridgeTableProxyNdLimitHighUtilization.....	82
10.28	networkInstanceBridgeTableProxyNdLimitHighUtilizationLowered.....	82
10.29	systemBridgeTableMacLimitHighUtilization.....	83
10.30	systemBridgeTableMacLimitHighUtilizationLowered.....	83
10.31	systemBridgeTableMacLimitLowered.....	84
10.32	systemBridgeTableMacLimitReached.....	84
10.33	systemBridgeTableProxyArpLimitHighUtilization.....	85
10.34	systemBridgeTableProxyArpLimitHighUtilizationLowered.....	85
10.35	systemBridgeTableProxyNdLimitHighUtilization.....	86
10.36	systemBridgeTableProxyNdLimitHighUtilizationLowered.....	86
10.37	systemEvpnMplsMulticastPeersLimitHighUtilization.....	87
10.38	systemEvpnMplsMulticastPeersLimitHighUtilizationLowered.....	87

10.39	systemEvpnMplsMulticastPeersLimitLowered.....	88
10.40	systemEvpnMplsMulticastPeersLimitReached.....	88
10.41	systemMulticastIldLimitHighUtilization.....	88
10.42	systemMulticastIldLimitHighUtilizationLowered.....	89
10.43	vxlanInterfaceBridgeTableMulticastDestinationsLimitHighUtilization.....	89
10.44	vxlanInterfaceBridgeTableMulticastDestinationsLimit HighUtilizationLowered.....	90
10.45	vxlanInterfaceBridgeTableMulticastDestinationsLimitLowered.....	90
10.46	vxlanInterfaceBridgeTableMulticastDestinationsLimitReached.....	91
<b>11</b>	<b>chassis.....</b>	<b>92</b>
11.1	interfaceStormControlRateReached.....	92
11.2	olsTransceiverAmplifierHighGainAlarm.....	92
11.3	olsTransceiverAmplifierHighGainAlarmClear.....	93
11.4	olsTransceiverAmplifierHighGainWarning.....	93
11.5	olsTransceiverAmplifierHighGainWarningClear.....	93
11.6	olsTransceiverAmplifierHighInputPowerAlarm.....	94
11.7	olsTransceiverAmplifierHighInputPowerAlarmClear.....	94
11.8	olsTransceiverAmplifierHighInputPowerWarning.....	95
11.9	olsTransceiverAmplifierHighInputPowerWarningClear.....	95
11.10	olsTransceiverAmplifierHighOutputPowerAlarm.....	95
11.11	olsTransceiverAmplifierHighOutputPowerAlarmClear.....	96
11.12	olsTransceiverAmplifierHighOutputPowerWarning.....	96
11.13	olsTransceiverAmplifierHighOutputPowerWarningClear.....	97
11.14	olsTransceiverAmplifierHighTempAlarm.....	97
11.15	olsTransceiverAmplifierHighTempAlarmClear.....	98
11.16	olsTransceiverAmplifierHighTempWarning.....	98
11.17	olsTransceiverAmplifierHighTempWarningClear.....	98
11.18	olsTransceiverAmplifierLowGainAlarm.....	99
11.19	olsTransceiverAmplifierLowGainAlarmClear.....	99
11.20	olsTransceiverAmplifierLowGainWarning.....	100
11.21	olsTransceiverAmplifierLowGainWarningClear.....	100
11.22	olsTransceiverAmplifierLowInputPowerAlarm.....	101
11.23	olsTransceiverAmplifierLowInputPowerAlarmClear.....	101
11.24	olsTransceiverAmplifierLowInputPowerWarning.....	101
11.25	olsTransceiverAmplifierLowInputPowerWarningClear.....	102
11.26	olsTransceiverAmplifierLowOutputPowerAlarm.....	102

11.27	olsTransceiverAmplifierLowOutputPowerAlarmClear.....	103
11.28	olsTransceiverAmplifierLowOutputPowerWarning.....	103
11.29	olsTransceiverAmplifierLowOutputPowerWarningClear.....	104
11.30	olsTransceiverAmplifierLowTempAlarm.....	104
11.31	olsTransceiverAmplifierLowTempAlarmClear.....	104
11.32	olsTransceiverAmplifierLowTempWarning.....	105
11.33	olsTransceiverAmplifierLowTempWarningClear.....	105
11.34	platformDatapathResourceHighUtilization.....	106
11.35	platformDatapathResourceHighUtilizationLowered.....	106
11.36	platformDatapathResourceLimitCleared.....	107
11.37	platformDatapathResourceLimitReached.....	107
11.38	platformMtuHighUtilization.....	108
11.39	platformMtuHighUtilizationLowered.....	108
11.40	platformPipelineResourceHighUtilization.....	109
11.41	platformPipelineResourceHighUtilizationLowered.....	109
11.42	platformPipelineResourceLimitCleared.....	110
11.43	platformPipelineResourceLimitReached.....	110
11.44	portDown.....	111
11.45	portEtherCrcMonAlarmClear.....	111
11.46	portEtherCrcMonAlarmSet.....	111
11.47	portEtherSymMonAlarmClear.....	112
11.48	portEtherSymMonAlarmSet.....	112
11.49	portUp.....	113
11.50	secureBootDisabled.....	113
11.51	secureBootEnabled.....	114
11.52	secureBootModDatasetInconsistent.....	114
11.53	secureBootModDatasetNotPresent.....	114
11.54	secureBootRevokeUpdateRecommended.....	115
11.55	secureBootVariablesConsistent.....	115
11.56	secureBootVarsUpdateRecommended.....	116
11.57	subinterfaceDown.....	116
11.58	subinterfaceUp.....	117
11.59	systemResourceHighUtilization.....	117
11.60	systemResourceHighUtilizationLowered.....	118
11.61	systemResourceLimitCleared.....	118
11.62	systemResourceLimitReached.....	119



11.63	transceiverChannelHighInputPowerAlarm.....	119
11.64	transceiverChannelHighInputPowerAlarmClear.....	119
11.65	transceiverChannelHighInputPowerWarning.....	120
11.66	transceiverChannelHighInputPowerWarningClear.....	120
11.67	transceiverChannelHighLaserBiasCurrentAlarm.....	121
11.68	transceiverChannelHighLaserBiasCurrentAlarmClear.....	121
11.69	transceiverChannelHighLaserBiasCurrentWarning.....	122
11.70	transceiverChannelHighLaserBiasCurrentWarningClear.....	122
11.71	transceiverChannelHighOutputPowerAlarm.....	123
11.72	transceiverChannelHighOutputPowerAlarmClear.....	123
11.73	transceiverChannelHighOutputPowerWarning.....	123
11.74	transceiverChannelHighOutputPowerWarningClear.....	124
11.75	transceiverChannelLowInputPowerAlarm.....	124
11.76	transceiverChannelLowInputPowerAlarmClear.....	125
11.77	transceiverChannelLowInputPowerWarning.....	125
11.78	transceiverChannelLowInputPowerWarningClear.....	126
11.79	transceiverChannelLowLaserBiasCurrentAlarm.....	126
11.80	transceiverChannelLowLaserBiasCurrentAlarmClear.....	126
11.81	transceiverChannelLowLaserBiasCurrentWarning.....	127
11.82	transceiverChannelLowLaserBiasCurrentWarningClear.....	127
11.83	transceiverChannelLowOutputPowerAlarm.....	128
11.84	transceiverChannelLowOutputPowerAlarmClear.....	128
11.85	transceiverChannelLowOutputPowerWarning.....	129
11.86	transceiverChannelLowOutputPowerWarningClear.....	129
11.87	transceiverHighInputPowerAlarm.....	129
11.88	transceiverHighInputPowerAlarmClear.....	130
11.89	transceiverHighInputPowerWarning.....	130
11.90	transceiverHighInputPowerWarningClear.....	131
11.91	transceiverHighLaserBiasCurrentAlarm.....	131
11.92	transceiverHighLaserBiasCurrentAlarmClear.....	132
11.93	transceiverHighLaserBiasCurrentWarning.....	132
11.94	transceiverHighLaserBiasCurrentWarningClear.....	132
11.95	transceiverHighOutputPowerAlarm.....	133
11.96	transceiverHighOutputPowerAlarmClear.....	133
11.97	transceiverHighOutputPowerWarning.....	134
11.98	transceiverHighOutputPowerWarningClear.....	134

11.99	transceiverLowInputPowerAlarm.....	135
11.100	transceiverLowInputPowerAlarmClear.....	135
11.101	transceiverLowInputPowerWarning.....	135
11.102	transceiverLowInputPowerWarningClear.....	136
11.103	transceiverLowLaserBiasCurrentAlarm.....	136
11.104	transceiverLowLaserBiasCurrentAlarmClear.....	137
11.105	transceiverLowLaserBiasCurrentWarning.....	137
11.106	transceiverLowLaserBiasCurrentWarningClear.....	137
11.107	transceiverLowOutputPowerAlarm.....	138
11.108	transceiverLowOutputPowerAlarmClear.....	138
11.109	transceiverLowOutputPowerWarning.....	139
11.110	transceiverLowOutputPowerWarningClear.....	139
11.111	transceiverModuleDown.....	139
11.112	transceiverModuleHighTemperatureAlarm.....	140
11.113	transceiverModuleHighTemperatureAlarmClear.....	140
11.114	transceiverModuleHighTemperatureWarning.....	141
11.115	transceiverModuleHighTemperatureWarningClear.....	141
11.116	transceiverModuleHighVoltageAlarm.....	141
11.117	transceiverModuleHighVoltageAlarmClear.....	142
11.118	transceiverModuleHighVoltageWarning.....	142
11.119	transceiverModuleHighVoltageWarningClear.....	143
11.120	transceiverModuleLowTemperatureAlarm.....	143
11.121	transceiverModuleLowTemperatureAlarmClear.....	143
11.122	transceiverModuleLowTemperatureWarning.....	144
11.123	transceiverModuleLowTemperatureWarningClear.....	144
11.124	transceiverModuleLowVoltageAlarm.....	145
11.125	transceiverModuleLowVoltageAlarmClear.....	145
11.126	transceiverModuleLowVoltageWarning.....	145
11.127	transceiverModuleLowVoltageWarningClear.....	146
11.128	transceiverModuleUp.....	146
<b>12</b>	<b>debug.....</b>	<b>147</b>
12.1	setAllConfigLevels.....	147
12.2	setAllStartupLevels.....	147
12.3	setHighBaselineLogLevels.....	148

<b>13</b>	<b>dhcp.....</b>	<b>149</b>
13.1	dhcp6ClientAddressDeclined.....	149
13.2	dhcp6ClientIpv6AddressValidLifetimeExpired.....	149
13.3	dhcp6ClientRebindAttempted.....	150
13.4	dhcp6ClientReconfigureMsgDropped.....	150
13.5	dhcp6ClientRenewSuccess.....	151
13.6	dhcpClientAddressDeclined.....	151
13.7	dhcpClientLeaseExpired.....	152
13.8	dhcpClientRebindAttempted.....	152
13.9	dhcpClientRenewSuccess.....	152
13.10	dhcpxv4RelayAdminDisable.....	153
13.11	dhcpxv4RelayAdminEnable.....	153
13.12	dhcpxv4RelayAllDhcpv4ServersUnreachable.....	154
13.13	dhcpxv4RelayOperDown.....	154
13.14	dhcpxv4RelayOperUp.....	155
13.15	dhcpxv6RelayAdminDisable.....	155
13.16	dhcpxv6RelayAdminEnable.....	156
13.17	dhcpxv6RelayAllDhcpv6ServersUnreachable.....	156
13.18	dhcpxv6RelayOperDown.....	157
13.19	dhcpxv6RelayOperUp.....	157
13.20	giAddressMismatch.....	157
13.21	sourceAddressMismatch.....	158
<b>14</b>	<b>ethcfm.....</b>	<b>159</b>
14.1	ClearErrorCcm.....	159
14.2	ClearLOC.....	159
14.3	ClearMacStatus.....	160
14.4	ClearMMG.....	160
14.5	ClearRDI.....	161
14.6	ClearRemoteCcm.....	161
14.7	ClearRemoteDefectIndication.....	162
14.8	clearTwoWaySlmAvgflrTCA.....	162
14.9	clearTwoWaySlmHliTCA.....	163
14.10	clearTwoWaySlmUnavailTCA.....	163
14.11	ClearUNL.....	164

14.12	ClearUNM.....	164
14.13	ClearUNP.....	164
14.14	ClearXconCcm.....	165
14.15	linktraceCompleted.....	165
14.16	loopbackCompleted.....	166
14.17	RaiseErrorCcm.....	166
14.18	RaiseLOC.....	167
14.19	RaiseMacStatus.....	167
14.20	RaiseMMG.....	168
14.21	RaiseRDI.....	168
14.22	RaiseRemoteCcm.....	168
14.23	RaiseRemoteDefectIndication.....	169
14.24	raiseTwoWaySlmAvgflrTCA.....	169
14.25	raiseTwoWaySlmHliTCA.....	170
14.26	raiseTwoWaySlmUnavailTCA.....	170
14.27	RaiseUNL.....	171
14.28	RaiseUNM.....	171
14.29	RaiseUNP.....	172
14.30	RaiseXconCcm.....	172
14.31	singleEndedDmmCompleted.....	173
14.32	singleEndedSlmCompleted.....	173
14.33	TwoWaySlmAvailabilityState.....	174
<b>15</b>	<b>evpn.....</b>	<b>175</b>
15.1	ethernetsegmentNetworkInstanceBgpInstanceDfStatusChanged.....	175
15.2	ethernetsegmentPreferenceOperValueChanged.....	175
15.3	evpnAutoDiscoveryEviRouteAddDroppedDueToUnexpectedEthTag.....	176
15.4	evpnAutoDiscoveryEviRouteWithdrawDroppedDueToUnexpectedEthTag.....	176
15.5	evpnAutoDiscoveryEviRouteWithdrawnDueToUnexpectedVni.....	177
15.6	evpnInclMcastRouteAddDroppedDueToUnexpectedEthTag.....	177
15.7	evpnInclMcastRouteWithdrawDroppedDueToUnexpectedEthTag.....	178
15.8	evpnInclMcastRouteWithdrawnDueToUnexpectedVni.....	179
15.9	evpnIpPrefixRouteNotImportedDueToUnexpectedVni.....	179
15.10	evpnIpPrefixRouteWithdrawnDueToNoGwMac.....	180
15.11	evpnIpPrefixRouteWithdrawnDueToUnexpectedGwIp.....	180
15.12	evpnMacRouteAddDroppedDueToUnexpectedEthTag.....	181

15.13	evpnMacRouteWithdrawDroppedDueToUnexpectedEthTag.....	181
15.14	evpnMacRouteWithdrawnDueToUnexpectedVni.....	182
15.15	evpnVxlanAutoDiscoveryEviRouteWithdrawnDueToNextHopTypeMismatch.....	183
15.16	evpnVxlanIpPrefixRouteWithdrawnDueToNextHopTypeMismatch.....	183
15.17	evpnVxlanMacIpRouteWithdrawnDueToNextHopTypeMismatch.....	184
<b>16</b>	<b>gnsi.....</b>	<b>185</b>
16.1	gnsiAcctzSubscriptionEnd.....	185
16.2	gnsiAcctzSubscriptionRequestReceived.....	185
16.3	gnsiAcctzSubscriptionStart.....	186
16.4	gnsiAuthzPolicyFinalized.....	186
16.5	gnsiAuthzPolicyInvalid.....	187
16.6	gnsiAuthzPolicyNotFinalized.....	187
16.7	gnsiAuthzPolicyRotate.....	188
16.8	gnsiCertzRotate.....	188
16.9	gnsiCertzRotateFinalized.....	189
16.10	gnsiCertzRotateInvalid.....	189
16.11	gnsiCertzRotateNotFinalized.....	190
16.12	gnsiCredentialzRotateAccountCredentials.....	190
16.13	gnsiCredentialzRotateAccountCredentialsFinalized.....	191
16.14	gnsiCredentialzRotateAccountCredentialsInvalid.....	191
16.15	gnsiCredentialzRotateAccountCredentialsNotFinalized.....	192
16.16	gnsiCredentialzRotateHostParameters.....	192
16.17	gnsiCredentialzRotateHostParametersFinalized.....	193
16.18	gnsiCredentialzRotateHostParametersInvalid.....	193
16.19	gnsiCredentialzRotateHostParametersNotFinalized.....	194
16.20	gnsiPathzPolicyFinalized.....	194
16.21	gnsiPathzPolicyInvalid.....	195
16.22	gnsiPathzPolicyNotFinalized.....	195
16.23	gnsiPathzPolicyRotate.....	196
<b>17</b>	<b>grpc.....</b>	<b>197</b>
17.1	configUpdate.....	197
17.2	grpcServerStart.....	197
17.3	grpcServerStop.....	198
17.4	subscriptionEnd.....	198

17.5	subscriptionRequestReceived.....	198
17.6	subscriptionStart.....	199
17.7	unixSocketGrpcOperDown.....	199
17.8	unixSocketGrpcOperUp.....	200
<b>18</b>	<b>igmp.....</b>	<b>201</b>
18.1	igmpCModeRxQueryVersionMismatch.....	201
18.2	igmpMaxNumberOfGroupSourcesReached.....	201
18.3	igmpMaxNumberOfGroupsReached.....	202
18.4	igmpMaxNumberOfSourcesReached.....	202
18.5	igmpRxQueryVersionMismatch.....	203
<b>19</b>	<b>isis.....</b>	<b>204</b>
19.1	isisAdjacencyBfdSessionSetupFailed.....	204
19.2	isisAdjacencyChange.....	204
19.3	isisAdjacencyRestartStatusChange.....	205
19.4	isisAreaMismatch.....	205
19.5	isisAuthDataFail.....	206
19.6	isisAuthTypeMismatch.....	206
19.7	isisCircuitIdsExhausted.....	207
19.8	isisCircuitMtuTooLow.....	207
19.9	isisCorruptedLspDetected.....	208
19.10	isisLdpSyncExited.....	208
19.11	isisLdpSyncTimerStarted.....	209
19.12	isisLspFragmentTooLarge.....	209
19.13	isisLspPurge.....	210
19.14	isisLspSequenceNumberSkip.....	210
19.15	isisMaxAreaAddressesMismatch.....	210
19.16	isisMaxLspSequenceNumberExceeded.....	211
19.17	isisOverloadEntry.....	211
19.18	isisOverloadExit.....	212
19.19	isisOwnLspPurge.....	212
19.20	isisSystemIdLengthMismatch.....	213
19.21	isisVersionMismatch.....	213
<b>20</b>	<b>json.....</b>	<b>214</b>

20.1	authenticationError.....	214
20.2	authenticationErrorSpiffe.....	214
20.3	globalConfigUpdate.....	215
20.4	httpJsonRpcOperDown.....	215
20.5	httpJsonRpcOperUp.....	216
20.6	httpsJsonRpcOperDown.....	216
20.7	httpsJsonRpcOperUp.....	217
20.8	jsonRpcRequestReceived.....	217
20.9	jsonRpcResponseSent.....	217
20.10	networkInstanceConfigUpdate.....	218
20.11	unixSocketJsonRpcOperDown.....	218
20.12	unixSocketJsonRpcOperUp.....	219
20.13	userAuthenticated.....	219
20.14	userAuthenticationErrorWrongPassword.....	220
20.15	userAuthenticationErrorWrongSpiffeld.....	220
<b>21</b>	<b>lag.....</b>	<b>221</b>
21.1	lagDown.....	221
21.2	lagDownMinLinks.....	221
21.3	lagMemberLinkAdded.....	222
21.4	lagMemberLinkRemoved.....	222
21.5	lagMemberOperDown.....	222
21.6	lagMemberOperUp.....	223
21.7	lagUp.....	223
<b>22</b>	<b>ldp.....</b>	<b>225</b>
22.1	ldplpv4InstanceDown.....	225
22.2	ldplpv4InstanceUp.....	225
22.3	ldplPv4InterfaceDown.....	226
22.4	ldplPv4InterfaceUp.....	226
22.5	ldplPv4TargetDown.....	227
22.6	ldplPv4TargetUp.....	227
22.7	ldplpv6InstanceDown.....	227
22.8	ldplpv6InstanceUp.....	228
22.9	ldplPv6InterfaceDown.....	228
22.10	ldplPv6InterfaceUp.....	229

22.11	IdpIPv6TargetDown.....	229
22.12	IdpIPv6TargetUp.....	230
22.13	IdpSessionDown.....	230
22.14	IdpSessionFecLimitReached.....	231
22.15	IdpSessionLocalIPv4Overload.....	231
22.16	IdpSessionLocalIPv4OverloadCleared.....	232
22.17	IdpSessionLocalIPv6Overload.....	232
22.18	IdpSessionLocalIPv6OverloadCleared.....	232
22.19	IdpSessionPeerIPv4Overload.....	233
22.20	IdpSessionPeerIPv4OverloadCleared.....	233
22.21	IdpSessionPeerIPv6Overload.....	234
22.22	IdpSessionPeerIPv6OverloadCleared.....	234
22.23	IdpSessionUp.....	235
<b>23</b>	<b>license.....</b>	<b>236</b>
23.1	licenseExpired.....	236
23.2	licenseExpirySoon.....	236
23.3	licenseMissing.....	237
23.4	licenseViolation.....	237
<b>24</b>	<b>linux.....</b>	<b>238</b>
24.1	cpuUsageCritical.....	238
24.2	cpuUsageHigh.....	238
24.3	cpuUsageNormal.....	239
24.4	dateAndTimeChanged.....	239
24.5	domainChanged.....	239
24.6	hostnameChanged.....	240
24.7	memoryUsageCritical.....	240
24.8	memoryUsageFull.....	241
24.9	memoryUsageHigh.....	241
24.10	memoryUsageNormal.....	242
24.11	partitionStateChange.....	242
24.12	partitionUsageCritical.....	242
24.13	partitionUsageFull.....	243
24.14	partitionUsageNormal.....	243
24.15	partitionUsageWarning.....	244



24.16	serviceConfigChanged.....	244
24.17	serviceDownInNetworkInstance.....	245
24.18	serviceUpInNetworkInstance.....	245
<b>25</b>	<b>lldp.....</b>	<b>246</b>
25.1	remoteLdpMedPeerAdded.....	246
25.2	remoteLdpMedPeerRemoved.....	246
25.3	remotePeerAdded.....	247
25.4	remotePeerRemoved.....	247
25.5	remotePeerUpdated.....	248
<b>26</b>	<b>log.....</b>	<b>249</b>
26.1	bufferRollover.....	249
26.2	configUpdate.....	249
26.3	fileRollover.....	250
26.4	networkNamespaceChanged.....	250
26.5	subsystemFacilityChanged.....	251
<b>27</b>	<b>macsec.....</b>	<b>252</b>
27.1	MACsecConfigureOnInterface.....	252
27.2	MACsecDisabledFromInterface.....	252
27.3	MACsecEnabledOnInterface.....	253
27.4	MACsecRemovedFromInterface.....	253
27.5	maxNumberOfPeers.....	253
27.6	MkaSessionEnded.....	254
27.7	MkaSessionEstablished.....	254
<b>28</b>	<b>mgmt.....</b>	<b>256</b>
28.1	checkpointGenerated.....	256
28.2	checkpointRevertRequestReceived.....	256
28.3	commitFailed.....	257
28.4	commitSucceeded.....	257
28.5	exclusiveConfigSessionBlockedByOtherSessionError.....	257
28.6	exclusiveConfigSessionError.....	258
28.7	privateConfigSessionError.....	258
28.8	privateSharedMismatch.....	259
28.9	sharedConfigSessionBlockedByOtherSessionError.....	259

<b>29</b>	<b>mirror.....</b>	<b>260</b>
29.1	mirrorDestinationDelete.....	260
29.2	mirrorDestinationOperDown.....	260
29.3	mirrorDestinationOperUP.....	261
29.4	mirrorDestnationAdd.....	261
29.5	mirrorInstanceAdminDisable.....	262
29.6	mirrorInstanceAdminEnable.....	262
29.7	mirrorInstanceOperDown.....	262
29.8	mirrorInstanceOperUp.....	263
29.9	mirrorSourceAdd.....	263
29.10	mirrorSourceDelete.....	264
<b>30</b>	<b>netconf.....</b>	<b>265</b>
30.1	netconfHello.....	265
30.2	netconfRpcError.....	265
30.3	netconfRpcReply.....	266
30.4	netconfRpcRequest.....	266
30.5	netconfRpcStart.....	266
30.6	netconfRpcSuccess.....	267
30.7	netconfServerSocketCreated.....	267
30.8	netconfServerSocketError.....	268
30.9	netconfSessionClosed.....	268
30.10	netconfSessionDisconnected.....	268
30.11	netconfSessionKilled.....	269
30.12	netconfSessionOpened.....	269
<b>31</b>	<b>netinst.....</b>	<b>271</b>
31.1	networkInstanceInterfaceDown.....	271
31.2	networkInstanceInterfaceUp.....	271
31.3	networkInstanceStateDown.....	272
31.4	networkInstanceStateUp.....	272
<b>32</b>	<b>oam_pm.....</b>	<b>273</b>
32.1	ThresholdDelayEventClear.....	273
32.2	ThresholdDelayEventRaise.....	273
32.3	ThresholdLossEventClear.....	274

32.4	ThresholdLossEventRaise.....	274
<b>33</b>	<b>ospf.....</b>	<b>276</b>
33.1	ospfAdjacencyBfdSessionSetupFailed.....	276
33.2	ospfAdjacencyChange.....	276
33.3	ospfAdjacencyRestartStatusChange.....	277
33.4	ospfAsMaxAgeLSA.....	277
33.5	ospfExportLimitReached.....	278
33.6	ospfExportLimitWarning.....	278
33.7	ospfFailure.....	279
33.8	ospfIfLdpSyncStateChange.....	279
33.9	ospfIfRxBadPacket.....	279
33.10	ospfIfStateChange.....	280
33.11	ospfLsdbApproachingOverflow.....	280
33.12	ospfLsdbOverflow.....	281
33.13	ospfNbrMtuMismatch.....	281
33.14	ospfOverloadEntry.....	282
33.15	ospfOverloadExit.....	282
33.16	ospfOverloadWarning.....	283
33.17	ospfSpfRunRestarted.....	283
33.18	ospfSpfRunsStopped.....	283
33.19	ospfAuthDataFailure.....	284
<b>34</b>	<b>platform.....</b>	<b>285</b>
34.1	airflowCorrected.....	285
34.2	airflowMismatch.....	285
34.3	componentBooting.....	286
34.4	componentDown.....	286
34.5	componentFailed.....	286
34.6	componentInserted.....	287
34.7	componentInsertedInInvalidSlot.....	287
34.8	componentLocatorDisabled.....	288
34.9	componentLocatorEnabled.....	288
34.10	componentPowerDown.....	289
34.11	componentPowerUp.....	289
34.12	componentRemoved.....	290

34.13	componentRestarted.....	290
34.14	componentTemperatureExceeded.....	291
34.15	componentTemperatureFailure.....	291
34.16	componentTemperatureNormal.....	292
34.17	componentUp.....	292
34.18	controlModuleActivityChange.....	292
34.19	controlModuleConfigSynchronized.....	293
34.20	controlModuleImageSynchronized.....	293
34.21	controlModuleInSync.....	294
34.22	controlModuleOverlaySynchronized.....	294
34.23	controlModuleSyncLost.....	295
34.24	controlModuleSyncStart.....	295
34.25	fantrayEmpty.....	296
34.26	fips140ConfiguredOperDown.....	296
34.27	fips140ConfiguredOperUp.....	296
34.28	fips140ConfiguredWaitingReboot.....	297
34.29	fips140NotActive.....	297
34.30	fips140Removed.....	298
34.31	linecardCapacityDegraded.....	298
34.32	linecardCapacityNormal.....	298
34.33	platformLowPower.....	299
34.34	platformLowReservePower.....	299
34.35	platformNoPowerRedundancy.....	300
34.36	platformNormalPower.....	300
34.37	platformPowerRedundancyRecovered.....	301
34.38	psuInputDown.....	301
34.39	psuInputUp.....	301
34.40	psuOutputDown.....	302
34.41	psuOutputUp.....	302
34.42	psuTemperatureFault.....	303
34.43	psuTemperatureNormal.....	303
34.44	systemInServiceSoftwareUpgrade.....	304
34.45	systemReboot.....	304
34.46	systemWarmReboot.....	305
34.47	systemWarmRebootAborted.....	305

<b>35</b>	<b>qos.....</b>	<b>306</b>
35.1	platformQoSProfileHighUtilization.....	306
35.2	platformQoSProfileHighUtilizationLowered.....	306
<b>36</b>	<b>ra_guard-agent.....</b>	<b>307</b>
36.1	ra_guardAdd.....	307
36.2	ra_guardRemove.....	307
<b>37</b>	<b>sflow.....</b>	<b>308</b>
37.1	sFlowAgentChange.....	308
37.2	sFlowCollectorUnreachable.....	308
<b>38</b>	<b>stp.....</b>	<b>309</b>
38.1	higherPriorityBridge.....	309
38.2	InterfaceActiveProtocolChange.....	309
38.3	NewCistRegionalRootBridge.....	310
38.4	NewMstiRegionalRootBridge.....	310
38.5	newRootBridge.....	310
38.6	newRootInterface.....	311
38.7	receivedTCN.....	311
38.8	StpBpduGuardError.....	312
38.9	StpRootGuardViolation.....	312
38.10	topologyChangeInterfaceMajorState.....	313
38.11	topologyChangeInterfaceState.....	313
38.12	unacknowledgedTCN.....	314
<b>39</b>	<b>sync.....</b>	<b>315</b>
39.1	syncFreqClockQLChange.....	315
39.2	syncFreqClockRefChange.....	315
39.3	syncFreqClockStateChange.....	316
39.4	syncFreqInstanceAlarmChange.....	316
39.5	syncFreqInstanceQLChange.....	316
39.6	syncPTPNoPortTimestamping.....	317
39.7	syncPTPParentChange.....	317
39.8	syncPTPParentChangeGNSS.....	318
39.9	syncPTPParentChangeIP.....	318

---

39.10	syncPTPParentChangeLocalClock.....	319
39.11	syncPTPPortPTSFUnusable.....	319
39.12	syncPTPTimeRecoveryState.....	320
<b>40</b>	<b>tls.....</b>	<b>321</b>
40.1	tlsProfileExpired.....	321
40.2	tlsProfileExpiresSoon.....	321

# 1 About this guide

This document provides guidance for operators to interpret log events for the Nokia Service Router Linux (SR Linux). This document is intended for users who need to access and understand log events for SR Linux.

**Note:**

This manual covers the current release and may also contain some content that will be released in later maintenance loads. See the *SR Linux Software Release Notes* for information about features supported in each load.

Configuration and command outputs shown in this guide are examples only; actual displays may differ depending on supported functionality and user configuration.

## 1.1 Precautionary and information messages

The following are information symbols used in the documentation.



**DANGER:** Danger warns that the described activity or situation may result in serious personal injury or death. An electric shock hazard could exist. Before you begin work on this equipment, be aware of hazards involving electrical circuitry, be familiar with networking environments, and implement accident prevention procedures.



**WARNING:** Warning indicates that the described activity or situation may, or will, cause equipment damage, serious performance problems, or loss of data.



**Caution:** Caution indicates that the described activity or situation may reduce your component or system performance.



**Note:** Note provides additional operational information.



**Tip:** Tip provides suggestions for use or best practices.

## 1.2 Conventions

Nokia SR Linux documentation uses the following command conventions.

- **Bold** indicates a command that the user must enter.
- Input and output examples are displayed in Courier text.
- An open right angle bracket indicates a progression of menu choices or simple command sequence (often selected from a user interface). Example: **start > connect to**
- A vertical bar (|) indicates a mutually exclusive argument.
- Square brackets ([ ]) indicate optional elements.

- 
- Braces ({ }) indicate a required choice. When braces are contained within square brackets, they indicate a required choice within an optional element.
  - *Italic* indicates a variable.

Generic IP addresses are used in examples. Replace these with the appropriate IP addresses used in the system.



## 2 Log events overview

This section provides general information about the log events described in this guide for the Service Router Linux (SR Linux).

For more information about logging, see the SR Linux Configuration Basics Guide.

### 2.1 Example log event

The following contains an example log event entry from this guide for the `bgpNeighborBackwardTransition` log event.

*Table 1: bgpNeighborBackwardTransition properties*

Property name	Value
Application name	bgp
Event name	bgpNeighborBackwardTransition
Default severity	warning
Message format string	In network-instance \$network-instance\$, the BGP session with \$peer-address\$ moved from higher state \$last-state\$ to lower state \$session-state\$ due to event \$last-event\$
Cause	No routes can be exchanged with this peer
Effect	N/A

The table title for a log event entry is the event name. Each entry contains the information described in the table that follows.

*Table 2: Log event entry field descriptions*

Label	Description
Application name	Name of the application generating the log message
Event name	Name of the log event
Default severity	Severity level of the log event (see <a href="#">Table 3: Log event entry field descriptions</a> for the severity level)
Message format string	Text description of the log event
Cause	Cause of the log event

Label	Description
Effect	Effect of the log event

## 2.2 Log event properties

Log events that are forwarded to a destination are formatted. All application-generated events have the following properties:

- time stamp in UTC or local time
- generating application
- router name identifying the VRF-ID that generated the event
- subject identifying the affected object
- short message describing the event

A log event with a memory, console, or file destination has the following format:

```
nnnn YYYY/MM/DD HH:MM:SS.SS TZONE <severity>: <application> <router-name>
<subject>
<message>
```

Format properties are described in [Table 3: Log event entry field descriptions](#).

*Table 3: Log event entry field descriptions*

Label	Description
nnnn	Log event entry sequence number
YYYY/MM/DD	UTC or local date stamp for the log event entry: YYYY — Year MM — Month DD — Day
HH:MM:SS.SS	UTC time stamp for the event: HH — Hours (24-hour format) MM — Minutes SS.SS — Seconds.hundredths of a second
TZONE	Time zone (for example, UTC, EDT)
<severity>	Severity level of the log event: emerg — System is unusable alert — Action must be taken immediately crit — Critical conditions err — Error conditions

---

Label	Description
	warning — Warning conditions notice — Normal but significant condition info — Informational messages debug — Debug-level messages
<application>	Name of the application generating the log event message
<router>	Router name representing the VRF-ID that generated the log event
<subject>	Subject/affected object for the log event
<message>	Text description of the log event

### 3 What's new

Table 4: Event Changes

Event Name	Change
<a href="#">componentInsertedInInvalidSlot</a>	New
<a href="#">licenseExpired</a>	New
<a href="#">licenseMissing</a>	New
<a href="#">licenseViolation</a>	New
<a href="#">remoteLldpMedPeerAdded</a>	New
<a href="#">remoteLldpMedPeerRemoved</a>	New
<a href="#">serverGroupUp</a>	New
<a href="#">serverUp</a>	New
<a href="#">tacacsRoleInvalid</a>	New
<a href="#">tlsProfileExpired</a>	New
<a href="#">tlsProfileExpiresSoon</a>	New
<a href="#">higherPriorityBridge</a>	New
<a href="#">InterfaceActiveProtocolChange</a>	New
<a href="#">NewCistRegionalRootBridge</a>	New
<a href="#">NewMstiRegionalRootBridge</a>	New
<a href="#">newRootBridge</a>	New
<a href="#">newRootInterface</a>	New
<a href="#">receivedTCN</a>	New
<a href="#">StpBpduGuardError</a>	New
<a href="#">StpRootGuardViolation</a>	New
<a href="#">topologyChangeInterfaceMajorState</a>	New
<a href="#">topologyChangeInterfaceState</a>	New
<a href="#">unacknowledgedTCN</a>	New

## 4 aaa

### 4.1 serverDown

Table 5: serverDown properties

Property name	Value
Application name	aaa
Event name	serverDown
Default severity	error
Message format string	Server <i>server_address</i> in group <i>server_group</i> is down
Cause	The specified server is down, either via being unreachable, or a timeout
Effect	The specified server can no longer be used for authentication, authorization, or accounting transactions.

### 4.2 serverGroupDown

Table 6: serverGroupDown properties

Property name	Value
Application name	aaa
Event name	serverGroupDown
Default severity	error
Message format string	All servers in server group <i>server_group</i> are down
Cause	All servers within the specified server group are no longer available
Effect	The specified server group can no longer be used for authentication, authorization, or accounting transactions.

## 4.3 serverGroupUp

Table 7: serverGroupUp properties

Property name	Value
Application name	aaa
Event name	serverGroupUp
Default severity	error
Message format string	Servers in server group <i>server_group</i> are up
Cause	Servers within the specified server group are available
Effect	The specified server group can be used for authentication, authorization, or accounting transactions.

## 4.4 serverRouteUnavailable

Table 8: serverRouteUnavailable properties

Property name	Value
Application name	aaa
Event name	serverRouteUnavailable
Default severity	error
Message format string	No route available to reach remote server <i>server_address</i> in server group <i>server_group</i> via network instance <i>network_instance</i>
Cause	No routes are available in the specified network instance to reach the remote server
Effect	The specified server can no longer be used for authentication, authorization, or accounting transactions.

## 4.5 serverTimeout

Table 9: serverTimeout properties

Property name	Value
Application name	aaa

Property name	Value
Event name	serverTimeout
Default severity	error
Message format string	Server <i>server_address</i> in group <i>server_group</i> has timed out
Cause	The connection between the AAA manager and the remote server has timed out. The server will be tried again in 30 seconds, or immediately if a valid response is received
Effect	The specified server can no longer be used for authentication, authorization, or accounting transactions.

## 4.6 serverUp

Table 10: *serverUp* properties

Property name	Value
Application name	aaa
Event name	serverUp
Default severity	error
Message format string	Server <i>server_address</i> in group <i>server_group</i> is up
Cause	The specified server is up
Effect	The specified server can be used for authentication, authorization, or accounting transactions.

## 4.7 sessionClosed

Table 11: *sessionClosed* properties

Property name	Value
Application name	aaa
Event name	sessionClosed
Default severity	notice
Message format string	Closed session <i>session_id</i> for user <i>user_name</i> from host <i>remote_host</i> in network-instance <i>network_instance</i>

Property name	Value
Cause	The specified user has closed a session on the system
Effect	None.

## 4.8 sessionDisconnected

Table 12: sessionDisconnected properties

Property name	Value
Application name	aaa
Event name	sessionDisconnected
Default severity	notice
Message format string	Session <i>session_id</i> for user <i>user_name</i> from remote host <i>remote_host</i> in network-instance <i>network_instance</i> disconnected by administrative action
Cause	A specific session for a user has been disconnected from the system by an administrator
Effect	The specified user is disconnected.

## 4.9 sessionIdleDisconnected

Table 13: sessionIdleDisconnected properties

Property name	Value
Application name	aaa
Event name	sessionIdleDisconnected
Default severity	notice
Message format string	Session <i>session_id</i> for user <i>user_name</i> from remote host <i>remote_host</i> in network-instance <i>network_instance</i> disconnected by timeout
Cause	The specified user session disconnected from the system due to an idle timeout
Effect	The specified user is disconnected.



## 4.10 sessionOpened

Table 14: sessionOpened properties

Property name	Value
Application name	aaa
Event name	sessionOpened
Default severity	notice
Message format string	Opened session <i>session_id</i> for user <i>user_name</i> from host <i>remote_host</i> in network-instance <i>network_instance</i>
Cause	The specified user has opened a session on the system
Effect	None.

## 4.11 tacacsRoleInvalid

Table 15: tacacsRoleInvalid properties

Property name	Value
Application name	aaa
Event name	tacacsRoleInvalid
Default severity	error
Message format string	Invalid <i>vsa_name</i> <i>vsa_value</i> received from the TACACS+ server for user <i>user_name</i>
Cause	The TACACS+ server provided an invalid role parameter.
Effect	The TACACS+ user is disconnected.

## 4.12 userAuthenticationFailed

Table 16: userAuthenticationFailed properties

Property name	Value
Application name	aaa
Event name	userAuthenticationFailed

Property name	Value
Default severity	warning
Message format string	User <i>user_name</i> authentication failed from host <i>remote_host</i> in network-instance <i>network_instance</i>
Cause	The specified user has failed authentication
Effect	None.

## 4.13 userAuthenticationSucceeded

Table 17: userAuthenticationSucceeded properties

Property name	Value
Application name	aaa
Event name	userAuthenticationSucceeded
Default severity	notice
Message format string	User <i>user_name</i> on session <i>session_id</i> successfully authenticated from host <i>remote_host</i> in network-instance <i>network_instance</i>
Cause	The specified user has successfully authenticated
Effect	None.

## 4.14 userLockoutReset

Table 18: userLockoutReset properties

Property name	Value
Application name	aaa
Event name	userLockoutReset
Default severity	warning
Message format string	User <i>user_name</i> is unlocked
Cause	Tools command is used to unlock this user or when the lockout timer expires
Effect	None.

## 4.15 userLockoutSet

Table 19: userLockoutSet properties

Property name	Value
Application name	aaa
Event name	userLockoutSet
Default severity	warning
Message format string	User <i>user_name</i> is locked out
Cause	The specified user has been locked out after successive authentication failed attempts within a specific time duration
Effect	None.

## 4.16 userPasswordChanged

Table 20: userPasswordChanged properties

Property name	Value
Application name	aaa
Event name	userPasswordChanged
Default severity	notice
Message format string	Password for user <i>user_name</i> has changed
Cause	The user has changed his password or it was changed by a user with administrative rights
Effect	None.

## 4.17 userPasswordExpired

Table 21: userPasswordExpired properties

Property name	Value
Application name	aaa
Event name	userPasswordExpired

---

Property name	Value
Default severity	warning
Message format string	User <i>user_name</i> password has expired
Cause	The specified user has not changed his password before aging time
Effect	None.

## 5 app

### 5.1 applicationFailed

Table 22: applicationFailed properties

Property name	Value
Application name	app
Event name	applicationFailed
Default severity	alert
Message format string	Application <i>application_name</i> has failed, <i>failure_count</i> of <i>failure_threshold</i> failures in the last <i>failure_window</i> seconds
Cause	The specified application has failed.
Effect	The specified application has failed, and all functionality it provides is inoperable. If this failure reaches the applications failure threshold then the applications failure action will be triggered, otherwise the application will be restarted.

### 5.2 applicationFailureActionTriggered

Table 23: applicationFailureActionTriggered properties

Property name	Value
Application name	app
Event name	applicationFailureActionTriggered
Default severity	alert
Message format string	Application <i>application_name</i> has failed <i>failure_threshold</i> times in the last <i>failure_window</i> seconds, triggering action <i>failure_action</i>
Cause	The specified application has failed enough times to trigger the applications failure action.
Effect	The applications failure action is triggered, as defined in the application-specific configuration.

## 5.3 applicationRestarted

Table 24: applicationRestarted properties

Property name	Value
Application name	app
Event name	applicationRestarted
Default severity	warning
Message format string	Restarted application <i>application_name</i> , restart type <i>restart_type</i>
Cause	Application manager has restarted the specified application.
Effect	The specified application has been restarted.

## 5.4 applicationStarted

Table 25: applicationStarted properties

Property name	Value
Application name	app
Event name	applicationStarted
Default severity	notice
Message format string	Successfully started application <i>application_name</i>
Cause	Application manager has started the specified application.
Effect	The specified application is started.

## 5.5 applicationStarting

Table 26: applicationStarting properties

Property name	Value
Application name	app
Event name	applicationStarting
Default severity	notice

---

Property name	Value
Message format string	Starting application <i>application_name</i>
Cause	Application manager is starting the specified application.
Effect	The specified application is starting.

## 6 acl

### 6.1 aclCpmlpv4MatchedPacket

Table 27: *aclCpmlpv4MatchedPacket* properties

Property name	Value
Application name	acl
Event name	aclCpmlpv4MatchedPacket
Default severity	notice
Message format string	An IPv4 packet, len <i>packet-length</i> , protocol <i>ip-protocol</i> , received by linecard <i>incoming-linecard</i> was <i>action</i> by entry <i>sequence-id</i> of the IPv4 cpm-filter. <i>source-ip(source-port) -&gt; dest-ip(dest-port)</i>
Cause	This event is generated when an IPv4 packet matches an entry of the CPM IPv4 filter and that entry specifies a log action
Effect	None

### 6.2 aclCpmlpv6MatchedPacket

Table 28: *aclCpmlpv6MatchedPacket* properties

Property name	Value
Application name	acl
Event name	aclCpmlpv6MatchedPacket
Default severity	notice
Message format string	An IPv6 packet, len <i>packet-length</i> , protocol <i>last-next-header</i> , received by linecard <i>incoming-linecard</i> was <i>action</i> by entry <i>sequence-id</i> of the IPv6 cpm-filter. <i>source-ip(source-port) -&gt; dest-ip(dest-port)</i>
Cause	This event is generated when an IPv6 packet matches an entry of the CPM IPv6 filter and that entry specifies a log action
Effect	None



## 6.3 aclInterfaceInputIpv4MatchedPacket

Table 29: *aclInterfaceInputIpv4MatchedPacket* properties

Property name	Value
Application name	acl
Event name	aclInterfaceInputIpv4MatchedPacket
Default severity	notice
Message format string	An IPv4 packet, len <i>packet-length</i> , protocol <i>ip-protocol</i> , received on <i>incoming-interface</i> was <i>action</i> by entry <i>sequence-id</i> of filter <i>filter-name</i> . <i>source-ip(source-port) -&gt; dest-ip(dest-port)</i>
Cause	This event is generated when an IPv4 packet matches an entry of an IPv4 filter applied to ingress traffic on a subinterface and that entry specifies a log action
Effect	None

## 6.4 aclInterfaceInputIpv6MatchedPacket

Table 30: *aclInterfaceInputIpv6MatchedPacket* properties

Property name	Value
Application name	acl
Event name	aclInterfaceInputIpv6MatchedPacket
Default severity	notice
Message format string	An IPv6 packet, len <i>packet-length</i> , protocol <i>last-next-header</i> , received on <i>incoming-interface</i> was <i>action</i> by entry <i>sequence-id</i> of filter <i>filter-name</i> . <i>source-ip(source-port) -&gt; dest-ip(dest-port)</i>
Cause	This event is generated when an IPv6 packet matches an entry of an IPv6 filter applied to ingress traffic on a subinterface and that entry specifies a log action
Effect	None

## 6.5 aclInterfaceOutputIpv4MatchedPacket

Table 31: *aclInterfaceOutputIpv4MatchedPacket* properties

Property name	Value
Application name	acl
Event name	aclInterfaceOutputIpv4MatchedPacket
Default severity	notice
Message format string	An IPv4 packet, len <i>packet-length</i> , protocol <i>ip-protocol</i> , intended for transmit on <i>outgoing-interface</i> was <i>action</i> by entry <i>sequence-id</i> of filter <i>filter-name</i> . <i>source-ip(source-port) -&gt; dest-ip( dest-port)</i>
Cause	This event is generated when an IPv4 packet matches an entry of an IPv4 filter applied to egress traffic on a subinterface and that entry specifies a log action
Effect	None

## 6.6 aclInterfaceOutputIpv6MatchedPacket

Table 32: *aclInterfaceOutputIpv6MatchedPacket* properties

Property name	Value
Application name	acl
Event name	aclInterfaceOutputIpv6MatchedPacket
Default severity	notice
Message format string	An IPv6 packet, len <i>packet-length</i> , protocol <i>last-next-header</i> , intended for transmit on <i>outgoing-interface</i> was <i>action</i> by entry <i>sequence-id</i> of filter <i>filter-name</i> . <i>source-ip(source-port) -&gt; dest-ip( dest-port)</i>
Cause	This event is generated when an IPv6 packet matches an entry of an IPv6 filter applied to egress traffic on a subinterface and that entry specifies a log action
Effect	None

## 6.7 aclTcamProgComplete

Table 33: *aclTcamProgComplete* properties

Property name	Value
Application name	acl
Event name	aclTcamProgComplete
Default severity	notice
Message format string	All TCAM banks on all linecards have been reprogrammed with the latest ACL configuration changes.
Cause	This event is generated when all TCAM banks on all linecards have been reprogrammed with the latest ACL configuration changes.
Effect	None

## 6.8 platformAclHighUtilization

Table 34: *platformAclHighUtilization* properties

Property name	Value
Application name	acl
Event name	platformAclHighUtilization
Default severity	warning
Message format string	The ACL resource called <i>resource-name</i> has reached <i>threshold%</i> or more utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> . Only <i>free-entries</i> entries are remaining.
Cause	This event is generated when the utilization of an ACL resource has increased to a level that may warrant concern if further resources are consumed
Effect	None

## 6.9 platformAclHighUtilizationLowered

Table 35: platformAclHighUtilizationLowered properties

Property name	Value
Application name	acl
Event name	platformAclHighUtilizationLowered
Default severity	notice
Message format string	The ACL resource called <i>resource-name</i> has decreased back to <i>threshold%</i> or less utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> .
Cause	This event is generated when the utilization of an ACL resource has decreased to a level that may no longer warrant concern
Effect	None

## 6.10 platformTcamHighUtilization

Table 36: platformTcamHighUtilization properties

Property name	Value
Application name	acl
Event name	platformTcamHighUtilization
Default severity	warning
Message format string	The TCAM resource called <i>resource-name</i> has reached <i>threshold%</i> or more utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> . Only <i>free-entries</i> entries are remaining.
Cause	This event is generated when the utilization of a TCAM resource has increased to a level that may warrant concern if further resources are consumed
Effect	None

## 6.11 platformTcamHighUtilizationLowered

Table 37: platformTcamHighUtilizationLowered properties

Property name	Value
Application name	acl
Event name	platformTcamHighUtilizationLowered
Default severity	notice
Message format string	The TCAM resource called <i>resource-name</i> has decreased back to <i>threshold%</i> or less utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> .
Cause	This event is generated when the utilization of a TCAM resource has decreased to a level that may no longer warrant concern
Effect	None

## 7 arpnd

### 7.1 ipArpEntryUpdated

Table 38: *ipArpEntryUpdated* properties

Property name	Value
Application name	arpnd
Event name	ipArpEntryUpdated
Default severity	informational
Message format string	The ARP entry for <i>ipv4-address</i> on <i>interface.subinterface-index</i> has been updated from mac <i>old-mac</i> type <i>old-type</i> to mac <i>new-mac</i> and type <i>new-type</i> .
Cause	This event is generated whenever an existing static or dynamic ARP entry for an IPv4 address is overwritten. This could be a triggered by a change of entry type (static vs dynamic) or a change of MAC address or a change of the subinterface binding.
Effect	None

### 7.2 ipSubinterfaceDuplicateIpv4Address

Table 39: *ipSubinterfaceDuplicateIpv4Address* properties

Property name	Value
Application name	arpnd
Event name	ipSubinterfaceDuplicateIpv4Address
Default severity	notice
Message format string	The IPv4 address <i>ipv4-address</i> assigned to <i>interface.subinterface-index</i> is being used by another host or router on the same subnet.
Cause	This event is generated when ARP detects that another system is using the same IPv4 address
Effect	Unreliable communications

## 7.3 ipSubinterfaceDuplicateIpv6Address

Table 40: ipSubinterfaceDuplicateIpv6Address properties

Property name	Value
Application name	arpnd
Event name	ipSubinterfaceDuplicateIpv6Address
Default severity	notice
Message format string	The IPv6 address <i>ipv6-address</i> assigned to <i>interface.subinterface-index</i> is being used by another host or router on the same subnet.
Cause	This event is generated when IPv6 DAD detects that another system is using the same IPv6 address
Effect	Unreliable communications

## 7.4 ipSubinterfaceDuplicateMacAddress

Table 41: ipSubinterfaceDuplicateMacAddress properties

Property name	Value
Application name	arpnd
Event name	ipSubinterfaceDuplicateMacAddress
Default severity	notice
Message format string	The MAC address <i>mac-address</i> used by <i>interface.subinterface-index</i> is being used by another host or router on the same subnet.
Cause	This event is generated when ARP or IPv6 Neighbor Discovery detects that another system is using the same MAC address
Effect	Unreliable communications

## 7.5 ipSubinterfaceInvalidArp

Table 42: ipSubinterfaceInvalidArp properties

Property name	Value
Application name	arpnd

Property name	Value
Event name	ipSubinterfaceInvalidArp
Default severity	notice
Message format string	An ARP request for <i>ipv4-address</i> was received on <i>interface.subinterface-index</i> and there is no matching IPv4 subnet.
Cause	This event is generated when ARP receives an ARP request for an invalid IPv4 address
Effect	None

## 7.6 ipSubinterfaceInvalidIpv6NeighborSolicitation

Table 43: *ipSubinterfaceInvalidIpv6NeighborSolicitation* properties

Property name	Value
Application name	arpnd
Event name	ipSubinterfaceInvalidIpv6NeighborSolicitation
Default severity	notice
Message format string	An IPv6 neighbor solicitation for <i>ipv6-address</i> was received on <i>interface.subinterface-index</i> and there is no matching IPv6 subnet.
Cause	This event is generated when IPv6 neighbor discovery receives a NS message for an invalid IPv6 address
Effect	None

## 7.7 ipv6NeighborEntryUpdated

Table 44: *ipv6NeighborEntryUpdated* properties

Property name	Value
Application name	arpnd
Event name	ipv6NeighborEntryUpdated
Default severity	informational
Message format string	The IPv6 neighbor discovery entry for <i>ipv6-address</i> on <i>interface.subinterface-index</i> has been updated from mac <i>old-mac</i> type <i>old-type</i> to mac <i>new-mac</i> and type <i>new-type</i> .



Property name	Value
Cause	This event is generated whenever an existing static or dynamic neighbor entry for an IPv6 address is overwritten. This could be a triggered by a change of entry type (static vs dynamic) or a change of MAC address or a change of the subinterface binding.
Effect	None

## 7.8 ipv6NeighborSubinterfaceLimit

Table 45: *ipv6NeighborSubinterfaceLimit* properties

Property name	Value
Application name	arpnd
Event name	ipv6NeighborSubinterfaceLimit
Default severity	warning
Message format string	The number of IPv6 neighbor discovery entries on <i>interface-dot-subindex</i> has reached the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of IPv6 neighbor entries in the subinterface is at the configured limit.
Effect	None

## 7.9 ipv6NeighborSubinterfaceLimitThreshold

Table 46: *ipv6NeighborSubinterfaceLimitThreshold* properties

Property name	Value
Application name	arpnd
Event name	ipv6NeighborSubinterfaceLimitThreshold
Default severity	warning
Message format string	The number of IPv6 neighbor discovery entries on <i>interface-dot-subindex</i> has reached <i>pct-threshold</i> percent of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of IPv6 neighbor entries in the subinterface is at the configured threshold warning limit.
Effect	None

## 8 bfd

### 8.1 bfdDownEvent

Table 47: bfdDownEvent properties

Property name	Value
Application name	bfd
Event name	bfdDownEvent
Default severity	warning
Message format string	BFD: Network-instance <i>network-instance</i> - Session from <i>local-address:local-discriminator</i> to <i>remote-address:remote-discriminator</i> has transitioned to the <i>down-state</i> state with local-diagnostic code: <i>local-diagnostic-str</i> ( <i>local-diagnostic-code</i> ) and remote-diagnostic code: <i>remote-diagnostic-str</i> ( <i>remote-diagnostic-code</i> )
Cause	This notification is generated when a BFD session transitions to the Down or Admin Down state from an Up state.
Effect	The specified BFD session is now down. If the new state is Down, the session may be down due to a failure see the local or remote diagnostic code. If the new state is Admin-Down the session is down due to administrative reasons.

### 8.2 bfdMaxSessionActive

Table 48: bfdMaxSessionActive properties

Property name	Value
Application name	bfd
Event name	bfdMaxSessionActive
Default severity	warning
Message format string	BFD: Network-instance <i>network-instance</i> - Session from <i>local-address</i> to <i>remote-address</i> requested by <i>client-protocol</i> could not be created because the maximum number of BFD sessions <i>bfd-max-session</i> are active.

Property name	Value
Cause	This notification is generated when a BFD session cannot be created because the maximum number of BFD sessions are already active.
Effect	No more BFD sessions can be created until some existing sessions are removed.

## 8.3 bfdProtocolClientAdd

Table 49: bfdProtocolClientAdd properties

Property name	Value
Application name	bfd
Event name	bfdProtocolClientAdd
Default severity	notice
Message format string	BFD: Network-instance <i>network-instance</i> - The protocol <i>client-protocol</i> is now using BFD session from <i>local-address:local-discriminator</i> to <i>remote-address: remote-discriminator</i>
Cause	This notification is generated when a new protocol begins to use a BFD session to track liveliness.
Effect	The specified protocol will be notified by BFD if the associated sessions transitions from an Up to a Down state. It will be up to the receiving protocol to determine the course of action.

## 8.4 bfdProtocolClientRemove

Table 50: bfdProtocolClientRemove properties

Property name	Value
Application name	bfd
Event name	bfdProtocolClientRemove
Default severity	notice
Message format string	BFD: Network-instance <i>network-instance</i> - The protocol <i>client-protocol</i> using BFD session from <i>local-address:local-discriminator</i> to <i>remote-address: remote-discriminator</i> has been cleared

Property name	Value
Cause	This notification is generated when a protocol stops using a BFD session to track liveliness.
Effect	The specified protocol will no longer be notified by BFD if the associated sessions transitions from an Up to a Down state

## 8.5 bfdSessionDeleted

Table 51: bfdSessionDeleted properties

Property name	Value
Application name	bfd
Event name	bfdSessionDeleted
Default severity	notice
Message format string	BFD: Network-instance <i>network-instance</i> - Session from <i>local-address:local-discriminator</i> to <i>remote-address:remote-discriminator</i> has been deleted
Cause	This notification is generated when a BFD session has been removed from the configuration.
Effect	The BFD session has been removed.

## 8.6 bfdSessionUp

Table 52: bfdSessionUp properties

Property name	Value
Application name	bfd
Event name	bfdSessionUp
Default severity	notice
Message format string	BFD: Network-instance <i>network-instance</i> - Session from <i>local-address:local-discriminator</i> to <i>remote-address:remote-discriminator</i> is UP
Cause	This notification is generated when a BFD session transitions to the up state.
Effect	The BFD session is now operational.

## 8.7 bfdWarmrebootAdjustTimers

Table 53: bfdWarmrebootAdjustTimers properties

Property name	Value
Application name	bfd
Event name	bfdWarmrebootAdjustTimers
Default severity	notice
Message format string	BFD: Warm reboot adjustment of BFD timers initiated
Cause	This notification is generated when BFD is notified to adjust timers in preparation for warm reboot.
Effect	The timers on warm reboot capable BFD sessions are adjusted to keep the sessions UP during the warm reboot

## 8.8 bfdWarmrebootRestoreTimers

Table 54: bfdWarmrebootRestoreTimers properties

Property name	Value
Application name	bfd
Event name	bfdWarmrebootRestoreTimers
Default severity	notice
Message format string	BFD: Warm reboot restoration of BFD timers initiated
Cause	This notification is generated when BFD is notified to restore timers at completion of warm reboot.
Effect	The timers on warm reboot capable BFD sessions are restored to their configured values

## 8.9 microbfdDownEvent

Table 55: microbfdDownEvent properties

Property name	Value
Application name	bfd

Property name	Value
Event name	microbfdDownEvent
Default severity	warning
Message format string	BFD: LAG <i>lag-interface</i> member <i>member-interface</i> - Session from <i>local-address:local-discriminator</i> to <i>remote-address:remote-discriminator</i> has transitioned to the <i>down-state</i> state with local-diagnostic code: <i>local-diagnostic-str</i> ( <i>local-diagnostic-code</i> ) and remote-diagnostic code: <i>remote-diagnostic-str</i> ( <i>remote-diagnostic-code</i> )
Cause	This notification is generated when a BFD session transitions to the Down or Admin Down state from an Up state.
Effect	The specified BFD session is now down. If the new state is Down, the session may be down due to a failure see the local or remote diagnostic code. If the new state is Admin-Down the session is down due to administrative reasons.

## 8.10 microbfdMaxSessionActive

Table 56: *microbfdMaxSessionActive* properties

Property name	Value
Application name	bfd
Event name	microbfdMaxSessionActive
Default severity	warning
Message format string	BFD: LAG <i>lag-interface</i> member <i>member-interface</i> - Session from <i>local-address</i> to <i>remote-address</i> could not be created because the maximum number of BFD sessions <i>bfd-max-session</i> are active.
Cause	This notification is generated when a BFD session cannot be created because the maximum number of BFD sessions are already active.
Effect	No more BFD sessions can be created until some existing sessions are removed.

## 8.11 microbfdSessionDeleted

Table 57: *microbfdSessionDeleted* properties

Property name	Value
Application name	bfd
Event name	microbfdSessionDeleted
Default severity	notice
Message format string	BFD: LAG <i>lag-interface</i> member <i>member-interface</i> - Session from <i>local-address:local-discriminator</i> to <i>remote-address:remote-discriminator</i> has been deleted
Cause	This notification is generated when a BFD session has been removed from the configuration.
Effect	The BFD session has been removed.

## 8.12 microbfdSessionUp

Table 58: *microbfdSessionUp* properties

Property name	Value
Application name	bfd
Event name	microbfdSessionUp
Default severity	notice
Message format string	BFD: LAG <i>lag-interface</i> member <i>member-interface</i> - Session from <i>local-address:local-discriminator</i> to <i>remote-address:remote-discriminator</i> is UP
Cause	This notification is generated when a BFD session transitions to the up state.
Effect	The BFD session is now operational.

## 8.13 sbfdechoDownEvent

Table 59: sbfdechoDownEvent properties

Property name	Value
Application name	bfd
Event name	sbfdechoDownEvent
Default severity	warning
Message format string	BFD: BFD: SR Policy Id <i>policy-id</i> Policy Name <i>policy-name</i> User Type <i>user-type</i> Endpoint <i>endpoint</i> Network-instance <i>network-instance</i> - Sbfd Echo Session discriminator <i>local-discriminator</i> has transitioned to the <i>down-state</i> state with local-diagnostic code: <i>local-diagnostic-str (local-diagnostic-code)</i>
Cause	This notification is generated when a BFD session transitions to the Down or Admin Down state from an Up state.
Effect	The specified BFD session is now down. If the new state is Down, the session may be down due to a failure see the local or remote diagnostic code. If the new state is Admin-Down the session is down due to administrative reasons.

## 8.14 sbfdechoMaxSessionActive

Table 60: sbfdechoMaxSessionActive properties

Property name	Value
Application name	bfd
Event name	sbfdechoMaxSessionActive
Default severity	warning
Message format string	BFD: SR Policy Id <i>policy-id</i> Policy Name <i>policy-name</i> User Type <i>user-type</i> Endpoint <i>endpoint</i> Network-instance <i>network-instance</i> - Sbfd Echo Session requested by <i>client-protocol</i> could not be created because the maximum number of BFD sessions <i>bfd-max-session</i> are active.
Cause	This notification is generated when a BFD session cannot be created because the maximum number of BFD sessions are already active.
Effect	No more BFD sessions can be created until some existing sessions are removed.



## 8.15 sbfdechoSessionDeleted

Table 61: *sbfdechoSessionDeleted* properties

Property name	Value
Application name	bfd
Event name	sbfdechoSessionDeleted
Default severity	notice
Message format string	BFD: SR Policy Id <i>policy-id</i> Policy Name <i>policy-name</i> User Type <i>user-type</i> Endpoint <i>endpoint</i> Network-instance <i>network-instance</i> - SBFD Echo Session discriminator <i>local-discriminator</i> has been deleted
Cause	This notification is generated when a BFD session has been removed from the configuration.
Effect	The BFD session has been removed.

## 8.16 sbfdechoSessionUp

Table 62: *sbfdechoSessionUp* properties

Property name	Value
Application name	bfd
Event name	sbfdechoSessionUp
Default severity	notice
Message format string	BFD: SR Policy Id <i>policy-id</i> Policy Name <i>policy-name</i> User Type <i>user-type</i> Endpoint <i>endpoint</i> Network-instance <i>network-instance</i> - SBFD Echo Session discriminator <i>local-discriminator</i> is UP
Cause	This notification is generated when a BFD session transitions to the up state.
Effect	The BFD session is now operational.

## 9 bgp

### 9.1 bgpIncomingDynamicPeerLimitReached

Table 63: *bgpIncomingDynamicPeerLimitReached* properties

Property name	Value
Application name	bgp
Event name	bgpIncomingDynamicPeerLimitReached
Default severity	notice
Message format string	In network-instance <i>network-instance</i> , an incoming BGP connection from <i>peer-address</i> was rejected because the limit for the maximum number of incoming dynamic peers, <i>max-sessions</i> , has been reached.
Cause	The configured limit on the number of incoming sessions associated with dynamic peers has been reached.
Effect	The incoming connection attempt is rejected.

### 9.2 bgpIncomingInterfaceDynamicPeerLimitReached

Table 64: *bgpIncomingInterfaceDynamicPeerLimitReached* properties

Property name	Value
Application name	bgp
Event name	bgpIncomingInterfaceDynamicPeerLimitReached
Default severity	notice
Message format string	In network-instance <i>network-instance</i> , an incoming BGP connection from <i>peer-address</i> was rejected because the limit for the maximum number of incoming interface dynamic peers, <i>max-sessions</i> , has been reached for the interface <i>interface</i> .
Cause	This event is generated when the dynamic session limit for this interface is reached.
Effect	The incoming connection attempt is rejected.

## 9.3 bgpInstanceConvergenceStateTransition

Table 65: *bgpInstanceConvergenceStateTransition* properties

Property name	Value
Application name	bgp
Event name	bgpInstanceConvergenceStateTransition
Default severity	notice
Message format string	In network-instance <i>network-instance</i> , the BGP convergence state for the <i>address-family</i> address family transitioned from the <i>previous-state</i> state to the <i>new-state</i> state
Cause	This event is generated when the BGP convergence process is being tracked and a state transition occurs
Effect	Dependent on the new state

## 9.4 bgpLowMemory

Table 66: *bgpLowMemory* properties

Property name	Value
Application name	bgp
Event name	bgpLowMemory
Default severity	critical
Message format string	In network-instance <i>network-instance</i> , the BGP session with <i>peer-address</i> was terminated immediately because BGP has out of memory.
Cause	BGP has run out of memory and this peer has been shutdown to reclaim some memory.
Effect	No routes can be exchanged with this peer.

## 9.5 bgpNeighborBackwardTransition

Table 67: *bgpNeighborBackwardTransition* properties

Property name	Value
Application name	bgp
Event name	bgpNeighborBackwardTransition
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , the BGP session with <i>peer-address</i> moved from higher state <i>last-state</i> to lower state <i>session-state</i> due to event <i>last-event</i>
Cause	This event is generated when the BGP FSM moves from a higher numbered state to a lower numbered state.
Effect	No routes can be exchanged with this peer.

## 9.6 bgpNeighborClosedTCPConn

Table 68: *bgpNeighborClosedTCPConn* properties

Property name	Value
Application name	bgp
Event name	bgpNeighborClosedTCPConn
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , the BGP session with <i>peer-address</i> was closed because the neighbor closed the TCP connection.
Cause	The router received a TCP FIN message from its peer.
Effect	No routes can be exchanged with this peer.

## 9.7 bgpNeighborEstablished

Table 69: *bgpNeighborEstablished* properties

Property name	Value
Application name	bgp

Property name	Value
Event name	bgpNeighborEstablished
Default severity	notice
Message format string	In network-instance <i>network-instance</i> , the BGP session with <i>peer-address</i> moved into the ESTABLISHED state
Cause	The BGP session entered the ESTABLISHED state.
Effect	Routes of negotiated address families can now be exchanged with this peer.

## 9.8 bgpNeighborGRHelpingStarted

Table 70: *bgpNeighborGRHelpingStarted* properties

Property name	Value
Application name	bgp
Event name	bgpNeighborGRHelpingStarted
Default severity	notice
Message format string	In network-instance <i>network-instance</i> , the router has started providing GR helper service to the neighbor <i>peer-address</i>
Cause	GR helper is activated
Effect	Routes previously received from the peer, prior to its restart, are retained as stale until the stale-routes-time expires.

## 9.9 bgpNeighborGRHelpingStopped

Table 71: *bgpNeighborGRHelpingStopped* properties

Property name	Value
Application name	bgp
Event name	bgpNeighborGRHelpingStopped
Default severity	notice
Message format string	In network-instance <i>network-instance</i> , the router has stopped providing GR helper service to the neighbor <i>peer-address</i>

Property name	Value
Cause	GR helper is deactivated
Effect	Any remaining stale routes are immediately removed.

## 9.10 bgpNeighborHoldTimeExpired

Table 72: *bgpNeighborHoldTimeExpired* properties

Property name	Value
Application name	bgp
Event name	bgpNeighborHoldTimeExpired
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , the BGP session with <i>peer-address</i> was terminated because a KEEPALIVE message was not received before the holdtime limit of <i>negotiated-hold-time</i> was reached.
Cause	BGP did not receive a KEEPALIVE message from the peer before the negotiated holdtime expired.
Effect	No routes can be exchanged with this peer.

## 9.11 bgpNeighborInvalidLocalIP

Table 73: *bgpNeighborInvalidLocalIP* properties

Property name	Value
Application name	bgp
Event name	bgpNeighborInvalidLocalIP
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , an incoming BGP connection from <i>peer-address</i> was rejected because the destination IP address does not match the allowed local-address, <i>local-address</i> .
Cause	BGP configuration does not allow an incoming BGP connection to this IP address.
Effect	No routes can be exchanged with this peer.

## 9.12 bgpNeighborNoOpenReceived

Table 74: *bgpNeighborNoOpenReceived* properties

Property name	Value
Application name	bgp
Event name	bgpNeighborNoOpenReceived
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , the BGP session with <i>peer-address</i> was terminated because an OPEN message was not received before the configured holdtime limit was reached.
Cause	BGP did not receive an OPEN message from the peer before the configured holdtime expired.
Effect	No routes can be exchanged with this peer.

## 9.13 bgpNeighborPrefixLimitReached

Table 75: *bgpNeighborPrefixLimitReached* properties

Property name	Value
Application name	bgp
Event name	bgpNeighborPrefixLimitReached
Default severity	notice
Message format string	In network-instance <i>network-instance</i> , the number of <i>family</i> routes received from the neighbor <i>peer-address</i> has exceeded the configured limit.
Cause	The number of received routes from the peer has exceeded the configured limit for the associated address family.
Effect	No effect. Routes above the limit are still received and processed.

## 9.14 bgpNeighborPrefixLimitThresholdReached

Table 76: *bgpNeighborPrefixLimitThresholdReached* properties

Property name	Value
Application name	bgp
Event name	bgpNeighborPrefixLimitThresholdReached
Default severity	notice
Message format string	In network-instance <i>network-instance</i> , the number of <i>family</i> routes received from the neighbor <i>peer-address</i> has exceeded the configured threshold, which is <i>warning-threshold-pct%</i> of the limit.
Cause	The number of received routes from the peer has exceeded the configured threshold for the associated address family.
Effect	No effect. Routes above the threshold are still received and processed.

## 9.15 bgpNeighborUnknownRemoteIP

Table 77: *bgpNeighborUnknownRemoteIP* properties

Property name	Value
Application name	bgp
Event name	bgpNeighborUnknownRemoteIP
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , an incoming BGP connection from <i>peer-address</i> was rejected because the source IP address does not match the address of any configured neighbor or any dynamic-neighbor block.
Cause	BGP configuration does not allow an incoming BGP connection from this IP address.
Effect	No routes can be exchanged with this peer.



## 9.16 bgpNLRIInvalid

Table 78: *bgpNLRIInvalid* properties

Property name	Value
Application name	bgp
Event name	bgpNLRIInvalid
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , a route for NLRI <i>nlri</i> was received from neighbor <i>peer-address</i> and it was ignored because it is considered an invalid NLRI.
Cause	The router received an UPDATE with an invalid NLRI
Effect	The route associated with the NLRI is not added or removed from the BGP RIB.

## 9.17 bgpNotificationReceivedFromNeighbor

Table 79: *bgpNotificationReceivedFromNeighbor* properties

Property name	Value
Application name	bgp
Event name	bgpNotificationReceivedFromNeighbor
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , the BGP session with <i>peer-address</i> was closed because the neighbor sent a NOTIFICATION with code <i>last-notification-error-code</i> and subcode <i>last-notification-error-subcode</i>
Cause	The router received a NOTIFICATION message from its peer.
Effect	No routes can be exchanged with this peer.

## 9.18 bgpNotificationSentToNeighbor

Table 80: *bgpNotificationSentToNeighbor* properties

Property name	Value
Application name	bgp
Event name	bgpNotificationSentToNeighbor
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , the BGP session with <i>peer-address</i> was closed because the router sent this neighbor a NOTIFICATION with code <i>last-notification-error-code</i> and subcode <i>last-notification-error-subcode</i>
Cause	The router sent a NOTIFICATION message to its peer.
Effect	No routes can be exchanged with this peer.

## 9.19 bgpOutgoingDynamicPeerLimitReached

Table 81: *bgpOutgoingDynamicPeerLimitReached* properties

Property name	Value
Application name	bgp
Event name	bgpOutgoingDynamicPeerLimitReached
Default severity	notice
Message format string	In network-instance <i>network-instance</i> , no session was initiated towards the LLDP-discovered address <i>peer-address</i> because the limit for the maximum number of outgoing dynamic peers, <i>max-sessions</i> , has been reached.
Cause	The configured limit on the number of outgoing sessions associated with dynamic peers has been reached.
Effect	No connection attempt is made by the router.

## 9.20 bgpPathAttributeDiscarded

Table 82: *bgpPathAttributeDiscarded* properties

Property name	Value
Application name	bgp
Event name	bgpPathAttributeDiscarded
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , a path attribute of type <i>attribute-type</i> and length <i>attribute-length</i> was discarded in a route received from the neighbor <i>peer-address</i> .
Cause	The path attribute was malformed and the attribute-discard approach is used for this type of attribute.
Effect	The intended meaning of that path attribute is not applied but the UPDATE message is still processed for new reachability information.

## 9.21 bgpPathAttributeMalformed

Table 83: *bgpPathAttributeMalformed* properties

Property name	Value
Application name	bgp
Event name	bgpPathAttributeMalformed
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , a path attribute of type <i>attribute-type</i> and length <i>attribute-length</i> that was received in a route from the neighbor <i>peer-address</i> was considered malformed.
Cause	The router considers a path attribute to be malformed, for example not the expected length. The UPDATE message can still be parsed though.
Effect	Dependent on the type of the malformed path attribute. Either the malformed attribute is discarded or else the entire UPDATE message is considered to have unreachable NLRI.

## 9.22 bgpRouteWithdrawnDueToError

Table 84: *bgpRouteWithdrawnDueToError* properties

Property name	Value
Application name	bgp
Event name	bgpRouteWithdrawnDueToError
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , a route for NLRI <i>nlri</i> was received from neighbor <i>peer-address</i> and it was considered withdrawn because of a recoverable error in the UPDATE message.
Cause	The router received a malformed UPDATE and the malformed path attribute(s) require as a treat-as-withdraw error handling behavior for the included set of routes.
Effect	There is no reachability for the NLRI in the malformed UPDATE message.

## 9.23 bgpUpdateInvalid

Table 85: *bgpUpdateInvalid* properties

Property name	Value
Application name	bgp
Event name	bgpUpdateInvalid
Default severity	warning
Message format string	In network-instance <i>network-instance</i> , an UPDATE message received from neighbor <i>peer-address</i> was considered invalid and caused the connection to be closed because the NLRI could not be parsed correctly.
Cause	The router received a malformed UPDATE which made it is impossible to identify all of the NLRI correctly.
Effect	The session is shutdown.

## 10 bridgetable

### 10.1 evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitHighUtilization

Table 86: *evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitHighUtilization* properties

Property name	Value
Application name	bridgetable
Event name	evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitHighUtilization
Default severity	warning
Message format string	The number of Evpn-Mpls Multicast Destinations in the bridge table for bgp-instance <i>bgp-instance</i> on network-instance <i>network-instance</i> has reached <i>pct-threshold</i> % of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of Evpn-Mpls Multicast Destinations in the bgp-instance reaches the warning threshold percentage of the allowed limit.
Effect	None

### 10.2 evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitHighUtilizationLowered

Table 87: *evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitHighUtilizationLowered* properties

Property name	Value
Application name	bridgetable
Event name	evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of Evpn-Mpls Multicast Destinations in the bridge table for bgp-instance <i>bgp-instance</i> on network-instance <i>network-instance</i> is now below a <i>pct-threshold</i> % minus 5% of the allowed limit of <i>maximum-entries</i> .

Property name	Value
Cause	This event is generated when the number of Evpn-Mpls Multicast Destinations in the bgp-instance is 5% below the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

### 10.3 evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitLowered

Table 88: evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitLowered properties

Property name	Value
Application name	bridgetable
Event name	evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitLowered
Default severity	notice
Message format string	The number of Evpn-Mpls Multicast Destinations in the bridge table for bgp-instance <i>bgp-instance</i> on network-instance <i>network-instance</i> is now below the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of Evpn-Mpls Multicast Destinations in a bgp-instance goes below the allowed limit, after being above the allowed limit
Effect	New Evpn-Mpls Multicast Destinations can be added to the multicast list of the network-instance.

### 10.4 evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitReached

Table 89: evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitReached properties

Property name	Value
Application name	bridgetable
Event name	evpnMplsBgpInstanceBridgeTableMulticastDestinationsLimitReached
Default severity	warning
Message format string	The number of Evpn-Mpls Multicast Destinations in the bridge table for bgp-instance <i>bgp-instance</i> on network-instance <i>network-instance</i> is at the allowed limit of <i>maximum-entries</i> .

Property name	Value
Cause	This event is generated when the number of Evpn-Mpls Multicast Destinations in a bgp-instance is at the allowed limit.
Effect	New Evpn-Mpls Multicast Destinations cannot be added to the multicast list of the network-instance.

## 10.5 I2ConnectionpointBridgeTableDuplicateMacAddressDeleted

Table 90: I2ConnectionpointBridgeTableDuplicateMacAddressDeleted properties

Property name	Value
Application name	bridgetable
Event name	I2ConnectionpointBridgeTableDuplicateMacAddressDeleted
Default severity	notice
Message format string	A duplicate MAC address <i>mac-address</i> detected on connection-point <i>connection-point</i> on <i>network-instance</i> is now deleted.
Cause	This event is generated when a duplicate MAC address is deleted.
Effect	The duplicate mac-address is now deleted.

## 10.6 I2ConnectionpointBridgeTableDuplicateMacAddressDetected

Table 91: I2ConnectionpointBridgeTableDuplicateMacAddressDetected properties

Property name	Value
Application name	bridgetable
Event name	I2ConnectionpointBridgeTableDuplicateMacAddressDetected
Default severity	notice
Message format string	A duplicate MAC address <i>mac-address</i> was detected on connection-point <i>connection-point</i> on <i>network-instance</i> .
Cause	This event is generated when a duplicate MAC address is detected, qualified by the bridge-table mac-duplication configuration under the network-instance and the connection-points configured under the network-instance.

Property name	Value
Effect	depending on the mac-duplication configuration, traffic destined to the duplicate mac-address maybe blackholed or not reprogrammed against any other connection-point on the network-instance

## 10.7 I2ConnectionpointBridgeTableMacLimitHighUtilization

Table 92: I2ConnectionpointBridgeTableMacLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	I2ConnectionpointBridgeTableMacLimitHighUtilization
Default severity	warning
Message format string	The number of MAC addresses in the bridge table for connection-point <i>connection-point</i> on <i>network-instance</i> has reached <i>pct-threshold%</i> of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table for a connection-point reaches the configured warning threshold percentage of the allowed limit.
Effect	None

## 10.8 I2ConnectionpointBridgeTableMacLimitHighUtilizationLowered

Table 93: I2ConnectionpointBridgeTableMacLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	I2ConnectionpointBridgeTableMacLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of MAC addresses in the bridge table for connection-point <i>connection-point</i> on <i>network-instance</i> is below <i>pct-threshold%</i> (minus 5%) of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table for a connection-point is below 5% minus the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.



Property name	Value
Effect	None

## 10.9 I2ConnectionpointBridgeTableMacLimitLowered

Table 94: I2ConnectionpointBridgeTableMacLimitLowered properties

Property name	Value
Application name	bridgetable
Event name	I2ConnectionpointBridgeTableMacLimitLowered
Default severity	notice
Message format string	The number of MAC addresses in the bridge table for the connection-point <i>connection-point</i> on <i>network-instance</i> is below the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table for a connection-point is below the allowed limit, after being above the allowed limit
Effect	new mac-addresses for the connection-point can now be added to the bridge table.

## 10.10 I2ConnectionpointBridgeTableMacLimitReached

Table 95: I2ConnectionpointBridgeTableMacLimitReached properties

Property name	Value
Application name	bridgetable
Event name	I2ConnectionpointBridgeTableMacLimitReached
Default severity	warning
Message format string	The number of MAC addresses in the bridge table for the connection-point <i>connection-point</i> on <i>network-instance</i> has reached the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table for the connection-point is at the allowed limit.
Effect	new mac-addresses for the connection-point cannot be added in the bridge table.

## 10.11 I2SubinterfaceBridgeTableDuplicateMacAddressDeleted

Table 96: I2SubinterfaceBridgeTableDuplicateMacAddressDeleted properties

Property name	Value
Application name	bridgetable
Event name	I2SubinterfaceBridgeTableDuplicateMacAddressDeleted
Default severity	notice
Message format string	A duplicate MAC address <i>mac-address</i> detected on sub-interface <i>interface.subinterface-index</i> is now deleted.
Cause	This event is generated when a duplicate MAC address is deleted.
Effect	The duplicate mac-address is now deleted.

## 10.12 I2SubinterfaceBridgeTableDuplicateMacAddressDetected

Table 97: I2SubinterfaceBridgeTableDuplicateMacAddressDetected properties

Property name	Value
Application name	bridgetable
Event name	I2SubinterfaceBridgeTableDuplicateMacAddressDetected
Default severity	notice
Message format string	A duplicate MAC address <i>mac-address</i> was detected on sub-interface <i>interface.subinterface-index</i> .
Cause	This event is generated when a duplicate MAC address is detected, qualified by the bridge-table mac-duplication configuration under the network-instance and the sub-interfaces configured under the network-instance.
Effect	depending on the mac-duplication configuration, traffic destined to the duplicate mac-address maybe blackholed or not reprogrammed against any other sub-interface on the network-instance

## 10.13 I2SubinterfaceBridgeTableMacLimitHighUtilization

Table 98: I2SubinterfaceBridgeTableMacLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	I2SubinterfaceBridgeTableMacLimitHighUtilization
Default severity	warning
Message format string	The number of MAC addresses in the bridge table for sub-interface <i>interface.subinterface-index</i> has reached <i>pct-threshold%</i> of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table for a sub-interface reaches the configured warning threshold percentage of the allowed limit.
Effect	None

## 10.14 I2SubinterfaceBridgeTableMacLimitHighUtilizationLowered

Table 99: I2SubinterfaceBridgeTableMacLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	I2SubinterfaceBridgeTableMacLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of MAC addresses in the bridge table for sub-interface <i>interface.subinterface-index</i> is below <i>pct-threshold%</i> (minus 5%) of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table for a sub-interface is below 5% minus the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

## 10.15 I2SubinterfaceBridgeTableMacLimitLowered

Table 100: I2SubinterfaceBridgeTableMacLimitLowered properties

Property name	Value
Application name	bridgetable
Event name	I2SubinterfaceBridgeTableMacLimitLowered
Default severity	notice
Message format string	The number of MAC addresses in the bridge table for the sub-interface <i>interface.subinterface-index</i> is below the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table for a sub-interface is below the allowed limit, after being above the allowed limit
Effect	new mac-addresses for the sub-interface can now be added to the bridge table.

## 10.16 I2SubinterfaceBridgeTableMacLimitReached

Table 101: I2SubinterfaceBridgeTableMacLimitReached properties

Property name	Value
Application name	bridgetable
Event name	I2SubinterfaceBridgeTableMacLimitReached
Default severity	warning
Message format string	The number of MAC addresses in the bridge table for the sub-interface <i>interface.subinterface-index</i> has reached the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table for the sub-interface is at the allowed limit.
Effect	new mac-addresses for the sub-interface cannot be added in the bridge table.

## 10.17 networkInstanceBridgeTableDuplicateMacAddressDeleted

Table 102: networkInstanceBridgeTableDuplicateMacAddressDeleted properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableDuplicateMacAddressDeleted
Default severity	notice
Message format string	A duplicate MAC address <i>mac-address</i> detected on <i>network-instance</i> is now deleted.
Cause	This event is generated when a duplicate MAC address is deleted.
Effect	The duplicate mac-address is now deleted.

## 10.18 networkInstanceBridgeTableDuplicateMacAddressDetected

Table 103: networkInstanceBridgeTableDuplicateMacAddressDetected properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableDuplicateMacAddressDetected
Default severity	notice
Message format string	A duplicate MAC address <i>mac-address</i> was detected on <i>network-instance</i> .
Cause	This event is generated when a duplicate MAC address is detected, qualified by the bridge-table mac-duplication configuration under the network-instance and the sub-interfaces configured under the network-instance.
Effect	depending on the mac-duplication configuration, traffic destined to the duplicate mac-address maybe blackholed or not reprogrammed against any other sub-interface on the network-instance

## 10.19 networkInstanceBridgeTableMacLimitHighUtilization

Table 104: networkInstanceBridgeTableMacLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableMacLimitHighUtilization
Default severity	warning
Message format string	The number of MAC addresses in the bridge table of network-instance <i>network-instance</i> has reached <i>pct-threshold</i> % of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table of a network-instance reaches the configured warning threshold percentage of the allowed limit.
Effect	None

## 10.20 networkInstanceBridgeTableMacLimitHighUtilizationLowered

Table 105: networkInstanceBridgeTableMacLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableMacLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of MAC addresses in the bridge table of network-instance <i>network-instance</i> is now at <i>pct-threshold</i> % minus 5% of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table of the network-instance is at 5% minus the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

## 10.21 networkInstanceBridgeTableMacLimitLowered

Table 106: networkInstanceBridgeTableMacLimitLowered properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableMacLimitLowered
Default severity	notice
Message format string	The number of MAC addresses in the bridge table of network-instance <i>network-instance</i> is now below the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table of a network-instance goes below the allowed limit, after being above the allowed limit
Effect	new mac-addresses can now be added to the bridge table.

## 10.22 networkInstanceBridgeTableMacLimitReached

Table 107: networkInstanceBridgeTableMacLimitReached properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableMacLimitReached
Default severity	warning
Message format string	The number of MAC addresses in the bridge table of network-instance <i>network-instance</i> is at the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table of a network-instance is at the allowed limit.
Effect	new mac-addresses cannot be added in the bridge table.

## 10.23 networkInstanceBridgeTableProxyArpLimitHighUtilization

Table 108: networkInstanceBridgeTableProxyArpLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableProxyArpLimitHighUtilization
Default severity	warning
Message format string	The number of proxy ARP entries in the bridge table of network-instance <i>network-instance</i> has reached <i>pct-threshold%</i> of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of proxy ARP entries in the bridge table of a network-instance reaches the warning threshold percentage of the allowed limit.
Effect	None

## 10.24 networkInstanceBridgeTableProxyArpLimitHighUtilizationLowered

Table 109: networkInstanceBridgeTableProxyArpLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableProxyArpLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of proxy ARP entries in the bridge table of network-instance <i>network-instance</i> is now at <i>pct-threshold%</i> minus 5% of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of proxy ARP entries in the bridge table of the network-instance is at 5% minus the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None



## 10.25 networkInstanceBridgeTableProxyArpNdDuplicateIpAddressDeleted

Table 110: networkInstanceBridgeTableProxyArpNdDuplicateIpAddressDeleted properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableProxyArpNdDuplicateIpAddressDeleted
Default severity	notice
Message format string	A duplicate proxy IP <i>ip-address</i> detected on <i>network-instance</i> is now deleted.
Cause	This event is generated when a duplicate proxy IP is deleted.
Effect	The duplicate proxy IP is now deleted.

## 10.26 networkInstanceBridgeTableProxyArpNdDuplicateIpAddressDetected

Table 111: networkInstanceBridgeTableProxyArpNdDuplicateIpAddressDetected properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableProxyArpNdDuplicateIpAddressDetected
Default severity	notice
Message format string	A duplicate link-layer-address <i>new-mac-address</i> was detected for proxy IP <i>ip-address</i> link-layer-address <i>old-mac-address</i> on <i>network-instance</i> .
Cause	This event is generated when when duplicate detection criteria is met when a new link-layer-address overwrites the existing link-layer-address for the proxy IP on the network-instance.
Effect	A traffic disruption may occur if both systems are active

## 10.27 networkInstanceBridgeTableProxyNdLimitHighUtilization

Table 112: networkInstanceBridgeTableProxyNdLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableProxyNdLimitHighUtilization
Default severity	warning
Message format string	The number of proxy ND entries in the bridge table of network-instance <i>network-instance</i> has reached <i>pct-threshold</i> % of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of proxy ND entries in the bridge table of a network-instance reaches the warning threshold percentage of the allowed limit.
Effect	None

## 10.28 networkInstanceBridgeTableProxyNdLimitHighUtilizationLowered

Table 113: networkInstanceBridgeTableProxyNdLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	networkInstanceBridgeTableProxyNdLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of proxy ND entries in the bridge table of network-instance <i>network-instance</i> is now at <i>pct-threshold</i> % minus 5% of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of proxy ND entries in the bridge table of the network-instance is at 5% minus the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

## 10.29 systemBridgeTableMacLimitHighUtilization

Table 114: systemBridgeTableMacLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	systemBridgeTableMacLimitHighUtilization
Default severity	warning
Message format string	The number of MAC addresses in the bridge table of the system has reached <i>pct-threshold</i> % of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table of the system reaches the configured warning threshold percentage of the allowed limit.
Effect	None

## 10.30 systemBridgeTableMacLimitHighUtilizationLowered

Table 115: systemBridgeTableMacLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	systemBridgeTableMacLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of MAC addresses in the bridge table of the system is now at <i>pct-threshold</i> % minus 5% of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table of the system is at 5% minus the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

## 10.31 systemBridgeTableMacLimitLowered

Table 116: systemBridgeTableMacLimitLowered properties

Property name	Value
Application name	bridgetable
Event name	systemBridgeTableMacLimitLowered
Default severity	notice
Message format string	The number of MAC addresses in the bridge table of the system is now below the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table of the system goes below the allowed limit, after being above the allowed limit
Effect	new mac-addresses can now be added to the bridge table.

## 10.32 systemBridgeTableMacLimitReached

Table 117: systemBridgeTableMacLimitReached properties

Property name	Value
Application name	bridgetable
Event name	systemBridgeTableMacLimitReached
Default severity	warning
Message format string	The number of MAC addresses in the bridge table of the system is at the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of MAC addresses in the bridge table of the system is at the allowed limit.
Effect	new mac-addresses cannot be added in any bridge table in the system.

## 10.33 systemBridgeTableProxyArpLimitHighUtilization

Table 118: systemBridgeTableProxyArpLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	systemBridgeTableProxyArpLimitHighUtilization
Default severity	warning
Message format string	The number of proxy ARP entries in the bridge table of the system has reached <i>pct-threshold%</i> of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of proxy ARP entries in the bridge table the system reaches the warning threshold percentage of the allowed limit.
Effect	None

## 10.34 systemBridgeTableProxyArpLimitHighUtilizationLowered

Table 119: systemBridgeTableProxyArpLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	systemBridgeTableProxyArpLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of proxy ARP entries in the bridge table of the system is now at <i>pct-threshold%</i> minus 5% of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of proxy ARP entries in the bridge table of the system is at 5% minus the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

## 10.35 systemBridgeTableProxyNdLimitHighUtilization

Table 120: systemBridgeTableProxyNdLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	systemBridgeTableProxyNdLimitHighUtilization
Default severity	warning
Message format string	The number of proxy ND entries in the bridge table of the system has reached <i>pct-threshold</i> % of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of proxy ND entries in the bridge table the system reaches the warning threshold percentage of the allowed limit.
Effect	None

## 10.36 systemBridgeTableProxyNdLimitHighUtilizationLowered

Table 121: systemBridgeTableProxyNdLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	systemBridgeTableProxyNdLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of proxy ND entries in the bridge table of the system is now at <i>pct-threshold</i> % minus 5% of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of proxy ND entries in the bridge table of the system is at 5% minus the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

## 10.37 systemEvpnMplsMulticastPeersLimitHighUtilization

Table 122: systemEvpnMplsMulticastPeersLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	systemEvpnMplsMulticastPeersLimitHighUtilization
Default severity	warning
Message format string	The number of Evpn Mpls Multicast Peers has reached <i>pct-threshold%</i> of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of Evpn Mpls Multicast Peers reaches the warning threshold percentage of the allowed limit.
Effect	None

## 10.38 systemEvpnMplsMulticastPeersLimitHighUtilizationLowered

Table 123: systemEvpnMplsMulticastPeersLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	systemEvpnMplsMulticastPeersLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of Evpn Mpls Multicast Peers is now below a <i>pct-threshold%</i> minus 5% of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of Evpn Mpls Multicast Peers is 5% below the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

## 10.39 systemEvpnMplsMulticastPeersLimitLowered

Table 124: systemEvpnMplsMulticastPeersLimitLowered properties

Property name	Value
Application name	bridgetable
Event name	systemEvpnMplsMulticastPeersLimitLowered
Default severity	notice
Message format string	The number of Evpn Mpls Multicast Peers is now below the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of Evpn Mpls Multicast Peers goes below the allowed limit, after being above the allowed limit
Effect	New Evpn Mpls Multicast Peers can be added.

## 10.40 systemEvpnMplsMulticastPeersLimitReached

Table 125: systemEvpnMplsMulticastPeersLimitReached properties

Property name	Value
Application name	bridgetable
Event name	systemEvpnMplsMulticastPeersLimitReached
Default severity	warning
Message format string	The number of Evpn Mpls Multicast Peers is at the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of Evpn Mpls Multicast Peers is at the allowed limit.
Effect	New Evpn Mpls Multicast Peers cannot be added.

## 10.41 systemMulticastIldLimitHighUtilization

Table 126: systemMulticastIldLimitHighUtilization properties

Property name	Value
Application name	bridgetable



Property name	Value
Event name	systemMulticastIdLimitHighUtilization
Default severity	warning
Message format string	The multicast id usage of the system has reached <i>pct-threshold%</i> of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the multicast id usage of the system reaches the configured warning threshold percentage of the allowed limit.
Effect	None

## 10.42 systemMulticastIdLimitHighUtilizationLowered

Table 127: systemMulticastIdLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	systemMulticastIdLimitHighUtilizationLowered
Default severity	notice
Message format string	The multicast id usage of the system is now at <i>pct-threshold%</i> minus 5% of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the multicast id usage of the system is at 5% minus the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

## 10.43 vxlanInterfaceBridgeTableMulticastDestinationsLimitHighUtilization

Table 128: vxlanInterfaceBridgeTableMulticastDestinationsLimitHighUtilization properties

Property name	Value
Application name	bridgetable
Event name	vxlanInterfaceBridgeTableMulticastDestinationsLimitHighUtilization
Default severity	warning

Property name	Value
Message format string	The number of Vxlan Multicast Destinations in the bridge table for the vxlan-interface <i>tunnel-interface.vxlan-interface</i> has reached <i>pct-threshold%</i> of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of Vxlan Multicast Destinations in the vxlan-interface reaches the warning threshold percentage of the allowed limit.
Effect	None

## 10.44 vxlanInterfaceBridgeTableMulticastDestinationsLimitHighUtilizationLowered

Table 129: vxlanInterfaceBridgeTableMulticastDestinationsLimitHighUtilizationLowered properties

Property name	Value
Application name	bridgetable
Event name	vxlanInterfaceBridgeTableMulticastDestinationsLimitHighUtilizationLowered
Default severity	notice
Message format string	The number of Vxlan Multicast Destinations in the bridge table for the vxlan-interface <i>tunnel-interface.vxlan-interface</i> is now below a <i>pct-threshold%</i> minus 5% of the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of Vxlan Multicast Destinations in the vxlan-interface is 5% below the warning threshold percentage of the allowed limit, after having exceeded the maximum percentage threshold of the allowed limit.
Effect	None

## 10.45 vxlanInterfaceBridgeTableMulticastDestinationsLimitLowered

Table 130: vxlanInterfaceBridgeTableMulticastDestinationsLimitLowered properties

Property name	Value
Application name	bridgetable
Event name	vxlanInterfaceBridgeTableMulticastDestinationsLimitLowered
Default severity	notice

Property name	Value
Message format string	The number of Vxlan Multicast Destinations in the bridge table for the vxlan-interface <i>tunnel-interface.vxlan-interface</i> is now below the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of Vxlan Multicast Destinations in a vxlan-interface goes below the allowed limit, after being above the allowed limit
Effect	New Vxlan Multicast Destinations can be added to the vxlan-interface.

## 10.46 vxlanInterfaceBridgeTableMulticastDestinationsLimitReached

Table 131: vxlanInterfaceBridgeTableMulticastDestinationsLimitReached properties

Property name	Value
Application name	bridgetable
Event name	vxlanInterfaceBridgeTableMulticastDestinationsLimitReached
Default severity	warning
Message format string	The number of Vxlan Multicast Destinations in the bridge table for the vxlan-interface <i>tunnel-interface.vxlan-interface</i> is at the allowed limit of <i>maximum-entries</i> .
Cause	This event is generated when the number of Vxlan Multicast Destinations in a vxlan-interface is at the allowed limit.
Effect	New Vxlan Multicast Destinations cannot be added to the vxlan-interface.

## 11 chassis

### 11.1 interfaceStormControlRateReached

Table 132: interfaceStormControlRateReached properties

Property name	Value
Application name	chassis
Event name	interfaceStormControlRateReached
Default severity	warning
Message format string	The ingress traffic rate in <i>interface-name</i> has exceeded at least one of the configured storm-control rates (broadcast, multicast or unknown-unicast rates).
Cause	This event is generated when the traffic exceeds any of the configured storm control rates.
Effect	broadcast, multicast or unknown-unicast frames are discarded at this rate

### 11.2 olsTransceiverAmplifierHighGainAlarm

Table 133: olsTransceiverAmplifierHighGainAlarm properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierHighGainAlarm
Default severity	error
Message format string	The gain of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> has increased to <i>high_threshold</i> dBm or above
Cause	The gain of the amplifier in the module has increased
Effect	High gain may affect module performance

## 11.3 olsTransceiverAmplifierHighGainAlarmClear

Table 134: olsTransceiverAmplifierHighGainAlarmClear properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierHighGainAlarmClear
Default severity	informational
Message format string	The gain of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> decreased below <i>high_threshold</i> dBm
Cause	The gain of the amplifier in the module has decreased
Effect	High gain may affect module performance

## 11.4 olsTransceiverAmplifierHighGainWarning

Table 135: olsTransceiverAmplifierHighGainWarning properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierHighGainWarning
Default severity	warning
Message format string	The gain of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> has increased to <i>high_threshold</i> dBm or above
Cause	The gain of the amplifier in the module has increased
Effect	High gain may affect module performance

## 11.5 olsTransceiverAmplifierHighGainWarningClear

Table 136: olsTransceiverAmplifierHighGainWarningClear properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierHighGainWarningClear

Property name	Value
Default severity	informational
Message format string	The gain of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> decreased below <i>high_threshold</i> dBm
Cause	The gain of the amplifier in the module has decreased
Effect	High gain may affect module performance

## 11.6 olsTransceiverAmplifierHighInputPowerAlarm

Table 137: *olsTransceiverAmplifierHighInputPowerAlarm* properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierHighInputPowerAlarm
Default severity	error
Message format string	The input power of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> has increased to <i>high_threshold</i> dBm or above
Cause	The input power of the amplifier in the module has increased
Effect	High input power may affect module performance

## 11.7 olsTransceiverAmplifierHighInputPowerAlarmClear

Table 138: *olsTransceiverAmplifierHighInputPowerAlarmClear* properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierHighInputPowerAlarmClear
Default severity	informational
Message format string	The input power of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> decreased below <i>high_threshold</i> dBm
Cause	The input power of the amplifier in the module has decreased
Effect	High input power may affect module performance

## 11.8 olsTransceiverAmplifierHighInputPowerWarning

Table 139: olsTransceiverAmplifierHighInputPowerWarning properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierHighInputPowerWarning
Default severity	warning
Message format string	The input power of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> has increased to <i>high_threshold</i> dBm or above
Cause	The input power of the amplifier in the module has increased
Effect	High input power may affect module performance

## 11.9 olsTransceiverAmplifierHighInputPowerWarningClear

Table 140: olsTransceiverAmplifierHighInputPowerWarningClear properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierHighInputPowerWarningClear
Default severity	informational
Message format string	The input power of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> decreased below <i>high_threshold</i> dBm
Cause	The input power of the amplifier in the module has decreased
Effect	High input power may affect module performance

## 11.10 olsTransceiverAmplifierHighOutputPowerAlarm

Table 141: olsTransceiverAmplifierHighOutputPowerAlarm properties

Property name	Value
Application name	chassis

Property name	Value
Event name	olsTransceiverAmplifierHighOutputPowerAlarm
Default severity	error
Message format string	The output power of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> has increased to <i>high_threshold</i> dBm or above
Cause	The output power of the amplifier in the module has increased
Effect	High output power may affect module performance

## 11.11 olsTransceiverAmplifierHighOutputPowerAlarmClear

Table 142: olsTransceiverAmplifierHighOutputPowerAlarmClear properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierHighOutputPowerAlarmClear
Default severity	informational
Message format string	The output power of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> decreased below <i>high_threshold</i> dBm
Cause	The output power of the amplifier in the module has decreased
Effect	High output power may affect module performance

## 11.12 olsTransceiverAmplifierHighOutputPowerWarning

Table 143: olsTransceiverAmplifierHighOutputPowerWarning properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierHighOutputPowerWarning
Default severity	warning
Message format string	The output power of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> has increased to <i>high_threshold</i> dBm or above



Property name	Value
Cause	The output power of the amplifier in the module has increased
Effect	High output power may affect module performance

## 11.13 olsTransceiverAmplifierHighOutputPowerWarningClear

Table 144: *olsTransceiverAmplifierHighOutputPowerWarningClear* properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierHighOutputPowerWarningClear
Default severity	informational
Message format string	The output power of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> decreased below <i>high_threshold</i> dBm
Cause	The output power of the amplifier in the module has decreased
Effect	High output power may affect module performance

## 11.14 olsTransceiverAmplifierHighTempAlarm

Table 145: *olsTransceiverAmplifierHighTempAlarm* properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierHighTempAlarm
Default severity	error
Message format string	The temperature of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> has increased to <i>high_threshold</i> degrees C or above
Cause	The temperature of the amplifier in the module has increased
Effect	High temperatures may affect module performance

## 11.15 olsTransceiverAmplifierHighTempAlarmClear

Table 146: olsTransceiverAmplifierHighTempAlarmClear properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierHighTempAlarmClear
Default severity	informational
Message format string	The temperature of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> decreased below <i>high_threshold</i> degrees C
Cause	The temperature of the amplifier in the module has decreased
Effect	High temperatures may affect module performance

## 11.16 olsTransceiverAmplifierHighTempWarning

Table 147: olsTransceiverAmplifierHighTempWarning properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierHighTempWarning
Default severity	warning
Message format string	The temperature of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> has increased to <i>high_threshold</i> degrees C or above
Cause	The temperature of the amplifier in the module has increased
Effect	High temperatures may affect module performance

## 11.17 olsTransceiverAmplifierHighTempWarningClear

Table 148: olsTransceiverAmplifierHighTempWarningClear properties

Property name	Value
Application name	chassis

Property name	Value
Event name	olsTransceiverAmplifierHighTempWarningClear
Default severity	informational
Message format string	The temperature of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> decreased below <i>high_threshold</i> degrees C
Cause	The temperature of the amplifier in the module has decreased
Effect	High temperatures may affect module performance

## 11.18 olsTransceiverAmplifierLowGainAlarm

Table 149: olsTransceiverAmplifierLowGainAlarm properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierLowGainAlarm
Default severity	error
Message format string	The gain of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> has decreased to <i>low_threshold</i> dBm or below
Cause	The gain of the amplifier in the module has decreased
Effect	Low gain may affect module performance

## 11.19 olsTransceiverAmplifierLowGainAlarmClear

Table 150: olsTransceiverAmplifierLowGainAlarmClear properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierLowGainAlarmClear
Default severity	informational
Message format string	The gain of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> has increased to <i>low_threshold</i> dBm or above
Cause	The gain of the amplifier in the module has increased

Property name	Value
Effect	Low gain may affect module performance

## 11.20 olsTransceiverAmplifierLowGainWarning

Table 151: olsTransceiverAmplifierLowGainWarning properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierLowGainWarning
Default severity	warning
Message format string	The gain of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> has decreased to <i>low_threshold</i> dBm or below
Cause	The gain of the amplifier in the module has decreased
Effect	Low gain may affect module performance

## 11.21 olsTransceiverAmplifierLowGainWarningClear

Table 152: olsTransceiverAmplifierLowGainWarningClear properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierLowGainWarningClear
Default severity	informational
Message format string	The gain of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> has increased to <i>low_threshold</i> dBm or above
Cause	The gain of the amplifier in the module has increased
Effect	Low gain may affect module performance

## 11.22 olsTransceiverAmplifierLowInputPowerAlarm

Table 153: olsTransceiverAmplifierLowInputPowerAlarm properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierLowInputPowerAlarm
Default severity	error
Message format string	The input power of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> has decreased to <i>low_threshold</i> dBm or below
Cause	The input power of the amplifier in the module has decreased
Effect	Low input power may affect module performance

## 11.23 olsTransceiverAmplifierLowInputPowerAlarmClear

Table 154: olsTransceiverAmplifierLowInputPowerAlarmClear properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierLowInputPowerAlarmClear
Default severity	informational
Message format string	The input power of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> has increased to <i>low_threshold</i> dBm or above
Cause	The input power of the amplifier in the module has increased
Effect	Low input power may affect module performance

## 11.24 olsTransceiverAmplifierLowInputPowerWarning

Table 155: olsTransceiverAmplifierLowInputPowerWarning properties

Property name	Value
Application name	chassis

Property name	Value
Event name	olsTransceiverAmplifierLowInputPowerWarning
Default severity	warning
Message format string	The input power of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> has decreased to <i>low_threshold</i> dBm or below
Cause	The input power of the amplifier in the module has decreased
Effect	Low input power may affect module performance

## 11.25 olsTransceiverAmplifierLowInputPowerWarningClear

Table 156: *olsTransceiverAmplifierLowInputPowerWarningClear* properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierLowInputPowerWarningClear
Default severity	informational
Message format string	The input power of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> has increased to <i>low_threshold</i> dBm or above
Cause	The input power of the amplifier in the module has increased
Effect	Low input power may affect module performance

## 11.26 olsTransceiverAmplifierLowOutputPowerAlarm

Table 157: *olsTransceiverAmplifierLowOutputPowerAlarm* properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierLowOutputPowerAlarm
Default severity	error
Message format string	The output power of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> has decreased to <i>low_threshold</i> dBm or below

Property name	Value
Cause	The output power of the amplifier in the module has decreased
Effect	Low output power may affect module performance

## 11.27 olsTransceiverAmplifierLowOutputPowerAlarmClear

Table 158: olsTransceiverAmplifierLowOutputPowerAlarmClear properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierLowOutputPowerAlarmClear
Default severity	informational
Message format string	The output power of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> has increased to <i>low_threshold</i> dBm or above
Cause	The output power of the amplifier in the module has increased
Effect	Low output power may affect module performance

## 11.28 olsTransceiverAmplifierLowOutputPowerWarning

Table 159: olsTransceiverAmplifierLowOutputPowerWarning properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierLowOutputPowerWarning
Default severity	warning
Message format string	The output power of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> has decreased to <i>low_threshold</i> dBm or below
Cause	The output power of the amplifier in the module has decreased
Effect	Low output power may affect module performance

## 11.29 olsTransceiverAmplifierLowOutputPowerWarningClear

Table 160: olsTransceiverAmplifierLowOutputPowerWarningClear properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierLowOutputPowerWarningClear
Default severity	informational
Message format string	The output power of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> has increased to <i>low_threshold</i> dBm or above
Cause	The output power of the amplifier in the module has increased
Effect	Low output power may affect module performance

## 11.30 olsTransceiverAmplifierLowTempAlarm

Table 161: olsTransceiverAmplifierLowTempAlarm properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierLowTempAlarm
Default severity	error
Message format string	The temperature of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> has decreased to <i>low_threshold</i> degrees C or below
Cause	The temperature of the amplifier in the module has decreased
Effect	Low temperatures may affect module performance

## 11.31 olsTransceiverAmplifierLowTempAlarmClear

Table 162: olsTransceiverAmplifierLowTempAlarmClear properties

Property name	Value
Application name	chassis



Property name	Value
Event name	olsTransceiverAmplifierLowTempAlarmClear
Default severity	informational
Message format string	The temperature of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> has increased to <i>low_threshold</i> degrees C or above
Cause	The temperature of the amplifier in the module has increased
Effect	Low temperatures may affect module performance

## 11.32 olsTransceiverAmplifierLowTempWarning

Table 163: olsTransceiverAmplifierLowTempWarning properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierLowTempWarning
Default severity	warning
Message format string	The temperature of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> has decreased to <i>low_threshold</i> degrees C or below
Cause	The temperature of the amplifier in the module has decreased
Effect	Low temperatures may affect module performance

## 11.33 olsTransceiverAmplifierLowTempWarningClear

Table 164: olsTransceiverAmplifierLowTempWarningClear properties

Property name	Value
Application name	chassis
Event name	olsTransceiverAmplifierLowTempWarningClear
Default severity	informational
Message format string	The temperature of the <i>amplifier_name</i> of the optical line system in interface <i>interface_name</i> has increased to <i>low_threshold</i> degrees C or above

Property name	Value
Cause	The temperature of the amplifier in the module has increased
Effect	Low temperatures may affect module performance

## 11.34 platformDatapathResourceHighUtilization

Table 165: platformDatapathResourceHighUtilization properties

Property name	Value
Application name	chassis
Event name	platformDatapathResourceHighUtilization
Default severity	warning
Message format string	The datapath resource called <i>resource-name</i> has reached <i>threshold%</i> or more utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i>
Cause	This event is generated when the utilization of a datapath resource has increased to a level that may warrant concern if further resources are consumed
Effect	None

## 11.35 platformDatapathResourceHighUtilizationLowered

Table 166: platformDatapathResourceHighUtilizationLowered properties

Property name	Value
Application name	chassis
Event name	platformDatapathResourceHighUtilizationLowered
Default severity	notice
Message format string	The datapath resource called <i>resource-name</i> has decreased back to <i>threshold%</i> or less utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i>
Cause	This event is generated when the utilization of a datapath resource has decreased to a level that may no longer warrant concern
Effect	None

## 11.36 platformDatapathResourceLimitCleared

Table 167: *platformDatapathResourceLimitCleared* properties

Property name	Value
Application name	chassis
Event name	platformDatapathResourceLimitCleared
Default severity	notice
Message format string	The datapath resource called <i>resource-name</i> has decreased from 100% utilization back to 95% or less utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i>
Cause	This event is generated when the utilization of a datapath resource has decreased to a level such that resource exhaustion is no longer imminent
Effect	None

## 11.37 platformDatapathResourceLimitReached

Table 168: *platformDatapathResourceLimitReached* properties

Property name	Value
Application name	chassis
Event name	platformDatapathResourceLimitReached
Default severity	warning
Message format string	The datapath resource called <i>resource-name</i> has reached 100% utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i>
Cause	This event is generated when the utilization of a datapath resource has exhausted the resource
Effect	None

## 11.38 platformMtuHighUtilization

Table 169: platformMtuHighUtilization properties

Property name	Value
Application name	chassis
Event name	platformMtuHighUtilization
Default severity	warning
Message format string	The MTU resource called <i>resource-name</i> has reached <i>threshold%</i> or more utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> . Only <i>free-entries</i> entries are remaining.
Cause	This event is generated when the utilization of an MTU resource has increased to a level that may warrant concern if further resources are consumed
Effect	None

## 11.39 platformMtuHighUtilizationLowered

Table 170: platformMtuHighUtilizationLowered properties

Property name	Value
Application name	chassis
Event name	platformMtuHighUtilizationLowered
Default severity	notice
Message format string	The MTU resource called <i>resource-name</i> has decreased back to <i>threshold%</i> or less utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> .
Cause	This event is generated when the utilization of an MTU resource has decreased to a level that may no longer warrant concern
Effect	None

## 11.40 platformPipelineResourceHighUtilization

Table 171: platformPipelineResourceHighUtilization properties

Property name	Value
Application name	chassis
Event name	platformPipelineResourceHighUtilization
Default severity	warning
Message format string	The pipeline resource called <i>resource-name</i> has reached <i>threshold%</i> or more utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> , pipeline <i>pipeline</i>
Cause	This event is generated when the utilization of a pipeline resource has increased to a level that may warrant concern if further resources are consumed
Effect	None

## 11.41 platformPipelineResourceHighUtilizationLowered

Table 172: platformPipelineResourceHighUtilizationLowered properties

Property name	Value
Application name	chassis
Event name	platformPipelineResourceHighUtilizationLowered
Default severity	notice
Message format string	The pipeline resource called <i>resource-name</i> has decreased back to <i>threshold%</i> or less utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> , pipeline <i>pipeline</i>
Cause	This event is generated when the utilization of a pipeline resource has decreased to a level that may no longer warrant concern
Effect	None

## 11.42 platformPipelineResourceLimitCleared

Table 173: platformPipelineResourceLimitCleared properties

Property name	Value
Application name	chassis
Event name	platformPipelineResourceLimitCleared
Default severity	notice
Message format string	The pipeline resource called <i>resource-name</i> has decreased from 100% utilization back to 95% or less utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> , <i>pipeline</i>
Cause	This event is generated when the utilization of a pipeline resource has decreased to a level such that resource exhaustion is no longer imminent
Effect	None

## 11.43 platformPipelineResourceLimitReached

Table 174: platformPipelineResourceLimitReached properties

Property name	Value
Application name	chassis
Event name	platformPipelineResourceLimitReached
Default severity	warning
Message format string	The pipeline resource called <i>resource-name</i> has reached 100% utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> , <i>pipeline</i>
Cause	This event is generated when the utilization of a pipeline resource has exhausted the resource
Effect	None

## 11.44 portDown

Table 175: portDown properties

Property name	Value
Application name	chassis
Event name	portDown
Default severity	warning
Message format string	Interface <i>interface_name</i> is now down for reason: <i>oper_down_reason</i>
Cause	The interface has transitioned from the up state to the down state
Effect	The interface is now down

## 11.45 portEtherCrcMonAlarmClear

Table 176: portEtherCrcMonAlarmClear properties

Property name	Value
Application name	chassis
Event name	portEtherCrcMonAlarmClear
Default severity	warning
Message format string	Interface <i>interface-name</i> reported CRC frame errors have dropped below configured <i>threshold-name</i> threshold <i>multiplier</i> *10e- <i>exponent</i>
Cause	This event is generated when an Ethernet port CRC monitoring alarm condition is cleared or the monitoring is disabled.
Effect	None

## 11.46 portEtherCrcMonAlarmSet

Table 177: portEtherCrcMonAlarmSet properties

Property name	Value
Application name	chassis
Event name	portEtherCrcMonAlarmSet

Property name	Value
Default severity	warning
Message format string	Interface <i>interface-name</i> reported CRC frame errors in excess of the configured <i>threshold-name</i> threshold <i>multiplier</i> *10e- <i>exponent</i>
Cause	This event is generated when an Ethernet port CRC frame monitoring alarm condition is detected. It is generated only when CRC monitoring is enabled on the port
Effect	On a signal failure (SF) threshold being exceeded, the port is taken out of service until the CRC alarm condition is cleared

## 11.47 portEtherSymMonAlarmClear

Table 178: portEtherSymMonAlarmClear properties

Property name	Value
Application name	chassis
Event name	portEtherSymMonAlarmClear
Default severity	warning
Message format string	Interface <i>interface-name</i> reported symbol errors have dropped below configured <i>threshold-name</i> threshold <i>multiplier</i> *10e- <i>exponent</i>
Cause	This event is generated when an Ethernet port symbol monitoring alarm condition is cleared or the monitoring is disabled.
Effect	None

## 11.48 portEtherSymMonAlarmSet

Table 179: portEtherSymMonAlarmSet properties

Property name	Value
Application name	chassis
Event name	portEtherSymMonAlarmSet
Default severity	warning
Message format string	Interface <i>interface-name</i> reported symbol errors in excess of the configured <i>threshold-name</i> threshold <i>multiplier</i> *10e- <i>exponent</i>



Property name	Value
Cause	This event is generated when an Ethernet port symbol monitoring alarm condition is detected. It is generated only when symbol monitoring is enabled on the port
Effect	On a signal failure (SF) threshold being exceeded, the port is taken out of service until the symbol alarm condition is cleared

## 11.49 portUp

Table 180: portUp properties

Property name	Value
Application name	chassis
Event name	portUp
Default severity	notice
Message format string	Interface <i>interface_name</i> is now up
Cause	The interface has transitioned from the down state to the up state
Effect	The interface is now up

## 11.50 secureBootDisabled

Table 181: secureBootDisabled properties

Property name	Value
Application name	chassis
Event name	secureBootDisabled
Default severity	warning
Message format string	Control module <i>control</i> booted with Secure Boot Disabled
Cause	The control module booted with Secure Boot disabled
Effect	Boot software is not subject to signature verification

## 11.51 secureBootEnabled

Table 182: secureBootEnabled properties

Property name	Value
Application name	chassis
Event name	secureBootEnabled
Default severity	notice
Message format string	Control module <i>control</i> booted with Secure Boot Enabled
Cause	The control module booted with Secure Boot Enabled
Effect	Boot software is subject to signature verification

## 11.52 secureBootModDatasetInconsistent

Table 183: secureBootModDatasetInconsistent properties

Property name	Value
Application name	chassis
Event name	secureBootModDatasetInconsistent
Default severity	warning
Message format string	Control module <i>control</i> secure boot variable modification dataset is not consistent
Cause	The control module booted with Secure Boot enabled, but the secure boot variable modification dataset is not consistent with the secure boot variables
Effect	Boot software was/is subject to complete signature verification, but no update to the variables is possible

## 11.53 secureBootModDatasetNotPresent

Table 184: secureBootModDatasetNotPresent properties

Property name	Value
Application name	chassis

Property name	Value
Event name	secureBootModDatasetNotPresent
Default severity	warning
Message format string	Control module <i>control</i> secure boot variable modification dataset is not present
Cause	The control module booted with Secure Boot enabled, but the secure boot variable modification dataset is not present
Effect	Boot software was/is subject to complete signature verification, but no update to the variables is possible

## 11.54 secureBootRevokeUpdateRecommended

Table 185: secureBootRevokeUpdateRecommended properties

Property name	Value
Application name	chassis
Event name	secureBootRevokeUpdateRecommended
Default severity	alert
Message format string	Control module <i>control</i> secure boot database revoke list (dbx) is inconsistent
Cause	The control module booted with Secure Boot enabled, but the secure boot database dbx contents are inconsistent with the expected values from the variable modification data set
Effect	Boot software was/is not subject to complete signature verification against the dbx (revoke list)

## 11.55 secureBootVariablesConsistent

Table 186: secureBootVariablesConsistent properties

Property name	Value
Application name	chassis
Event name	secureBootVariablesConsistent
Default severity	notice

Property name	Value
Message format string	Control module <i>control</i> secure boot variables are consistent
Cause	The control module booted with Secure Boot enabled, and the secure boot variables are consistent with the expected values from the variable modification data set
Effect	Boot software was/is subject to complete signature verification

## 11.56 secureBootVarsUpdateRecommended

Table 187: *secureBootVarsUpdateRecommended* properties

Property name	Value
Application name	chassis
Event name	secureBootVarsUpdateRecommended
Default severity	warning
Message format string	Control module <i>control</i> secure boot database update recommended
Cause	The control module booted with Secure Boot enabled, but the secure boot database contents are inconsistent with the expected values from the variable modification data set
Effect	Current software was subject to complete signature verification, however an update to the secure boot database is recommended

## 11.57 subinterfaceDown

Table 188: *subinterfaceDown* properties

Property name	Value
Application name	chassis
Event name	subinterfaceDown
Default severity	warning
Message format string	The subinterface <i>subinterface_name</i> is now down for reason: <i>oper_down_reason</i>
Cause	This event is generated when the subinterface has transitioned from the up state to the down state

Property name	Value
Effect	The subinterface is now down

## 11.58 subinterfaceUp

Table 189: subinterfaceUp properties

Property name	Value
Application name	chassis
Event name	subinterfaceUp
Default severity	notice
Message format string	The subinterface <i>subinterface_name</i> is now up
Cause	This event is generated when the subinterface has transitioned from the down state to the up state.
Effect	The subinterface is now up

## 11.59 systemResourceHighUtilization

Table 190: systemResourceHighUtilization properties

Property name	Value
Application name	chassis
Event name	systemResourceHighUtilization
Default severity	warning
Message format string	The system resource called <i>resource-name</i> has reached <i>threshold%</i> or more utilization
Cause	This event is generated when the utilization of a system resource has increased to a level that may warrant concern if further resources are consumed
Effect	None

## 11.60 systemResourceHighUtilizationLowered

Table 191: systemResourceHighUtilizationLowered properties

Property name	Value
Application name	chassis
Event name	systemResourceHighUtilizationLowered
Default severity	notice
Message format string	The system resource called <i>resource-name</i> has decreased back to <i>threshold%</i> or less utilization
Cause	This event is generated when the utilization of a system resource has decreased to a level that may no longer warrant concern
Effect	None

## 11.61 systemResourceLimitCleared

Table 192: systemResourceLimitCleared properties

Property name	Value
Application name	chassis
Event name	systemResourceLimitCleared
Default severity	notice
Message format string	The system resource called <i>resource-name</i> has decreased from 100% utilization back to 95% or less utilization
Cause	This event is generated when the utilization of a system resource has decreased to a level such that resource exhaustion is no longer imminent
Effect	None

## 11.62 systemResourceLimitReached

Table 193: systemResourceLimitReached properties

Property name	Value
Application name	chassis
Event name	systemResourceLimitReached
Default severity	warning
Message format string	The system resource called <i>resource-name</i> has reached 100% utilization
Cause	This event is generated when the utilization of a system resource has exhausted the resource
Effect	None

## 11.63 transceiverChannelHighInputPowerAlarm

Table 194: transceiverChannelHighInputPowerAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighInputPowerAlarm
Default severity	critical
Message format string	The input power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> dBm or more
Cause	The input power of the optical channel has increased
Effect	High input power may affect transceiver performance

## 11.64 transceiverChannelHighInputPowerAlarmClear

Table 195: transceiverChannelHighInputPowerAlarmClear properties

Property name	Value
Application name	chassis

Property name	Value
Event name	transceiverChannelHighInputPowerAlarmClear
Default severity	informational
Message format string	The input power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> dBm
Cause	The input power of the optical channel has decreased
Effect	High input power may affect transceiver performance

## 11.65 transceiverChannelHighInputPowerWarning

Table 196: transceiverChannelHighInputPowerWarning properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighInputPowerWarning
Default severity	warning
Message format string	The input power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> dBm or more
Cause	The input power of the optical channel has increased
Effect	High input power may affect transceiver performance

## 11.66 transceiverChannelHighInputPowerWarningClear

Table 197: transceiverChannelHighInputPowerWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighInputPowerWarningClear
Default severity	informational
Message format string	The input power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> dBm



Property name	Value
Cause	The input power of the optical channel has decreased
Effect	High input power may affect transceiver performance

## 11.67 transceiverChannelHighLaserBiasCurrentAlarm

Table 198: transceiverChannelHighLaserBiasCurrentAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighLaserBiasCurrentAlarm
Default severity	critical
Message format string	The laser bias current supplied to channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> mA or more
Cause	Laser bias increases with temperature and age. Consider lowering the ambient temperature or replacing the laser.
Effect	High laser bias may affect transceiver performance

## 11.68 transceiverChannelHighLaserBiasCurrentAlarmClear

Table 199: transceiverChannelHighLaserBiasCurrentAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighLaserBiasCurrentAlarmClear
Default severity	informational
Message format string	The laser bias current supplied to channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> mA
Cause	Laser bias current has decreased
Effect	High laser bias may affect transceiver performance

## 11.69 transceiverChannelHighLaserBiasCurrentWarning

Table 200: transceiverChannelHighLaserBiasCurrentWarning properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighLaserBiasCurrentWarning
Default severity	warning
Message format string	The laser bias current supplied to channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> mA or more
Cause	Laser bias increases with temperature and age. Consider lowering the ambient temperature or replacing the laser.
Effect	High laser bias may affect transceiver performance

## 11.70 transceiverChannelHighLaserBiasCurrentWarningClear

Table 201: transceiverChannelHighLaserBiasCurrentWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighLaserBiasCurrentWarningClear
Default severity	informational
Message format string	The laser bias current supplied to channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> mA
Cause	Laser bias current has decreased
Effect	High laser bias may affect transceiver performance

## 11.71 transceiverChannelHighOutputPowerAlarm

Table 202: transceiverChannelHighOutputPowerAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighOutputPowerAlarm
Default severity	critical
Message format string	The output power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> dBm or more
Cause	The output power of the optical channel has increased
Effect	High output power may affect transceiver performance

## 11.72 transceiverChannelHighOutputPowerAlarmClear

Table 203: transceiverChannelHighOutputPowerAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighOutputPowerAlarmClear
Default severity	informational
Message format string	The output power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> dBm
Cause	The output power of the optical channel has decreased
Effect	High output power may affect transceiver performance

## 11.73 transceiverChannelHighOutputPowerWarning

Table 204: transceiverChannelHighOutputPowerWarning properties

Property name	Value
Application name	chassis

Property name	Value
Event name	transceiverChannelHighOutputPowerWarning
Default severity	warning
Message format string	The output power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> dBm or more
Cause	The output power of the optical channel has increased
Effect	High output power may affect transceiver performance

## 11.74 transceiverChannelHighOutputPowerWarningClear

Table 205: transceiverChannelHighOutputPowerWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelHighOutputPowerWarningClear
Default severity	informational
Message format string	The output power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> dBm
Cause	The output power of the optical channel has decreased
Effect	High output power may affect transceiver performance

## 11.75 transceiverChannelLowInputPowerAlarm

Table 206: transceiverChannelLowInputPowerAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowInputPowerAlarm
Default severity	critical
Message format string	The input power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> dBm or less

Property name	Value
Cause	The input power of the optical channel has decreased
Effect	Low input power may affect transceiver performance

## 11.76 transceiverChannelLowInputPowerAlarmClear

Table 207: transceiverChannelLowInputPowerAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowInputPowerAlarmClear
Default severity	informational
Message format string	The input power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> dBm
Cause	The input power of the optical channel has increased
Effect	Low input power may affect transceiver performance

## 11.77 transceiverChannelLowInputPowerWarning

Table 208: transceiverChannelLowInputPowerWarning properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowInputPowerWarning
Default severity	warning
Message format string	The input power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> dBm or less
Cause	The input power of the optical channel has decreased
Effect	Low input power may affect transceiver performance

## 11.78 transceiverChannelLowInputPowerWarningClear

Table 209: transceiverChannelLowInputPowerWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowInputPowerWarningClear
Default severity	informational
Message format string	The input power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> dBm
Cause	The input power of the optical channel has increased
Effect	Low input power may affect transceiver performance

## 11.79 transceiverChannelLowLaserBiasCurrentAlarm

Table 210: transceiverChannelLowLaserBiasCurrentAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowLaserBiasCurrentAlarm
Default severity	critical
Message format string	The laser bias current supplied to channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> mA or less
Cause	The laser bias current of the optical channel has decreased
Effect	Low laser bias current may affect transceiver performance

## 11.80 transceiverChannelLowLaserBiasCurrentAlarmClear

Table 211: transceiverChannelLowLaserBiasCurrentAlarmClear properties

Property name	Value
Application name	chassis

Property name	Value
Event name	transceiverChannelLowLaserBiasCurrentAlarmClear
Default severity	informational
Message format string	The laser bias current supplied to channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> mA
Cause	The laser bias current of the optical channel has increased
Effect	Low laser bias current may affect transceiver performance

## 11.81 transceiverChannelLowLaserBiasCurrentWarning

Table 212: transceiverChannelLowLaserBiasCurrentWarning properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowLaserBiasCurrentWarning
Default severity	warning
Message format string	The laser bias current supplied to channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> mA or less
Cause	The laser bias current of the optical channel has decreased
Effect	Low laser bias current may affect transceiver performance

## 11.82 transceiverChannelLowLaserBiasCurrentWarningClear

Table 213: transceiverChannelLowLaserBiasCurrentWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowLaserBiasCurrentWarningClear
Default severity	informational
Message format string	The laser bias current supplied to channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> mA

Property name	Value
Cause	The laser bias current of the optical channel has increased
Effect	Low laser bias current may affect transceiver performance

## 11.83 transceiverChannelLowOutputPowerAlarm

Table 214: transceiverChannelLowOutputPowerAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowOutputPowerAlarm
Default severity	critical
Message format string	The output power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> dBm or less
Cause	The output power of the optical channel has decreased
Effect	Low output power may affect transceiver performance

## 11.84 transceiverChannelLowOutputPowerAlarmClear

Table 215: transceiverChannelLowOutputPowerAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowOutputPowerAlarmClear
Default severity	informational
Message format string	The output power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> dBm
Cause	The output power of the optical channel has increased
Effect	Low output power may affect transceiver performance



## 11.85 transceiverChannelLowOutputPowerWarning

Table 216: transceiverChannelLowOutputPowerWarning properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowOutputPowerWarning
Default severity	warning
Message format string	The output power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> dBm or less
Cause	The output power of the optical channel has decreased
Effect	Low output power may affect transceiver performance

## 11.86 transceiverChannelLowOutputPowerWarningClear

Table 217: transceiverChannelLowOutputPowerWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverChannelLowOutputPowerWarningClear
Default severity	informational
Message format string	The output power measured for channel <i>channel_num</i> of the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> dBm
Cause	The output power of the optical channel has increased
Effect	Low output power may affect transceiver performance

## 11.87 transceiverHighInputPowerAlarm

Table 218: transceiverHighInputPowerAlarm properties

Property name	Value
Application name	chassis

Property name	Value
Event name	transceiverHighInputPowerAlarm
Default severity	critical
Message format string	The input power measured for the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> dBm or more
Cause	The input power of the optics has increased
Effect	High input power may affect transceiver performance

## 11.88 transceiverHighInputPowerAlarmClear

Table 219: *transceiverHighInputPowerAlarmClear* properties

Property name	Value
Application name	chassis
Event name	transceiverHighInputPowerAlarmClear
Default severity	informational
Message format string	The input power measured for the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> dBm
Cause	The input power of the optics has decreased
Effect	High input power may affect transceiver performance

## 11.89 transceiverHighInputPowerWarning

Table 220: *transceiverHighInputPowerWarning* properties

Property name	Value
Application name	chassis
Event name	transceiverHighInputPowerWarning
Default severity	warning
Message format string	The input power measured for the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> dBm or more
Cause	The input power of the optics has increased

Property name	Value
Effect	High input power may affect transceiver performance

## 11.90 transceiverHighInputPowerWarningClear

Table 221: transceiverHighInputPowerWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverHighInputPowerWarningClear
Default severity	informational
Message format string	The input power measured for the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> dBm
Cause	The input power of the opticsI has decreased
Effect	High input power may affect transceiver performance

## 11.91 transceiverHighLaserBiasCurrentAlarm

Table 222: transceiverHighLaserBiasCurrentAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverHighLaserBiasCurrentAlarm
Default severity	critical
Message format string	The laser bias current supplied to the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> mA or more
Cause	Laser bias increases with temperature and age. Consider lowering the ambient temperature or replacing the laser.
Effect	High laser bias may affect transceiver performance

## 11.92 transceiverHighLaserBiasCurrentAlarmClear

Table 223: transceiverHighLaserBiasCurrentAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverHighLaserBiasCurrentAlarmClear
Default severity	informational
Message format string	The laser bias current supplied to the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> mA
Cause	Laser bias current has decreased
Effect	High laser bias may affect transceiver performance

## 11.93 transceiverHighLaserBiasCurrentWarning

Table 224: transceiverHighLaserBiasCurrentWarning properties

Property name	Value
Application name	chassis
Event name	transceiverHighLaserBiasCurrentWarning
Default severity	warning
Message format string	The laser bias current supplied to the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> mA or more
Cause	Laser bias increases with temperature and age. Consider lowering the ambient temperature or replacing the laser.
Effect	High laser bias may affect transceiver performance

## 11.94 transceiverHighLaserBiasCurrentWarningClear

Table 225: transceiverHighLaserBiasCurrentWarningClear properties

Property name	Value
Application name	chassis

Property name	Value
Event name	transceiverHighLaserBiasCurrentWarningClear
Default severity	informational
Message format string	The laser bias current supplied to the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> mA
Cause	Laser bias current has decreased
Effect	High laser bias may affect transceiver performance

## 11.95 transceiverHighOutputPowerAlarm

Table 226: *transceiverHighOutputPowerAlarm* properties

Property name	Value
Application name	chassis
Event name	transceiverHighOutputPowerAlarm
Default severity	critical
Message format string	The output power measured for the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> dBm or more
Cause	The output power of the optics has increased
Effect	High output power may affect transceiver performance

## 11.96 transceiverHighOutputPowerAlarmClear

Table 227: *transceiverHighOutputPowerAlarmClear* properties

Property name	Value
Application name	chassis
Event name	transceiverHighOutputPowerAlarmClear
Default severity	informational
Message format string	The output power measured for the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> dBm
Cause	The output power of the optics has decreased

Property name	Value
Effect	High output power may affect transceiver performance

## 11.97 transceiverHighOutputPowerWarning

Table 228: *transceiverHighOutputPowerWarning* properties

Property name	Value
Application name	chassis
Event name	transceiverHighOutputPowerWarning
Default severity	warning
Message format string	The output power measured for the transceiver associated with interface <i>interface_name</i> has increased to <i>high_threshold</i> dBm or more
Cause	The output power of the optics has increased
Effect	High output power may affect transceiver performance

## 11.98 transceiverHighOutputPowerWarningClear

Table 229: *transceiverHighOutputPowerWarningClear* properties

Property name	Value
Application name	chassis
Event name	transceiverHighOutputPowerWarningClear
Default severity	informational
Message format string	The output power measured for the transceiver associated with interface <i>interface_name</i> has decreased below <i>high_threshold</i> dBm
Cause	The output power of the optics has decreased
Effect	High output power may affect transceiver performance

## 11.99 transceiverLowInputPowerAlarm

Table 230: transceiverLowInputPowerAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverLowInputPowerAlarm
Default severity	critical
Message format string	The input power measured for the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> dBm or less
Cause	The input power of the optics has decreased
Effect	Low input power may affect transceiver performance

## 11.100 transceiverLowInputPowerAlarmClear

Table 231: transceiverLowInputPowerAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverLowInputPowerAlarmClear
Default severity	informational
Message format string	The input power measured for the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> dBm
Cause	The input power of the optics has increased
Effect	Low input power may affect transceiver performance

## 11.101 transceiverLowInputPowerWarning

Table 232: transceiverLowInputPowerWarning properties

Property name	Value
Application name	chassis
Event name	transceiverLowInputPowerWarning

Property name	Value
Default severity	warning
Message format string	The input power measured for the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> dBm or less
Cause	The input power of the optics has decreased
Effect	Low input power may affect transceiver performance

## 11.102 transceiverLowInputPowerWarningClear

Table 233: *transceiverLowInputPowerWarningClear* properties

Property name	Value
Application name	chassis
Event name	transceiverLowInputPowerWarningClear
Default severity	informational
Message format string	The input power measured for the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> dBm
Cause	The input power of the optics has increased
Effect	Low input power may affect transceiver performance

## 11.103 transceiverLowLaserBiasCurrentAlarm

Table 234: *transceiverLowLaserBiasCurrentAlarm* properties

Property name	Value
Application name	chassis
Event name	transceiverLowLaserBiasCurrentAlarm
Default severity	critical
Message format string	The laser bias current supplied to the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> mA or less
Cause	The laser bias current of the optics has decreased
Effect	Low laser bias current may affect transceiver performance



## 11.104 transceiverLowLaserBiasCurrentAlarmClear

Table 235: transceiverLowLaserBiasCurrentAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverLowLaserBiasCurrentAlarmClear
Default severity	informational
Message format string	The laser bias current supplied to the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> mA
Cause	The laser bias current of the optics has increased
Effect	Low laser bias current may affect transceiver performance

## 11.105 transceiverLowLaserBiasCurrentWarning

Table 236: transceiverLowLaserBiasCurrentWarning properties

Property name	Value
Application name	chassis
Event name	transceiverLowLaserBiasCurrentWarning
Default severity	warning
Message format string	The laser bias current supplied to the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> mA or less
Cause	The laser bias current of the optics has decreased
Effect	Low laser bias current may affect transceiver performance

## 11.106 transceiverLowLaserBiasCurrentWarningClear

Table 237: transceiverLowLaserBiasCurrentWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverLowLaserBiasCurrentWarningClear

Property name	Value
Default severity	informational
Message format string	The laser bias current supplied to the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> mA
Cause	The laser bias current of the optics has increased
Effect	Low laser bias current may affect transceiver performance

## 11.107 transceiverLowOutputPowerAlarm

Table 238: *transceiverLowOutputPowerAlarm* properties

Property name	Value
Application name	chassis
Event name	transceiverLowOutputPowerAlarm
Default severity	critical
Message format string	The output power measured for the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> dBm or less
Cause	The output power of the optics has decreased
Effect	Low output power may affect transceiver performance

## 11.108 transceiverLowOutputPowerAlarmClear

Table 239: *transceiverLowOutputPowerAlarmClear* properties

Property name	Value
Application name	chassis
Event name	transceiverLowOutputPowerAlarmClear
Default severity	informational
Message format string	The output power measured for the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> dBm
Cause	The output power of the optics has increased
Effect	Low output power may affect transceiver performance

## 11.109 transceiverLowOutputPowerWarning

Table 240: transceiverLowOutputPowerWarning properties

Property name	Value
Application name	chassis
Event name	transceiverLowOutputPowerWarning
Default severity	warning
Message format string	The output power measured for the transceiver associated with interface <i>interface_name</i> has decreased to <i>low_threshold</i> dBm or less
Cause	The output power of the optics has decreased
Effect	Low output power may affect transceiver performance

## 11.110 transceiverLowOutputPowerWarningClear

Table 241: transceiverLowOutputPowerWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverLowOutputPowerWarningClear
Default severity	informational
Message format string	The output power measured for the transceiver associated with interface <i>interface_name</i> has increased above <i>low_threshold</i> dBm
Cause	The output power of the optics has increased
Effect	Low output power may affect transceiver performance

## 11.111 transceiverModuleDown

Table 242: transceiverModuleDown properties

Property name	Value
Application name	chassis
Event name	transceiverModuleDown

Property name	Value
Default severity	warning
Message format string	The transceiver associated with the interface <i>interface_name</i> is now down
Cause	The transceiver oper-state has transitioned from the up state to any lower state
Effect	The transceiver is not operational

## 11.112 transceiverModuleHighTemperatureAlarm

Table 243: *transceiverModuleHighTemperatureAlarm* properties

Property name	Value
Application name	chassis
Event name	transceiverModuleHighTemperatureAlarm
Default severity	critical
Message format string	The temperature of the transceiver associated with the interface <i>interface_name</i> has increased to <i>high_threshold</i> degrees C or more
Cause	The temperature of the transceiver module has increased
Effect	High temperatures may affect transceiver performance

## 11.113 transceiverModuleHighTemperatureAlarmClear

Table 244: *transceiverModuleHighTemperatureAlarmClear* properties

Property name	Value
Application name	chassis
Event name	transceiverModuleHighTemperatureAlarmClear
Default severity	informational
Message format string	The temperature of the transceiver associated with the interface <i>interface_name</i> has decreased below <i>high_threshold</i> degrees C
Cause	The temperature of the transceiver module has decreased
Effect	High temperatures may affect transceiver performance

## 11.114 transceiverModuleHighTemperatureWarning

Table 245: transceiverModuleHighTemperatureWarning properties

Property name	Value
Application name	chassis
Event name	transceiverModuleHighTemperatureWarning
Default severity	warning
Message format string	The temperature of the transceiver associated with the interface <i>interface_name</i> has increased to <i>high_threshold</i> degrees C or more
Cause	The temperature of the transceiver module has increased
Effect	High temperatures may affect transceiver performance

## 11.115 transceiverModuleHighTemperatureWarningClear

Table 246: transceiverModuleHighTemperatureWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverModuleHighTemperatureWarningClear
Default severity	informational
Message format string	The temperature of the transceiver associated with the interface <i>interface_name</i> has decreased below <i>high_threshold</i> degrees C
Cause	The temperature of the transceiver module has decreased
Effect	High temperatures may affect transceiver performance

## 11.116 transceiverModuleHighVoltageAlarm

Table 247: transceiverModuleHighVoltageAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverModuleHighVoltageAlarm

Property name	Value
Default severity	critical
Message format string	The voltage of the transceiver associated with the interface <i>interface_name</i> has increased to <i>high_threshold</i> Volts or more
Cause	The voltage supplied to the transceiver module has increased
Effect	High voltages may affect transceiver performance

## 11.117 transceiverModuleHighVoltageAlarmClear

Table 248: *transceiverModuleHighVoltageAlarmClear* properties

Property name	Value
Application name	chassis
Event name	transceiverModuleHighVoltageAlarmClear
Default severity	informational
Message format string	The voltage of the transceiver associated with the interface <i>interface_name</i> has decreased below <i>high_threshold</i> Volts
Cause	The voltage supplied to the transceiver module has decreased
Effect	High voltages may affect transceiver performance

## 11.118 transceiverModuleHighVoltageWarning

Table 249: *transceiverModuleHighVoltageWarning* properties

Property name	Value
Application name	chassis
Event name	transceiverModuleHighVoltageWarning
Default severity	warning
Message format string	The voltage of the transceiver associated with the interface <i>interface_name</i> has increased to <i>high_threshold</i> Volts or more
Cause	The voltage supplied to the transceiver module has increased
Effect	High voltages may affect transceiver performance

## 11.119 transceiverModuleHighVoltageWarningClear

Table 250: transceiverModuleHighVoltageWarningClear properties

Property name	Value
Application name	chassis
Event name	transceiverModuleHighVoltageWarningClear
Default severity	informational
Message format string	The voltage of the transceiver associated with the interface <i>interface_name</i> has decreased below <i>high_threshold</i> Volts
Cause	The voltage supplied to the transceiver module has decreased
Effect	High voltages may affect transceiver performance

## 11.120 transceiverModuleLowTemperatureAlarm

Table 251: transceiverModuleLowTemperatureAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverModuleLowTemperatureAlarm
Default severity	critical
Message format string	The temperature of the transceiver associated with the interface <i>interface_name</i> has decreased to <i>low_threshold</i> degrees C or less
Cause	The temperature of the transceiver module has decreased
Effect	Low temperatures may affect transceiver performance

## 11.121 transceiverModuleLowTemperatureAlarmClear

Table 252: transceiverModuleLowTemperatureAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverModuleLowTemperatureAlarmClear

Property name	Value
Default severity	informational
Message format string	The temperature of the transceiver associated with the interface <i>interface_name</i> has increased above <i>low_threshold</i> degrees C
Cause	The temperature of the transceiver module has increased
Effect	Low temperatures may affect transceiver performance

## 11.122 transceiverModuleLowTemperatureWarning

Table 253: *transceiverModuleLowTemperatureWarning* properties

Property name	Value
Application name	chassis
Event name	transceiverModuleLowTemperatureWarning
Default severity	warning
Message format string	The temperature of the transceiver associated with the interface <i>interface_name</i> has decreased to <i>low_threshold</i> degrees C or less
Cause	The temperature of the transceiver module has decreased
Effect	Low temperatures may affect transceiver performance

## 11.123 transceiverModuleLowTemperatureWarningClear

Table 254: *transceiverModuleLowTemperatureWarningClear* properties

Property name	Value
Application name	chassis
Event name	transceiverModuleLowTemperatureWarningClear
Default severity	informational
Message format string	The temperature of the transceiver associated with the interface <i>interface_name</i> has increased above <i>low_threshold</i> degrees C
Cause	The temperature of the transceiver module has increased
Effect	Low temperatures may affect transceiver performance



## 11.124 transceiverModuleLowVoltageAlarm

Table 255: transceiverModuleLowVoltageAlarm properties

Property name	Value
Application name	chassis
Event name	transceiverModuleLowVoltageAlarm
Default severity	critical
Message format string	The voltage of the transceiver associated with the interface <i>interface_name</i> has decreased to <i>low_threshold</i> Volts or less
Cause	The voltage supplied to the transceiver module has decreased
Effect	Low voltages may affect transceiver performance

## 11.125 transceiverModuleLowVoltageAlarmClear

Table 256: transceiverModuleLowVoltageAlarmClear properties

Property name	Value
Application name	chassis
Event name	transceiverModuleLowVoltageAlarmClear
Default severity	informational
Message format string	The voltage of the transceiver associated with the interface <i>interface_name</i> has increased above <i>low_threshold</i> Volts
Cause	The voltage supplied to the transceiver module has increased
Effect	Low voltages may affect transceiver performance

## 11.126 transceiverModuleLowVoltageWarning

Table 257: transceiverModuleLowVoltageWarning properties

Property name	Value
Application name	chassis
Event name	transceiverModuleLowVoltageWarning

Property name	Value
Default severity	warning
Message format string	The voltage of the transceiver associated with the interface <i>interface_name</i> has decreased to <i>low_threshold</i> Volts or less
Cause	The voltage supplied to the transceiver module has decreased
Effect	Low voltages may affect transceiver performance

## 11.127 transceiverModuleLowVoltageWarningClear

Table 258: *transceiverModuleLowVoltageWarningClear* properties

Property name	Value
Application name	chassis
Event name	transceiverModuleLowVoltageWarningClear
Default severity	informational
Message format string	The voltage of the transceiver associated with the interface <i>interface_name</i> has increased above <i>low_threshold</i> Volts
Cause	The voltage supplied to the transceiver module has increased
Effect	Low voltages may affect transceiver performance

## 11.128 transceiverModuleUp

Table 259: *transceiverModuleUp* properties

Property name	Value
Application name	chassis
Event name	transceiverModuleUp
Default severity	notice
Message format string	The transceiver associated with the interface <i>interface_name</i> is now up
Cause	The transceiver oper-state has transitioned from any other state to the up state
Effect	The transceiver is now operational

## 12 debug

### 12.1 setAllConfigLevels

Table 260: setAllConfigLevels properties

Property name	Value
Application name	debug
Event name	setAllConfigLevels
Default severity	informational
Message format string	App config debug log levels set to: <i>new_level</i> .
Cause	Configuration of debug log levels that can be received by program parameter or via idb.
Effect	Sticky levels are losable only to another configuration setting.

### 12.2 setAllStartupLevels

Table 261: setAllStartupLevels properties

Property name	Value
Application name	debug
Event name	setAllStartupLevels
Default severity	informational
Message format string	App debug startup log levels set to: <i>new_level</i> (configuration can override).
Cause	Restrain of logging verbosity internal to some programs
Effect	If configuration is set, and goes away, the startup levels are respected.



## 12.3 setHighBaselineLogLevels

Table 262: *setHighBaselineLogLevels* properties

Property name	Value
Application name	debug
Event name	setHighBaselineLogLevels
Default severity	informational
Message format string	Default (startup), and runtime app debug log levels set to: <i>new_level</i> . Except for modules: { <i>configured_list</i> }
Cause	Boot phase time is up, and verbose messages are suppressed in a beta build with .
Effect	Internal setting to all levels. If module levels are configured, they restore to the setting.

## 13 dhcp

### 13.1 dhcp6ClientAddressDeclined

Table 263: dhcp6ClientAddressDeclined properties

Property name	Value
Application name	dhcp
Event name	dhcp6ClientAddressDeclined
Default severity	notice
Message format string	DHCPv6 client running on <i>subinterface_name</i> was given a duplicate IPv6 address by the DHCP server <i>server_ip</i>
Cause	The DHCP server assigned an IPv6 address that is already in use on the same subnet
Effect	The subinterface will try to acquire a new IPv6 address

### 13.2 dhcp6ClientIpv6AddressValidLifetimeExpired

Table 264: dhcp6ClientIpv6AddressValidLifetimeExpired properties

Property name	Value
Application name	dhcp
Event name	dhcp6ClientIpv6AddressValidLifetimeExpired
Default severity	warning
Message format string	The IPv6 address <i>assigned_ip</i> obtained by the DHCPv6 client running on <i>subinterface_name</i> has become invalid
Cause	The DHCPv6 client was not successful in renewing or rebinding the IA_NA lease before the valid lifetime of the IPv6 address expired
Effect	The subinterface has no DHCP-assigned IPv6 address

## 13.3 dhcp6ClientRebindAttempted

Table 265: *dhcp6ClientRebindAttempted* properties

Property name	Value
Application name	dhcp
Event name	dhcp6ClientRebindAttempted
Default severity	informational
Message format string	DHCPv6 client running on <i>subinterface_name</i> is attempting to rebind its IA_NA lease for the IPv6 address <i>requested_ip</i>
Cause	The DHCPv6 client could not renew its assigned IPv6 address before the timer T2 expired
Effect	The IPv6 address may become deprecated and then invalid if the rebind is not successful

## 13.4 dhcp6ClientReconfigureMsgDropped

Table 266: *dhcp6ClientReconfigureMsgDropped* properties

Property name	Value
Application name	dhcp
Event name	dhcp6ClientReconfigureMsgDropped
Default severity	notice
Message format string	The DHCPv6 client running on <i>subinterface_name</i> dropped a RECONFIGURE message received from the server <i>server_ip</i>
Cause	The DHCPv6 client received a message that it was not supposed to receive (because it did not include a Reconfigure Accept option in its SOLICIT msg)
Effect	None

## 13.5 dhcp6ClientRenewSuccess

Table 267: *dhcp6ClientRenewSuccess* properties

Property name	Value
Application name	dhcp
Event name	dhcp6ClientRenewSuccess
Default severity	informational
Message format string	DHCPv6 client running on <i>subinterface_name</i> successfully renewed the IPv6 address <i>requested_ip</i> for a new lease duration of <i>new_lease_time</i> seconds from server <i>server_ip</i>
Cause	The DHCPv6 client received a success REPLY in response to its RENEW
Effect	The subinterface remains operational with its existing DHCP-assigned IPv6 address

## 13.6 dhcpClientAddressDeclined

Table 268: *dhcpClientAddressDeclined* properties

Property name	Value
Application name	dhcp
Event name	dhcpClientAddressDeclined
Default severity	notice
Message format string	DHCP client running on <i>subinterface_name</i> was given a duplicate IPv4 address by the DHCP server <i>server_ip</i>
Cause	The DHCP server assigned an IPv4 address that is already in use on the same subnet
Effect	The subinterface will try to acquire a new IPv4 address after a 10s delay

## 13.7 dhcpClientLeaseExpired

Table 269: dhcpClientLeaseExpired properties

Property name	Value
Application name	dhcp
Event name	dhcpClientLeaseExpired
Default severity	warning
Message format string	The DHCP lease for address <i>assigned_ip</i> obtained by the DHCP client running on <i>subinterface_name</i> and obtained from server <i>server_ip</i> has expired
Cause	The DHCP client was not successful in renewing or rebinding the lease
Effect	The subinterface has no DHCP-assigned IPv4 address

## 13.8 dhcpClientRebindAttempted

Table 270: dhcpClientRebindAttempted properties

Property name	Value
Application name	dhcp
Event name	dhcpClientRebindAttempted
Default severity	informational
Message format string	DHCP client running on <i>subinterface_name</i> is attempting to rebind its lease for the IP address <i>requested_ip</i>
Cause	The DHCP client could not renew its assigned IPv4 address before the timer T2 expired
Effect	The lease may expire if the rebind is not successful

## 13.9 dhcpClientRenewSuccess

Table 271: dhcpClientRenewSuccess properties

Property name	Value
Application name	dhcp



Property name	Value
Event name	dhcpClientRenewSuccess
Default severity	informational
Message format string	DHCP client running on <i>subinterface_name</i> successfully renewed the IP address <i>requested_ip</i> for a new lease duration of <i>new_lease_time</i> seconds from server <i>server_ip</i>
Cause	The DHCP client received a DHCPACK response to its DHCPREQUEST
Effect	The subinterface remains operational with its existing DHCP-assigned IPv4 address

## 13.10 dhcpv4RelayAdminDisable

Table 272: dhcpv4RelayAdminDisable properties

Property name	Value
Application name	dhcp
Event name	dhcpv4RelayAdminDisable
Default severity	warning
Message format string	DHCPv4 Relay on sub-interface <i>subinterface_name</i> has changed to administrative disable state
Cause	The DHCPv4 Relay admin state has changed from enable to disable due to configuration change
Effect	The DHCPv4 Relay admin state is disable on the mentioned sub-interface

## 13.11 dhcpv4RelayAdminEnable

Table 273: dhcpv4RelayAdminEnable properties

Property name	Value
Application name	dhcp
Event name	dhcpv4RelayAdminEnable
Default severity	warning

Property name	Value
Message format string	DHCPv4 Relay on sub-interface <i>subinterface_name</i> has changed to administrative enable state
Cause	The DHCPv4 Relay admin state has changed from disable to enable due to configuration change
Effect	The DHCPv4 Relay admin state is enable on the mentioned sub-interface

## 13.12 dhcpv4RelayAllDhcpv4ServersUnreachable

Table 274: *dhcpv4RelayAllDhcpv4ServersUnreachable* properties

Property name	Value
Application name	dhcp
Event name	dhcpv4RelayAllDhcpv4ServersUnreachable
Default severity	critical
Message format string	All DHCPv4 Servers <i>dhcpv4_server_list</i> configured under DHCPv4 Relay on sub-interface <i>subinterface_name</i> are unreachable for network instance <i>network_instance</i>
Cause	All The DHCPv4 Servers configured under DHCPv4 Relay are unreachable
Effect	The DHCPv4 Relay oper state is down on the mentioned sub-interface

## 13.13 dhcpv4RelayOperDown

Table 275: *dhcpv4RelayOperDown* properties

Property name	Value
Application name	dhcp
Event name	dhcpv4RelayOperDown
Default severity	critical
Message format string	DHCPv4 Relay on sub-interface <i>subinterface_name</i> has changed to operational down state
Cause	The DHCPv4 Relay oper state has changed from up to down

Property name	Value
Effect	The DHCPv4 Relay oper state is down on the mentioned sub-interface

## 13.14 dhcpv4RelayOperUp

Table 276: dhcpv4RelayOperUp properties

Property name	Value
Application name	dhcp
Event name	dhcpv4RelayOperUp
Default severity	warning
Message format string	DHCPv4 Relay on sub-interface <i>subinterface_name</i> has changed to operational up state
Cause	The DHCPv4 Relay oper state has changed from down to up
Effect	The DHCPv4 Relay oper state is up on the mentioned sub-interface

## 13.15 dhcpv6RelayAdminDisable

Table 277: dhcpv6RelayAdminDisable properties

Property name	Value
Application name	dhcp
Event name	dhcpv6RelayAdminDisable
Default severity	warning
Message format string	DHCPv6 Relay on sub-interface <i>subinterface_name</i> has changed to administrative disable state
Cause	The DHCPv6 Relay admin state has changed from enable to disable due to configuration change
Effect	The DHCPv6 Relay admin state is disable on the mentioned sub-interface

## 13.16 dhcpv6RelayAdminEnable

Table 278: dhcpv6RelayAdminEnable properties

Property name	Value
Application name	dhcp
Event name	dhcpv6RelayAdminEnable
Default severity	warning
Message format string	DHCPv6 Relay on sub-interface <i>subinterface_name</i> has changed to administrative enable state
Cause	The DHCPv6 Relay admin state has changed from disable to enable due to configuration change
Effect	The DHCPv6 Relay admin state is enable on the mentioned sub-interface

## 13.17 dhcpv6RelayAllDhcpv6ServersUnreachable

Table 279: dhcpv6RelayAllDhcpv6ServersUnreachable properties

Property name	Value
Application name	dhcp
Event name	dhcpv6RelayAllDhcpv6ServersUnreachable
Default severity	critical
Message format string	All DHCPv6 Servers <i>dhcpv6_server_list</i> configured under DHCPv6 Relay on sub-interface <i>subinterface_name</i> are unreachable for network instance <i>network_instance</i>
Cause	All The DHCPv6 Servers configured under DHCPv6 Relay are unreachable
Effect	The DHCPv6 Relay oper state is down on the mentioned sub-interface

## 13.18 dhcpv6RelayOperDown

Table 280: dhcpv6RelayOperDown properties

Property name	Value
Application name	dhcp
Event name	dhcpv6RelayOperDown
Default severity	critical
Message format string	DHCPv6 Relay on sub-interface <i>subinterface_name</i> has changed to operational down state
Cause	The DHCPv6 Relay oper state has changed from up to down
Effect	The DHCPv6 Relay oper state is down on the mentioned sub-interface

## 13.19 dhcpv6RelayOperUp

Table 281: dhcpv6RelayOperUp properties

Property name	Value
Application name	dhcp
Event name	dhcpv6RelayOperUp
Default severity	warning
Message format string	DHCPv6 Relay on sub-interface <i>subinterface_name</i> has changed to operational up state
Cause	The DHCPv6 Relay oper state has changed from down to up
Effect	The DHCPv6 Relay oper state is up on the mentioned sub-interface

## 13.20 giAddressMismatch

Table 282: giAddressMismatch properties

Property name	Value
Application name	dhcp
Event name	giAddressMismatch

Property name	Value
Default severity	critical
Message format string	Gi-Address for DHCPv4 Relay on sub-interface <i>subinterface_name</i> does not match any of the configured IPv4 addresses under sub-interface
Cause	The gi-address for DHCPv4 Relay does not match any of the configured IPv4 addresses under sub-interface
Effect	The DHCPv4 Relay oper state is down on the mentioned sub-interface

## 13.21 sourceAddressMismatch

Table 283: sourceAddressMismatch properties

Property name	Value
Application name	dhcp
Event name	sourceAddressMismatch
Default severity	critical
Message format string	source-address for DHCPv6 Relay on sub-interface <i>subinterface_name</i> does not match any of the configured IPv6 addresses under sub-interface
Cause	The source-address for DHCPv6 Relay does not match any of the configured IPv6 addresses under sub-interface
Effect	The DHCPv6 Relay oper state is down on the mentioned sub-interface

## 14 ethcfm

### 14.1 ClearErrorCcm

Table 284: ClearErrorCcm properties

Property name	Value
Application name	ethcfm
Event name	ClearErrorCcm
Default severity	notice
Message format string	ETHCFM: The condition of ERROR-CCM on MEP <i>domain-id/association-id/mep-id</i> was cleared.
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level, correct MEG ID, correct MEP ID, correct period.
Effect	The MEP has cleared a defect.

### 14.2 ClearLOC

Table 285: ClearLOC properties

Property name	Value
Application name	ethcfm
Event name	ClearLOC
Default severity	notice
Message format string	ETHCFM: The condition of loss of continuity (LOC) on MEP <i>domain-id/association-id/mep-id</i> was cleared.
Cause	This notification is generated when a MEP receives CCM frames from a peer MEP during an interval equal to 3.5 times the CCM transmission period.
Effect	The MEP has cleared a defect.

## 14.3 ClearMacStatus

Table 286: ClearMacStatus properties

Property name	Value
Application name	ethcfm
Event name	ClearMacStatus
Default severity	notice
Message format string	ETHCFM: The condition of MAC-STATUS on MEP <i>domain-id/association-id/mep-id</i> was cleared.
Cause	This notification is generated when a MEP receives CCM frames from a peer MEP during an interval equal to 3.5 times the CCM transmission period.
Effect	The MEP has cleared a defect.

## 14.4 ClearMMG

Table 287: ClearMMG properties

Property name	Value
Application name	ethcfm
Event name	ClearMMG
Default severity	notice
Message format string	ETHCFM: The condition of mismerge (MMG) on MEP <i>domain-id/association-id/mep-id</i> was cleared.
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level, correct MEG ID.
Effect	The MEP has cleared a defect.



## 14.5 ClearRDI

Table 288: ClearRDI properties

Property name	Value
Application name	ethcfm
Event name	ClearRDI
Default severity	notice
Message format string	ETHCFM: The remote defect indication (RDI) condition on MEP <i>domain-id/association-id/mep-id</i> was cleared.
Cause	This notification is generated when a MEP receives a CCM frame with the RDI field clear.
Effect	The MEP has cleared a defect.

## 14.6 ClearRemoteCcm

Table 289: ClearRemoteCcm properties

Property name	Value
Application name	ethcfm
Event name	ClearRemoteCcm
Default severity	notice
Message format string	ETHCFM: The condition of REMOTE-CCM on MEP <i>domain-id/association-id/mep-id</i> was cleared.
Cause	This notification is generated when a MEP receives CCM frames from a peer MEP during an interval equal to 3.5 times the CCM transmission period.
Effect	The MEP has cleared a defect.

## 14.7 ClearRemoteDefectIndication

Table 290: ClearRemoteDefectIndication properties

Property name	Value
Application name	ethcfm
Event name	ClearRemoteDefectIndication
Default severity	notice
Message format string	ETHCFM: The remote defect indication (RDI) condition on MEP <i>domain-id/association-id/mep-id</i> was cleared.
Cause	This notification is generated when a MEP receives a CCM frame with the RDI field clear.
Effect	The MEP has cleared a defect.

## 14.8 clearTwoWaySlmAvgflrTCA

Table 291: clearTwoWaySlmAvgflrTCA properties

Property name	Value
Application name	ethcfm
Event name	clearTwoWaySlmAvgflrTCA
Default severity	notice
Message format string	ETHCFM: A TCA is cleared for average flr of two-way synthetic loss measurement PM test ' <i>domain-id/association-id/mep-id/session-id/ mi-type/direction</i> '.
Cause	This notification is generated when the average flr of a two-way synthetic loss measurement has fallen below the clear-threshold.
Effect	The alarm is cleared.

## 14.9 clearTwoWaySImHliTCA

Table 292: clearTwoWaySImHliTCA properties

Property name	Value
Application name	ethcfm
Event name	clearTwoWaySImHliTCA
Default severity	notice
Message format string	ETHCFM: A TCA is cleared for high loss of two-way synthetic loss measurement PM test ' domain-id/association-id/mep-id/session-id/ mi-type/direction'.
Cause	This notification is generated when the high loss interval of a two-way synthetic loss measurement has fallen below the clear-threshold.
Effect	The alarm is cleared.

## 14.10 clearTwoWaySImUnavailTCA

Table 293: clearTwoWaySImUnavailTCA properties

Property name	Value
Application name	ethcfm
Event name	clearTwoWaySImUnavailTCA
Default severity	notice
Message format string	ETHCFM: A TCA is cleared for unavailability of two-way synthetic loss measurement PM test ' domain-id/association-id/mep-id/session-id/ mi-type/direction'.
Cause	This notification is generated when the unavailability intervals of a two-way synthetic loss measurement has fallen below the clear-threshold.
Effect	The alarm is cleared.

## 14.11 ClearUNL

Table 294: ClearUNL properties

Property name	Value
Application name	ethcfm
Event name	ClearUNL
Default severity	notice
Message format string	ETHCFM: The condition of unexpected MEG level (UNL) on MEP <i>domain-id/association-id/mep-id</i> was cleared.
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level.
Effect	The MEP has cleared a defect.

## 14.12 ClearUNM

Table 295: ClearUNM properties

Property name	Value
Application name	ethcfm
Event name	ClearUNM
Default severity	notice
Message format string	ETHCFM: The condition of unexpected MEP (UNM) on MEP <i>domain-id/association-id/mep-id</i> was cleared.
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level, correct MEG ID, correct MEP ID.
Effect	The MEP has cleared a defect.

## 14.13 ClearUNP

Table 296: ClearUNP properties

Property name	Value
Application name	ethcfm

Property name	Value
Event name	ClearUNP
Default severity	notice
Message format string	ETHCFM: The condition of unexpected period (UNP) on MEP <i>domain-id/association-id/mep-id</i> was cleared.
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level, correct MEG ID, correct MEP ID, correct period.
Effect	The MEP has cleared a defect.

## 14.14 ClearXconCcm

Table 297: ClearXconCcm properties

Property name	Value
Application name	ethcfm
Event name	ClearXconCcm
Default severity	notice
Message format string	ETHCFM: The condition of XCON-CCM on MEP <i>domain-id/association-id/mep-id</i> was cleared.
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level.
Effect	The MEP has cleared a defect.

## 14.15 linktraceCompleted

Table 298: linktraceCompleted properties

Property name	Value
Application name	ethcfm
Event name	linktraceCompleted
Default severity	notice
Message format string	ETHCFM: A linktrace test from MEP <i>domain-id/association-id/mep-id</i> to the destination address <i>target</i> has completed.

Property name	Value
Cause	This notification is generated when an on-demand linktrace test was successfully completed.
Effect	The test result is stored in the MEP object.

## 14.16 loopbackCompleted

Table 299: *loopbackCompleted* properties

Property name	Value
Application name	ethcfm
Event name	loopbackCompleted
Default severity	notice
Message format string	ETHCFM: A loopback test from MEP <i>domain-id/association-id/mep-id</i> to the destination address <i>target</i> has completed.
Cause	This notification is generated when an on-demand loopback test was successfully completed.
Effect	The test result is stored in the MEP object.

## 14.17 RaiseErrorCcm

Table 300: *RaiseErrorCcm* properties

Property name	Value
Application name	ethcfm
Event name	RaiseErrorCcm
Default severity	warning
Message format string	ETHCFM: MEP <i>domain-id/ association-id/mep-id</i> has a condition of ERROR-CCM.
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level, correct MEG ID, correct MEP ID, but with a period field value different than its own CCM transmission period.
Effect	The MEP has a defect.

## 14.18 RaiseLOC

Table 301: RaiseLOC properties

Property name	Value
Application name	ethcfm
Event name	RaiseLOC
Default severity	warning
Message format string	ETHCFM: MEP <i>domain-id/ association-id/mep-id</i> has a condition of loss of continuity (LOC).
Cause	This notification is generated when a MEP receives no CCM frames from a peer MEP during an interval equal to 3.5 times the CCM transmission period.
Effect	The MEP has a defect.

## 14.19 RaiseMacStatus

Table 302: RaiseMacStatus properties

Property name	Value
Application name	ethcfm
Event name	RaiseMacStatus
Default severity	warning
Message format string	ETHCFM: MEP <i>domain-id/ association-id/mep-id</i> has a condition of MAC-STATUS.
Cause	This notification is generated when a MEP receives no CCM frames from a peer MEP during an interval equal to 3.5 times the CCM transmission period.
Effect	The MEP has a defect.

## 14.20 RaiseMMG

Table 303: RaiseMMG properties

Property name	Value
Application name	ethcfm
Event name	RaiseMMG
Default severity	warning
Message format string	ETHCFM: MEP <i>domain-id/ association-id/mep-id</i> has a condition of mismerge (MMG).
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level but incorrect MEG ID.
Effect	The MEP has a defect.

## 14.21 RaiseRDI

Table 304: RaiseRDI properties

Property name	Value
Application name	ethcfm
Event name	RaiseRDI
Default severity	warning
Message format string	ETHCFM: MEP <i>domain-id/ association-id/mep-id</i> has a condition of remote defect indication (RDI).
Cause	This notification is generated when a MEP receives a CCM frame with the RDI field set.
Effect	The MEP has a defect.

## 14.22 RaiseRemoteCcm

Table 305: RaiseRemoteCcm properties

Property name	Value
Application name	ethcfm



Property name	Value
Event name	RaiseRemoteCcm
Default severity	warning
Message format string	ETHCFM: MEP <i>domain-id/ association-id/mep-id</i> has a condition of REMOTE-CCM.
Cause	This notification is generated when a MEP receives no CCM frames from a peer MEP during an interval equal to 3.5 times the CCM transmission period.
Effect	The MEP has a defect.

## 14.23 RaiseRemoteDefectIndication

Table 306: *RaiseRemoteDefectIndication* properties

Property name	Value
Application name	ethcfm
Event name	RaiseRemoteDefectIndication
Default severity	warning
Message format string	ETHCFM: MEP <i>domain-id/ association-id/mep-id</i> has a condition of remote defect indication (RDI).
Cause	This notification is generated when a MEP receives a CCM frame with the RDI field set.
Effect	The MEP has a defect.

## 14.24 raiseTwoWaySlmAvgflrTCA

Table 307: *raiseTwoWaySlmAvgflrTCA* properties

Property name	Value
Application name	ethcfm
Event name	raiseTwoWaySlmAvgflrTCA
Default severity	warning

Property name	Value
Message format string	ETHCFM: A TCA is raised for average flr of two-way synthetic loss measurement PM test ' <i>domain-id/association-id/mep-id/session-id/ mi-type/direction</i> '.
Cause	This notification is generated when the average flr of a two-way synthetic loss measurement has reached or exceeded the raise-threshold.
Effect	An alarm is raised.

## 14.25 raiseTwoWaySImHliTCA

Table 308: *raiseTwoWaySImHliTCA* properties

Property name	Value
Application name	ethcfm
Event name	raiseTwoWaySImHliTCA
Default severity	warning
Message format string	ETHCFM: A TCA is raised for high loss of two-way synthetic loss measurement PM test ' <i>domain-id/association-id/mep-id/session-id/ mi-type/direction</i> '.
Cause	This notification is generated when the high loss intervals of a two-way synthetic loss measurement has reached or exceeded the raise-threshold.
Effect	An alarm is raised.

## 14.26 raiseTwoWaySImUnavailTCA

Table 309: *raiseTwoWaySImUnavailTCA* properties

Property name	Value
Application name	ethcfm
Event name	raiseTwoWaySImUnavailTCA
Default severity	warning

Property name	Value
Message format string	ETHCFM: A TCA is raised for unavailability of two-way synthetic loss measurement PM test ' <i>domain-id/association-id/mep-id/session-id/ mi-type/direction</i> '.
Cause	This notification is generated when the unavailability intervals of a two-way synthetic loss measurement has reached or exceeded the raise-threshold.
Effect	An alarm is raised.

## 14.27 RaiseUNL

Table 310: RaiseUNL properties

Property name	Value
Application name	ethcfm
Event name	RaiseUNL
Default severity	warning
Message format string	ETHCFM: MEP <i>domain-id/ association-id/mep-id</i> has a condition of unexpected MEG level (UNL).
Cause	This notification is generated when a MEP receives a CCM frame with incorrect MEG level.
Effect	The MEP has a defect.

## 14.28 RaiseUNM

Table 311: RaiseUNM properties

Property name	Value
Application name	ethcfm
Event name	RaiseUNM
Default severity	warning
Message format string	ETHCFM: MEP <i>domain-id/ association-id/mep-id</i> has a condition of unexpected MEP (UNM).
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level, correct MEG ID but with unexpected MEP ID.

Property name	Value
Effect	The MEP has a defect.

## 14.29 RaiseUNP

Table 312: RaiseUNP properties

Property name	Value
Application name	ethcfm
Event name	RaiseUNP
Default severity	warning
Message format string	ETHCFM: MEP <i>domain-id/ association-id/mep-id</i> has a condition of unexpected period (UNP).
Cause	This notification is generated when a MEP receives a CCM frame with correct MEG level, correct MEG ID, correct MEP ID, but with a period field value different than its own CCM transmission period.
Effect	The MEP has a defect.

## 14.30 RaiseXconCcm

Table 313: RaiseXconCcm properties

Property name	Value
Application name	ethcfm
Event name	RaiseXconCcm
Default severity	warning
Message format string	ETHCFM: MEP <i>domain-id/ association-id/mep-id</i> has a condition of XCON-CCM.
Cause	This notification is generated when a MEP receives a CCM frame with incorrect MEG level.
Effect	The MEP has a defect.

## 14.31 singleEndedDmmCompleted

Table 314: *singleEndedDmmCompleted* properties

Property name	Value
Application name	ethcfm
Event name	singleEndedDmmCompleted
Default severity	notice
Message format string	ETHCFM: A single-ended delay measurement test ( <i>test-id</i> ) from MEP <i>domain-id/association-id/mep-id</i> to the destination address <i>target</i> has completed.
Cause	This notification is generated when an on-demand single-ended delay measurement test was successfully completed.
Effect	The test result is stored in the MEP object.

## 14.32 singleEndedSlmCompleted

Table 315: *singleEndedSlmCompleted* properties

Property name	Value
Application name	ethcfm
Event name	singleEndedSlmCompleted
Default severity	notice
Message format string	ETHCFM: A single-ended synthetic loss measurement test ( <i>test-id</i> ) from MEP <i>domain-id/association-id/mep-id</i> to the destination address <i>target</i> has completed.
Cause	This notification is generated when an on-demand single-ended synthetic loss measurement test was successfully completed.
Effect	The test result is stored in the MEP object.

## 14.33 TwoWaySlmAvailabilityState

Table 316: TwoWaySlmAvailabilityState properties

Property name	Value
Application name	ethcfm
Event name	TwoWaySlmAvailabilityState
Default severity	notice
Message format string	ETHCFM: The availability state has transited to ' <i>availability</i> ' in two-way synthetic loss measurement PM test ' <i>domain-id/ association-id/mep-id/ session-id/mi-type/direction</i> ' at ' <i>transition-time</i> '.
Cause	This notification is generated when the availability of a two-way synthetic loss measurement has transited from Available to Unavailable or vice versa.
Effect	The notice is sent.

## 15 evpn

### 15.1 ethernetsegmentNetworkInstanceBgpInstanceDfStatusChanged

Table 317: *ethernetsegmentNetworkInstanceBgpInstanceDfStatusChanged* properties

Property name	Value
Application name	evpn
Event name	ethernetsegmentNetworkInstanceBgpInstanceDfStatusChanged
Default severity	notice
Message format string	BGP-EVPN attachment circuit on ethernet segment <i>ethernet-segment</i> on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is now a <i>designated-forwarding-status</i> .
Cause	This event is generated when there is a change in the ethernet segment attachment circuit designated forwarder state.
Effect	The forwarding state of the ethernet segment attachment circuit is changed.

### 15.2 ethernetsegmentPreferenceOperValueChanged

Table 318: *ethernetsegmentPreferenceOperValueChanged* properties

Property name	Value
Application name	evpn
Event name	ethernetsegmentPreferenceOperValueChanged
Default severity	notice
Message format string	The Oper DF preference value changed to <i>oper-preference</i> and/or the DP value changed to <i>do-not-preempt</i> on ethernet-segment <i>ethernet-segment</i>
Cause	This event is generated when there is a change in the ethernet segment operational preference value or the do not preempt value.
Effect	The designated forwarder state of the ethernet segment's attachment circuit might change.

## 15.3 evpnAutoDiscoveryEviRouteAddDroppedDueToUnexpectedEthTag

Table 319: *evpnAutoDiscoveryEviRouteAddDroppedDueToUnexpectedEthTag* properties

Property name	Value
Application name	evpn
Event name	evpnAutoDiscoveryEviRouteAddDroppedDueToUnexpectedEthTag
Default severity	warning
Message format string	BGP-EVPN Auto Discovery Evi route received with route-distinguisher <i>route-distinguisher</i> and ethernet segment identifier <i>ethernet-segment-id</i> add on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is dropped because the Ethernet Tag Identifier <i>received-ethernet-tag</i> received in the route, does not match locally configured Ethernet Tag Identifier <i>local-ethernet-tag</i> on the bgp-instance
Cause	This event is generated when a received Ethernet Tag Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The designated forwarder election on this ethernet-segment-id for this EVI will be affected. The mac-address's on this ethernet-segment will not be programmed in the bridge-table

## 15.4 evpnAutoDiscoveryEviRouteWithdrawDroppedDueToUnexpectedEthTag

Table 320: *evpnAutoDiscoveryEviRouteWithdrawDroppedDueToUnexpectedEthTag* properties

Property name	Value
Application name	evpn
Event name	evpnAutoDiscoveryEviRouteWithdrawDroppedDueToUnexpectedEthTag
Default severity	warning
Message format string	BGP-EVPN Auto Discovery Evi route received with route-distinguisher <i>route-distinguisher</i> and ethernet segment identifier <i>ethernet-segment-id</i> delete on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is dropped because the Ethernet Tag Identifier <i>received-ethernet-tag</i> received in the route, does not match locally configured Ethernet Tag Identifier <i>local-ethernet-tag</i> on the bgp-instance



Property name	Value
Cause	This event is generated when a received Ethernet Tag Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The designated forwarder election on this ethernet-segment-id for this EVI will be affected. The mac-address's on this ethernet-segment if programmed in the bridge-table, will not be deleted or updated

## 15.5 evpnAutoDiscoveryEviRouteWithdrawnDueToUnexpectedVni

Table 321: *evpnAutoDiscoveryEviRouteWithdrawnDueToUnexpectedVni* properties

Property name	Value
Application name	evpn
Event name	evpnAutoDiscoveryEviRouteWithdrawnDueToUnexpectedVni
Default severity	warning
Message format string	BGP-EVPN Auto Discovery Evi route received with route-distinguisher <i>route-distinguisher</i> and ethernet segment identifier <i>ethernet-segment-id</i> on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is withdrawn because the VXLAN Network Identifier <i>received-vni</i> received in the route, does not match locally configured VXLAN Network Identifier <i>local-vni</i> on the bgp-instance
Cause	This event is generated when a received VXLAN Network Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The designated forwarder election on this ethernet-segment-id for this EVI will be affected. The mac-address's on this ethernet-segment will not be programmed in the bridge-table

## 15.6 evpnInclMcastRouteAddDroppedDueToUnexpectedEthTag

Table 322: *evpnInclMcastRouteAddDroppedDueToUnexpectedEthTag* properties

Property name	Value
Application name	evpn
Event name	evpnInclMcastRouteAddDroppedDueToUnexpectedEthTag
Default severity	warning

Property name	Value
Message format string	BGP-EVPN Inclusive Multicast route received with route-distinguisher <i>route-distinguisher</i> and originating IP <i>originating-ip-address</i> add on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is dropped because the Ethernet Tag Identifier <i>received-ethernet-tag</i> received in the route, does not match locally configured Ethernet Tag Identifier <i>local-ethernet-tag</i> on the bgp-instance
Cause	This event is generated when a received Ethernet Tag Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The Virtual Tunnel End Point for the received VXLAN Network Identifier is not programmed in the multicast flood list of bridge-table

## 15.7 evpnInclMcastRouteWithdrawDroppedDueToUnexpectedEthTag

Table 323: *evpnInclMcastRouteWithdrawDroppedDueToUnexpectedEthTag* properties

Property name	Value
Application name	evpn
Event name	evpnInclMcastRouteWithdrawDroppedDueToUnexpectedEthTag
Default severity	warning
Message format string	BGP-EVPN Inclusive Multicast route received with route-distinguisher <i>route-distinguisher</i> and originating IP <i>originating-ip-address</i> withdraw on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is dropped because the Ethernet Tag Identifier <i>received-ethernet-tag</i> received in the route, does not match locally configured Ethernet Tag Identifier <i>local-ethernet-tag</i> on the bgp-instance
Cause	This event is generated when a received Ethernet Tag Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The Virtual Tunnel End Point for the received VXLAN Network Identifier if programmed in the multicast flood list of bridge-table, might not be removed

## 15.8 evpnInclMcastRouteWithdrawnDueToUnexpectedVni

Table 324: *evpnInclMcastRouteWithdrawnDueToUnexpectedVni* properties

Property name	Value
Application name	evpn
Event name	evpnInclMcastRouteWithdrawnDueToUnexpectedVni
Default severity	warning
Message format string	BGP-EVPN Inclusive Multicast route received with route-distinguisher <i>route-distinguisher</i> and originating IP <i>originating-ip-address</i> on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is withdrawn because the VXLAN Network Identifier <i>received-vni</i> received in the route, does not match locally configured VXLAN Network Identifier <i>local-vni</i> on the bgp-instance
Cause	This event is generated when a received VXLAN Network Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The Virtual Tunnel End Point for the received VXLAN Network Identifier is not programmed in the multicast flood list of bridge-table

## 15.9 evpnIpPrefixRouteNotImportedDueToUnexpectedVni

Table 325: *evpnIpPrefixRouteNotImportedDueToUnexpectedVni* properties

Property name	Value
Application name	evpn
Event name	evpnIpPrefixRouteNotImportedDueToUnexpectedVni
Default severity	warning
Message format string	BGP-EVPN IP-PREFIX <i>ip-prefix</i> LENGTH <i>prefix-length</i> received with route-distinguisher <i>route-distinguisher</i> on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is not imported because the VXLAN Network Identifier <i>received-vni</i> received in the route, does not match the locally configured VXLAN Network Identifier on the bgp-instance
Cause	This event is generated when a received VXLAN Network Identifier does not match the one configured locally on the bgp-instance in the network instance

Property name	Value
Effect	The IP-Prefix is not programmed in the route-table

## 15.10 evpnIpPrefixRouteWithdrawnDueToNoGwMac

Table 326: *evpnIpPrefixRouteWithdrawnDueToNoGwMac* properties

Property name	Value
Application name	evpn
Event name	evpnIpPrefixRouteWithdrawnDueToNoGwMac
Default severity	warning
Message format string	BGP-EVPN IP-PREFIX <i>ip-prefix</i> LENGTH <i>prefix-length</i> received with route-distinguisher <i>route-distinguisher</i> on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is withdrawn because the route is received without a Gateway MAC Address and that is not allowed in an EVPN Interface-less bgp instance for VXLAN tunnels
Cause	This event is generated when a received IP Prefix route does not contain the required GW Mac and therefore it is not allowed in the local EVPN Interface-less bgp instance of the network-instance
Effect	The ip-prefix is not programmed in the route table of the network instance

## 15.11 evpnIpPrefixRouteWithdrawnDueToUnexpectedGwIp

Table 327: *evpnIpPrefixRouteWithdrawnDueToUnexpectedGwIp* properties

Property name	Value
Application name	evpn
Event name	evpnIpPrefixRouteWithdrawnDueToUnexpectedGwIp
Default severity	warning
Message format string	BGP-EVPN IP-PREFIX <i>ip-prefix</i> LENGTH <i>prefix-length</i> received with route-distinguisher <i>route-distinguisher</i> on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is withdrawn because the non-zero Gateway IP Address <i>gw-ip-address</i> received in the route is not allowed in an EVPN Interface-less bgp instance of the network-instance

Property name	Value
Cause	This event is generated when a received Gateway IP Address in the IP Prefix routes is non-zero and therefore not allowed in the local EVPN Interface-less bgp instance of the network-instance
Effect	The ip-prefix is not programmed in the route table of the network instance

## 15.12 evpnMacRouteAddDroppedDueToUnexpectedEthTag

Table 328: *evpnMacRouteAddDroppedDueToUnexpectedEthTag* properties

Property name	Value
Application name	evpn
Event name	evpnMacRouteAddDroppedDueToUnexpectedEthTag
Default severity	warning
Message format string	BGP-EVPN MAC <i>mac-address</i> IP <i>ip-address</i> received with route-distinguisher <i>route-distinguisher</i> add on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is dropped because the Ethernet Tag Identifier <i>received-ethernet-tag</i> received in the route, does not match locally configured Ethernet Tag Identifier <i>local-ethernet-tag</i> on the bgp-instance
Cause	This event is generated when a received Ethernet Tag Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The mac-address is not programmed in the bridge-table AND/OR the mac-address/ip-address pair is not programmed in the ARP or Neighbor discovery table

## 15.13 evpnMacRouteWithdrawDroppedDueToUnexpectedEthTag

Table 329: *evpnMacRouteWithdrawDroppedDueToUnexpectedEthTag* properties

Property name	Value
Application name	evpn
Event name	evpnMacRouteWithdrawDroppedDueToUnexpectedEthTag
Default severity	warning

Property name	Value
Message format string	BGP-EVPN MAC <i>mac-address</i> IP <i>ip-address</i> received with route-distinguisher <i>route-distinguisher</i> delete on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is dropped because the Ethernet Tag Identifier <i>received-ethernet-tag</i> received in the route, does not match locally configured Ethernet Tag Identifier <i>local-ethernet-tag</i> on the bgp-instance
Cause	This event is generated when a received Ethernet Tag Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The mac-address if programmed in the bridge-table AND/OR the mac-address/ip-address pair if programmed in the ARP or Neighbor discovery table, might not be removed

## 15.14 evpnMacRouteWithdrawnDueToUnexpectedVni

Table 330: *evpnMacRouteWithdrawnDueToUnexpectedVni* properties

Property name	Value
Application name	evpn
Event name	evpnMacRouteWithdrawnDueToUnexpectedVni
Default severity	warning
Message format string	BGP-EVPN MAC <i>mac-address</i> IP <i>ip-address</i> received with route-distinguisher <i>route-distinguisher</i> on network instance <i>network-instance</i> and bgp instance <i>bgp-instance</i> is withdrawn because the VXLAN Network Identifier <i>received-vni</i> received in the route, does not match locally configured VXLAN Network Identifier <i>local-vni</i> on the bgp-instance
Cause	This event is generated when a received VXLAN Network Identifier does not match the one configured locally on the bgp-instance in the network instance
Effect	The mac-address is not programmed in the bridge-table AND/OR the mac-address/ip-address pair is not programmed in the ARP or Neighbor discovery table

## 15.15 evpnVxlanAutoDiscoveryEviRouteWithdrawnDueToNextHopTypeMismatch

Table 331: *evpnVxlanAutoDiscoveryEviRouteWithdrawnDueToNextHopTypeMismatch* properties

Property name	Value
Application name	evpn
Event name	evpnVxlanAutoDiscoveryEviRouteWithdrawnDueToNextHopTypeMismatch
Default severity	warning
Message format string	BGP-EVPN Auto Discovery Evi route received with route-distinguisher <i>route-distinguisher</i> on network instance <i>network-instance</i> , bgp instance <i>bgp-instance</i> , ethernet segment identifier <i>ethernet-segment-id</i> and next-hop <i>next-hop</i> is withdrawn because the next-hop address type does not match the vxlan-interface egress source-ip address type used in the network-instance
Cause	This event is triggered when the next-hop type of a received Auto Discovery Evi route does not match the vxlan-interface egress source IP address type utilized in the network instance
Effect	The next-hop address is not programmed in the route table of the network instance

## 15.16 evpnVxlanIpPrefixRouteWithdrawnDueToNextHopTypeMismatch

Table 332: *evpnVxlanIpPrefixRouteWithdrawnDueToNextHopTypeMismatch* properties

Property name	Value
Application name	evpn
Event name	evpnVxlanIpPrefixRouteWithdrawnDueToNextHopTypeMismatch
Default severity	warning
Message format string	BGP-EVPN IP-PREFIX <i>ip-prefix</i> LENGTH <i>prefix-length</i> received with route-distinguisher <i>route-distinguisher</i> on network instance <i>network-instance</i> , bgp instance <i>bgp-instance</i> and next-hop <i>next-hop</i> is withdrawn because the next-hop address type does not match the vxlan-interface egress source-ip address type used in the network-instance

Property name	Value
Cause	This event is triggered when the next-hop type of a received IP Prefix route does not match the vxlan-interface egress source IP address type utilized in the network instance
Effect	The ip-prefix is not programmed in the route table of the network instance

## 15.17 evpnVxlanMacIpRouteWithdrawnDueToNextHopTypeMismatch

Table 333: *evpnVxlanMacIpRouteWithdrawnDueToNextHopTypeMismatch* properties

Property name	Value
Application name	evpn
Event name	evpnVxlanMacIpRouteWithdrawnDueToNextHopTypeMismatch
Default severity	warning
Message format string	BGP-EVPN MAC/IP route MAC <i>mac-address</i> IP <i>ip-address</i> received with route-distinguisher <i>route-distinguisher</i> on network instance <i>network-instance</i> , bgp instance <i>bgp-instance</i> and next-hop <i>next-hop</i> is withdrawn because the next-hop address type does not match the vxlan-interface egress source-ip address type used in the network-instance
Cause	This event is triggered when the next-hop type of a received MAC/IP route does not match the vxlan-interface egress source IP address type utilized in the network instance
Effect	The IP address is not programmed in the route table of the network instance



## 16 gnsi

### 16.1 gnsiAcctzSubscriptionEnd

Table 334: *gnsiAcctzSubscriptionEnd* properties

Property name	Value
Application name	gnsi
Event name	gnsiAcctzSubscriptionEnd
Default severity	informational
Message format string	Acctz subscription with starting point ' <i>timestamp</i> ' requested by <i>peer_address:peer_port</i> has finished.
Cause	Acctz subscription has finished based on the request from mentioned peer.
Effect	none.

### 16.2 gnsiAcctzSubscriptionRequestReceived

Table 335: *gnsiAcctzSubscriptionRequestReceived* properties

Property name	Value
Application name	gnsi
Event name	gnsiAcctzSubscriptionRequestReceived
Default severity	informational
Message format string	Acctz subscription request from peer <i>peer_address:peer_port</i> is received.
Cause	Acctz has received subscription request is received from the mentioned peer.
Effect	Server will process the request.

## 16.3 gnsiAcctzSubscriptionStart

Table 336: *gnsiAcctzSubscriptionStart* properties

Property name	Value
Application name	gnsi
Event name	gnsiAcctzSubscriptionStart
Default severity	informational
Message format string	Acctz subscription with starting timestamp ' <i>timestamp</i> ' requested by <i>peer_address:peer_port</i> has started.
Cause	Acctz subscription has started based on the request from mentioned peer.
Effect	none.

## 16.4 gnsiAuthzPolicyFinalized

Table 337: *gnsiAuthzPolicyFinalized* properties

Property name	Value
Application name	gnsi
Event name	gnsiAuthzPolicyFinalized
Default severity	informational
Message format string	Authz gRPC authorization policy has been finalized on version <i>version</i> created on <i>created_on</i>
Cause	Authz has received a request to rotate the gRPC authorization policy, and a subsequent request to finalize it.
Effect	Requests to all gRPC servers on the system will authorize using the new policy. Reboots of the system will use the new policy rather than reverting to the previous.

## 16.5 gnsiAuthzPolicyInvalid

Table 338: *gnsiAuthzPolicyInvalid* properties

Property name	Value
Application name	gnsi
Event name	gnsiAuthzPolicyInvalid
Default severity	critical
Message format string	Authz gRPC authorization policy with version <i>version</i> created on <i>created_on</i> failed to validate - policy content invalid. Previous policy remains active.
Cause	Authz has received a request to rotate the gRPC authorization policy, with policy content that is invalid.
Effect	Requests to all gRPC servers on the system will authorize using the previous policy.

## 16.6 gnsiAuthzPolicyNotFinalized

Table 339: *gnsiAuthzPolicyNotFinalized* properties

Property name	Value
Application name	gnsi
Event name	gnsiAuthzPolicyNotFinalized
Default severity	critical
Message format string	Authz gRPC authorization policy with version <i>version</i> created on <i>created_on</i> was not finalized by client. Reverting to previous policy.
Cause	Authz has received a request to rotate the gRPC authorization policy, but did not received a subsequent finalization before the RPC was terminated.
Effect	Requests to all gRPC servers on the system will authorize using the previous policy.

## 16.7 gnsiAuthzPolicyRotate

Table 340: *gnsiAuthzPolicyRotate* properties

Property name	Value
Application name	gnsi
Event name	gnsiAuthzPolicyRotate
Default severity	informational
Message format string	Authz gRPC authorization policy has been rotated to version <i>version</i> created on <i>created_on</i>
Cause	gNSI server has received a request to rotate the gRPC authorization policy.
Effect	Requests to all gRPC servers on the system will authorize using the new policy. If a request is not recieved to finalize the rotation, the system will revert to the previous policy.

## 16.8 gnsiCertzRotate

Table 341: *gnsiCertzRotate* properties

Property name	Value
Application name	gnsi
Event name	gnsiCertzRotate
Default severity	informational
Message format string	Certz <i>artifact_type</i> has been rotated to version <i>version</i> created on <i>created_on</i>
Cause	Certz has received a request to rotate the specified certificate or bundle.
Effect	All gRPC servers without explicitly configured TLS server profiles will use the certificate and bundles provided. If a request is not received to finalize the rotation, the system will revert to the previous certificate and/or bundle/s.

## 16.9 gnsiCertzRotateFinalized

Table 342: *gnsiCertzRotateFinalized* properties

Property name	Value
Application name	gnsi
Event name	gnsiCertzRotateFinalized
Default severity	informational
Message format string	Certz <i>artifact_type</i> has been finalized on version <i>version</i> created on <i>created_on</i>
Cause	Certz has received a request to rotate the certificate and/or bundle/s, and a subsequent request to finalize it.
Effect	All gRPC servers without explicitly configured TLS server profiles will use the certificate and/or bundle/s provided. Reboots of the system will use the profile rather than reverting to the previous.

## 16.10 gnsiCertzRotateInvalid

Table 343: *gnsiCertzRotateInvalid* properties

Property name	Value
Application name	gnsi
Event name	gnsiCertzRotateInvalid
Default severity	critical
Message format string	Certz <i>artifact_type</i> with version <i>version</i> created on <i>created_on</i> failed to rotate. Previous <i>artifact_type</i> remains active. Error: <i>error</i>
Cause	Certz has received a request to rotate a certificate and/or bundle/s, but the RPC has failed with the provided error.
Effect	All gRPC servers without explicitly configured TLS server profiles will revert to using the previous certificate and/or bundle/s provided.

## 16.11 gnsiCertzRotateNotFinalized

Table 344: *gnsiCertzRotateNotFinalized* properties

Property name	Value
Application name	gnsi
Event name	gnsiCertzRotateNotFinalized
Default severity	critical
Message format string	Certz <i>artifact_type</i> with version <i>version</i> created on <i>created_on</i> was not finalized by client. Reverting to previous.
Cause	Certz has received a request to rotate the a certificate and/or bundle/s, but did not received a subsequent finalization before the RPC was terminated.
Effect	All gRPC servers without explicitly configured TLS server profiles will revert to using the previous certificate and/or bundle/s provided.

## 16.12 gnsiCredentialzRotateAccountCredentials

Table 345: *gnsiCredentialzRotateAccountCredentials* properties

Property name	Value
Application name	gnsi
Event name	gnsiCredentialzRotateAccountCredentials
Default severity	informational
Message format string	Credentialz <i>artifact_type</i> for user <i>username</i> has been rotated to version <i>version</i> created on <i>created_on</i>
Cause	Credentialz has received a request to rotate the specified aaa user credentials.
Effect	System will use the aaa user credentials provided. If a request is not received to finalize the rotation, the system will revert to the previous aaa user credentials.

## 16.13 gnsiCredentialzRotateAccountCredentialsFinalized

Table 346: *gnsiCredentialzRotateAccountCredentialsFinalized* properties

Property name	Value
Application name	gnsi
Event name	gnsiCredentialzRotateAccountCredentialsFinalized
Default severity	informational
Message format string	Credentialz <i>artifact_type</i> for user <i>username</i> has been finalized on version <i>version</i> created on <i>created_on</i>
Cause	Credentialz has received a request to rotate aaa user credentials, and a subsequent request to finalize it.
Effect	System will use the aaa user credentials provided. Reboots of the system will use the aaa user credentials rather than reverting to the previous.

## 16.14 gnsiCredentialzRotateAccountCredentialsInvalid

Table 347: *gnsiCredentialzRotateAccountCredentialsInvalid* properties

Property name	Value
Application name	gnsi
Event name	gnsiCredentialzRotateAccountCredentialsInvalid
Default severity	critical
Message format string	Credentialz <i>artifact_type</i> for user <i>username</i> with version <i>version</i> created on <i>created_on</i> failed to rotate. Previous <i>artifact_type</i> remains active. Error: <i>error</i>
Cause	Credentialz has received a request to rotate aaa user credentials, but the RPC has failed with the provided error.
Effect	System will revert to using the previous aaa user credentials provided.

## 16.15 gnsiCredentialzRotateAccountCredentialsNotFinalized

Table 348: *gnsiCredentialzRotateAccountCredentialsNotFinalized* properties

Property name	Value
Application name	gnsi
Event name	gnsiCredentialzRotateAccountCredentialsNotFinalized
Default severity	critical
Message format string	Credentialz <i>artifact_type</i> for user <i>username</i> with version <i>version</i> created on <i>created_on</i> was not finalized by client. Reverting to previous.
Cause	Credentialz has received a request to rotate aaa user credentials, but did not received a subsequent finalization before the RPC was terminated.
Effect	System will revert to using the previous aaa user credentials provided.

## 16.16 gnsiCredentialzRotateHostParameters

Table 349: *gnsiCredentialzRotateHostParameters* properties

Property name	Value
Application name	gnsi
Event name	gnsiCredentialzRotateHostParameters
Default severity	informational
Message format string	Credentialz <i>artifact_type</i> has been rotated to version <i>version</i> created on <i>created_on</i>
Cause	Credentialz has received a request to rotate the specified ssh host parameters.
Effect	All ssh servers will use the ssh host parameters provided. If a request is not received to finalize the rotation, the system will revert to the previous ssh host parameters.



## 16.17 gnsiCredentialzRotateHostParametersFinalized

Table 350: *gnsiCredentialzRotateHostParametersFinalized* properties

Property name	Value
Application name	gnsi
Event name	gnsiCredentialzRotateHostParametersFinalized
Default severity	informational
Message format string	Credentialz <i>artifact_type</i> has been finalized on version <i>version</i> created on <i>created_on</i>
Cause	Credentialz has received a request to rotate ssh host parameters, and a subsequent request to finalize it.
Effect	All ssh servers will use the ssh host parameters provided. Reboots of the system will use the ssh host parameters rather than reverting to the previous.

## 16.18 gnsiCredentialzRotateHostParametersInvalid

Table 351: *gnsiCredentialzRotateHostParametersInvalid* properties

Property name	Value
Application name	gnsi
Event name	gnsiCredentialzRotateHostParametersInvalid
Default severity	critical
Message format string	Credentialz <i>artifact_type</i> with version <i>version</i> created on <i>created_on</i> failed to rotate. Previous <i>artifact_type</i> remains active. Error: <i>error</i>
Cause	Credentialz has received a request to rotate ssh host parameters, but the RPC has failed with the provided error.
Effect	All ssh servers will revert to using the previous ssh host parameters provided.

## 16.19 gnsiCredentialzRotateHostParametersNotFinalized

Table 352: *gnsiCredentialzRotateHostParametersNotFinalized* properties

Property name	Value
Application name	gnsi
Event name	gnsiCredentialzRotateHostParametersNotFinalized
Default severity	critical
Message format string	Credentialz <i>artifact_type</i> with version <i>version</i> created on <i>created_on</i> was not finalized by client. Reverting to previous.
Cause	Credentialz has received a request to rotate ssh host parameters, but did not received a subsequent finalization before the RPC was terminated.
Effect	All ssh servers will revert to using the previous ssh host parameters provided.

## 16.20 gnsiPathzPolicyFinalized

Table 353: *gnsiPathzPolicyFinalized* properties

Property name	Value
Application name	gnsi
Event name	gnsiPathzPolicyFinalized
Default severity	informational
Message format string	Pathz gRPC authorization policy has been finalized on version <i>version</i> created on <i>created_on</i>
Cause	Pathz has received a request to rotate the gRPC authorization policy, and a subsequent request to finalize it.
Effect	Requests to all gRPC servers on the system will authorize using the new policy. Reboots of the system will use the new policy rather than reverting to the previous.

## 16.21 gnsiPathzPolicyInvalid

Table 354: *gnsiPathzPolicyInvalid* properties

Property name	Value
Application name	gnsi
Event name	gnsiPathzPolicyInvalid
Default severity	critical
Message format string	Pathz gRPC authorization policy with version <i>version</i> created on <i>created_on</i> failed to validate - policy content invalid. Previous policy remains active.
Cause	Pathz has received a request to rotate the gRPC authorization policy, with policy content that is invalid.
Effect	Requests to all gRPC servers on the system will authorize using the previous policy.

## 16.22 gnsiPathzPolicyNotFinalized

Table 355: *gnsiPathzPolicyNotFinalized* properties

Property name	Value
Application name	gnsi
Event name	gnsiPathzPolicyNotFinalized
Default severity	critical
Message format string	Pathz gRPC authorization policy with version <i>version</i> created on <i>created_on</i> was not finalized by client. Reverting to previous policy.
Cause	Pathz has received a request to rotate the gRPC authorization policy, but did not received a subsequent finalization before the RPC was terminated.
Effect	Requests to all gRPC servers on the system will authorize using the previous policy.

## 16.23 gnsiPathzPolicyRotate

Table 356: *gnsiPathzPolicyRotate* properties

Property name	Value
Application name	gnsi
Event name	gnsiPathzPolicyRotate
Default severity	informational
Message format string	Pathz gRPC authorization policy has been rotated to version <i>version</i> created on <i>created_on</i>
Cause	gNSI server has received a request to rotate the gRPC authorization policy.
Effect	Requests to all gRPC servers on the system will authorize using the new policy. If a request is not recieved to finalize the rotation, the system will revert to the previous policy.

## 17 grpc

### 17.1 configUpdate

Table 357: configUpdate properties

Property name	Value
Application name	grpc
Event name	configUpdate
Default severity	informational
Message format string	gRPC server <i>name</i> configuration updated.
Cause	A configuration change has been made in the mentioned grpc server, resulting in gRPC server configuration being regenerated.
Effect	May result in gRPC server start or stop depending on the configuration change.

### 17.2 grpcServerStart

Table 358: grpcServerStart properties

Property name	Value
Application name	grpc
Event name	grpcServerStart
Default severity	informational
Message format string	gRPC server <i>name</i> started for network instance <i>network_instance</i> source address <i>source_address</i> port number <i>grpc_socket</i> .
Cause	gRPC server has started for the mentioned network instance, source address and port number.
Effect	gRPC server is ready to receive and process requests for the mentioned network instance, source address and port number.

## 17.3 grpcServerStop

Table 359: *grpcServerStop* properties

Property name	Value
Application name	grpc
Event name	grpcServerStop
Default severity	informational
Message format string	gRPC server <i>name</i> stopped for network <i>network_instance</i> source address <i>source_address</i> port number <i>grpc_socket</i> .
Cause	gRPC server has stopped for the mentioned network instance, source address and port number.
Effect	gRPC server is not ready to receive and process requests for the mentioned network instance, source address and port number.

## 17.4 subscriptionEnd

Table 360: *subscriptionEnd* properties

Property name	Value
Application name	grpc
Event name	subscriptionEnd
Default severity	informational
Message format string	Subscription for path(s) <i>paths</i> requested by <i>peer_address:socket</i> has finished.
Cause	A subscription has finished based on the request from mentioned peer.
Effect	none.

## 17.5 subscriptionRequestReceived

Table 361: *subscriptionRequestReceived* properties

Property name	Value
Application name	grpc

Property name	Value
Event name	subscriptionRequestReceived
Default severity	informational
Message format string	Subscription request from peer <i>peer_address:socket</i> is received.
Cause	A subscription request is received from the mentioned peer.
Effect	gRPC server will process the request.

## 17.6 subscriptionStart

Table 362: *subscriptionStart* properties

Property name	Value
Application name	grpc
Event name	subscriptionStart
Default severity	informational
Message format string	Subscription for path(s) <i>paths</i> requested by <i>peer_address:socket</i> has started.
Cause	A subscription has started based on the request from mentioned peer.
Effect	none.

## 17.7 unixSocketGrpcOperDown

Table 363: *unixSocketGrpcOperDown* properties

Property name	Value
Application name	grpc
Event name	unixSocketGrpcOperDown
Default severity	critical
Message format string	Unix domain socket of gRPC server <i>name</i> is no longer operational.
Cause	The Unix domain socket of gRPC server has transitioned from any other operational state to the down state.
Effect	Unix domain socket of gRPC server is now down.



## 17.8 unixSocketGrpcOperUp

Table 364: *unixSocketGrpcOperUp* properties

Property name	Value
Application name	grpc
Event name	unixSocketGrpcOperUp
Default severity	warning
Message format string	Unix domain socket of gRPC server <i>name</i> is operational.
Cause	The Unix domain socket of gRPC server has transitioned from any other operational state to the up state.
Effect	Unix domain socket of gRPC server is now up.



## 18 igmp

### 18.1 igmpCModeRxQueryVersionMismatch

Table 365: *igmpCModeRxQueryVersionMismatch* properties

Property name	Value
Application name	igmp
Event name	igmpCModeRxQueryVersionMismatch
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - Mismatch between the interface <i>subinterface</i> compatible mode( <i>igmpInterfaceOperVersion</i> ) and the version of the IGMP query (version <i>igmpQuerierVersion</i> ) received on the interface.
Cause	This event is generated when the IGMP interface receives a query with a version that is higher than the interface's compatible mode.
Effect	IGMP interfaces will ignore any Queries with a version higher than the interface's compatibility mode.

### 18.2 igmpMaxNumberOfGroupSourcesReached

Table 366: *igmpMaxNumberOfGroupSourcesReached* properties

Property name	Value
Application name	igmp
Event name	igmpMaxNumberOfGroupSourcesReached
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - The number of group/source combinations learned on interface <i>subinterface</i> has exceeded the maximum limit of <i>igmpInterfaceMaxGroupSources</i> .
Cause	This event is generated when an attempt is made to learn a source when the number of group/source combinations on the IGMP interface is equal to the maximum number of group-sources configured on the interface.

Property name	Value
Effect	IGMP interfaces will not learn any new sources for a given group when the configured maximum number of group-sources has been reached.

## 18.3 igmpMaxNumberOfGroupsReached

Table 367: *igmpMaxNumberOfGroupsReached* properties

Property name	Value
Application name	igmp
Event name	igmpMaxNumberOfGroupsReached
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - The number of groups learned on interface <i>subinterface</i> has exceeded the maximum limit of <i>igmp InterfaceMaxGroups</i> .
Cause	This event is generated when an attempt is made to learn a group when the number of groups on the IGMP interface is equal to the maximum number of groups configured on the interface.
Effect	IGMP interfaces will not learn any new groups when the configured maximum number of groups has been reached.

## 18.4 igmpMaxNumberOfSourcesReached

Table 368: *igmpMaxNumberOfSourcesReached* properties

Property name	Value
Application name	igmp
Event name	igmpMaxNumberOfSourcesReached
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - The number of sources learned on interface <i>subinterface</i> has exceeded the maximum limit of <i>igmp InterfaceMaxSources</i> .
Cause	This event is generated when an attempt is made to learn a source when the number of sources for this group on the IGMP interface is equal to the maximum number of sources per group configured on the interface.

Property name	Value
Effect	IGMP interfaces will not learn any new sources for a given group when the configured maximum number of sources for the group has been reached.

## 18.5 igmpRxQueryVersionMismatch

Table 369: *igmpRxQueryVersionMismatch* properties

Property name	Value
Application name	igmp
Event name	igmpRxQueryVersionMismatch
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - IGMPv <i>igmpQuerierVersion</i> query received on interface <i>subinterface</i> configured as IGMPv <i>igmpInterfaceAdminVersion</i> .
Cause	This event is generated when the IGMP interface is configured as IGMPv3 and receives an IGMPv1 Query or IGMPv2 General Query.
Effect	IGMP interfaces configured as IGMPv3 will ignore IGMPv1 and IGMPv2 General Queries.

## 19 isis

### 19.1 isisAdjacencyBfdSessionSetupFailed

Table 370: *isisAdjacencyBfdSessionSetupFailed* properties

Property name	Value
Application name	isis
Event name	isisAdjacencyBfdSessionSetupFailed
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , BFD session setup failed for the <i>level</i> IS-IS adjacency with system <i>sys_id</i> , using interface <i>subinterface</i> . Failure reason: <i>bfd_failure_reason</i> .
Cause	This event is generated when BFD session setup fails with an adjacent neighbor.
Effect	Fast failure detection may not be possible.

### 19.2 isisAdjacencyChange

Table 371: *isisAdjacencyChange* properties

Property name	Value
Application name	isis
Event name	isisAdjacencyChange
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , the <i>level</i> IS-IS adjacency with system <i>sys_id</i> , using interface <i>subinterface</i> , moved to state <i>adj_state</i> .
Cause	This event is generated when an IS-IS adjacency enters or leaves the up state.
Effect	IS-IS traffic can only be forwarded along adjacencies that are up.

## 19.3 isisAdjacencyRestartStatusChange

Table 372: *isisAdjacencyRestartStatusChange* properties

Property name	Value
Application name	isis
Event name	isisAdjacencyRestartStatusChange
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , the graceful restart status for the <i>level</i> IS-IS adjacency on interface <i>subinterface</i> moved to new state <i>restart_status</i> .
Cause	This event is generated when the graceful restart status of a neighbor changes.
Effect	None

## 19.4 isisAreaMismatch

Table 373: *isisAreaMismatch* properties

Property name	Value
Application name	isis
Event name	isisAreaMismatch
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , a level1 PDU was received on interface <i>subinterface</i> with no Area Addresses matching the areas to which this IS router belongs. The PDU starts with: <i>pdu_fragment</i>
Cause	This event is generated to alert of a possible area-id misconfiguration inside a L1 area.
Effect	L1 adjacency cannot form

## 19.5 isisAuthDataFail

Table 374: *isisAuthDataFail* properties

Property name	Value
Application name	isis
Event name	isisAuthDataFail
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , a <i>level</i> PDU was received on interface <i>subinterface</i> with unexpected or incorrect data in the Authentication TLV. The PDU starts with: <i>pdu_fragment</i>
Cause	This event could be caused by incorrect keychain configuration in this router or its neighbor.
Effect	PDU's are dropped, with the effect depending on the PDU type

## 19.6 isisAuthTypeMismatch

Table 375: *isisAuthTypeMismatch* properties

Property name	Value
Application name	isis
Event name	isisAuthTypeMismatch
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , a <i>level</i> PDU was received on interface <i>subinterface</i> with an unrecognized or unsupported authentication type in TLV 10. The PDU starts with: <i>pdu_fragment</i>
Cause	This event could be caused by incorrect keychain configuration in this router or its neighbor.
Effect	PDU's are dropped, with the effect depending on the PDU type

## 19.7 isisCircuitIdsExhausted

Table 376: *isisCircuitIdsExhausted* properties

Property name	Value
Application name	isis
Event name	isisCircuitIdsExhausted
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , the IS-IS interface <i>subinterface</i> is operationally down because the limit of 255 circuit IDs available to LAN interfaces was reached.
Cause	This event is caused by having too many LAN interfaces.
Effect	LAN adjacencies are not formed

## 19.8 isisCircuitMtuTooLow

Table 377: *isisCircuitMtuTooLow* properties

Property name	Value
Application name	isis
Event name	isisCircuitMtuTooLow
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , a <i>level</i> LSP PDU or SNP PDU could not be transmitted on interface <i>subinterface</i> because the IP MTU is only <i>operational_subif_mtu</i> and an MTU of at least <i>required_mtu</i> is required.
Cause	The port MTU is too small and/or the lsp-mtu-size is too large.
Effect	PDUs are dropped

## 19.9 isisCorruptedLspDetected

Table 378: *isisCorruptedLspDetected* properties

Property name	Value
Application name	isis
Event name	isisCorruptedLspDetected
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , the LSP PDU with ID <i>lsp_id</i> in the <i>level</i> database has become corrupted.
Cause	Memory corruption or other.
Effect	LSP is removed

## 19.10 isisLdpSyncExited

Table 379: *isisLdpSyncExited* properties

Property name	Value
Application name	isis
Event name	isisLdpSyncExited
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , the LDP synchronization state has ended on IS-IS interface <i>subinterface</i> , and now the state is <i>sync_state</i>
Cause	The LDP synchronization timer can be stopped because of a tools command, hold-down timer expiry or indication from the LDP peer that End-of-LIB has been received. When LDP sync is exited IS-IS resumes advertising a normal metric for the interface.
Effect	Transit traffic can start using this interface again.



## 19.11 isisLdpSyncTimerStarted

Table 380: *isisLdpSyncTimerStarted* properties

Property name	Value
Application name	isis
Event name	isisLdpSyncTimerStarted
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , the LDP synchronization timer has started on IS-IS interface <i>subinterface</i>
Cause	The sync timer is started when LDP synchronization is configured and the LDP adjacency comes up with the LDP peer. When this timer expires IS-IS will resume advertisement of a normal metric for the interface.
Effect	Transit traffic will continue to avoid using this interface.

## 19.12 isisLspFragmentTooLarge

Table 381: *isisLspFragmentTooLarge* properties

Property name	Value
Application name	isis
Event name	isisLspFragmentTooLarge
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , the <i>level</i> LSP PDU fragment <i>lsp_id</i> received on interface <i>subinterface</i> could not be accepted because the configured LSP MTU size is too small. An LSP MTU size of at least <i>required_lsp_mtu</i> bytes is required.
Cause	Misconfiguration of LSP MTU size
Effect	LSP PDU is not accepted

## 19.13 isisLspPurge

Table 382: isisLspPurge properties

Property name	Value
Application name	isis
Event name	isisLspPurge
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , the LSP PDU with ID <i>lsp_id</i> in the <i>level</i> database has been purged by <i>purge_originator</i> .
Cause	LSP lifetime expired or other reason
Effect	The PDU is removed

## 19.14 isisLspSequenceNumberSkip

Table 383: isisLspSequenceNumberSkip properties

Property name	Value
Application name	isis
Event name	isisLspSequenceNumberSkip
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , the LSP with id <i>lsp_id</i> in the <i>level</i> database was re-originated with a sequence number that incremented by more than one.
Cause	There may be another IS router configured with the same system ID.
Effect	None

## 19.15 isisMaxAreaAddressesMismatch

Table 384: isisMaxAreaAddressesMismatch properties

Property name	Value
Application name	isis

Property name	Value
Event name	isisMaxAreaAddressesMismatch
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , a <i>level</i> PDU was received on interface <i>subinterface</i> with an unexpected Max Area Addresses value in the IS-IS PDU header. The PDU starts with: <i>pdu_fragment</i>
Cause	Misconfiguration of max area addresses in the neighbor
Effect	The PDU is dropped

## 19.16 isisMaxLspSequenceNumberExceeded

Table 385: *isisMaxLspSequenceNumberExceeded* properties

Property name	Value
Application name	isis
Event name	isisMaxLspSequenceNumberExceeded
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , the LSP with id <i>lsp_id</i> in the <i>level</i> database was purged because the sequence number was already at its maximum value and could not be incremented.
Cause	A possible cause could be that the same system-id is configured on multiple systems; when 2 systems have the same system-id they both keep incrementing the LSP sequence number, causing the sequence counter to rollover.
Effect	The PDU is purged and reachability may be temporarily lost

## 19.17 isisOverloadEntry

Table 386: *isisOverloadEntry* properties

Property name	Value
Application name	isis
Event name	isisOverloadEntry
Default severity	warning

Property name	Value
Message format string	In the IS-IS instance of network-instance <i>network_instance</i> , the <i>level</i> database has entered the overload state.
Cause	Overload bit configuration
Effect	No transit traffic is routed through the overloaded router.

## 19.18 isisOverloadExit

Table 387: *isisOverloadExit* properties

Property name	Value
Application name	isis
Event name	isisOverloadExit
Default severity	warning
Message format string	In the IS-IS instance of network-instance <i>network_instance</i> , the <i>level</i> database has exited from the overload state.
Cause	Overload bit configuration
Effect	Transit traffic can again be routed through the router.

## 19.19 isisOwnLspPurge

Table 388: *isisOwnLspPurge* properties

Property name	Value
Application name	isis
Event name	isisOwnLspPurge
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , a <i>level</i> LSP PDU was received with the system ID of this IS router and age equal to zero. The purge originator was <i>purge_originator</i> .
Cause	LSP lifetime expired or other reason
Effect	The PDU is removed

## 19.20 isisSystemIdLengthMismatch

Table 389: *isisSystemIdLengthMismatch* properties

Property name	Value
Application name	isis
Event name	isisSystemIdLengthMismatch
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , a <i>level</i> PDU was received on interface <i>subinterface</i> with an unexpected System ID length in the IS-IS PDU header. The PDU starts with: <i>pdu_fragment</i>
Cause	Misconfiguration of system ID length in the neighbor
Effect	The PDU is dropped

## 19.21 isisVersionMismatch

Table 390: *isisVersionMismatch* properties

Property name	Value
Application name	isis
Event name	isisVersionMismatch
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , a <i>level</i> PDU was received on interface <i>subinterface</i> with an IS-IS protocol version not matching the expected value. The PDU starts with: <i>pdu_fragment</i>
Cause	Unsupported IS-IS version
Effect	PDUs cannot be exchanged

## 20 json

### 20.1 authenticationError

Table 391: authenticationError properties

Property name	Value
Application name	json
Event name	authenticationError
Default severity	informational
Message format string	No valid spiffe-id or username/password received, authentication needed
Cause	A user has failed to authenticate.
Effect	That user can't establish a configuration session.

### 20.2 authenticationErrorSpiffe

Table 392: authenticationErrorSpiffe properties

Property name	Value
Application name	json
Event name	authenticationErrorSpiffe
Default severity	informational
Message format string	No valid spiffe-id received, username/password authentication disabled
Cause	A user has failed to authenticate.
Effect	That user can't establish a configuration session.

## 20.3 globalConfigUpdate

Table 393: *globalConfigUpdate* properties

Property name	Value
Application name	json
Event name	globalConfigUpdate
Default severity	informational
Message format string	JSON RPC server global configuration updated.
Cause	A global configuration change has been made, resulting in json rpc configuration being regenerated.
Effect	May result in json rpc process(es) start or stop depending on the configuration change.

## 20.4 httpJsonRpcOperDown

Table 394: *httpJsonRpcOperDown* properties

Property name	Value
Application name	json
Event name	httpJsonRpcOperDown
Default severity	critical
Message format string	HTTP JSON RPC server for network instance <i>network_instance</i> is no longer operational.
Cause	The httpJsonRpcOperDown event is generated when HTTP JSON RPC server on the mentioned network instance has transitioned from any other operational state to the down state.
Effect	HTTP JSON RPC server on the mentioned network instance is now down.

## 20.5 httpJsonRpcOperUp

Table 395: httpJsonRpcOperUp properties

Property name	Value
Application name	json
Event name	httpJsonRpcOperUp
Default severity	warning
Message format string	HTTP JSON RPC server for network instance <i>network_instance</i> is operational.
Cause	The httpJsonRpcOperUp event is generated when HTTP JSON RPC server on the mentioned network instance has transitioned from any other operational state to the up state.
Effect	HTTP JSON RPC server on the mentioned network instance is now up.

## 20.6 httpsJsonRpcOperDown

Table 396: httpsJsonRpcOperDown properties

Property name	Value
Application name	json
Event name	httpsJsonRpcOperDown
Default severity	critical
Message format string	HTTPS JSON RPC server for network instance <i>network_instance</i> is no longer operational.
Cause	The httpsJsonRpcOperDown event is generated when HTTPs JSON RPC server on the mentioned network instance has transitioned from any other operational state to the down state.
Effect	HTTPS JSON RPC server on the mentioned network instance is now down.



## 20.7 httpsJsonRpcOperUp

Table 397: *httpsJsonRpcOperUp* properties

Property name	Value
Application name	json
Event name	httpsJsonRpcOperUp
Default severity	warning
Message format string	HTTPS JSON RPC server for network instance <i>network_instance</i> is operational.
Cause	The httpsJsonRpcOperUp event is generated when HTTPs JSON RPC server on the mentioned network instance has transitioned from any other operational state to the up state.
Effect	HTTPS JSON RPC server on the mentioned network instance is now up.

## 20.8 jsonRpcRequestReceived

Table 398: *jsonRpcRequestReceived* properties

Property name	Value
Application name	json
Event name	jsonRpcRequestReceived
Default severity	informational
Message format string	Request received for session id <i>session_id</i> username <i>username</i> .
Cause	A JSON RPC Request is received.
Effect	JSON RPC server processes That Request.

## 20.9 jsonRpcResponseSent

Table 399: *jsonRpcResponseSent* properties

Property name	Value
Application name	json

Property name	Value
Event name	jsonRpcResponseSent
Default severity	informational
Message format string	Response sent for session id <i>session_id</i> username <i>username</i> .
Cause	A JSON RPC Response is sent.
Effect	none.

## 20.10 networkInstanceConfigUpdate

Table 400: networkInstanceConfigUpdate properties

Property name	Value
Application name	json
Event name	networkInstanceConfigUpdate
Default severity	informational
Message format string	JSON RPC server network instance <i>network_instance</i> configuration updated.
Cause	A configuration change has been made in the mentioned network instance, resulting in json rpc configuration being regenerated.
Effect	May result in json rpc process(es) start or stop depending on the configuration change.

## 20.11 unixSocketJsonRpcOperDown

Table 401: unixSocketJsonRpcOperDown properties

Property name	Value
Application name	json
Event name	unixSocketJsonRpcOperDown
Default severity	critical
Message format string	Unix Domain Socket JSON RPC server is no longer operational.
Cause	The Unix Domain Socket JSON RPC server has transitioned from any other operational state to the down state.

Property name	Value
Effect	Unix Domain Socket JSON RPC server is now down.

## 20.12 unixSocketJsonRpcOperUp

Table 402: *unixSocketJsonRpcOperUp* properties

Property name	Value
Application name	json
Event name	unixSocketJsonRpcOperUp
Default severity	warning
Message format string	Unix Domain Socket JSON RPC server is operational.
Cause	The Unix Domain Socket JSON RPC server has transitioned from any other operational state to the up state.
Effect	Unix Domain Socket JSON RPC server is now up.

## 20.13 userAuthenticated

Table 403: *userAuthenticated* properties

Property name	Value
Application name	json
Event name	userAuthenticated
Default severity	informational
Message format string	User <i>username</i> authenticated.
Cause	A user has been successfully authenticated.
Effect	That user is ready to start a configuration session.

## 20.14 userAuthenticationErrorWrongPassword

Table 404: userAuthenticationErrorWrongPassword properties

Property name	Value
Application name	json
Event name	userAuthenticationErrorWrongPassword
Default severity	informational
Message format string	User <i>username</i> authentication failure, invalid username or password.
Cause	A user has failed to authenticate.
Effect	That user can't establish a configuration session.

## 20.15 userAuthenticationErrorWrongSpiffeld

Table 405: userAuthenticationErrorWrongSpiffeld properties

Property name	Value
Application name	json
Event name	userAuthenticationErrorWrongSpiffeld
Default severity	informational
Message format string	User authentication failure, invalid client certificate spiffe-id <i>spiffe_id</i> .
Cause	A user has failed to authenticate.
Effect	That user can't establish a configuration session.

## 21 lag

### 21.1 lagDown

Table 406: lagDown properties

Property name	Value
Application name	lag
Event name	lagDown
Default severity	warning
Message format string	LAG Interface <i>interface_name</i> : The operational state has transitioned to Down
Cause	This warning is generated when a LAG transitions to the down state.
Effect	The LAG is now down and any associated subinterfaces will also be brought down.

### 21.2 lagDownMinLinks

Table 407: lagDownMinLinks properties

Property name	Value
Application name	lag
Event name	lagDownMinLinks
Default severity	warning
Message format string	LAG Interface <i>interface_name</i> : The active number of member links has fallen below the min-links threshold
Cause	This warning is generated when a LAG transitions to the down state because the number of active links has dropped below the min-link threshold
Effect	The LAG is now down and any associated subinterfaces will also be brought down.

## 21.3 lagMemberLinkAdded

Table 408: lagMemberLinkAdded properties

Property name	Value
Application name	lag
Event name	lagMemberLinkAdded
Default severity	notice
Message format string	LAG Interface <i>interface_name</i> : The member-link <i>member-interface</i> has been added
Cause	This notification is generated when a new member-link is added to a LAG.
Effect	A new member link is now available to the LAG bundle.

## 21.4 lagMemberLinkRemoved

Table 409: lagMemberLinkRemoved properties

Property name	Value
Application name	lag
Event name	lagMemberLinkRemoved
Default severity	notice
Message format string	LAG Interface <i>interface_name</i> : The member-link <i>member-interface</i> has been removed
Cause	This notification is generated when a new member-link is removed from a LAG.
Effect	The specified interfaces is no longer a member of the LAG bundle.

## 21.5 lagMemberOperDown

Table 410: lagMemberOperDown properties

Property name	Value
Application name	lag

Property name	Value
Event name	lagMemberOperDown
Default severity	warning
Message format string	LAG Interface <i>interface_name</i> : The member-link <i>member-interface</i> operational state has transitioned to Down
Cause	This notification is generated when a member-link transitions to the down state.
Effect	The member link is now down and will not forward traffic.

## 21.6 lagMemberOperUp

Table 411: lagMemberOperUp properties

Property name	Value
Application name	lag
Event name	lagMemberOperUp
Default severity	warning
Message format string	LAG Interface <i>interface_name</i> : The member-link <i>member-interface</i> operational state has transitioned to Up
Cause	This notification is generated when a member-link transitions to the up state.
Effect	The member link is now operational.

## 21.7 lagUp

Table 412: lagUp properties

Property name	Value
Application name	lag
Event name	lagUp
Default severity	notice
Message format string	LAG Interface <i>interface_name</i> : The operational state has transitioned to Up

---

Property name	Value
Cause	This notification is generated when a LAG transitions to the up state.
Effect	The LAG is now operational.



## 22 ldp

### 22.1 Idplpv4InstanceDown

Table 413: *Idplpv4InstanceDown* properties

Property name	Value
Application name	ldp
Event name	Idplpv4InstanceDown
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , LDP-IPv4 has changed oper-state to DOWN. The reason is <i>oper_down_reason</i>
Cause	This event is generated when LDP ceases to becomes functional for IPv4 adjacencies, FECs and addresses.
Effect	LDP cannot form IPv4 adjacencies and sessions with other such routers.

### 22.2 Idplpv4InstanceUp

Table 414: *Idplpv4InstanceUp* properties

Property name	Value
Application name	ldp
Event name	Idplpv4InstanceUp
Default severity	informational
Message format string	In network-instance <i>network_instance</i> , LDP-IPv4 is now up and functional.
Cause	This event is generated when LDP becomes functional for IPv4 adjacencies, FECs and addresses.
Effect	LDP can form IPv4 adjacencies and sessions with other such routers reachable through LDP interfaces that are operational.

## 22.3 IdpIPv4InterfaceDown

Table 415: *IdpIPv4InterfaceDown* properties

Property name	Value
Application name	ldp
Event name	ldpIPv4InterfaceDown
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , LDP has changed oper-state to DOWN on the following IPv4 interface <i>subinterface</i> . The reason is <i>oper_down_reason</i>
Cause	This event is generated when LDP ceases to be functional on a subinterface.
Effect	LDP drops its adjacencies and sessions with other routers reachable through this subinterface.

## 22.4 IdpIPv4InterfaceUp

Table 416: *IdpIPv4InterfaceUp* properties

Property name	Value
Application name	ldp
Event name	ldpIPv4InterfaceUp
Default severity	informational
Message format string	In network-instance <i>network_instance</i> , LDP is now up and functional on the following IPv4 interface <i>subinterface</i> .
Cause	This event is generated when LDP becomes functional on a subinterface.
Effect	LDP can form adjacencies and sessions with other routers reachable through this subinterface.

## 22.5 IdpIPv4TargetDown

Table 417: IdpIPv4TargetDown properties

Property name	Value
Application name	ldp
Event name	ldpIPv4TargetDown
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , LDP target peer <i>target</i> has changed oper-state to DOWN. The reason is <i>oper_down_reason</i>
Cause	This event is generated when LDP ceases to be functional on a target.
Effect	LDP drops its adjacencies and sessions with other routers reachable through this target.

## 22.6 IdpIPv4TargetUp

Table 418: IdpIPv4TargetUp properties

Property name	Value
Application name	ldp
Event name	ldpIPv4TargetUp
Default severity	informational
Message format string	In network-instance <i>network_instance</i> , LDP target peer <i>target</i> state is now in service.
Cause	This event is generated when LDP becomes functional on a target.
Effect	LDP can form adjacencies and sessions with other routers reachable through this target.

## 22.7 Idplpv6InstanceDown

Table 419: Idplpv6InstanceDown properties

Property name	Value
Application name	ldp

Property name	Value
Event name	ldplpv6InstanceDown
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , LDP-IPv6 has changed oper-state to DOWN. The reason is <i>oper_down_reason</i>
Cause	This event is generated when LDP ceases to becomes functional for IPv6 adjacencies, FECs and addresses.
Effect	LDP cannot form IPv6 adjacencies and sessions with other such routers.

## 22.8 ldplpv6InstanceUp

Table 420: ldplpv6InstanceUp properties

Property name	Value
Application name	ldp
Event name	ldplpv6InstanceUp
Default severity	informational
Message format string	In network-instance <i>network_instance</i> , LDP-IPv6 is now up and functional.
Cause	This event is generated when LDP becomes functional for IPv6 adjacencies, FECs and addresses.
Effect	LDP can form IPv6 adjacencies and sessions with other such routers reachable through LDP interfaces that are operational.

## 22.9 ldpIPv6InterfaceDown

Table 421: ldpIPv6InterfaceDown properties

Property name	Value
Application name	ldp
Event name	ldpIPv6InterfaceDown
Default severity	warning

Property name	Value
Message format string	In network-instance <i>network_instance</i> , LDP has changed oper-state to DOWN on the following IPv6 interface <i>subinterface</i> . The reason is <i>oper_down_reason</i>
Cause	This event is generated when LDP ceases to be functional on a subinterface.
Effect	LDP drops its adjacencies and sessions with other routers reachable through this subinterface.

## 22.10 IdpIPv6InterfaceUp

Table 422: *IdpIPv6InterfaceUp* properties

Property name	Value
Application name	ldp
Event name	IdpIPv6InterfaceUp
Default severity	informational
Message format string	In network-instance <i>network_instance</i> , LDP is now up and functional on the following IPv6 interface <i>subinterface</i> .
Cause	This event is generated when LDP becomes functional on a subinterface.
Effect	LDP can form adjacencies and sessions with other routers reachable through this subinterface.

## 22.11 IdpIPv6TargetDown

Table 423: *IdpIPv6TargetDown* properties

Property name	Value
Application name	ldp
Event name	IdpIPv6TargetDown
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , LDP target peer <i>target</i> has changed oper-state to DOWN. The reason is <i>oper_down_reason</i>
Cause	This event is generated when LDP ceases to be functional on a target.

Property name	Value
Effect	LDP drops its adjacencies and sessions with other routers reachable through this target.

## 22.12 IdpIPv6TargetUp

Table 424: IdpIPv6TargetUp properties

Property name	Value
Application name	Idp
Event name	IdpIPv6TargetUp
Default severity	informational
Message format string	In network-instance <i>network_instance</i> , LDP target peer <i>target</i> state is now in service.
Cause	This event is generated when LDP becomes functional on a target.
Effect	LDP can form adjacencies and sessions with other routers reachable through this target.

## 22.13 IdpSessionDown

Table 425: IdpSessionDown properties

Property name	Value
Application name	Idp
Event name	IdpSessionDown
Default severity	warning
Message format string	In network-instance <i>network_instance</i> , the LDP session with peer <i>peer_ldp_id</i> has changed to non-existent.
Cause	This event is generated when an LDP session transitions into the non-existent state from a higher state.
Effect	LDP immediately deletes FEC-label and address bindings received from this peer.

## 22.14 IdpSessionFecLimitReached

Table 426: *IdpSessionFecLimitReached* properties

Property name	Value
Application name	Idp
Event name	IdpSessionFecLimitReached
Default severity	warning
Message format string	The number of FECs received from the LDP peer <i>peer_ldp_id</i> has reached the configured limit of <i>fec_limit</i> .
Cause	The number of FECs accepted from the peer has reached the configured limit. If the number of FECs go below the limit and again start to increase and hit the limit a second time, a new event is generated if 2 or more minutes have elapsed since the previous event. If the FEC limit is changed and the current number of FECs is equal to or higher than the limit then the event is generated immediately.
Effect	If the peer supports the overload capability then the session will go into overload. If the peer doesn't support the overload capability then excess FECs will trigger the sending of label release messages back to the peer.

## 22.15 IdpSessionLocalIPv4Overload

Table 427: *IdpSessionLocalIPv4Overload* properties

Property name	Value
Application name	Idp
Event name	IdpSessionLocalIPv4Overload
Default severity	warning
Message format string	The LDP session with peer <i>peer_ldp_id</i> has entered overload state for IPv4 FECs because this router sent an overload TLV to the peer.
Cause	The local router has received too many IPv4 FECs.
Effect	The local router is requesting the peer to stop sending further IPv4 FECs.

## 22.16 ldpSessionLocalIPv4OverloadCleared

Table 428: ldpSessionLocalIPv4OverloadCleared properties

Property name	Value
Application name	ldp
Event name	ldpSessionLocalIPv4OverloadCleared
Default severity	notice
Message format string	The LDP session with peer <i>peer_ldp_id</i> has exited overload state for IPv4 FECs because this router cleared the overload TLV to the peer.
Cause	The local router has cleared overload state.
Effect	The local router cleared the peer to continue sending further IPv4 FECs.

## 22.17 ldpSessionLocalIPv6Overload

Table 429: ldpSessionLocalIPv6Overload properties

Property name	Value
Application name	ldp
Event name	ldpSessionLocalIPv6Overload
Default severity	warning
Message format string	The LDP session with peer <i>peer_ldp_id</i> has entered overload for IPv6 FECs because this router sent an overload TLV to the peer.
Cause	The local router has received too many IPv6 FECs.
Effect	The local router is requesting the peer to stop sending further IPv6 FECs.

## 22.18 ldpSessionLocalIPv6OverloadCleared

Table 430: ldpSessionLocalIPv6OverloadCleared properties

Property name	Value
Application name	ldp



Property name	Value
Event name	IdpSessionLocalIPv6OverloadCleared
Default severity	notice
Message format string	The LDP session with peer <i>peer_idp_id</i> has exited overload state for IPv6 FECs because this router cleared the overload TLV to the peer.
Cause	The local router has cleared overload state.
Effect	The local router cleared the peer to continue sending further IPv6 FECs.

## 22.19 IdpSessionPeerIPv4Overload

Table 431: *IdpSessionPeerIPv4Overload* properties

Property name	Value
Application name	Idp
Event name	IdpSessionPeerIPv4Overload
Default severity	warning
Message format string	The LDP session with peer <i>peer_idp_id</i> has entered overload state for IPv4 FECs because the peer sent an overload TLV.
Cause	The peer router has received too many IPv4 FECs.
Effect	The local router stops sending further IPv4 FECs to the peer.

## 22.20 IdpSessionPeerIPv4OverloadCleared

Table 432: *IdpSessionPeerIPv4OverloadCleared* properties

Property name	Value
Application name	Idp
Event name	IdpSessionPeerIPv4OverloadCleared
Default severity	notice
Message format string	The LDP session with peer <i>peer_idp_id</i> has exited overload state for IPv4 FECs because the peer cleared overload TLV.
Cause	The peer router has cleared overload state.

Property name	Value
Effect	The local router can again send IPv4 FECs to the peer.

## 22.21 IdpSessionPeerIPv6Overload

Table 433: IdpSessionPeerIPv6Overload properties

Property name	Value
Application name	Idp
Event name	IdpSessionPeerIPv6Overload
Default severity	warning
Message format string	The LDP session with peer <i>peer_idp_id</i> has entered overload state for IPv6 FECs because the peer sent an overload TLV.
Cause	The peer router has received too many IPv6 FECs.
Effect	The local router stops sending further IPv6 FECs to the peer.

## 22.22 IdpSessionPeerIPv6OverloadCleared

Table 434: IdpSessionPeerIPv6OverloadCleared properties

Property name	Value
Application name	Idp
Event name	IdpSessionPeerIPv6OverloadCleared
Default severity	notice
Message format string	The LDP session with peer <i>peer_idp_id</i> has exited overload state for IPv6 FECs because the peer cleared overload TLV.
Cause	The peer router has cleared overload state.
Effect	The local router can again send IPv6 FECs to the peer.

## 22.23 IdpSessionUp

Table 435: IdpSessionUp properties

Property name	Value
Application name	Idp
Event name	IdpSessionUp
Default severity	informational
Message format string	In network-instance <i>network_instance</i> , an LDP session is now up and operational with peer <i>peer_idp_id</i> .
Cause	This event is generated when an LDP session transitions into the operational state from a lower state.
Effect	LDP can exchange FEC-label and address bindings with this peer.

## 23 license

### 23.1 licenseExpired

Table 436: licenseExpired properties

Property name	Value
Application name	license
Event name	licenseExpired
Default severity	warning
Message format string	License <i>license_name</i> expired at <i>expired_at_date_time</i> , current time: <i>current_date_time</i>
Cause	The license specified has expired.
Effect	If no new license is provided, the system becomes unlicensed.

### 23.2 licenseExpirySoon

Table 437: licenseExpirySoon properties

Property name	Value
Application name	license
Event name	licenseExpirySoon
Default severity	warning
Message format string	License <i>license_name</i> expires at <i>expires_at_date_time</i> , current time: <i>current_date_time</i>
Cause	The license specified will expire in less than 30 days.
Effect	If no new license is provided before the expiry, the system becomes unlicensed.

## 23.3 licenseMissing

Table 438: licenseMissing properties

Property name	Value
Application name	license
Event name	licenseMissing
Default severity	warning
Message format string	System is running unlicensed. current time: <i>current_date_time</i>
Cause	No license activated on a system requiring a license.
Effect	System will continue to raise this event until a license is provided.

## 23.4 licenseViolation

Table 439: licenseViolation properties

Property name	Value
Application name	license
Event name	licenseViolation
Default severity	warning
Message format string	System requires a license. System will reboot at <i>reboot_at_date_time</i> , current time: <i>current_date_time</i>
Cause	No license activated on a system requiring a license.
Effect	If no license is provided before the reboot time, the system will reboot.

## 24 linux

### 24.1 cpuUsageCritical

Table 440: *cpuUsageCritical* properties

Property name	Value
Application name	linux
Event name	cpuUsageCritical
Default severity	critical
Message format string	CPU utilization on <i>component_type</i> module <i>slot</i> is above 90% on average for the last minute, current usage <i>cpu_usage_percentage</i> %
Cause	Applications or other system tasks have consumed more than 90% of available CPU resources on average over the last minute.
Effect	Processes may be scheduled at a slower rate than required, resulting in potential application failures or slow downs.

### 24.2 cpuUsageHigh

Table 441: *cpuUsageHigh* properties

Property name	Value
Application name	linux
Event name	cpuUsageHigh
Default severity	warning
Message format string	CPU utilization on <i>component_type</i> module <i>slot</i> is above 80% on average for the last minute, current usage <i>cpu_usage_percentage</i> %
Cause	Applications or other system tasks have consumed more than 80% of available CPU resources on average over the last minute.
Effect	No immediate effect, if utilization continues to increase, processes may be scheduled at a slower rate than required, resulting in potential application failures or slow downs.

## 24.3 cpuUsageNormal

Table 442: *cpuUsageNormal* properties

Property name	Value
Application name	linux
Event name	cpuUsageNormal
Default severity	notice
Message format string	CPU utilization on <i>component_type</i> module <i>slot</i> is below 70% on average for the last minute, current usage <i>cpu_usage_percentage</i> %
Cause	CPU consumption on the specified slot has returned to normal levels - below 70%, after triggering a cpuUsageHigh/cpuUsageCritical event.
Effect	None.

## 24.4 dateAndTimeChanged

Table 443: *dateAndTimeChanged* properties

Property name	Value
Application name	linux
Event name	dateAndTimeChanged
Default severity	notice
Message format string	System date and time changed to <i>date_and_time</i>
Cause	The system time has been changed either manually, or via NTP, to the specified time.
Effect	Local time on the system has changed.

## 24.5 domainChanged

Table 444: *domainChanged* properties

Property name	Value
Application name	linux

Property name	Value
Event name	domainChanged
Default severity	informational
Message format string	System domain name changed to <i>domain_name</i>
Cause	System configuration change to the domain name has been made.
Effect	The system uses the new domain name.

## 24.6 hostnameChanged

Table 445: *hostnameChanged* properties

Property name	Value
Application name	linux
Event name	hostnameChanged
Default severity	informational
Message format string	System host name changed to <i>host_name</i>
Cause	System configuration change to the host name has been made.
Effect	The system uses the new host name.

## 24.7 memoryUsageCritical

Table 446: *memoryUsageCritical* properties

Property name	Value
Application name	linux
Event name	memoryUsageCritical
Default severity	critical
Message format string	Memory utilization on <i>component_type</i> module <i>slot</i> is above 90%, current usage <i>memory_usage_percentage%</i>
Cause	Applications or other in-memory items have consumed more than 90% of the memory on the specified module.



Property name	Value
Effect	No immediate effect, if utilization continues to increase, new memory allocations may fail, resulting in potential application failures.

## 24.8 memoryUsageFull

Table 447: *memoryUsageFull* properties

Property name	Value
Application name	linux
Event name	memoryUsageFull
Default severity	emergency
Message format string	Memory utilization on <i>component_type</i> module <i>slot</i> is full
Cause	Applications or other in-memory items have consumed 100% of the memory on the specified module.
Effect	Further memory allocations will fail, likely leading to application failures and eventual module restart.

## 24.9 memoryUsageHigh

Table 448: *memoryUsageHigh* properties

Property name	Value
Application name	linux
Event name	memoryUsageHigh
Default severity	warning
Message format string	Memory utilization on <i>component_type</i> module <i>slot</i> is above 70%, current usage <i>memory_usage_percentage%</i>
Cause	Applications or other in-memory items have consumed more than 70% of the memory on the specified slot.
Effect	No immediate effect, if utilization continues to increase, new memory allocations may fail, resulting in potential application failures.

## 24.10 memoryUsageNormal

Table 449: *memoryUsageNormal* properties

Property name	Value
Application name	linux
Event name	memoryUsageNormal
Default severity	notice
Message format string	Memory utilization on <i>component_type</i> module <i>slot</i> is below 60%, current usage <i>memory_usage_percentage%</i>
Cause	Memory consumption on the specified slot has returned to normal levels - below 60%
Effect	None.

## 24.11 partitionStateChange

Table 450: *partitionStateChange* properties

Property name	Value
Application name	linux
Event name	partitionStateChange
Default severity	alert
Message format string	Partition <i>partition</i> has changed state to <i>current_state</i>
Cause	The specified partition has transitioned to a new state.
Effect	Depending on the state, the partition may now be unusable, read-only, or read-write.

## 24.12 partitionUsageCritical

Table 451: *partitionUsageCritical* properties

Property name	Value
Application name	linux

Property name	Value
Event name	partitionUsageCritical
Default severity	critical
Message format string	Partition <i>partition_label</i> usage on <i>component_type</i> module <i>slot</i> is higher than 90%, current usage <i>partition_usage_percentage</i> %
Cause	The specified partition is almost full, and action should be taken to remove unneeded files.
Effect	None.

## 24.13 partitionUsageFull

Table 452: *partitionUsageFull* properties

Property name	Value
Application name	linux
Event name	partitionUsageFull
Default severity	alert
Message format string	Partition <i>partition_label</i> on <i>component_type</i> module <i>slot</i> is full
Cause	The specified partition is full.
Effect	Write actions to this partition will fail.

## 24.14 partitionUsageNormal

Table 453: *partitionUsageNormal* properties

Property name	Value
Application name	linux
Event name	partitionUsageNormal
Default severity	notice
Message format string	Partition <i>partition_label</i> on <i>component_type</i> module <i>slot</i> is below 70%, current usage <i>partition_usage_percentage</i> %
Cause	Utilization of the specified partition is below 70%, after previously being higher than 80%.

Property name	Value
Effect	None.

## 24.15 partitionUsageWarning

Table 454: *partitionUsageWarning* properties

Property name	Value
Application name	linux
Event name	partitionUsageWarning
Default severity	warning
Message format string	Partition <i>partition_label</i> usage on <i>component_type</i> module <i>slot</i> is higher than 80%, current usage <i>partition_usage_percentage</i> %
Cause	The specified partition is almost full, and action should be taken to remove unneeded files.
Effect	None.

## 24.16 serviceConfigChanged

Table 455: *serviceConfigChanged* properties

Property name	Value
Application name	linux
Event name	serviceConfigChanged
Default severity	notice
Message format string	Service <i>service_name</i> configuration changed, service reloaded
Cause	The specified service configuration has been changed, and linux_mgr has reloaded the service.
Effect	New configuration for the service is now in effect.

## 24.17 serviceDownInNetworkInstance

Table 456: serviceDownInNetworkInstance properties

Property name	Value
Application name	linux
Event name	serviceDownInNetworkInstance
Default severity	warning
Message format string	Service <i>service_name</i> is no longer operational in network instance <i>net_inst</i>
Cause	The specified service has been disabled in the specified network instance.
Effect	Functionality provided by the service is no longer available in the specified network instance.

## 24.18 serviceUpInNetworkInstance

Table 457: serviceUpInNetworkInstance properties

Property name	Value
Application name	linux
Event name	serviceUpInNetworkInstance
Default severity	notice
Message format string	Service <i>service_name</i> is now operational in network instance <i>net_inst</i>
Cause	The specified service has been started in the specified network instance.
Effect	Functionality provided by the service is now available in the specified network instance.

## 25 lldp

### 25.1 remoteLldpMedPeerAdded

Table 458: remoteLldpMedPeerAdded properties

Property name	Value
Application name	lldp
Event name	remoteLldpMedPeerAdded
Default severity	informational
Message format string	LLDP MED remote peer added on interface <i>interface_name</i> : System <i>remote_system_name</i> with chassis ID <i>remote_chassis_id</i> , port <i>remote_port_id</i> with MAC <i>remote_port_mac</i> device class <i>remote_med_device_class</i>
Cause	A new LLDPDU with LLDP-MED Capability TLV has been received on the interface, resulting in the creation of an LLDP MED peer.
Effect	A new LLDP MED peer has been added to LLDP.

### 25.2 remoteLldpMedPeerRemoved

Table 459: remoteLldpMedPeerRemoved properties

Property name	Value
Application name	lldp
Event name	remoteLldpMedPeerRemoved
Default severity	informational
Message format string	LLDP MED remote peer removed on interface <i>interface_name</i> : System <i>remote_system_name</i> with chassis ID <i>remote_chassis_id</i> , port <i>remote_port_id</i> with MAC <i>remote_port_mac</i> device class <i>remote_med_device_class</i>
Cause	The TTL for the LLDP MED remote peer has expired without a new LLDP PDU being received.
Effect	The LLDP MED peer has been removed from LLDP.

## 25.3 remotePeerAdded

Table 460: remotePeerAdded properties

Property name	Value
Application name	lldp
Event name	remotePeerAdded
Default severity	informational
Message format string	LLDP remote peer added on interface <i>interface_name</i> : System <i>remote_system_name</i> with chassis ID <i>remote_chassis_id</i> , port <i>remote_port_id</i> with MAC <i>remote_port_mac</i>
Cause	A new LLDP PDU has been received on the interface, resulting in the creation of an LLDP peer.
Effect	A new peer has been added to LLDP.

## 25.4 remotePeerRemoved

Table 461: remotePeerRemoved properties

Property name	Value
Application name	lldp
Event name	remotePeerRemoved
Default severity	informational
Message format string	LLDP remote peer removed on interface <i>interface_name</i> : System <i>remote_system_name</i> with chassis ID <i>remote_chassis_id</i> , port <i>remote_port_id</i> with MAC <i>remote_port_mac</i>
Cause	The TTL for the remote peer has expired without a new LLDP PDU being received.
Effect	The peer has been removed from LLDP.

## 25.5 remotePeerUpdated

Table 462: remotePeerUpdated properties

Property name	Value
Application name	lldp
Event name	remotePeerUpdated
Default severity	informational
Message format string	LLDP remote peer updated on interface <i>interface_name</i> : System <i>remote_system_name</i> with chassis ID <i>remote_chassis_id</i> , port <i>remote_port_id</i> with MAC <i>remote_port_mac</i>
Cause	The LLDP peer has sent new information in a LLDP PDU, without the TTL for the peer expiring.
Effect	The peer has been updated in LLDP.



## 26 log

### 26.1 bufferRollover

Table 463: *bufferRollover* properties

Property name	Value
Application name	log
Event name	bufferRollover
Default severity	informational
Message format string	Buffer <i>buffer_name</i> has been rolled over
Cause	The buffer has reached its configured max size, and log manager has rolled it over.
Effect	A new buffer has been opened for writing, and the old buffer has been archived. This may result in older buffers being removed from the system.

### 26.2 configUpdate

Table 464: *configUpdate* properties

Property name	Value
Application name	log
Event name	configUpdate
Default severity	informational
Message format string	Logging configuration updated
Cause	A configuration change has been made, resulting in rsyslogd configuration being regenerated.
Effect	Rsyslogd configuration has been modified, and the process has been restarted.

## 26.3 fileRollover

Table 465: fileRollover properties

Property name	Value
Application name	log
Event name	fileRollover
Default severity	informational
Message format string	File <i>file_path/ file_name</i> has been rolled over
Cause	The file has reached its configured max size, and log manager has rolled it over.
Effect	A new log file has been opened for writing, and the old log file has been archived. This may result in older logs being removed from the system.

## 26.4 networkNamespaceChanged

Table 466: networkNamespaceChanged properties

Property name	Value
Application name	log
Event name	networkNamespaceChanged
Default severity	informational
Message format string	Logging network namespace has changed from <i>old_net_namespace</i> to <i>new_net_namespace</i>
Cause	Configuration has been modified, resulting in the rsyslogd using the new network namespace to reach remote syslog servers.
Effect	Rsyslogd will use the new network namespace for reachability to remote syslog servers.

## 26.5 subsystemFacilityChanged

Table 467: *subsystemFacilityChanged* properties

Property name	Value
Application name	log
Event name	subsystemFacilityChanged
Default severity	informational
Message format string	Logging output facility has changed from <i>old_facility</i> to <i>new_facility</i>
Cause	Configuration has been modified, resulting in the output facility of our subsystems changing.
Effect	Subsystems will now output logs to the newly configured facility.

## 27 macsec

### 27.1 MACsecConfigureOnInterface

Table 468: MACsecConfigureOnInterface properties

Property name	Value
Application name	macsec
Event name	MACsecConfigureOnInterface
Default severity	notice
Message format string	MACsec policy <i>policy_name</i> with key-chain <i>key_chain_name</i> has been configured on interface <i>interface_name</i>
Cause	The MACsec policy has been configured on an interface.
Effect	MACsec Policy has been configured on the interface but not protecting as it is not enabled.

### 27.2 MACsecDisabledFromInterface

Table 469: MACsecDisabledFromInterface properties

Property name	Value
Application name	macsec
Event name	MACsecDisabledFromInterface
Default severity	notice
Message format string	MACsec policy <i>policy_name</i> has been disabled on interface <i>interface_name</i>
Cause	The MACsec policy has been disable from an interface.
Effect	Interface is not protected with MACsec.

## 27.3 MACsecEnabledOnInterface

Table 470: MACsecEnabledOnInterface properties

Property name	Value
Application name	macsec
Event name	MACsecEnabledOnInterface
Default severity	notice
Message format string	MACsec policy <i>policy_name</i> has been admin enabled on interface <i>interface_name</i>
Cause	The MACsec policy has been enabled on an interface.
Effect	Interface is protected with MACsec Encryption.

## 27.4 MACsecRemovedFromInterface

Table 471: MACsecRemovedFromInterface properties

Property name	Value
Application name	macsec
Event name	MACsecRemovedFromInterface
Default severity	notice
Message format string	MACsec policy <i>policy_name</i> with key-chain <i>key_chain_name</i> has been removed from interface <i>interface_name</i>
Cause	The MACsec policy has been removed from an interface.
Effect	The MACsec policy has been removed and the interface is not protected any longer.

## 27.5 maxNumberOfPeers

Table 472: maxNumberOfPeers properties

Property name	Value
Application name	macsec

Property name	Value
Event name	maxNumberOfPeers
Default severity	notice
Message format string	MACsec Policy <i>policy_name</i> has been configured with maximum number of peers <i>maxNumberOfPeers</i> and has <i>numberOfActivePeers</i> active peers
Cause	The MACsec policy has more active peers than maximum number of peers.
Effect	No new active peers can be established.

## 27.6 MkaSessionEnded

Table 473: MkaSessionEnded properties

Property name	Value
Application name	macsec
Event name	MkaSessionEnded
Default severity	notice
Message format string	MKA Policy <i>policy_name</i> on interface <i>interface_name</i> with MI:SCI <i>MI:SCI</i> has been ended.
Cause	The MKA policy has ended on an interface.
Effect	MKA has ended on the interface and the MACsec status will go down.

## 27.7 MkaSessionEstablished

Table 474: MkaSessionEstablished properties

Property name	Value
Application name	macsec
Event name	MkaSessionEstablished
Default severity	notice
Message format string	MKA Policy <i>policy_name</i> on interface <i>interface_name</i> with MI:SCI <i>MI:SCI</i> has established and has key server priority <i>key_server_priority</i>

---

Property name	Value
Cause	The MKA policy has been established on an interface.
Effect	MKA will be establish to distribute SAKs.

## 28 mgmt

### 28.1 checkpointGenerated

Table 475: *checkpointGenerated* properties

Property name	Value
Application name	mgmt
Event name	checkpointGenerated
Default severity	informational
Message format string	Generated checkpoint <i>checkpoint_name</i> with comment <i>checkpoint_comment</i> on the following path <i>checkpoint_file_path</i> .
Cause	A configuration checkpoint generated on the mentioned path.
Effect	The mentioned checkpoint is stored to the filesystem.

### 28.2 checkpointRevertRequestReceived

Table 476: *checkpointRevertRequestReceived* properties

Property name	Value
Application name	mgmt
Event name	checkpointRevertRequestReceived
Default severity	warning
Message format string	Configuration is going to be reverted to checkpoint <i>checkpoint_id</i> name <i>checkpoint_name</i> comment <i>checkpoint_comment</i> .
Cause	Configuration revert request was received.
Effect	Configuration is going to be reverted to the specified checkpoint and applied to running datastore.



## 28.3 commitFailed

Table 477: *commitFailed* properties

Property name	Value
Application name	mgmt
Event name	commitFailed
Default severity	warning
Message format string	Error while committing configuration changes for user <i>username</i> session <i>session_id</i> ( <i>message</i> ).
Cause	Unsuccessful commit due to error(s)
Effect	Configuration changes are not applied to running datastore

## 28.4 commitSucceeded

Table 478: *commitSucceeded* properties

Property name	Value
Application name	mgmt
Event name	commitSucceeded
Default severity	informational
Message format string	All changes have been committed successfully by user <i>username</i> session <i>session_id</i> .
Cause	A successful commit
Effect	Configuration changes applied to running datastore

## 28.5 exclusiveConfigSessionBlockedByOtherSessionError

Table 479: *exclusiveConfigSessionBlockedByOtherSessionError* properties

Property name	Value
Application name	mgmt
Event name	exclusiveConfigSessionBlockedByOtherSessionError

Property name	Value
Default severity	informational
Message format string	Cannot start an exclusive configuration session for candidate name <i>candidate_name</i> , there is other configuration session in progress - session id <i>session_id</i> username <i>username</i> candidate name <i>candidate_name</i> .
Cause	Candidate datastore is locked due to other active session in progress
Effect	Exclusive configuration session Error

## 28.6 exclusiveConfigSessionError

Table 480: *exclusiveConfigSessionError* properties

Property name	Value
Application name	mgmt
Event name	exclusiveConfigSessionError
Default severity	informational
Message format string	Cannot start an exclusive configuration session, there is already another exclusive configuration session in progress - session id <i>session_id</i> username <i>username</i> candidate name <i>candidate_name</i> .
Cause	Candidate datastore is locked due to other active session in progress
Effect	Exclusive configuration session Error

## 28.7 privateConfigSessionError

Table 481: *privateConfigSessionError* properties

Property name	Value
Application name	mgmt
Event name	privateConfigSessionError
Default severity	informational
Message format string	Cannot start a configuration session for candidate name <i>candidate_name</i> by user <i>username</i> , the candidate is owned by user <i>candidate_username</i> .

Property name	Value
Cause	Candidate datastore is owned by different user
Effect	Private configuration session Error

## 28.8 privateSharedMismatch

Table 482: *privateSharedMismatch* properties

Property name	Value
Application name	mgmt
Event name	privateSharedMismatch
Default severity	informational
Message format string	Cannot start a configuration session for candidate name <i>candidate_name</i> by user <i>username</i> , cannot use private candidate with shared session or vice versa.
Cause	Candidate was created as private and the requested configuration session is shared or vice versa
Effect	Private shared configuration mismatch Error

## 28.9 sharedConfigSessionBlockedByOtherSessionError

Table 483: *sharedConfigSessionBlockedByOtherSessionError* properties

Property name	Value
Application name	mgmt
Event name	sharedConfigSessionBlockedByOtherSessionError
Default severity	informational
Message format string	Cannot start a shared configuration session for candidate name <i>candidate_name</i> , there is other configuration session in progress - session id <i>session_id</i> username <i>username</i> candidate name <i>candidate_name</i> .
Cause	Candidate datastore is locked due to other active session in progress
Effect	Shared configuration session Error

## 29 mirror

### 29.1 mirrorDestinationDelete

Table 484: *mirrorDestinationDelete* properties

Property name	Value
Application name	mirror
Event name	mirrorDestinationDelete
Default severity	warning
Message format string	Mirror destination <i>mirror_destination</i> is removed from configuration under mirror instance <i>mirror_instance_name</i>
Cause	Mirror destination is removed from configuration under the mentioned mirror instance
Effect	Packets will no longer be mirrored towards the mentioned mirror destination under the mentioned mirror instance

### 29.2 mirrorDestinationOperDown

Table 485: *mirrorDestinationOperDown* properties

Property name	Value
Application name	mirror
Event name	mirrorDestinationOperDown
Default severity	critical
Message format string	Mirror destination <i>mirror_destination</i> is operationally down under mirror instance <i>mirror_instance_name</i>
Cause	Mirror destination oper state has changed from up to down the mentioned mirror instance
Effect	The oper state is down for the mentioned mirror destination under the mentioned mirror instance. Packets will no longer be mirrored towards the mentioned mirror destination

## 29.3 mirrorDestinationOperUP

Table 486: mirrorDestinationOperUP properties

Property name	Value
Application name	mirror
Event name	mirrorDestinationOperUP
Default severity	warning
Message format string	Mirror destination <i>mirror_destination</i> is operationally up under mirror instance <i>mirror_instance_name</i>
Cause	Mirror destination oper state has changed from down to up the mentioned mirror instance
Effect	The oper state is up for the mentioned mirror destination under the mentioned mirror instance

## 29.4 mirrorDestnationAdd

Table 487: mirrorDestnationAdd properties

Property name	Value
Application name	mirror
Event name	mirrorDestnationAdd
Default severity	warning
Message format string	Mirror destination <i>mirror_destination</i> is added to configuration under mirror instance <i>mirror_instance_name</i>
Cause	Mirror destination is added in configuration under the mentioned mirror instance
Effect	Packets from mirror source(s) configured under the mentioned mirror instance will be mirrored towards the mentioned mirror destination configured under the same mirror instance if mirror instance, mirror source(s) and mirror dest are operational up

## 29.5 mirrorInstanceAdminDisable

Table 488: mirrorInstanceAdminDisable properties

Property name	Value
Application name	mirror
Event name	mirrorInstanceAdminDisable
Default severity	warning
Message format string	Mirror instance <i>mirror_instance_name</i> has changed to administrative disable state
Cause	The mirror instance admin state has changed from enable to disable due to configuration change
Effect	The admin state is disable for the mentioned mirror instance

## 29.6 mirrorInstanceAdminEnable

Table 489: mirrorInstanceAdminEnable properties

Property name	Value
Application name	mirror
Event name	mirrorInstanceAdminEnable
Default severity	warning
Message format string	Mirror instance <i>mirror_instance_name</i> has changed to administrative enable state
Cause	The mirror instance admin state has changed from disable to enable due to configuration change
Effect	The admin state is enable for the mentioned mirror instance

## 29.7 mirrorInstanceOperDown

Table 490: mirrorInstanceOperDown properties

Property name	Value
Application name	mirror

Property name	Value
Event name	mirrorInstanceOperDown
Default severity	critical
Message format string	Mirror instance <i>mirror_instance_name</i> has changed to operational down state due to <i>oper_down_reason</i>
Cause	The mirror instance oper state has changed from up to down
Effect	The oper state is down on the mentioned mirror instance

## 29.8 mirrorInstanceOperUp

Table 491: *mirrorInstanceOperUp* properties

Property name	Value
Application name	mirror
Event name	mirrorInstanceOperUp
Default severity	warning
Message format string	Mirror instance <i>mirror_instance_name</i> has changed to operational up state
Cause	The mirror instance oper state has changed from down to up
Effect	The oper state is up for the mentioned mirror instance

## 29.9 mirrorSourceAdd

Table 492: *mirrorSourceAdd* properties

Property name	Value
Application name	mirror
Event name	mirrorSourceAdd
Default severity	warning
Message format string	Mirror source <i>mirror_source</i> is added to configuration under mirror instance <i>mirror_instance_name</i>
Cause	Mirror source is added in configuration under the mentioned mirror instance

Property name	Value
Effect	Packets on the mentioned mirror source will be mirrored towards the mirror destination configured under the mentioned mirror instance if mirror instance, mirror source and mirror dest are operational up

## 29.10 mirrorSourceDelete

Table 493: *mirrorSourceDelete* properties

Property name	Value
Application name	mirror
Event name	mirrorSourceDelete
Default severity	warning
Message format string	Mirror source <i>mirror_source</i> is removed from configuration under mirror instance <i>mirror_instance_name</i>
Cause	Mirror source is removed from configuration under the mentioned mirror instance
Effect	Packets on the mentioned mirror source will no longer be mirrored towards the mirror destination configured under the mentioned mirror instance



## 30 netconf

### 30.1 netconfHello

Table 494: netconfHello properties

Property name	Value
Application name	netconf
Event name	netconfHello
Default severity	notice
Message format string	Netconf session <i>session_id</i> hello received from remote host.
Cause	The hello message was received over the session.
Effect	None.

### 30.2 netconfRpcError

Table 495: netconfRpcError properties

Property name	Value
Application name	netconf
Event name	netconfRpcError
Default severity	notice
Message format string	Netconf session <i>session_id</i> rpc message-id <i>message_id</i> completed with an error: <i>error_message</i>
Cause	The rpc message was processed with an error.
Effect	None.

### 30.3 netconfRpcReply

Table 496: netconfRpcReply properties

Property name	Value
Application name	netconf
Event name	netconfRpcReply
Default severity	debug
Message format string	Netconf session <i>session_id</i> rpc message-id <i>message_id</i> reply: <i>data</i>
Cause	The rpc message was processed.
Effect	None.

### 30.4 netconfRpcRequest

Table 497: netconfRpcRequest properties

Property name	Value
Application name	netconf
Event name	netconfRpcRequest
Default severity	debug
Message format string	Netconf session <i>session_id</i> rpc message-id <i>message_id</i> request: <i>data</i>
Cause	The rpc message was received over the session.
Effect	None.

### 30.5 netconfRpcStart

Table 498: netconfRpcStart properties

Property name	Value
Application name	netconf
Event name	netconfRpcStart
Default severity	notice

Property name	Value
Message format string	Netconf session <i>session_id</i> rpc message-id <i>message_id</i> processing started.
Cause	The rpc message was received over the session.
Effect	None.

## 30.6 netconfRpcSuccess

Table 499: netconfRpcSuccess properties

Property name	Value
Application name	netconf
Event name	netconfRpcSuccess
Default severity	notice
Message format string	Netconf session <i>session_id</i> rpc message-id <i>message_id</i> processing completed with success.
Cause	The rpc message was processed successfully.
Effect	None.

## 30.7 netconfServerSocketCreated

Table 500: netconfServerSocketCreated properties

Property name	Value
Application name	netconf
Event name	netconfServerSocketCreated
Default severity	notice
Message format string	Netconf server instance <i>server_name</i> listening on <i>socket</i> .
Cause	The Netconf server instance has been successfully bound to socket.
Effect	The Netconf server instance is listening on the socket.

## 30.8 netconfServerSocketError

Table 501: netconfServerSocketError properties

Property name	Value
Application name	netconf
Event name	netconfServerSocketError
Default severity	error
Message format string	Netconf server instance <i>server_name</i> failed to listen on socket <i>socket</i> because <i>oper_down_str</i> <i>errno_str</i> .
Cause	The Netconf server instance encountered problem with creation or usage of socket.
Effect	The Netconf server instance is not listening for connections.

## 30.9 netconfSessionClosed

Table 502: netconfSessionClosed properties

Property name	Value
Application name	netconf
Event name	netconfSessionClosed
Default severity	notice
Message format string	Netconf session <i>session_id</i> closed for user <i>user_name</i> for remote host <i>remote_host</i> network-instance <i>net_inst</i> over <i>transport</i> .
Cause	The specified session closed on the system.
Effect	The specified session is now disconnected.

## 30.10 netconfSessionDisconnected

Table 503: netconfSessionDisconnected properties

Property name	Value
Application name	netconf

Property name	Value
Event name	netconfSessionDisconnected
Default severity	notice
Message format string	Netconf session <i>session_id</i> for user <i>user_name</i> for remote host <i>remote_host</i> killed by administrative action.
Cause	The specified session has been disconnected from the system by an administrators action.
Effect	The specified session will be disconnected.

### 30.11 netconfSessionKilled

Table 504: netconfSessionKilled properties

Property name	Value
Application name	netconf
Event name	netconfSessionKilled
Default severity	notice
Message format string	Netconf session <i>session_id</i> for user <i>user_name</i> for remote host <i>remote_host</i> killed by Netconf session <i>kill_session_id</i> .
Cause	The specified session has been disconnected from the system by other netconf session.
Effect	The specified session will be disconnected.

### 30.12 netconfSessionOpened

Table 505: netconfSessionOpened properties

Property name	Value
Application name	netconf
Event name	netconfSessionOpened
Default severity	notice
Message format string	Netconf session <i>session_id</i> opened for user <i>user_name</i> from remote host <i>remote_host</i> network-instance <i>net_inst</i> over <i>transport</i> .

---

Property name	Value
Cause	The specified user has opened a session on the system.
Effect	None.

## 31 netinst

### 31.1 networkInstanceInterfaceDown

Table 506: networkInstanceInterfaceDown properties

Property name	Value
Application name	netinst
Event name	networkInstanceInterfaceDown
Default severity	warning
Message format string	The interface <i>networkinstance_interface_name</i> in network-instance <i>networkinstance_name</i> is now down for reason: <i>oper_down_reason</i>
Cause	This event is generated when the network instance interface has transitioned from the up state to the down state
Effect	The network instance interface is now down

### 31.2 networkInstanceInterfaceUp

Table 507: networkInstanceInterfaceUp properties

Property name	Value
Application name	netinst
Event name	networkInstanceInterfaceUp
Default severity	notice
Message format string	The interface <i>networkinstance_interface_name</i> in network-instance <i>networkinstance_name</i> is now up
Cause	This event is generated when the network instance interface has transitioned from the down state to the up state.
Effect	The network instance interface is now up

## 31.3 networkInstanceStateDown

Table 508: networkInstanceStateDown properties

Property name	Value
Application name	netinst
Event name	networkInstanceStateDown
Default severity	warning
Message format string	Network Instance <i>networkinstance_name</i> is now down
Cause	The network instance has transitioned from the up state to the down state
Effect	The network instance is now down

## 31.4 networkInstanceStateUp

Table 509: networkInstanceStateUp properties

Property name	Value
Application name	netinst
Event name	networkInstanceStateUp
Default severity	notice
Message format string	Network Instance <i>networkinstance_name</i> is now up
Cause	The network instance has transitioned from the down state to the up state
Effect	The network instance is now up



## 32 oam\_pm

### 32.1 ThresholdDelayEventClear

Table 510: ThresholdDelayEventClear properties

Property name	Value
Application name	oam_pm
Event name	ThresholdDelayEventClear
Default severity	warning
Message format string	OAM performance monitoring delay threshold cleared for session <i>session-name</i> <i>mi-duration</i> measurement interval index <i>index</i> started <i>start-time</i> threshold type <i>threshold-event-type</i> in the <i>direction</i> direction delay metric <i>bin-type</i> bin lower bound <i>bin-lower-bound</i> meets the clear threshold criteria <i>clear-threshold</i> , TCA type <i>tca-type</i> , operational value <i>operational-value</i> , suspect status <i>mi-suspect-status</i>
Cause	This event is generated when a delay metric count is lower than the clear threshold, clearing the event.
Effect	None.

### 32.2 ThresholdDelayEventRaise

Table 511: ThresholdDelayEventRaise properties

Property name	Value
Application name	oam_pm
Event name	ThresholdDelayEventRaise
Default severity	warning
Message format string	OAM performance monitoring delay raise threshold trigger for session <i>session-name</i> <i>mi-duration</i> measurement interval index <i>index</i> started <i>start-time</i> threshold type <i>threshold-event-type</i> in the <i>direction</i> direction delay metric <i>bin-type</i> bin lower bound <i>bin-lower-bound</i> exceeding the raise threshold <i>raise-threshold</i> , TCA type <i>tca-type</i> , operational value <i>operational-value</i> , suspect status <i>mi-suspect-status</i>

Property name	Value
Cause	This event is generated when a delay metric count exceeds the raise threshold.
Effect	None.

## 32.3 ThresholdLossEventClear

Table 512: ThresholdLossEventClear properties

Property name	Value
Application name	oam_pm
Event name	ThresholdLossEventClear
Default severity	warning
Message format string	OAM performance monitoring loss threshold cleared for session <i>session-name</i> <i>mi-duration</i> measurement interval index <i>index</i> started <i>start-time</i> threshold type <i>threshold-event-type</i> in the <i>direction</i> direction meets the clear threshold criteria <i>clear-threshold</i> , TCA type <i>tca-type</i> , operational value <i>operational-value</i> , suspect status <i>mi-suspect-status</i>
Cause	This event is generated when a loss metric count is lower than the clear threshold, clearing the event.
Effect	None.

## 32.4 ThresholdLossEventRaise

Table 513: ThresholdLossEventRaise properties

Property name	Value
Application name	oam_pm
Event name	ThresholdLossEventRaise
Default severity	warning
Message format string	OAM performance monitoring loss raise threshold trigger for session <i>session-name</i> <i>mi-duration</i> measurement interval index <i>index</i> started <i>start-time</i> threshold type <i>threshold-event-type</i> in the <i>direction</i> direction exceeding the raise threshold <i>raise-threshold</i> , TCA type <i>tca-type</i> , operational value <i>operational-value</i> , suspect status <i>mi-suspect-status</i>

---

Property name	Value
Cause	This event is generated when a loss metric count exceeds the raise threshold.
Effect	None.

## 33 ospf

### 33.1 ospfAdjacencyBfdSessionSetupFailed

Table 514: ospfAdjacencyBfdSessionSetupFailed properties

Property name	Value
Application name	ospf
Event name	ospfAdjacencyBfdSessionSetupFailed
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : BFD session setup failed for the OSPF neighbor <i>ospfNbrRtrId</i> , using interface <i>subinterface</i> . Failure reason: <i>bfd_failure_reason</i> .
Cause	This event is generated when BFD session setup fails with an adjacent OSPF neighbor.
Effect	Fast failure detection may not be possible.

### 33.2 ospfAdjacencyChange

Table 515: ospfAdjacencyChange properties

Property name	Value
Application name	ospf
Event name	ospfAdjacencyChange
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : Adjacency with neighbor <i>ospfNbrRtrId</i> , using interface <i>subinterface</i> , moved to state <i>ospfNbrState</i> due to event <i>ospfNbrEvent</i> .
Cause	This event is generated when an OSPF Neighbor changes state.
Effect	OSPF routing information can only utilized from neighbors in an up state.

### 33.3 ospfAdjacencyRestartStatusChange

Table 516: ospfAdjacencyRestartStatusChange properties

Property name	Value
Application name	ospf
Event name	ospfAdjacencyRestartStatusChange
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : The graceful restart status for OSPF neighbor <i>ospfNbrRtrId</i> on interface <i>subinterface</i> moved to new state <i>restart_status</i> .
Cause	This event is generated when the graceful restart status of a neighbor changes.
Effect	None

### 33.4 ospfAsMaxAgeLSA

Table 517: ospfAsMaxAgeLSA properties

Property name	Value
Application name	ospf
Event name	ospfAsMaxAgeLSA
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> area <i>ospfAreaId</i> : Max aged LSA <i>ospfLsdbLsid</i> type <i>ospfLsdbType</i> advertising router <i>ospfLsdbRtrId</i> .
Cause	One of the LSAs in the router's link-state database has reached its maximum age limit.
Effect	The Max Age LSA will be flushed from the LSDB.

## 33.5 ospfExportLimitReached

Table 518: ospfExportLimitReached properties

Property name	Value
Application name	ospf
Event name	ospfExportLimitReached
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : The export-limit <i>ospfExportLimit</i> is reached, additional routes will not be exported by OSPF.
Cause	This event is generated when OSPF has exported the maximum number of routes.
Effect	OSPF will not export any more routes.

## 33.6 ospfExportLimitWarning

Table 519: ospfExportLimitWarning properties

Property name	Value
Application name	ospf
Event name	ospfExportLimitWarning
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : OSPF has reached <i>ospfExportLimitLogPercent</i> % of the export-limit <i>ospfExportLimit</i> .
Cause	This event is generated when OSPF has exported the maximum number of routes.
Effect	OSPF will not export any more routes.

### 33.7 ospfFailure

Table 520: ospfFailure properties

Property name	Value
Application name	ospf
Event name	ospfFailure
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : has failed due to <i>ospfFailureReason</i> .
Cause	OSPF encountered an event forcing it to go down.
Effect	OSPF goes down and will restart after a timeout.

### 33.8 ospflfLdpSyncStateChange

Table 521: ospflfLdpSyncStateChange properties

Property name	Value
Application name	ospf
Event name	ospflfLdpSyncStateChange
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : Interface <i>subinterface</i> , ldp-sync-state moved to state <i>ospflfLdpSync State</i>
Cause	This event is generated when an OSPF interface ldp-synchronization changes state.
Effect	Metric of the interface changes to or from infinity.

### 33.9 ospflfRxBadPacket

Table 522: ospflfRxBadPacket properties

Property name	Value
Application name	ospf

Property name	Value
Event name	ospflfRxBadPacket
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : A bad packet was received on interface <i>subinterface</i> from <i>ospfPacketSrc Address</i> in packet type <i>ospfPacketType</i>
Cause	This event is generated An OSPF packet has been received on an interface that cannot be parsed.
Effect	Bad packet is discarded

### 33.10 ospflfStateChange

Table 523: *ospflfStateChange* properties

Property name	Value
Application name	ospf
Event name	ospflfStateChange
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : Interface <i>subinterface</i> , moved to state <i>ospflfState</i> due to event <i>ospfIfEvent</i>
Cause	This event is generated when an OSPF interface changes state.
Effect	An OSPF adjacency can not be established if the interface state is down or loop.

### 33.11 ospfLsdbApproachingOverflow

Table 524: *ospfLsdbApproachingOverflow* properties

Property name	Value
Application name	ospf
Event name	ospfLsdbApproachingOverflow
Default severity	warning



Property name	Value
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : The number of external LSAs has exceeded 90% of the configured limit <i>ospfExtLsdbLimit</i> .
Cause	The number of external LSAs in the router's link-state database has exceeded ninety percent of the configured limit.
Effect	Warning only, normal behavior will continue.

### 33.12 ospfLsdbOverflow

Table 525: ospfLsdbOverflow properties

Property name	Value
Application name	ospf
Event name	ospfLsdbOverflow
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : The number of external LSAs has exceeded the configured limit <i>ospfExtLsdbLimit</i> .
Cause	The number of external LSAs in the router's link-state database has exceeded the configured limit.
Effect	No additional external LSA will be added.

### 33.13 ospfNbrMtuMismatch

Table 526: ospfNbrMtuMismatch properties

Property name	Value
Application name	ospf
Event name	ospfNbrMtuMismatch
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : Neighbor <i>ospfNbrRtrId</i> , using interface <i>subinterface</i> , signaled an unacceptable MTU.

Property name	Value
Cause	This event is generated when an OSPF Neighbor signals an incorrect MTU.
Effect	An OSPF adjacency cannot be established if there is an MTU mismatch.

### 33.14 ospfOverloadEntry

Table 527: ospfOverloadEntry properties

Property name	Value
Application name	ospf
Event name	ospfOverloadEntry
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : the LSDB database has entered the overload state due to <i>ospfOverload Reason</i> .
Cause	Overload bit configuration
Effect	No transit traffic is routed through the overloaded router.

### 33.15 ospfOverloadExit

Table 528: ospfOverloadExit properties

Property name	Value
Application name	ospf
Event name	ospfOverloadExit
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : the LSDB database has exited the overload state.
Cause	Overload bit cleared
Effect	The OSPF instance has cleared the overload state.

## 33.16 ospfOverloadWarning

Table 529: ospfOverloadWarning properties

Property name	Value
Application name	ospf
Event name	ospfOverloadWarning
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : <i>ospfOverloadReason</i> .
Cause	Overload bit configuration
Effect	No transit traffic is routed through the overloaded router.

## 33.17 ospfSpfRunRestarted

Table 530: ospfSpfRunRestarted properties

Property name	Value
Application name	ospf
Event name	ospfSpfRunRestarted
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : SPF runs resumed - memory resources available.
Cause	There are sufficient memory resources on the system to run the SPF to completion.
Effect	OSPF stops running SPF's until enough memory resources become available OSPF will resume running the SPF's as required.

## 33.18 ospfSpfRunsStopped

Table 531: ospfSpfRunsStopped properties

Property name	Value
Application name	ospf

Property name	Value
Event name	ospfSpfRunsStopped
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : SPF runs stopped - insufficient memory resources.
Cause	There are insufficient memory resources on the system to run the SPF to completion.
Effect	OSPF stops running SPFs until enough memory resources become available.

### 33.19 ospfAuthDataFailure

Table 532: ospfAuthDataFailure properties

Property name	Value
Application name	ospf
Event name	ospfAuthDataFailure
Default severity	warning
Message format string	Network-instance <i>network_instance</i> - OSPF instance <i>ospfInstance</i> : A packet received on interface <i>subinterface</i> from <i>ospfPacketSrcAddress</i> and packet type <i>ospfPacketType</i> , failed authentication with <i>ospfAuth Error</i>
Cause	This event is caused by interface from a router whose authentication key or authentication type conflicts with this router's authentication key or authentication type.
Effect	PDUs are dropped, with the effect depending on the PDU type

## 34 platform

### 34.1 airflowCorrected

Table 533: *airflowCorrected* properties

Property name	Value
Application name	platform
Event name	airflowCorrected
Default severity	notice
Message format string	The <i>type</i> in slot <i>slot</i> now matches the dominant airflow of other modules in the system
Cause	The specified module is now part of the majority (either front to back, or back to front) fans + PSUs in the system. This clearance is triggered when a module moves from being part of the minority to the majority, typically through other modules being plugged/unplugged.
Effect	The specified module is providing correct airflow to the system.

### 34.2 airflowMismatch

Table 534: *airflowMismatch* properties

Property name	Value
Application name	platform
Event name	airflowMismatch
Default severity	critical
Message format string	The <i>type</i> in slot <i>slot</i> does not match the airflow of other modules in the system
Cause	The inserted module does not match the airflow direction of other modules in the system.
Effect	The system is working with inefficient cooling, and may trigger thermal protection.

### 34.3 componentBooting

Table 535: componentBooting properties

Property name	Value
Application name	platform
Event name	componentBooting
Default severity	informational
Message format string	Component <i>type slot</i> has started initialization
Cause	The componentBooting event is generated when the active control module has started initializing the component.
Effect	The specified component has started initializing.

### 34.4 componentDown

Table 536: componentDown properties

Property name	Value
Application name	platform
Event name	componentDown
Default severity	critical
Message format string	Component <i>type slot</i> is no longer operational
Cause	The componentDown event is generated when a component has transitioned from any other operational state to the down state.
Effect	The specified component is now down.

### 34.5 componentFailed

Table 537: componentFailed properties

Property name	Value
Application name	platform
Event name	componentFailed

Property name	Value
Default severity	critical
Message format string	Component <i>type slot</i> has failed, reason <i>reason</i>
Cause	The componentFailed event is generated when a component has transitioned from any other operational state to the failed state.
Effect	The specified component is now failed.

## 34.6 componentInserted

Table 538: componentInserted properties

Property name	Value
Application name	platform
Event name	componentInserted
Default severity	notice
Message format string	Component <i>type slot</i> has been inserted into the system
Cause	The componentInserted event is generated when a component has been initially detected by the active control module.
Effect	The specified component is detected.

## 34.7 componentInsertedInInvalidSlot

Table 539: componentInsertedInInvalidSlot properties

Property name	Value
Application name	platform
Event name	componentInsertedInInvalidSlot
Default severity	warning
Message format string	Component <i>type</i> is inserted in invalid slot <i>slot</i>
Cause	The componentInsertedInInvalidSlot event is generated when a component is being inserted in invalid slot.
Effect	The specified component will not be taken into use.

## 34.8 componentLocatorDisabled

Table 540: componentLocatorDisabled properties

Property name	Value
Application name	platform
Event name	componentLocatorDisabled
Default severity	notice
Message format string	Locator LED disabled on <i>type slot</i>
Cause	The componentLocatorDisabled event is generated when the locator LED for the component has been disabled, either via timeout, or via operator action.
Effect	The specified component's LED is no longer flashing with locator functionality.

## 34.9 componentLocatorEnabled

Table 541: componentLocatorEnabled properties

Property name	Value
Application name	platform
Event name	componentLocatorEnabled
Default severity	notice
Message format string	Locator LED enabled on <i>type slot</i> for <i>duration</i> seconds
Cause	The componentLocatorEnabled event is generated when the locator LED for the component has been enabled by an operator action.
Effect	The specified component's LED is now flashing with locator functionality.



## 34.10 componentPowerDown

Table 542: componentPowerDown properties

Property name	Value
Application name	platform
Event name	componentPowerDown
Default severity	critical
Message format string	Component <i>type slot</i> is being powered down due to insufficient power capacity
Cause	The componentPowerDown event is generated when a component is being powered off by the active control module as a means to bring the overall power consumption of the chassis down to a level the available power supplies are able to accommodate.
Effect	The specified component is powering down.

## 34.11 componentPowerUp

Table 543: componentPowerUp properties

Property name	Value
Application name	platform
Event name	componentPowerUp
Default severity	warning
Message format string	Component <i>type slot</i> is being powered up due to sufficient power capacity
Cause	The componentPowerUp event is generated when a component is being powered on by the active control module, following on from a power down as a result of insufficient power supplies. This event is not generated during normal power on events.
Effect	The specified component is powering on.

## 34.12 componentRemoved

Table 544: componentRemoved properties

Property name	Value
Application name	platform
Event name	componentRemoved
Default severity	critical
Message format string	Component <i>type slot</i> has been removed from the system
Cause	The componentRemoved event is generated when a component has is no longer detected in the system. This does not necessarily indicate that the component has been physically removed, but indicates that it is no longer detected by the active control module.
Effect	The specified component is no longer detected by the active control module.

## 34.13 componentRestarted

Table 545: componentRestarted properties

Property name	Value
Application name	platform
Event name	componentRestarted
Default severity	critical
Message format string	Component <i>type slot</i> has been restarted
Cause	The componentRestarting event is generated when the a component has been restarted.
Effect	The specified component has been restarted.

## 34.14 componentTemperatureExceeded

Table 546: componentTemperatureExceeded properties

Property name	Value
Application name	platform
Event name	componentTemperatureExceeded
Default severity	warning
Message format string	Component <i>type slot</i> has exceeded its temperature threshold, current temperature <i>temperatureC</i>
Cause	The componentTemperatureExceeded event is generated when the component has exceeded its temperature threshold.
Effect	The specified component has a temperature sensor that is overheating, the component may shut down by thermal protection.

## 34.15 componentTemperatureFailure

Table 547: componentTemperatureFailure properties

Property name	Value
Application name	platform
Event name	componentTemperatureFailure
Default severity	warning
Message format string	Component <i>type slot</i> has exceeded its safe operating temperature, component will be powered down in 10 seconds. Current temperature <i>temperatureC</i>
Cause	The componentTemperatureFailure event is generated when the component has exceeded its maximum temperature.
Effect	The specified component has a temperature sensor that has overheated, the component will shut down in 10 seconds for thermal protection.

## 34.16 componentTemperatureNormal

Table 548: componentTemperatureNormal properties

Property name	Value
Application name	platform
Event name	componentTemperatureNormal
Default severity	notice
Message format string	Component <i>type slot</i> temperature is now normal, current temperature <i>temperatureC</i>
Cause	The componentTemperatureNormal event is generated when the component has recovered from a temperature exceeded state.
Effect	The specified component is now within temperature operating limits.

## 34.17 componentUp

Table 549: componentUp properties

Property name	Value
Application name	platform
Event name	componentUp
Default severity	notice
Message format string	Component <i>type slot</i> is now operational
Cause	The componentUp event is generated when a component has transitioned from any other operational state to the up state.
Effect	The specified component is now up.

## 34.18 controlModuleActivityChange

Table 550: controlModuleActivityChange properties

Property name	Value
Application name	platform

Property name	Value
Event name	controlModuleActivityChange
Default severity	critical
Message format string	Control module <i>slot</i> has become <i>activity_state</i>
Cause	The controlModuleActivityChange event is generated when there has been an activity change on either control module.
Effect	The specified control module has transitioned to the specified state.

## 34.19 controlModuleConfigSynchronized

Table 551: controlModuleConfigSynchronized properties

Property name	Value
Application name	platform
Event name	controlModuleConfigSynchronized
Default severity	informational
Message format string	Configuration synchronization with standby control module <i>standby_slot</i> has succeeded
Cause	Configuration has been successfully synchronized between the active and standby control modules.
Effect	The standby control module now has the same configuration as the active.

## 34.20 controlModuleImageSynchronized

Table 552: controlModuleImageSynchronized properties

Property name	Value
Application name	platform
Event name	controlModuleImageSynchronized
Default severity	informational
Message format string	Image synchronization with standby control module <i>standby_slot</i> has succeeded

Property name	Value
Cause	Images have been successfully synchronized between the active and standby control modules.
Effect	The standby control module now has the same images as the active.

## 34.21 controlModuleInSync

Table 553: controlModuleInSync properties

Property name	Value
Application name	platform
Event name	controlModuleInSync
Default severity	informational
Message format string	Active and standby control modules are now synchronized
Cause	All synchronization activities have completed between the active and standby control modules.
Effect	The standby control module is now ready for a control module switchover, if necessary.

## 34.22 controlModuleOverlaySynchronized

Table 554: controlModuleOverlaySynchronized properties

Property name	Value
Application name	platform
Event name	controlModuleOverlaySynchronized
Default severity	informational
Message format string	Overlay synchronization with standby control module <i>standby_slot</i> has succeeded
Cause	Overlays have been successfully synchronized between the active and standby control modules.
Effect	The standby control module now has the same overlay as the active.

## 34.23 controlModuleSyncLost

Table 555: controlModuleSyncLost properties

Property name	Value
Application name	platform
Event name	controlModuleSyncLost
Default severity	critical
Message format string	Active control module has lost visibility of the standby control module
Cause	Connection between the active and standby control modules has been lost.
Effect	The standby control module is no longer capable of taking over in the event of a failure of the active, no configuration or images are being synchronized.

## 34.24 controlModuleSyncStart

Table 556: controlModuleSyncStart properties

Property name	Value
Application name	platform
Event name	controlModuleSyncStart
Default severity	informational
Message format string	Active and standby control modules are now synchronizing <i>synchronization_category</i>
Cause	A synchronization has been triggered between the active and standby control modules.
Effect	Configuration, images, or persistent storage is being synchronized between the active and standby control module.

## 34.25 fantrayEmpty

Table 557: fantrayEmpty properties

Property name	Value
Application name	platform
Event name	fantrayEmpty
Default severity	critical
Message format string	Component fan-tray <i>slot</i> is not present in the system
Cause	The fantrayEmpty event is generated when a fan-tray has transitioned from any other operational state to the empty state, or is never present.
Effect	The system may have cooling issues.

## 34.26 fips140ConfiguredOperDown

Table 558: fips140ConfiguredOperDown properties

Property name	Value
Application name	platform
Event name	fips140ConfiguredOperDown
Default severity	critical
Message format string	FIPS-140 is enabled operationally down for reason <i>down-reason</i>
Cause	FIPS-140 has been successfully configured but it is oper-down because of an error.
Effect	None

## 34.27 fips140ConfiguredOperUp

Table 559: fips140ConfiguredOperUp properties

Property name	Value
Application name	platform
Event name	fips140ConfiguredOperUp



Property name	Value
Default severity	notice
Message format string	FIPS-140 has been enabled and fully operational
Cause	FIPS-140 is successfully enabled and operational.
Effect	None

## 34.28 fips140ConfiguredWaitingReboot

Table 560: fips140ConfiguredWaitingReboot properties

Property name	Value
Application name	platform
Event name	fips140ConfiguredWaitingReboot
Default severity	notice
Message format string	FIPS-140 is enabled but operationally down until next reboot
Cause	FIPS-140 has been successfully configured.
Effect	FIPS-140 active after next reboot

## 34.29 fips140NotActive

Table 561: fips140NotActive properties

Property name	Value
Application name	platform
Event name	fips140NotActive
Default severity	notice
Message format string	FIPS-140 is not activated
Cause	FIPS-140 is not configured.
Effect	None

### 34.30 fips140Removed

Table 562: fips140Removed properties

Property name	Value
Application name	platform
Event name	fips140Removed
Default severity	notice
Message format string	FIPS-140 has been disabled but is operationally up until next reboot
Cause	FIPS-140 has been successfully unconfigured.
Effect	FIPS-140 inactive after next reboot.

### 34.31 linecardCapacityDegraded

Table 563: linecardCapacityDegraded properties

Property name	Value
Application name	platform
Event name	linecardCapacityDegraded
Default severity	critical
Message format string	Linecard <i>slot</i> forwarding complex <i>forwarding-complex</i> fabric capacity degraded
Cause	The specified linecard's forwarding complex has insufficient operational fabric links.
Effect	Packets may be dropped if the linecard's forwarding complex is sending and receiving significant amounts of traffic to the fabric.

### 34.32 linecardCapacityNormal

Table 564: linecardCapacityNormal properties

Property name	Value
Application name	platform

Property name	Value
Event name	linecardCapacityNormal
Default severity	informational
Message format string	Linecard <i>slot</i> forwarding complex <i>forwarding-complex</i> fabric capacity normal
Cause	The specified linecard's forwarding complex has sufficient operational fabric links again.
Effect	Normal behavior is restored for sending and receiving traffic to the fabric.

### 34.33 platformLowPower

Table 565: platformLowPower properties

Property name	Value
Application name	platform
Event name	platformLowPower
Default severity	emergency
Message format string	Insufficient power for currently installed components, <i>current_powerW</i> available, <i>required_powerW</i> required
Cause	Available power from operational power supplies is insufficient to power all components in the system.
Effect	Components in the system will be powered down until required power is lower than what is supplied by operational power supplies.

### 34.34 platformLowReservePower

Table 566: platformLowReservePower properties

Property name	Value
Application name	platform
Event name	platformLowReservePower
Default severity	critical

Property name	Value
Message format string	Insufficient reserve power for currently installed components, <i>current_powerW</i> available, <i>required_powerW</i> required
Cause	Available power is less than one power supply capacity extra to power all components in the system.
Effect	Power will be insufficient if one operational power supply is lost.

### 34.35 platformNoPowerRedundancy

Table 567: *platformNoPowerRedundancy* properties

Property name	Value
Application name	platform
Event name	platformNoPowerRedundancy
Default severity	warning
Message format string	Power redundancy based on mode <i>redundancy_mode</i> is not available, required PSUs <i>required_psus</i> , operational PSUs <i>active_psus</i>
Cause	The available PSUs are not able to accomodate the configured power redundancy mode.
Effect	The desired power redundancy is not available.

### 34.36 platformNormalPower

Table 568: *platformNormalPower* properties

Property name	Value
Application name	platform
Event name	platformNormalPower
Default severity	informational
Message format string	Sufficient power for currently installed components, <i>current_powerW</i> available, <i>required_powerW</i> required
Cause	Available power from operational power supplies is sufficient to power all components in the system.
Effect	Enough power is available.

### 34.37 platformPowerRedundancyRecovered

Table 569: platformPowerRedundancyRecovered properties

Property name	Value
Application name	platform
Event name	platformPowerRedundancyRecovered
Default severity	informational
Message format string	Power redundancy based on mode <i>redundancy_mode</i> is available, required PSUs <i>required_psus</i> , operational PSUs <i>active_psus</i>
Cause	The available PSUs are able to accomodate the configured power redundancy mode.
Effect	The desired power redundancy is available.

### 34.38 psuInputDown

Table 570: psuInputDown properties

Property name	Value
Application name	platform
Event name	psuInputDown
Default severity	warning
Message format string	Power input on power-supply <i>s/ot</i> is down
Cause	Input fault on the specified power supply is set.
Effect	The specified power supply can no longer supply power to the system.

### 34.39 psuInputUp

Table 571: psuInputUp properties

Property name	Value
Application name	platform
Event name	psuInputUp

Property name	Value
Default severity	notice
Message format string	Power input on power-supply <i>slot</i> is up
Cause	Input fault on the specified power supply is clear.
Effect	The specified power supply can now supply power to the system.

## 34.40 psuOutputDown

Table 572: *psuOutputDown* properties

Property name	Value
Application name	platform
Event name	psuOutputDown
Default severity	warning
Message format string	Power output on power-supply <i>slot</i> is down
Cause	Output fault on the specified power supply is set.
Effect	The specified power supply can no longer supply power to the system.

## 34.41 psuOutputUp

Table 573: *psuOutputUp* properties

Property name	Value
Application name	platform
Event name	psuOutputUp
Default severity	notice
Message format string	Power output on power-supply <i>slot</i> is up
Cause	Output fault on the specified power supply is clear.
Effect	The specified power supply can now supply power to the system.

## 34.42 psuTemperatureFault

Table 574: *psuTemperatureFault* properties

Property name	Value
Application name	platform
Event name	psuTemperatureFault
Default severity	warning
Message format string	Component <i>type slot</i> has raised a temperature fault, current temperature <i>temperatureC</i>
Cause	The psuTemperatureFault event is generated when the power supply raises a temperature fault.
Effect	The power supply is overheating, and may shut down by thermal protection.

## 34.43 psuTemperatureNormal

Table 575: *psuTemperatureNormal* properties

Property name	Value
Application name	platform
Event name	psuTemperatureNormal
Default severity	notice
Message format string	Component <i>type slot</i> temperature fault is now clear, current temperature <i>temperatureC</i>
Cause	The psuTemperatureNormal event is generated when the power supply recovered from a temperature fault state.
Effect	The power supply is now within temperature operating limits.

## 34.44 systemInServiceSoftwareUpgrade

Table 576: systemInServiceSoftwareUpgrade properties

Property name	Value
Application name	platform
Event name	systemInServiceSoftwareUpgrade
Default severity	critical
Message format string	System is upgrading from <i>old_version</i> to <i>new_version</i> , utilizing warm reboot
Cause	The systemInServiceSoftwareUpgrade event is generated when a software triggered in service software upgrade request has been made.
Effect	The control and management plane of the system will go offline, the datapath will continue forwarding based on current state. The system will upgrade the kernel, operating system, and/or applications as needed.

## 34.45 systemReboot

Table 577: systemReboot properties

Property name	Value
Application name	platform
Event name	systemReboot
Default severity	critical
Message format string	System going down for reboot
Cause	The systemReboot event is generated when a software triggered reboot has been made.
Effect	The system will go offline for reboot



## 34.46 systemWarmReboot

Table 578: systemWarmReboot properties

Property name	Value
Application name	platform
Event name	systemWarmReboot
Default severity	critical
Message format string	System going down for warm reboot
Cause	The systemWarmReboot event is generated when a software triggered warm reboot has been made.
Effect	The control and management plane of the system will go offline, the datapath will continue forwarding based on current state.

## 34.47 systemWarmRebootAborted

Table 579: systemWarmRebootAborted properties

Property name	Value
Application name	platform
Event name	systemWarmRebootAborted
Default severity	critical
Message format string	System has aborted a requested warm reboot due to <i>reason</i>
Cause	The systemWarmRebootAborted event is generated when a software triggered warm reboot request has been aborted, typically due to unsupported configuration.
Effect	The in progress warm reboot has been aborted, no effect to system configuration or state.

## 35 qos

### 35.1 platformQoSProfileHighUtilization

Table 580: platformQoSProfileHighUtilization properties

Property name	Value
Application name	qos
Event name	platformQoSProfileHighUtilization
Default severity	warning
Message format string	The QoS resource called <i>resource-name</i> has reached <i>threshold%</i> or more utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> . Only <i>free-entries</i> entries are remaining.
Cause	This event is generated when the utilization of a QoS resource has increased to a level that may warrant concern if further resources are consumed
Effect	None

### 35.2 platformQoSProfileHighUtilizationLowered

Table 581: platformQoSProfileHighUtilizationLowered properties

Property name	Value
Application name	qos
Event name	platformQoSProfileHighUtilizationLowered
Default severity	notice
Message format string	The QoS resource called <i>resource-name</i> has decreased back to <i>threshold%</i> or less utilization on linecard <i>linecard</i> , forwarding complex <i>forwarding-complex</i> .
Cause	This event is generated when the utilization of a QoS resource has decreased to a level that may no longer warrant concern
Effect	None

## 36 ra\_guard-agent

### 36.1 ra\_guardAdd

Table 582: ra\_guardAdd properties

Property name	Value
Application name	ra_guard-agent
Event name	ra_guardAdd
Default severity	notice
Message format string	RA Guard Policy <i>pol-name</i> associated with subinterface <i>if-name</i> , VLAN <i>vlan</i>
Cause	This notification is generated when an RA policy is added to a subinterface.
Effect	The associated RA Policy is now applied to the subinterface.

### 36.2 ra\_guardRemove

Table 583: ra\_guardRemove properties

Property name	Value
Application name	ra_guard-agent
Event name	ra_guardRemove
Default severity	notice
Message format string	RA Guard Policy <i>pol-name</i> removed from subinterface <i>if-name</i> , VLAN <i>vlan</i>
Cause	This notification is generated when an RA policy is removed from a subinterface.
Effect	An RA Policy is no longer associated with the specified subinterface.

## 37 sflow

### 37.1 sFlowAgentChange

Table 584: sFlowAgentChange properties

Property name	Value
Application name	sflow
Event name	sFlowAgentChange
Default severity	notice
Message format string	SFLOW: The global sFlow Agent has administratively been changed to <i>state</i>
Cause	This notification is generated when a sFlow global process changes administrative state.
Effect	The sFlow global process state has changed.

### 37.2 sFlowCollectorUnreachable

Table 585: sFlowCollectorUnreachable properties

Property name	Value
Application name	sflow
Event name	sFlowCollectorUnreachable
Default severity	warning
Message format string	SFLOW: Collector <i>collector-id</i> - IP address: <i>collector-ip</i> is unreachable
Cause	This notification is generated when the specified sFlow collector will no longer receive sflow sample data until reachability is restored
Effect	Restore IP reachability to the sFlow collector.

## 38 stp

### 38.1 higherPriorityBridge

Table 586: *higherPriorityBridge* properties

Property name	Value
Application name	stp
Event name	higherPriorityBridge
Default severity	warning
Message format string	Bridge <i>bridge-id</i> with root bridge \$\$ has higher priority, for network instance <i>networkinstance-name</i> on interface <i>interface-name</i>
Cause	A customer's device has been configured with a bridge priority equal to zero.
Effect	The interface that the customer's device is connected through will be blocked.

### 38.2 InterfaceActiveProtocolChange

Table 587: *InterfaceActiveProtocolChange* properties

Property name	Value
Application name	stp
Event name	InterfaceActiveProtocolChange
Default severity	notice
Message format string	NetworkInstance <i>networkinstance-name</i> SubInterface <i>interface-name</i> active protocol changed to <i>stp-oper-protocol-name</i> .
Cause	The spanning tree protocol on this Subinterface changed from RSTP to STP or viceversa.
Effect	None.

### 38.3 NewCistRegionalRootBridge

Table 588: NewCistRegionalRootBridge properties

Property name	Value
Application name	stp
Event name	NewCistRegionalRootBridge
Default severity	notice
Message format string	New <i>regional-name</i> root <i>cist-regionalroot-name</i> elected in network instance <i>networkinstance-name</i>
Cause	A STP selected a new regional root for the CIST
Effect	None

### 38.4 NewMstiRegionalRootBridge

Table 589: NewMstiRegionalRootBridge properties

Property name	Value
Application name	stp
Event name	NewMstiRegionalRootBridge
Default severity	notice
Message format string	New MSTI regional root <i>msti-regionalroot-name</i> elected in net work instance <i>networkinstance-name</i> . Msti-Instanceid: <i>mst-instance-id</i>
Cause	A STP selected a new regional root for the MSTI
Effect	None

### 38.5 newRootBridge

Table 590: newRootBridge properties

Property name	Value
Application name	stp
Event name	newRootBridge

Property name	Value
Default severity	warning
Message format string	New root elected for network instance <i>networkinstance-name</i> due to bridge parameter change.
Cause	The previous root bridge has been aged out and new root bridge is elected.
Effect	The new root bridge creates a new spanning tree topology which may denote loss of customer access or redundancy.

## 38.6 newRootInterface

Table 591: newRootInterface properties

Property name	Value
Application name	stp
Event name	newRootInterface
Default severity	warning
Message format string	New root elected for network instance <i>networkinstance-name</i> due to interface <i>interface-name</i>
Cause	The previous root bridge has been aged out and a new root bridge has been elected.
Effect	The new root bridge creates a new spanning tree topology which may denote a loss of customer access or redundancy.

## 38.7 receivedTCN

Table 592: receivedTCN properties

Property name	Value
Application name	stp
Event name	receivedTCN
Default severity	warning
Message format string	TCN received for network instance <i>networkinstance-name</i> on interface <i>interface-name</i> .

Property name	Value
Cause	SubInterface has received a TCN from another bridge.
Effect	This bridge will either have its Config bpdu with topology change flag set if it is a root bridge, or it will pass TCN to its root bridge. Eventually the address aging timer for the forwarding database will be made shorter for a short period of time.

## 38.8 StpBpduGuardError

Table 593: StpBpduGuardError properties

Property name	Value
Application name	stp
Event name	StpBpduGuardError
Default severity	warning
Message format string	A Bpdu-guard error is detected for network instance <i>networkinstance-name</i> on subinterface <i>interface-name</i>
Cause	Edge-SubInterface which has bpdu-guard configured received unexpected Stp Bpdu
Effect	Subinterface will become shutdown and traffic will be blocked.

## 38.9 StpRootGuardViolation

Table 594: StpRootGuardViolation properties

Property name	Value
Application name	stp
Event name	StpRootGuardViolation
Default severity	warning
Message format string	A root-guard violation is detected for network instance <i>networkinstance-name</i> on subinterface <i>interface-name</i>
Cause	SubInterface which has root-guard configured is trying to become root (has a better STP priority vector)
Effect	Subinterface will become alternate and traffic will be blocked.



## 38.10 topologyChangeInterfaceMajorState

Table 595: topologyChangeInterfaceMajorState properties

Property name	Value
Application name	stp
Event name	topologyChangeInterfaceMajorState
Default severity	warning
Message format string	Topology change for network-instance <i>networkinstance-name</i> due to subinterface <i>interface-name</i> major state change
Cause	SubInterface has transitioned its state from learning to forwarding or from forwarding to blocking or broken.
Effect	The spanning tree topology has been modified which may denote loss of customer access or redundancy.

## 38.11 topologyChangeInterfaceState

Table 596: topologyChangeInterfaceState properties

Property name	Value
Application name	stp
Event name	topologyChangeInterfaceState
Default severity	warning
Message format string	Topology change for network instance <i>networkinstance-name</i> due to interface <i>interface-name</i> state change.
Cause	SubInterface has transitioned state to blocking or broken from a state other than forwarding. This event complements what is not covered by topologyChangeInterfaceMajorState.
Effect	The spanning tree topology has been modified which may denote loss of customer access or redundancy.

## 38.12 unacknowledgedTCN

Table 597: *unacknowledgedTCN* properties

Property name	Value
Application name	stp
Event name	unacknowledgedTCN
Default severity	warning
Message format string	TCN sent for <i>networkinstance-name</i> is unacknowledged
Cause	TCN sent towards the root bridge on the root port (Subinterface) has not been acknowledged within allowed time.
Effect	A portion of the spanning tree topology may not have been notified that a topology change has taken place. FDB tables on some devices may take significantly longer to represent the new distribution of layer-2 addresses.

## 39 sync

### 39.1 syncFreqClockQLChange

Table 598: syncFreqClockQLChange properties

Property name	Value
Application name	sync
Event name	syncFreqClockQLChange
Default severity	notice
Message format string	The system frequency clock's Quality Level (ql) has transitioned to <i>freq_clock_ql</i>
Cause	This notification is generated when a frequency clock transitions to a new ql.
Effect	The system's frequency clock is synced to remote clock with this ql.

### 39.2 syncFreqClockRefChange

Table 599: syncFreqClockRefChange properties

Property name	Value
Application name	sync
Event name	syncFreqClockRefChange
Default severity	notice
Message format string	The system frequency clock reference has transitioned to frequency reference instance <i>instance_number</i>
Cause	This notification is generated when a frequency reference instance selected has changed.
Effect	The system frequency clock will follow the new reference.

### 39.3 syncFreqClockStateChange

Table 600: syncFreqClockStateChange properties

Property name	Value
Application name	sync
Event name	syncFreqClockStateChange
Default severity	notice
Message format string	The system frequency clock state has transitioned to <i>freq_clock_state</i>
Cause	This notification is generated when a frequency clock transitions to a new state.
Effect	The system's frequency clock behavior is based on this state.

### 39.4 syncFreqInstanceAlarmChange

Table 601: syncFreqInstanceAlarmChange properties

Property name	Value
Application name	sync
Event name	syncFreqInstanceAlarmChange
Default severity	notice
Message format string	Frequency reference instance <i>instance_number</i> : The alarm state has transitioned to <i>alarm_state</i>
Cause	This notification is generated when a frequency Reference instance transitions to a new alarm state.
Effect	If there is an alarm for a frequency reference instance, it will not be qualified for use.

### 39.5 syncFreqInstanceQLChange

Table 602: syncFreqInstanceQLChange properties

Property name	Value
Application name	sync

Property name	Value
Event name	syncFreqInstanceQLChange
Default severity	notice
Message format string	Frequency reference instance <i>instance_number</i> . The Quality Level (ql) has transitioned to <i>ql_number</i>
Cause	This notification is generated when a frequency reference Instance transitions to a new QL.
Effect	The new QL will be taken into account when for system frequency clock reference selection if ql-selection is set.

## 39.6 syncPTPNoPortTimestamping

Table 603: syncPTPNoPortTimestamping properties

Property name	Value
Application name	sync
Event name	syncPTPNoPortTimestamping
Default severity	warning
Message format string	Local interface <i>local_interface</i> is being used for PTP event messages but that interface doesn't support timestamping
Cause	For the interface indicated, either ptp timestamping has been disabled in configuration or the IMM or MDA does not support timestamping.
Effect	PTP exchanges require the event messages to be timestamped at the port. Clock recovery cannot work without this timestamping.

## 39.7 syncPTPParentChange

Table 604: syncPTPParentChange properties

Property name	Value
Application name	sync
Event name	syncPTPParentChange
Default severity	notice

Property name	Value
Message format string	PTP has transitioned to new parent <i>parent_clock_mac_address</i> on port <i>parent_clock_port</i> with clockClass of <i>parent_clockclass</i> .
Cause	This notification is generated when the PTP clock transitions to a new parent.
Effect	The ptp clock will follow this new parent clock.

## 39.8 syncPTPParentChangeGNSS

Table 605: syncPTPParentChangeGNSS properties

Property name	Value
Application name	sync
Event name	syncPTPParentChangeGNSS
Default severity	notice
Message format string	PTP has transitioned to new parent <i>parent_clock_gnss</i> with clockClass of <i>parent_clockclass</i> .
Cause	This notification is generated when the PTP clock transitions to the internal GNSS as the new parent.
Effect	The ptp clock will follow this new parent which is a GNSS reference.

## 39.9 syncPTPParentChangeIP

Table 606: syncPTPParentChangeIP properties

Property name	Value
Application name	sync
Event name	syncPTPParentChangeIP
Default severity	notice
Message format string	PTP has transitioned to new parent <i>parent_clock_ip</i> in routing instance <i>parent_clock_router</i> with clockClass of <i>parent_clockclass</i> .
Cause	This notification is generated when the PTP clock transitions to a new IP parent.
Effect	The ptp clock will follow this new parent clock.

## 39.10 syncPTPParentChangeLocalClock

Table 607: syncPTPParentChangeLocalClock properties

Property name	Value
Application name	sync
Event name	syncPTPParentChangeLocalClock
Default severity	notice
Message format string	PTP has transitioned to new parent <i>parent_clock_local</i> with clockClass of <i>parent_clockclass</i> .
Cause	This notification is generated when the PTP clock transitions to the local clock as the new parent.
Effect	The ptp clock will follow this new parent clock with is the local clock.

## 39.11 syncPTPPortPTSFUnusable

Table 608: syncPTPPortPTSFUnusable properties

Property name	Value
Application name	sync
Event name	syncPTPPortPTSFUnusable
Default severity	warning
Message format string	PTP detected excessive noise between PTP port number <i>ptp_neighbor_port_number</i> and parent clock ID <i>ptp_neighbor_clock_id</i> .
Cause	The PTP process detected excessive noise between the local port and the indicated external Master port.
Effect	Any Announce messages received from the indicated neighbor shall be excluded from the BMCA algorithm until this condition is cleared.

### 39.12 syncPTPTimeRecoveryState

Table 609: syncPTPTimeRecoveryState properties

Property name	Value
Application name	sync
Event name	syncPTPTimeRecoveryState
Default severity	notice
Message format string	PTP has transitioned to time recovery state of <i>ptp_time_rec_state</i>
Cause	This notification is generated when the PTP clock transitions to a new time recovery state.
Effect	The ptp clock's tim recovery behavior will be based on this state.



## 40 tls

### 40.1 tlsProfileExpired

Table 610: *tlsProfileExpired* properties


Property name	Value
Application name	tls
Event name	tlsProfileExpired
Default severity	warning
Message format string	Certificate in TLS profile <i>tls_profile</i> has expired
Cause	The certificate used in the specified TLS profile has an expiration date in the past.
Effect	Authentication using the specified TLS profile may fail.

### 40.2 tlsProfileExpiresSoon

Table 611: *tlsProfileExpiresSoon* properties

Property name	Value
Application name	tls
Event name	tlsProfileExpiresSoon
Default severity	warning
Message format string	Certificate in TLS profile <i>tls_profile</i> expires at <i>expires_at_date_time</i>
Cause	The certificate used in the specified TLS profile will expire in the next 30 days.
Effect	Authentication using the specified TLS profile may fail once the certificate expires.

# Customer document and product support

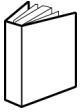

## **Customer documentation**

[Customer documentation welcome page](#)



## **Technical support**

[Product support portal](#)



## **Documentation feedback**

[Customer documentation feedback](#)